 
 


TV STAND

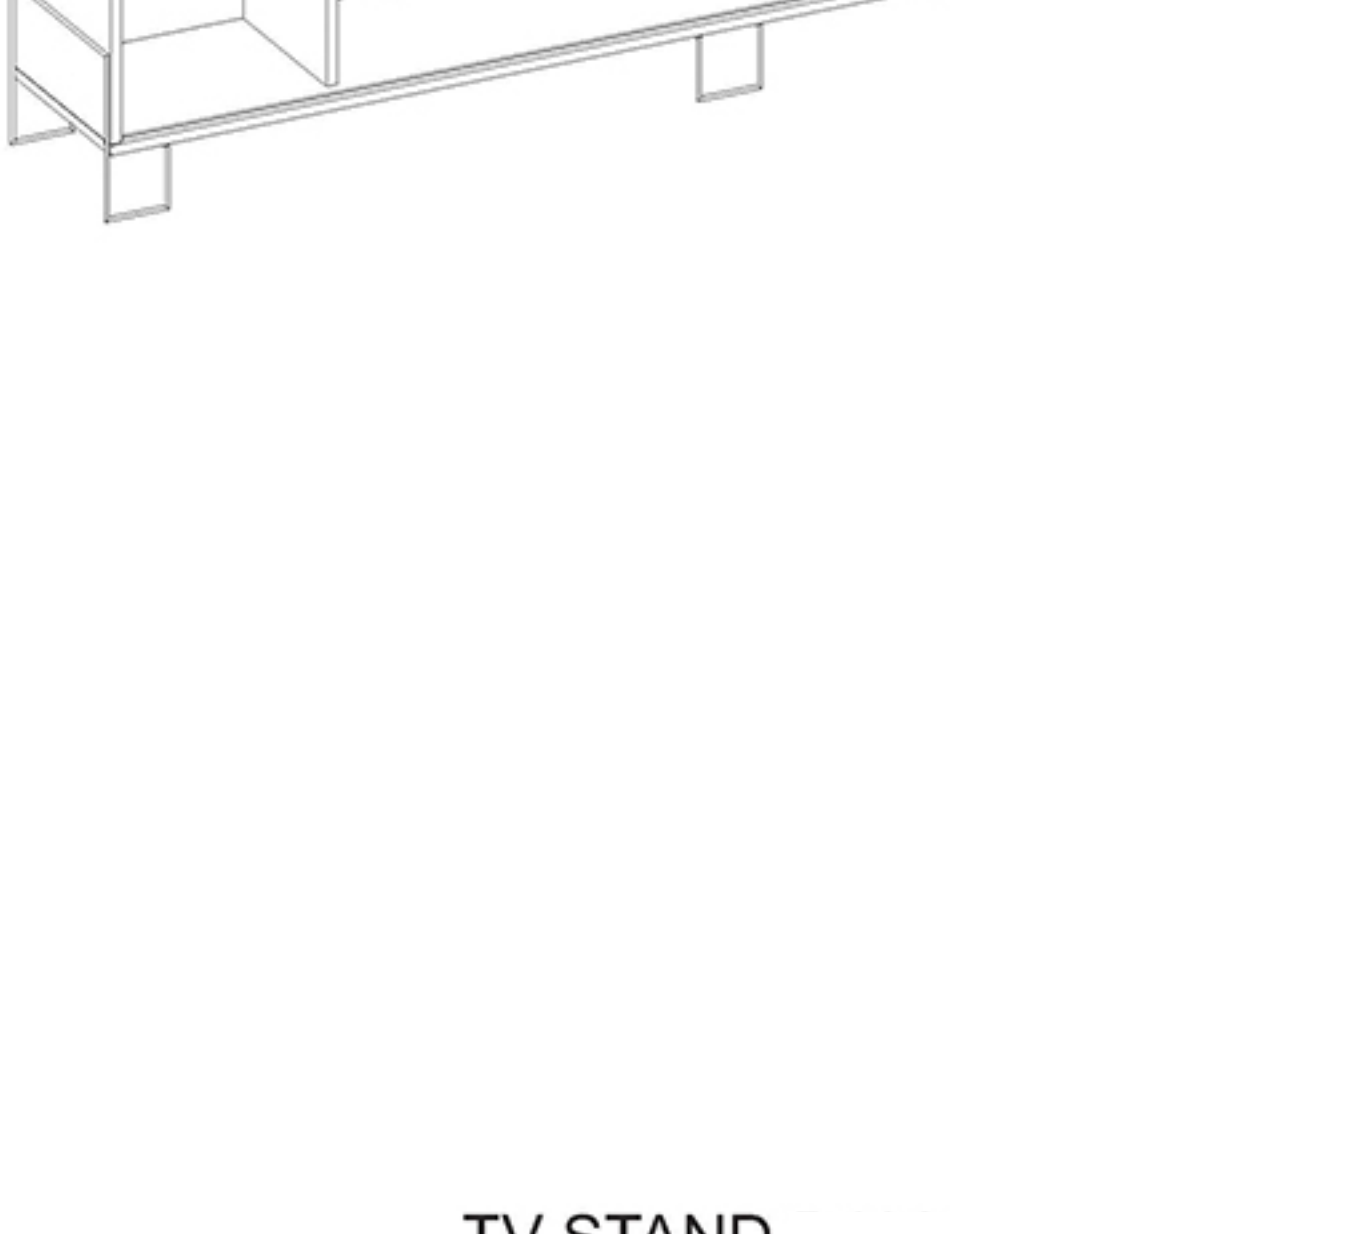

TV STAND

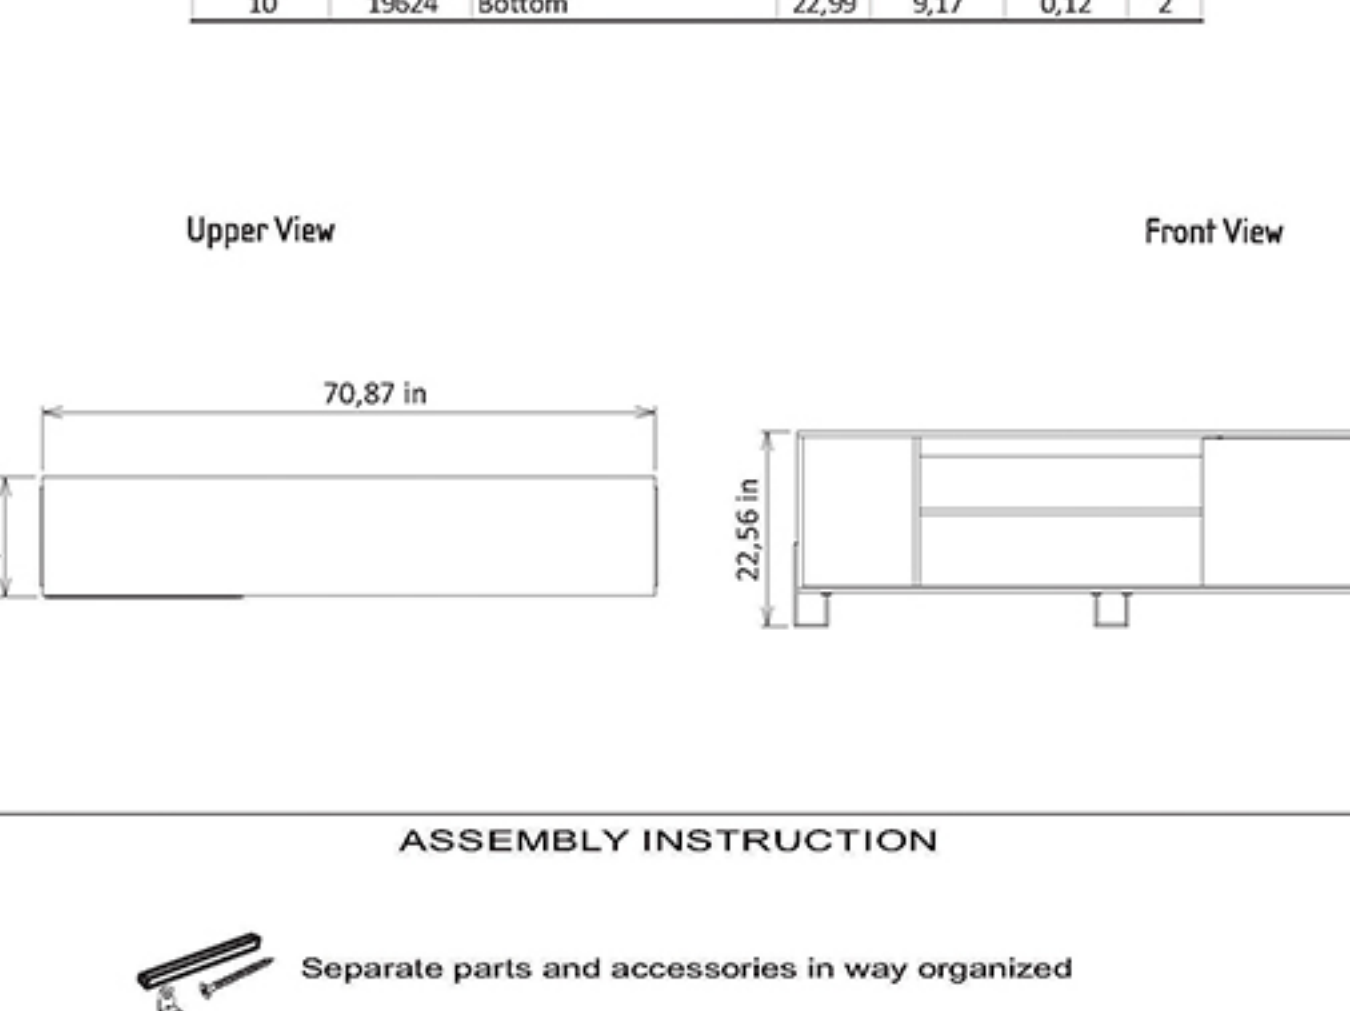


PARTS LIST

Sequence	Reference	Description	Width	Thickness	Quantity	Q
1	19615	Base	70,87	13,78	0,59	1
2	19616	Left-back	17,52	13,70	0,59	1
3	19617	Left division	17,52	11,73	0,59	1
4	19618	Shelf	33,39	11,65	0,59	1
5	19619	Right division	17,52	11,73	0,59	1
6	19620	Right side	17,52	13,70	0,59	1
7	19621	Top support crosspiece	33,39	2,36	0,59	1
8	19622	Cover	70,87	13,78	0,59	1
9	19623	Door	23,23	17,13	0,59	1
10	19624	Bottom	22,99	9,17	0,12	2

Upper View

 Front View

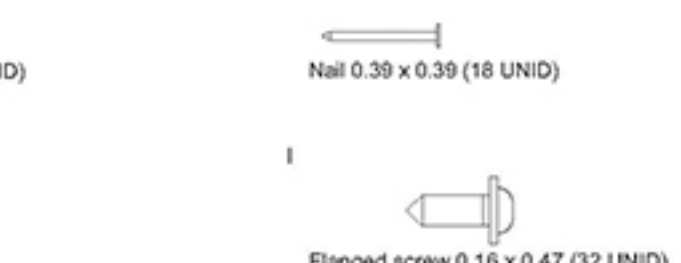

ASSEMBLY INSTRUCTION



Separate parts and accessories in way organized



 
Cover the floor with the cardboard



It is necessary one person to assembly




Not included tools

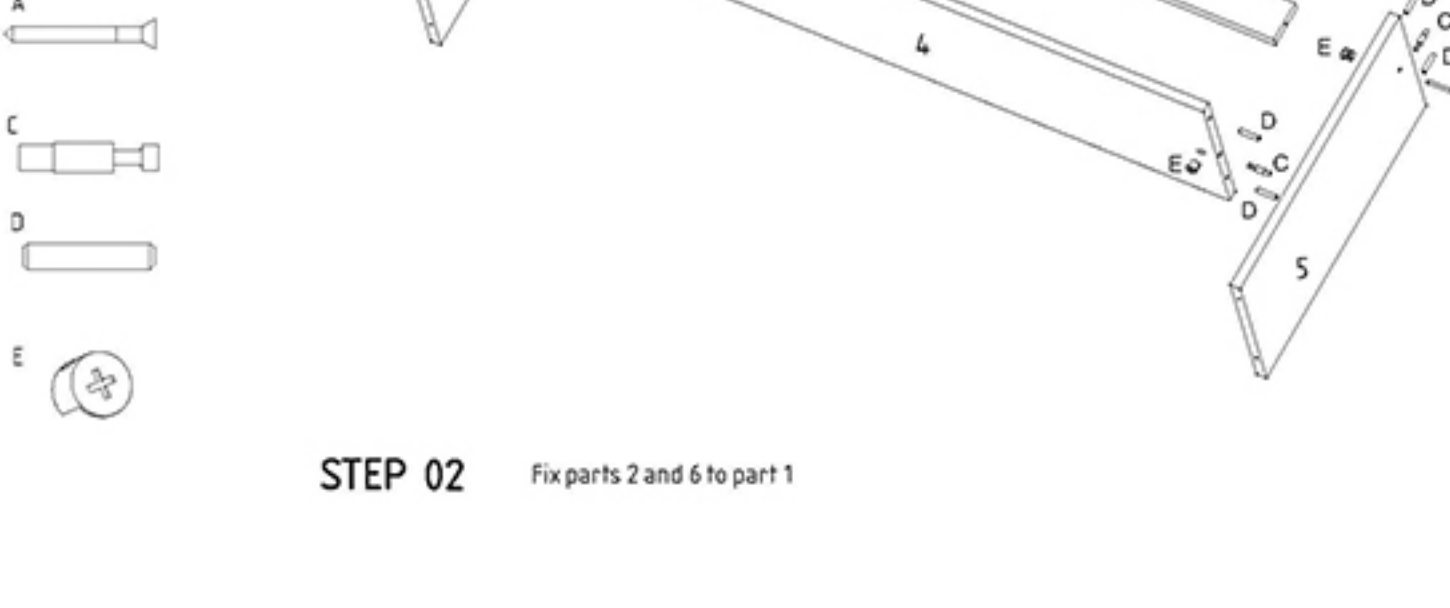


STEP 01

 Fix parts 4 and 7 to parts 3 and 5

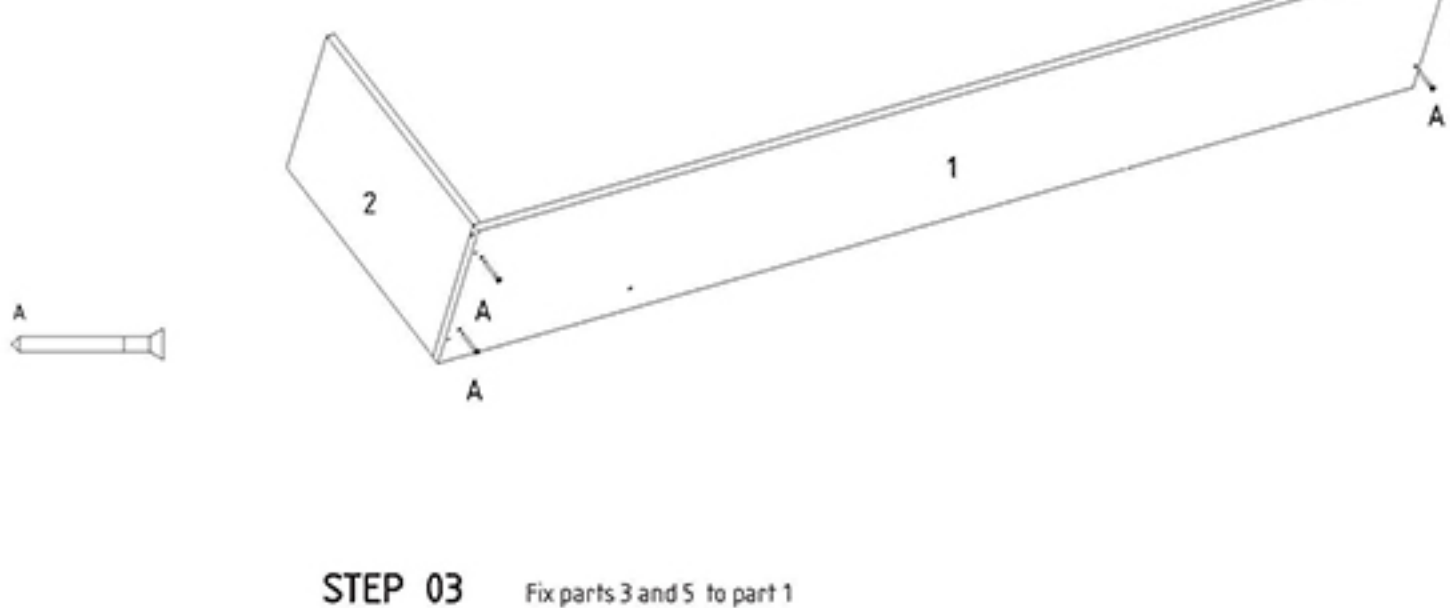


STEP 02

 Fix parts 2 and 6 to part 1

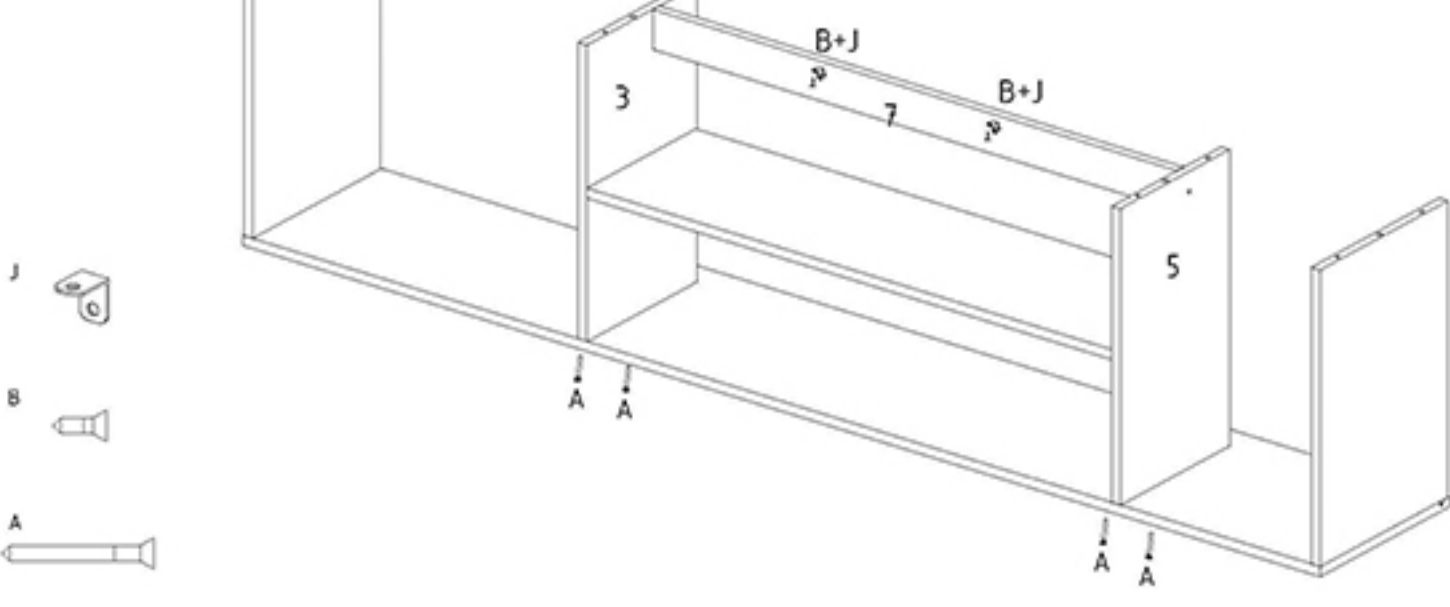


STEP 03

 Fix parts 3 and 5 to part 1

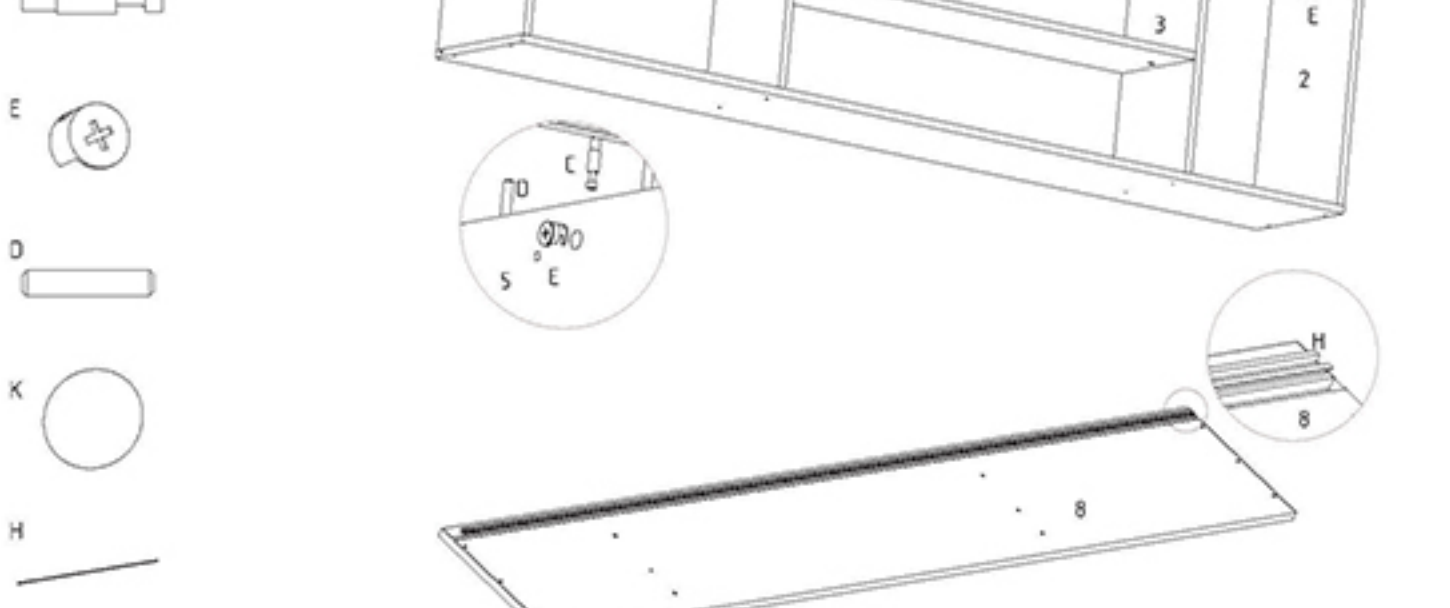


STEP 04

 Fix the accessory H on the part 8. Fix the part 8 on the parts 2, 3, 5 and 6

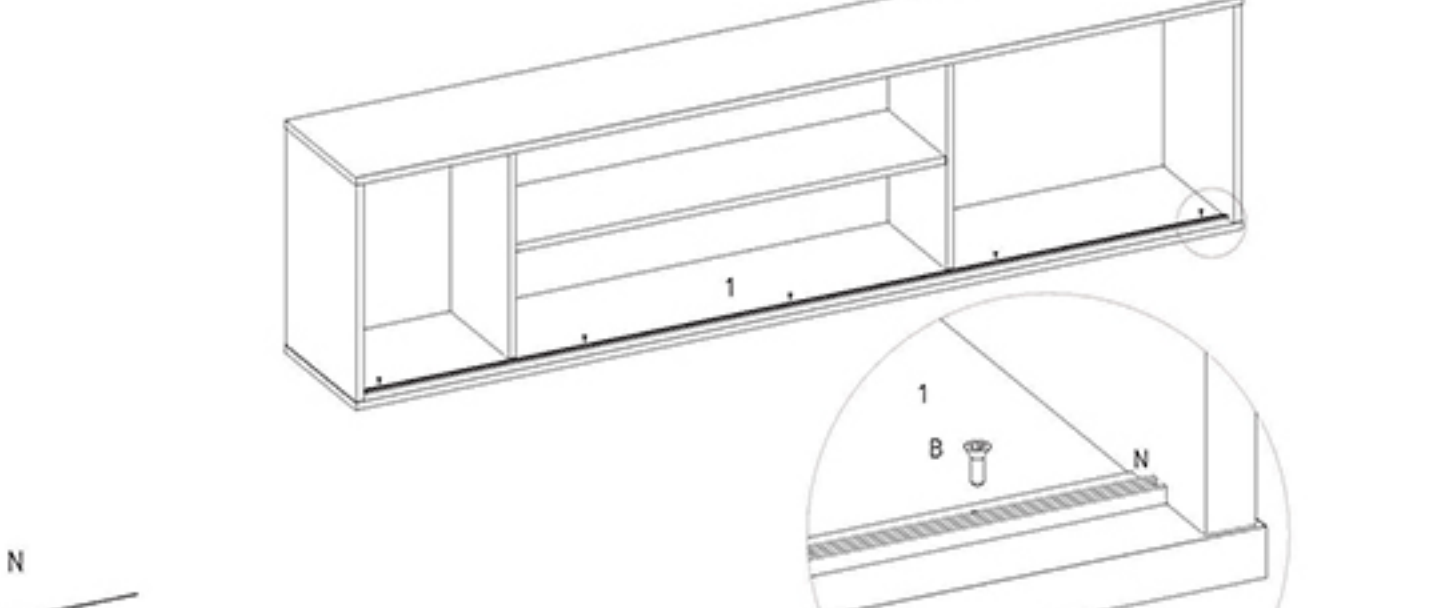


STEP 05

 Fix the accessory N in the parts 1

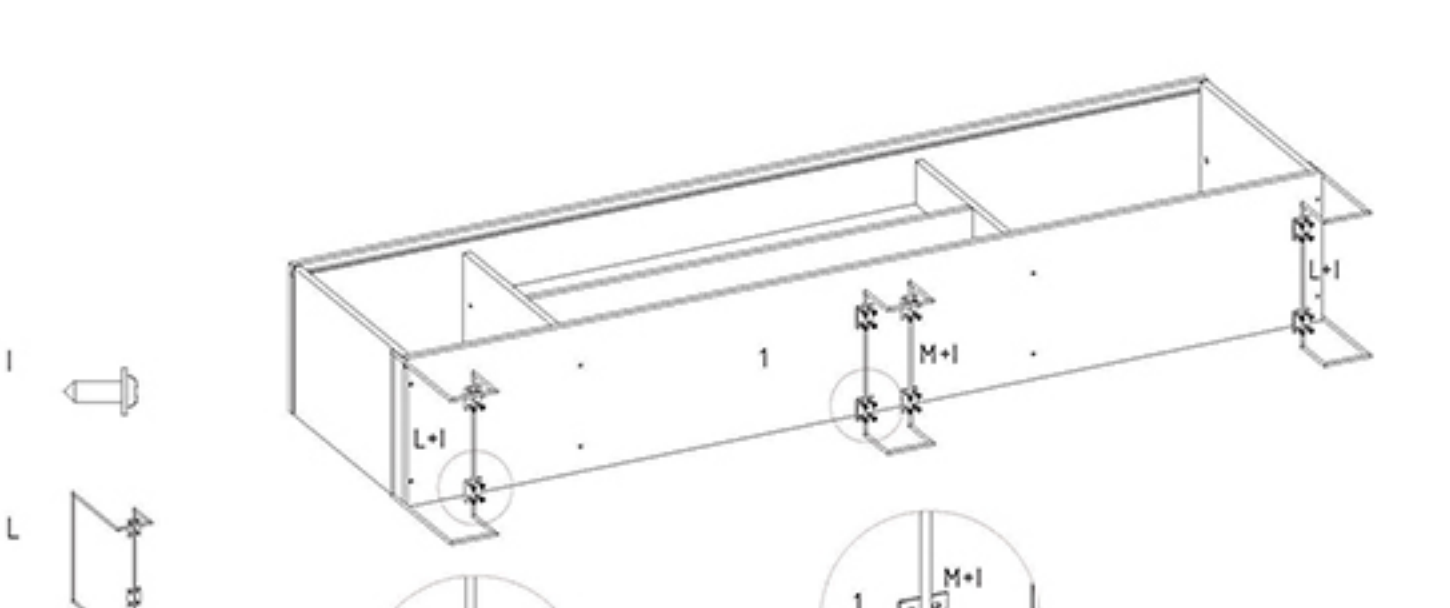


STEP 06

 Fix accessories L and M in part 1

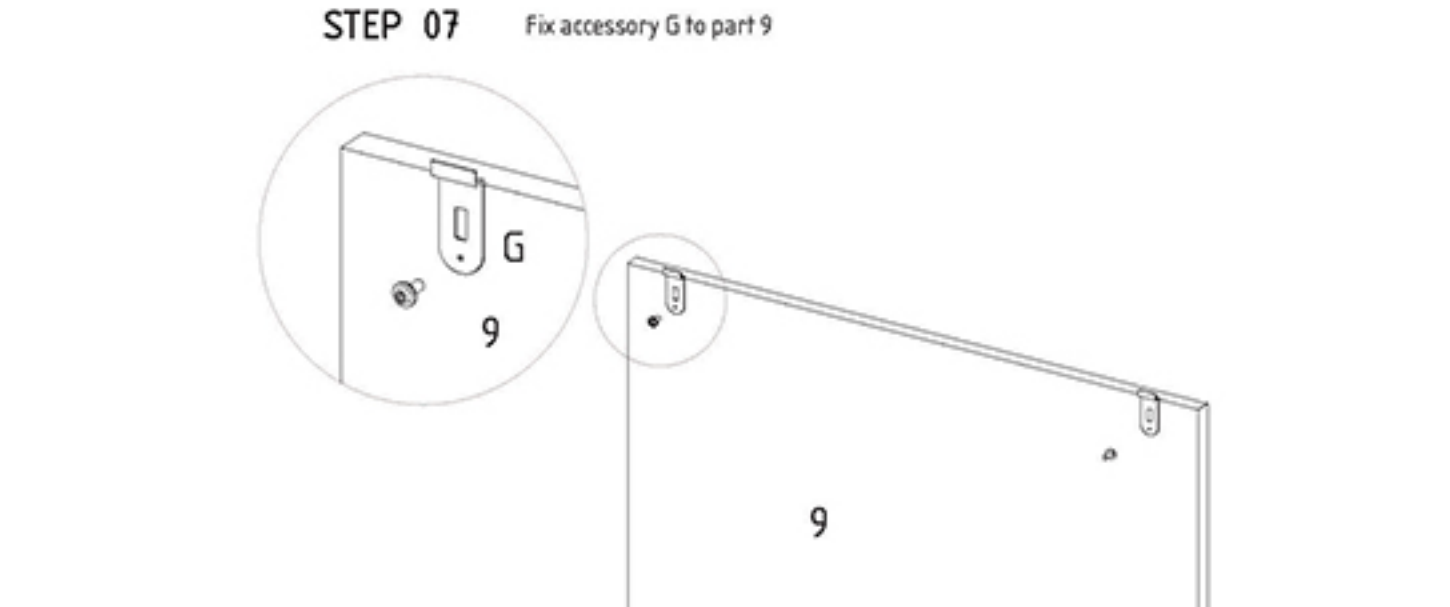


STEP 07

 Fix accessory G to part 9

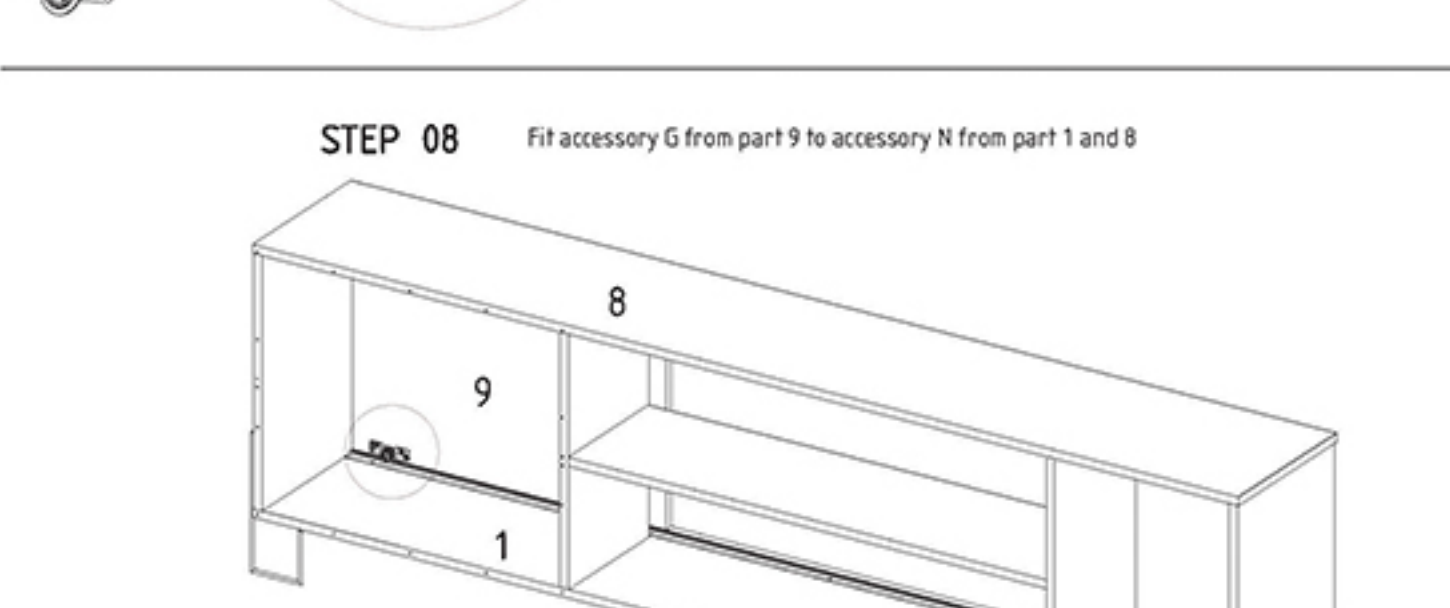


STEP 08

 Fit accessory G from part 9 to accessory N from part 1 and 8

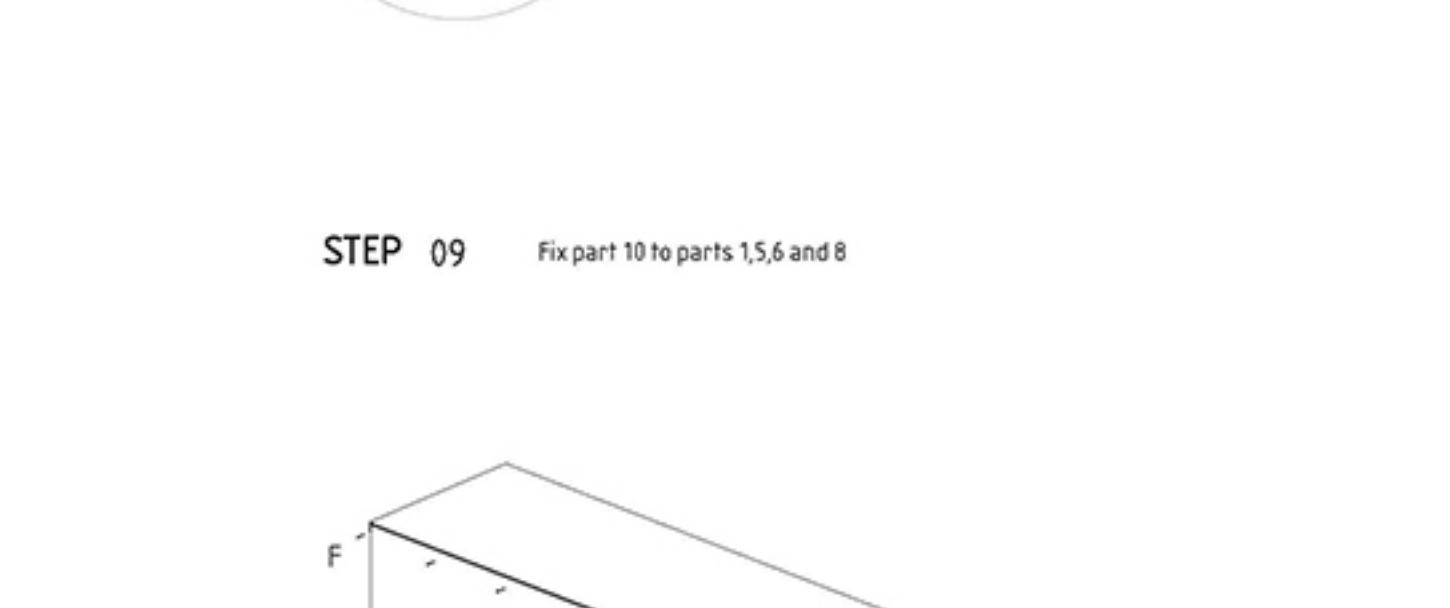

STEP 09

 Fix part 10 to parts 1, 5, 6 and 8

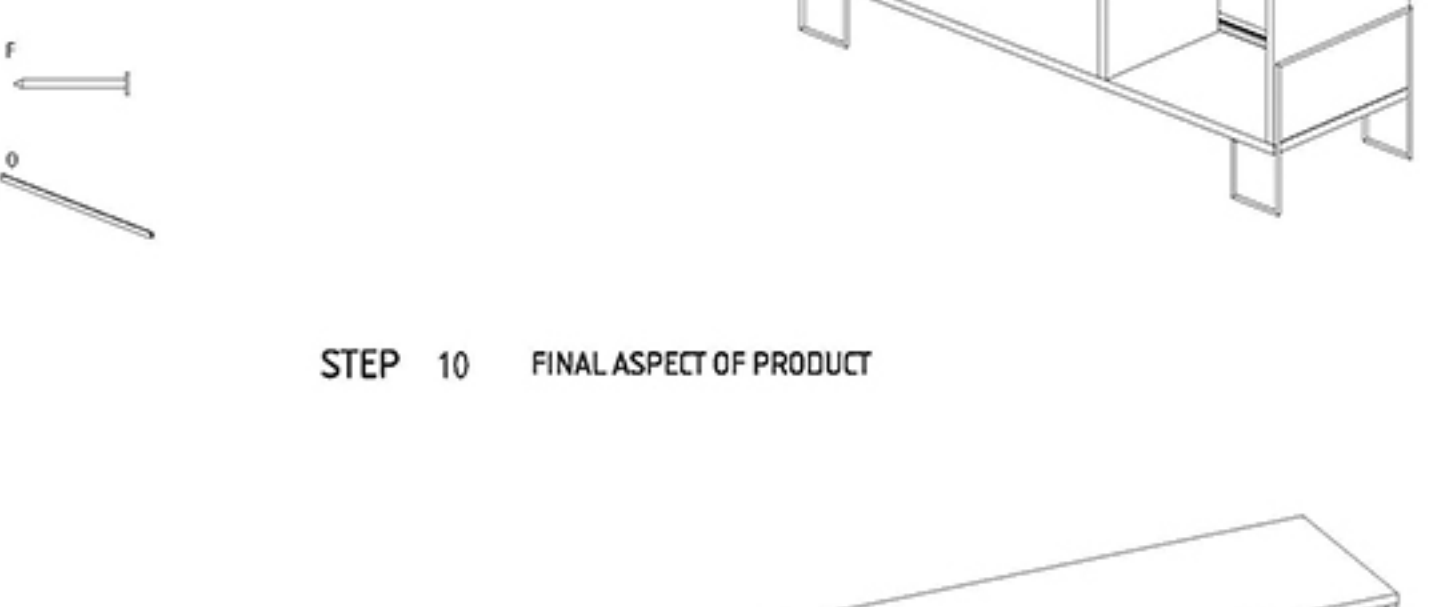

STEP 10

FINAL ASPECT OF PRODUCT



SPECIAL NOTES - TAKING CARE OF YOUR PRODUCT



NEVER USE A CHEMICAL CLEANING PRODUCT, IT CAN DAMAGE THE FINISH. FOR CLEANING, USE A SLIGHTY DAMP CLOTH AND WIPE DRY.



NEVER LET LIQUIDS OR DAMP ON THIS FURNITURE.



TO AVOID DULLING OF THE FINISH, DO NOT PLACE FURNITURE IN DIRECT SUNLIGHT.



TO CLEAN, USE A SOFT OR SLIGHTLY DAMP CLOTH, THEN WIPE WITH A CLEAN, DRY CLOTH, PREFERABLY USE A NEUTRAL SOAP.