 


INSTALLATION INSTRUCTIONS

DeerValley®

Sliding Shower Door

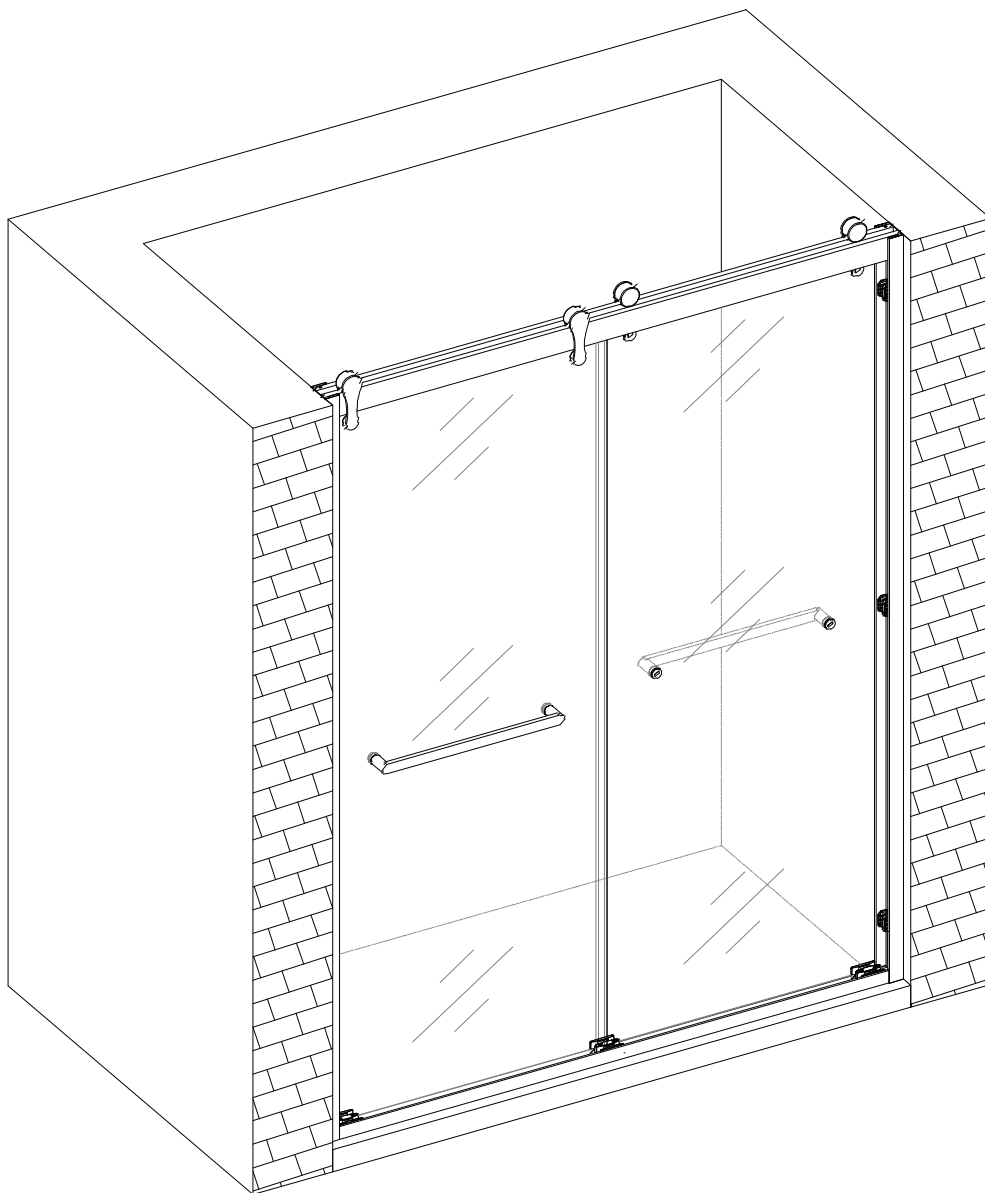

Watch the Installation Video

SCAN THE QR CODE BELOW TO WATCH THE STEP-BY-STEP INSTALLATION GUIDE

This video provides a detailed demonstration to help you complete the installation.

 
 


 <https://youtu.be/CMztuMYsQ4w>

If the QR code doesn't work, please enter this URL in your browser.

TIP : We recommend watching the full video before starting the installation.

Product Breakdown Diagram

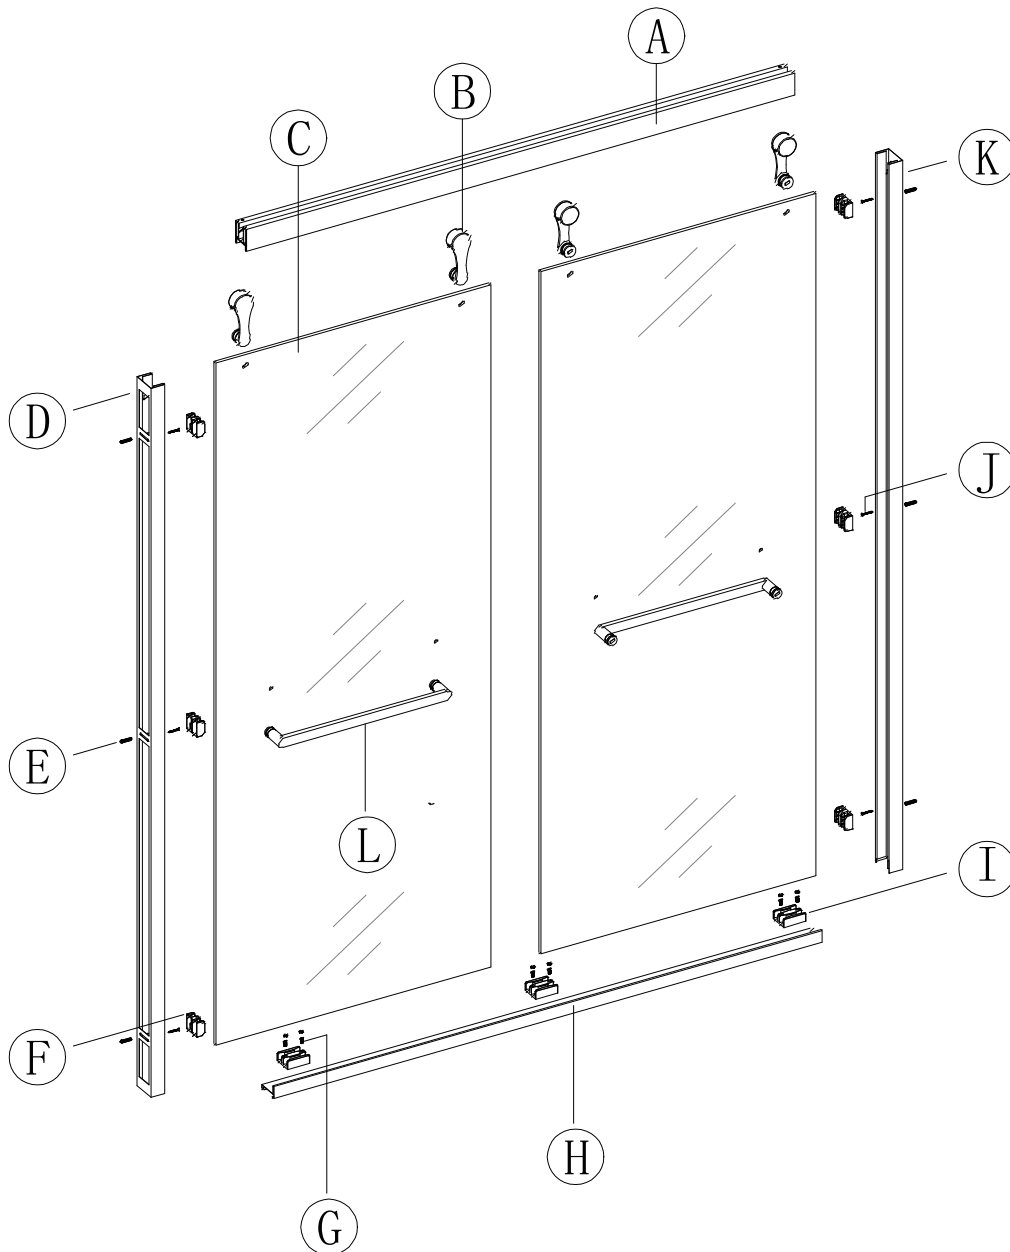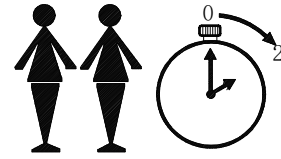

**If you have any questions or concerns
please contact us:**

(312) 626-9466
service@deervalleybath.com

Receiving the Product

Upon receiving the product, please immediately inspect it for any transportation damage, missing parts, or manufacturing defects.


 
 
 
 
 
 
 
 

Cleaning and Maintenance

1. For daily cleaning, use a general liquid detergent and a soft cloth.
2. If there are stains, gently wipe with a clean, soft towel or a small amount of neutral soap or toothpaste.
3. To make the glass surface shiny, use a polishing agent.


Notes

1. Do not use acids, alkalis, or sharp tools during cleaning to avoid damaging the surface of the shower basin, glass, aluminum, and other accessories.
2. Avoid strong detergents containing acetone or ammonia. When disinfecting, do not use products containing formic acid or formaldehyde to prevent damage to the product's surface gloss.
3. When showering, avoid using your body or hard objects to contact or impact the glass surface to prevent accidents.
4. Regularly check the shower room for any abnormalities. If any issues are found, please contact the after-sales service department promptly.


Tools Details (Not Included)

Tool Name	Illustration	Tool Name	Illustration
Tape Measure		Electric Drill	
Level		Hammer	
Marker Pen		Screwdriver	
1/4" Drill Bit		Allen Wrench	
Utility Knife		Silicone Sealant	

 
List of Accessories

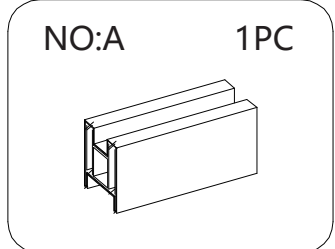


Upper Guide Rail

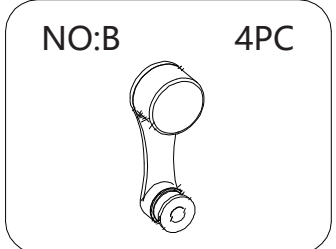 


Hanging Wheel

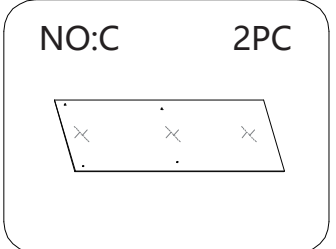 


Movable Door

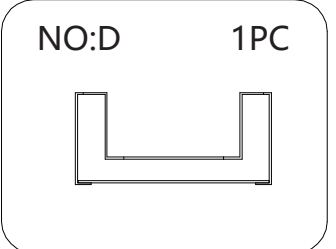 


Left Frame

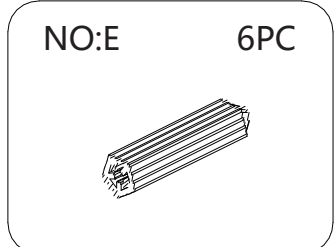 


Wall Plug

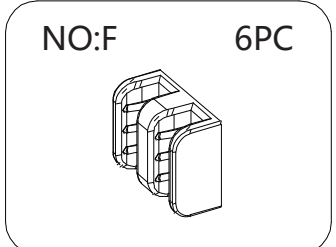 


Anti-Collision Part

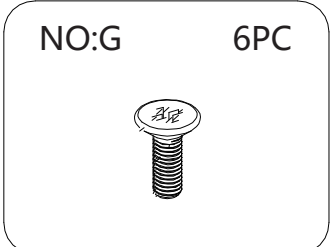 


Screw A

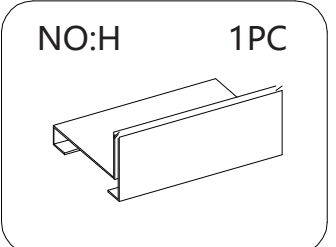 


Lower Guide Rail

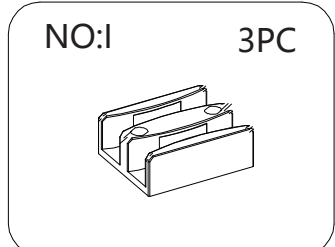 


Guide Block

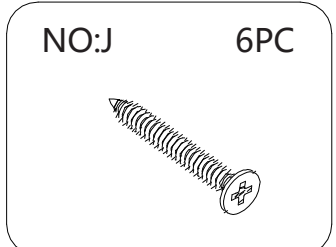 

Screw B

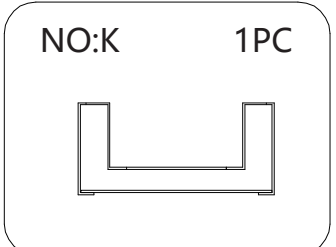 


Right Frame

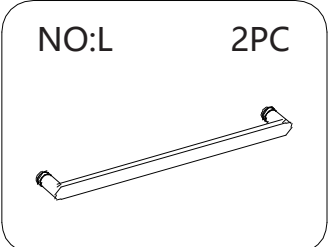 


Handle

Drawings may not exactly define contour of the product.

 
Installation steps

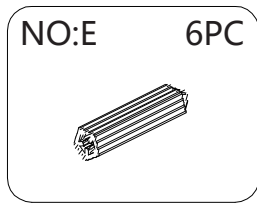


Wall Plug

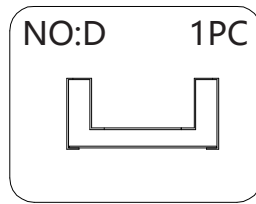 

Left Frame

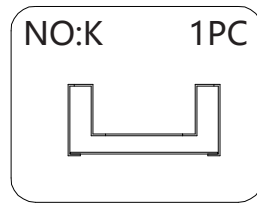 


Right Frame

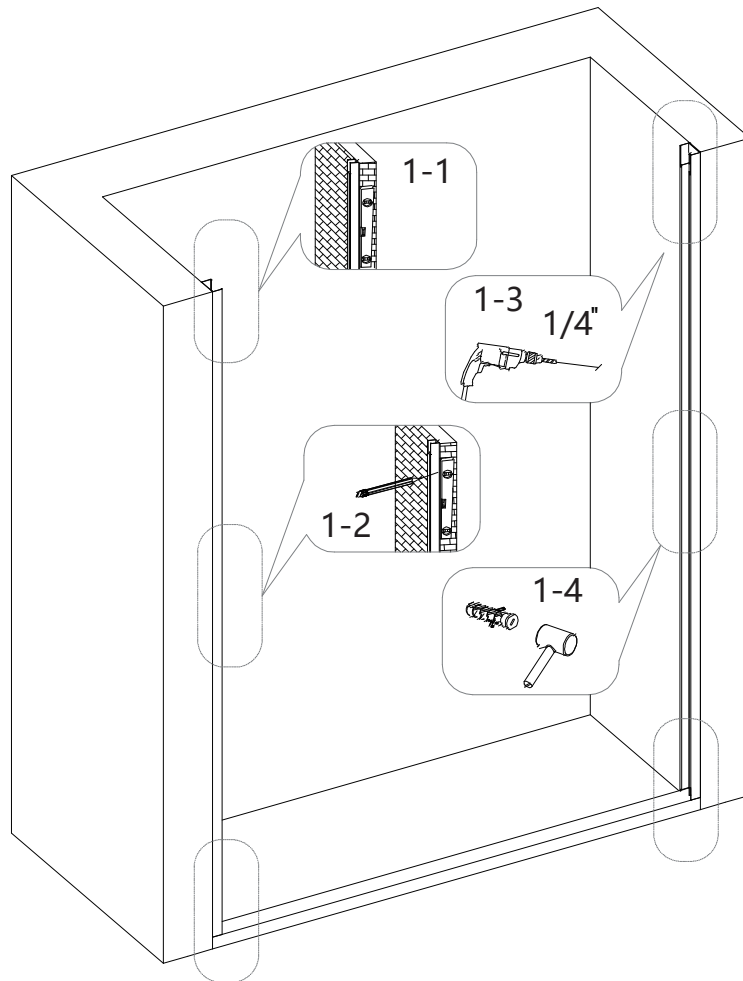 


Step 1: Positioning the Wall-Mounted Frame

 - 1-1. Place the frames on both sides against the wall on the base. Ensure they are centered.
- 1-2. Use a level to adjust the frames to a vertical position, and use a marker to locate and mark the locking hole positions on the wall.
- 1-3. Use a 1/4" drill bit to drill holes at the marked points.
- 1-4. Insert wall plugs into the drilled holes, ensuring the end face is flush with the wall.

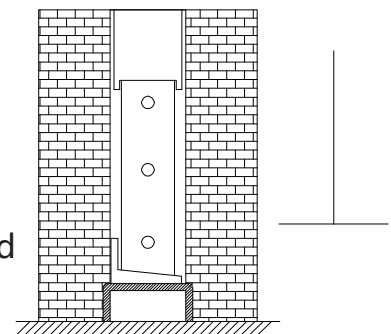


Drawings may not exactly define contour of the product.

 
Installation steps

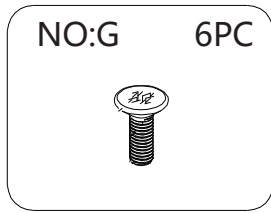


Screw A

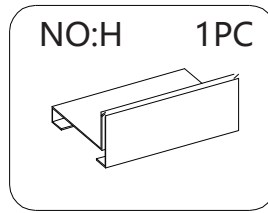 

Lower Guide Rail

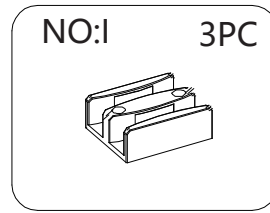 


Guide Block

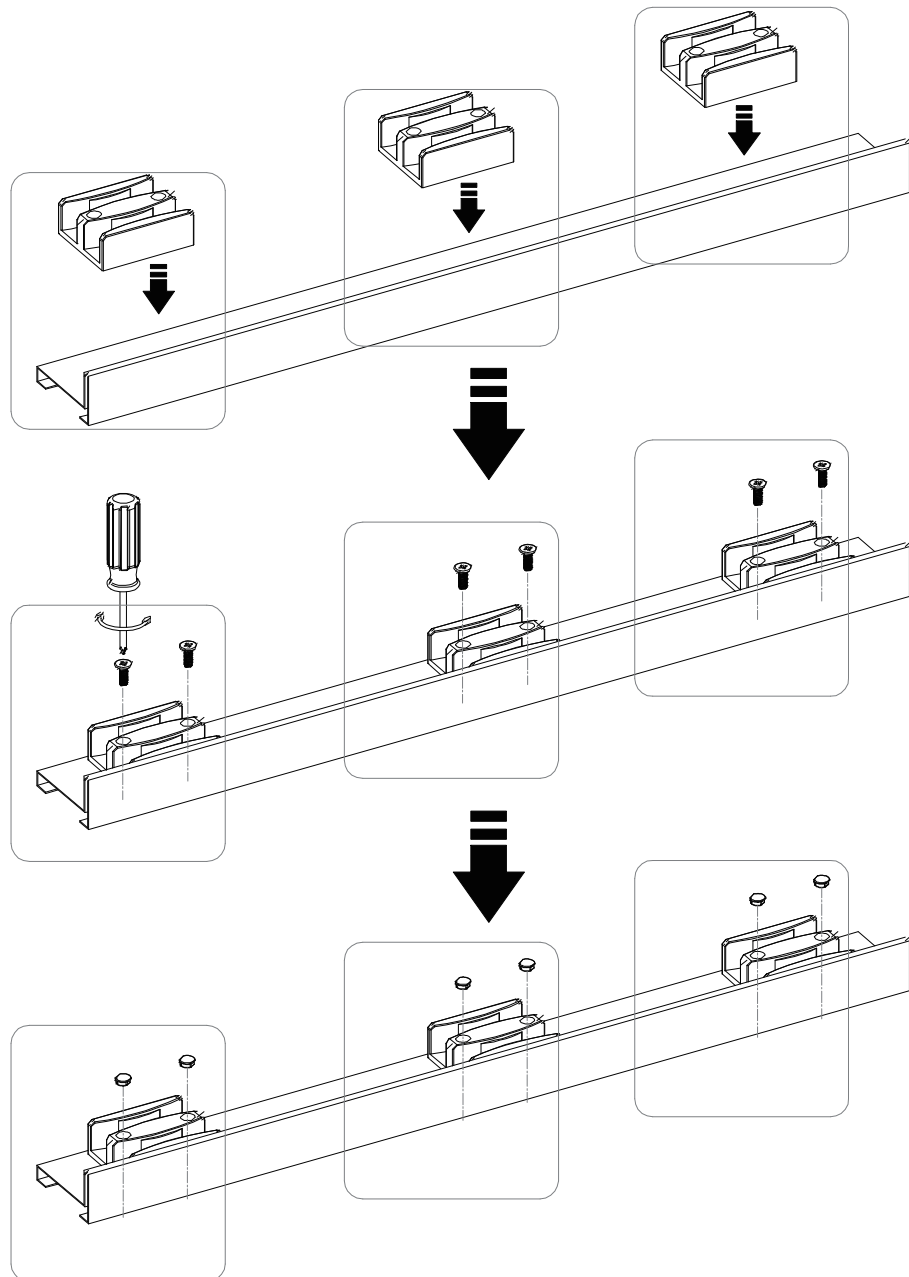 


Step 2: Assembling the Lower Guide Rail Components

Drawings may not exactly define contour of the product.

 
Installation steps

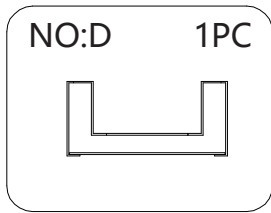


Left Frame

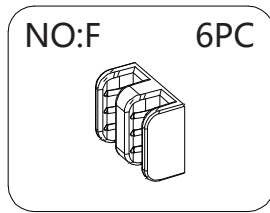 


Anti-Collision Part

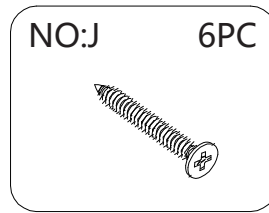 


Screw B

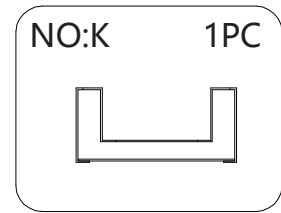 

Right Frame

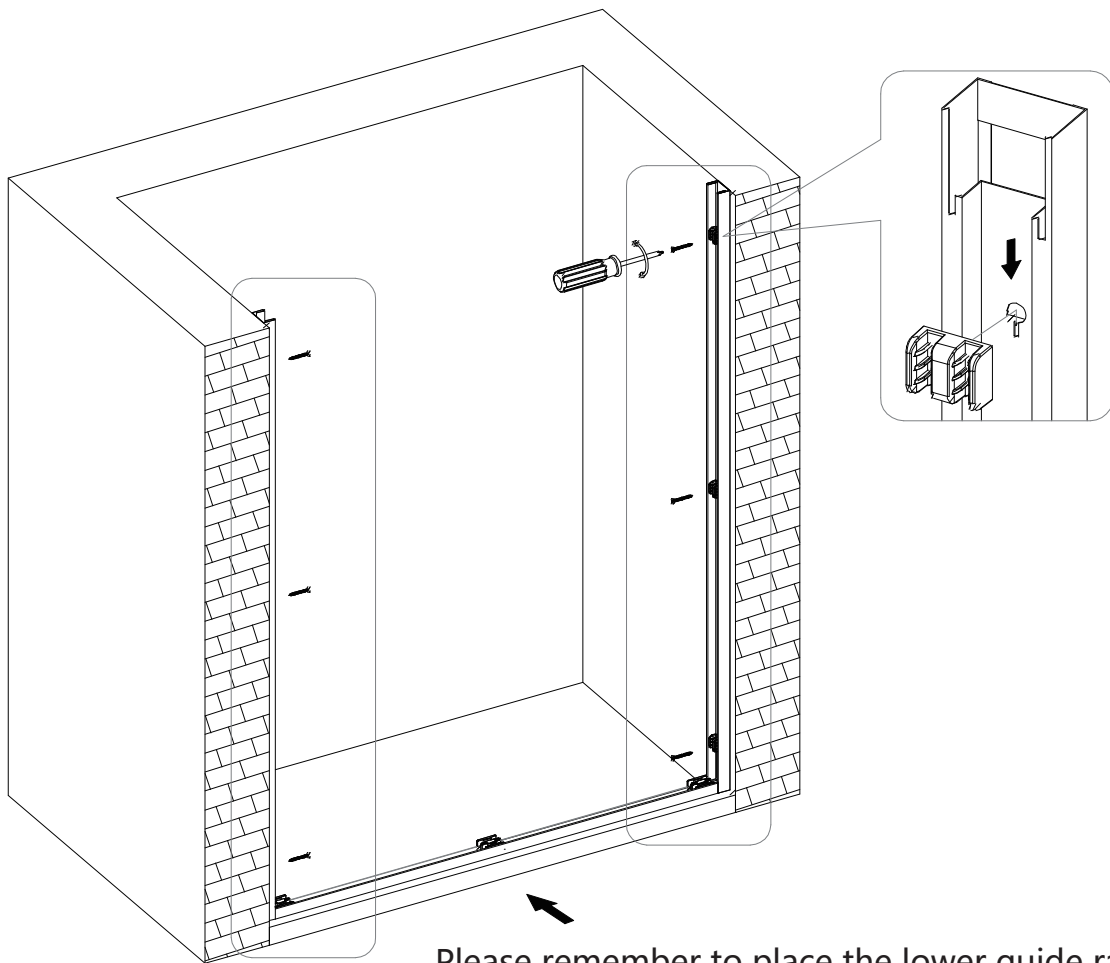 

 
Please remember to place the lower guide rail on the base when locking the frame.

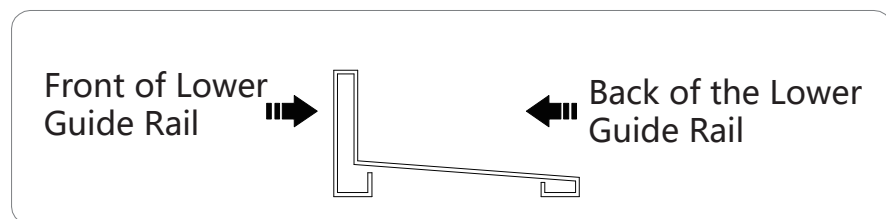


Step 3: Reinforcing the Wall Frame with Locking Screws

Drawings may not exactly define contour of the product.

 Installation steps


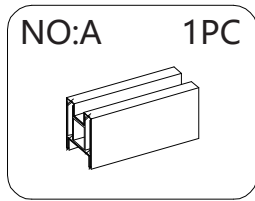


Upper Guide Rail

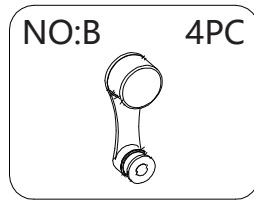 


Hanging Wheel

  
Step 4: Installing the Upper Guide Rail and Hanging Wheel

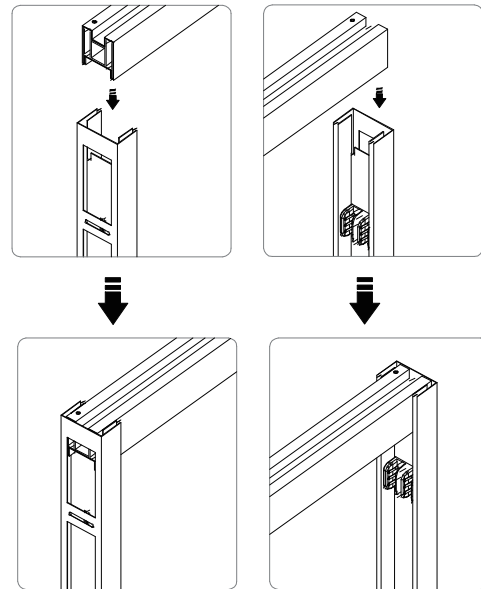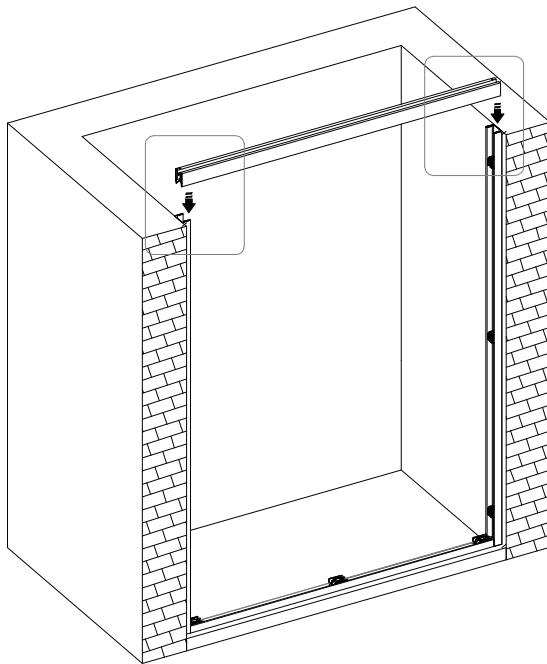

 Insert the upper guide rail into the left and right frames

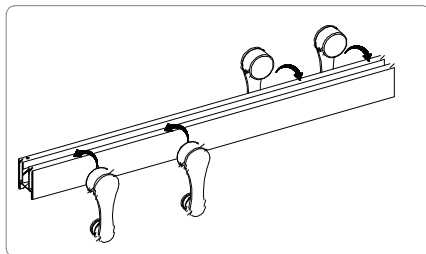


 Hang the wheel, paying attention to distinguishing between the inside and outside wheels.

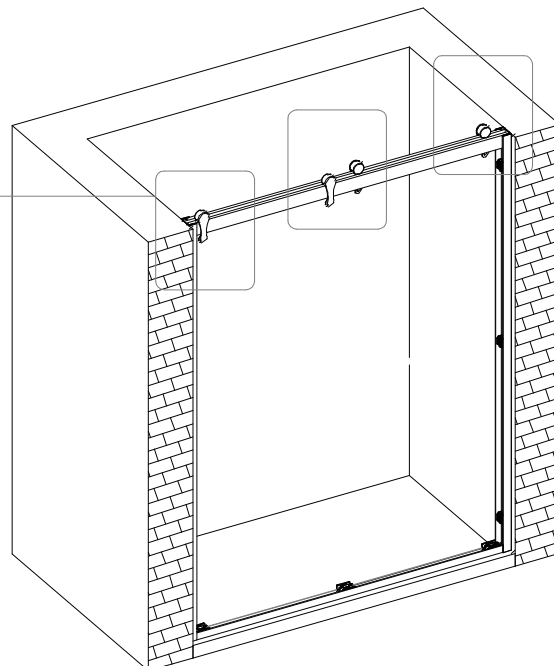




Drawings may not exactly define contour of the product.

 Installation steps

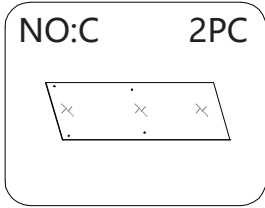


Movable Door

   Step 5: Installing the Movable Door Glass

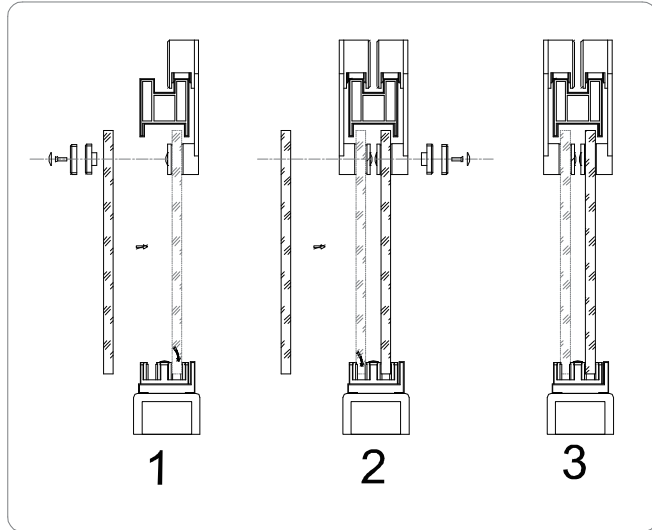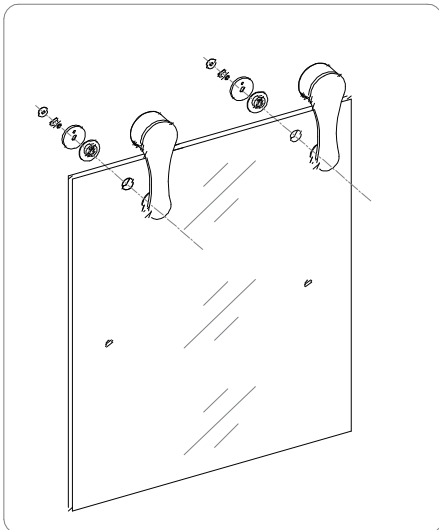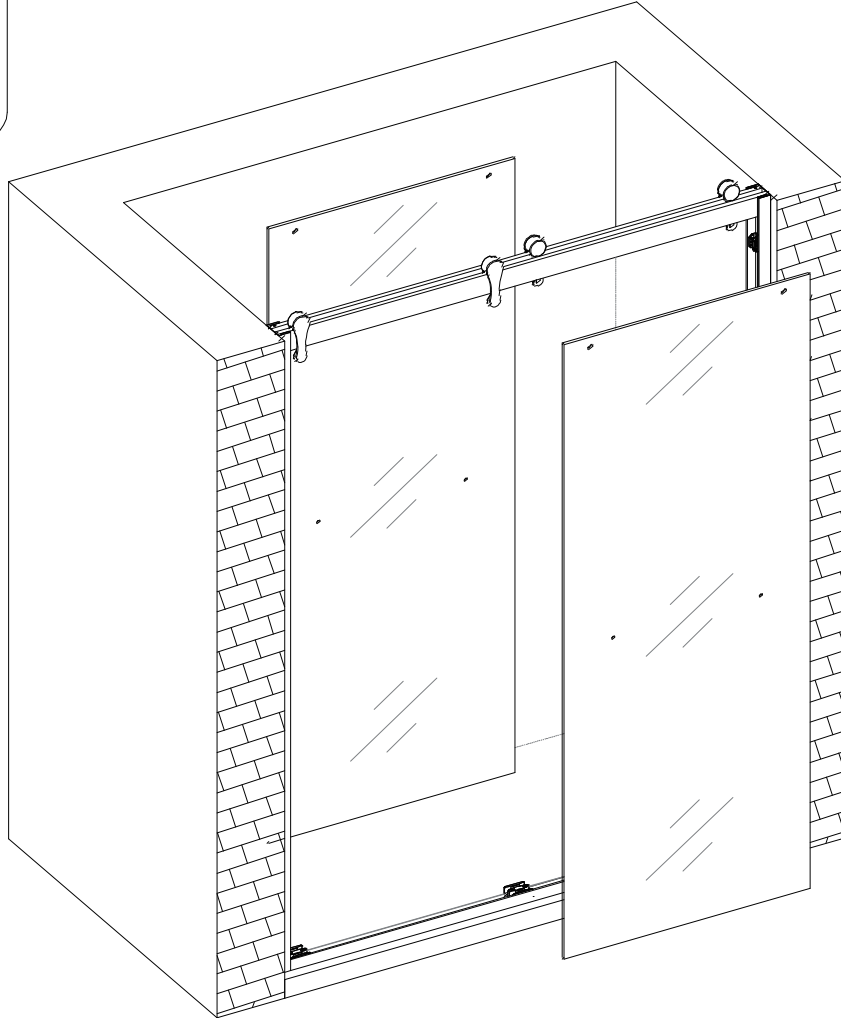



Drawings may not exactly define contour of the product.

 Installation steps

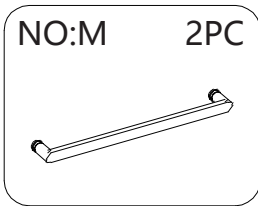

Handle



 
 
Step 6: Installing the Movable Door Handle

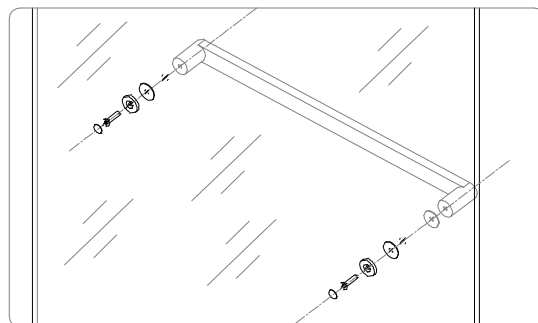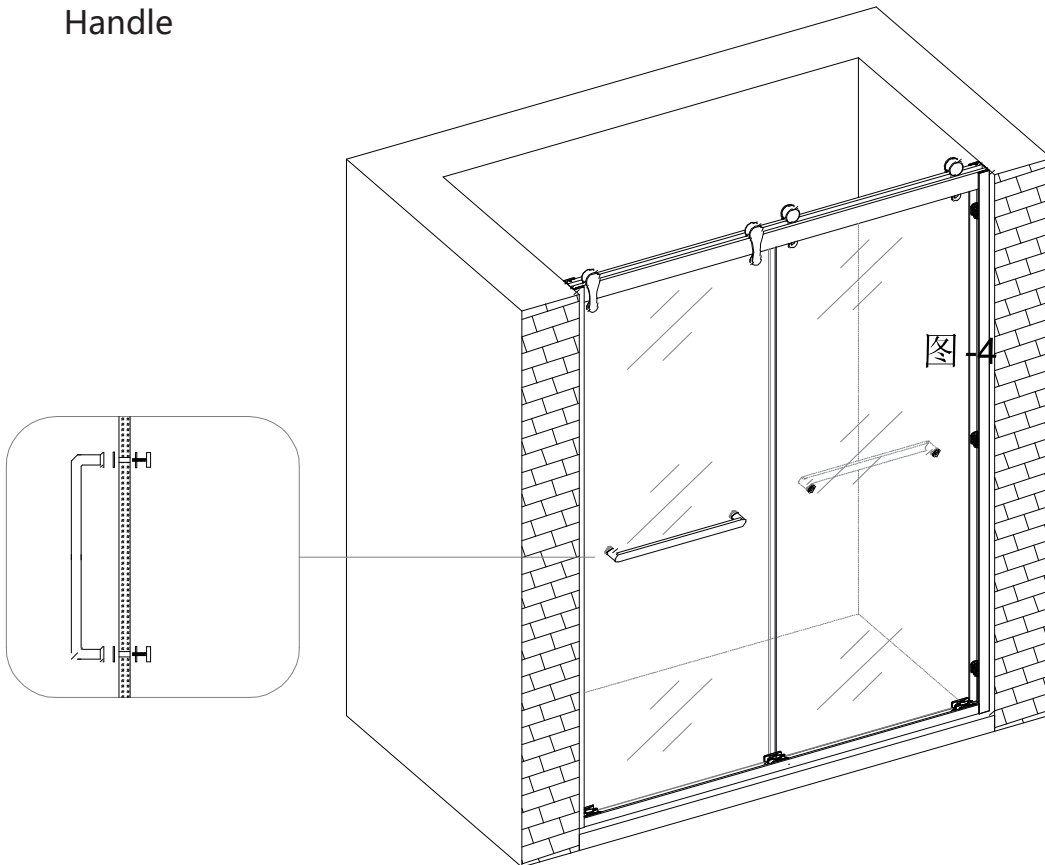


Attention: The handle of the outer groove door glass should face outward, while the handle of the inner groove door glass should face inward.

Drawings may not exactly define contour of the product.

    Installation steps

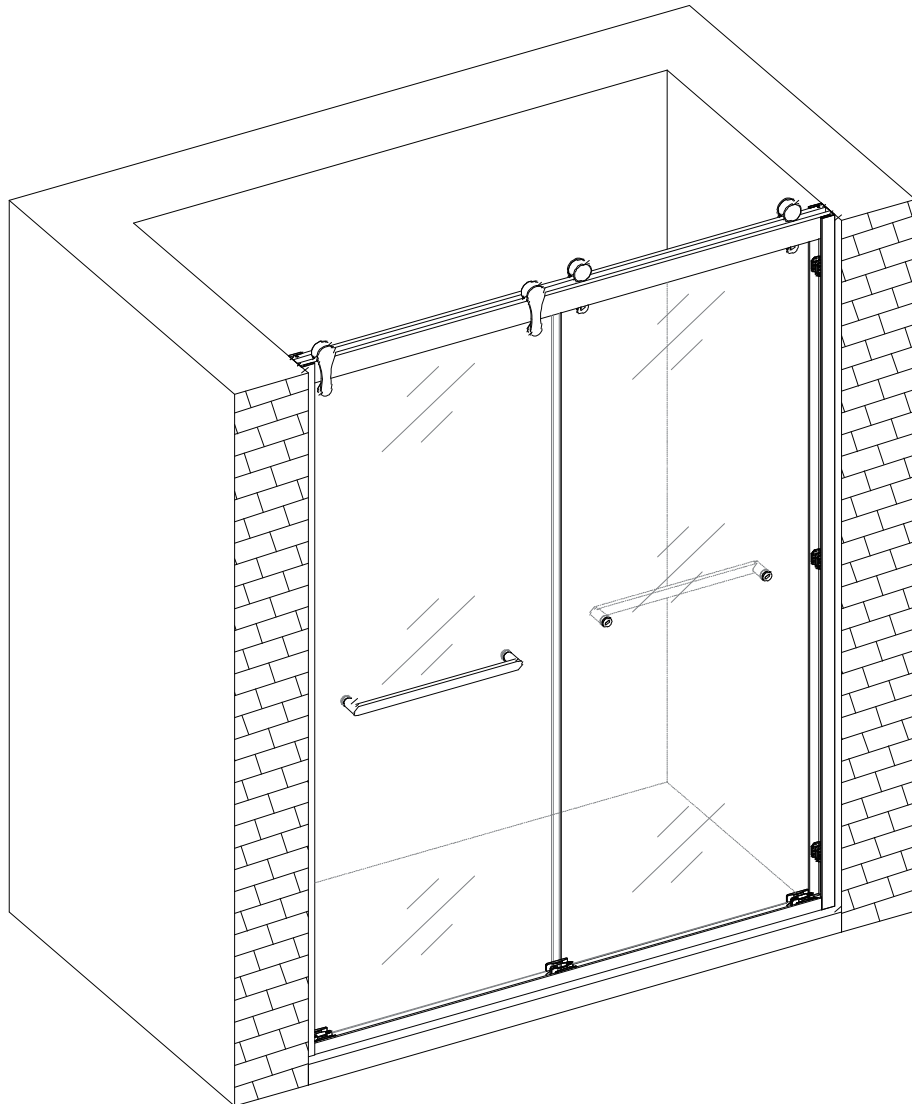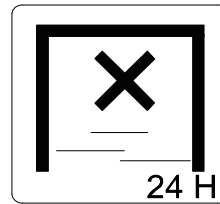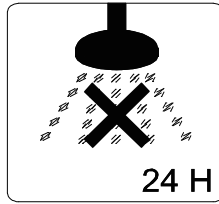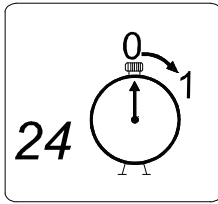

 After completing the installation, confirm that there are no abnormalities. Apply silicone sealant to ensure waterproofing.

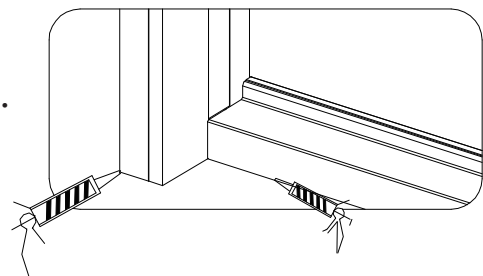

Drawings may not exactly define contour of the product.

LIMITED WARRANTY COVERAGE

1 YEAR LIMITED WARRANTY

DeerValley products are made with quality materials and excellent craftsmanship to provide the customers a long-lasting product. In the case of any defects in materials or craftsmanship under regular use were inspected in the first one year of delivery, DeerValley will provide replacement parts at no charge, or at its option, replace any product or part of the product that is deemed defective, under normal installation, use, service and maintenance. This warranty applies only to the original purchaser. Proof of purchase will be required in the case of a claim. **SCRATCHES ARE NOT COVERED UNDER WARRANTY.**

The manufacturer warrants this product to be free of manufacture defects during the above mentioned warranty time. Please keep a copy of the original invoice as proof of purchase.

DeerValley will, as its option, (1) repair or replace the defective part(s) or product(s) at no charge; (2) issue a refund of the original purchase price of the product(s) (Valid within 30 days from the date of delivery); or (3) issue a credit to be applied toward the purchase of a new DeerValley product shipping/delivery charges may apply and are in DeerValley sole discretion.

DeerValley recommends the installations to be made by a licensed, professional plumber. DeerValley will not be held responsible for any damage or product failure due to improper installation, misuse, or failure to use a licensed professional. DeerValley is not responsible for any removal or installation cost.

This limited warranty shall not apply to goods which have been subject to accident, negligence, improper installation, product abuse, product misuse, or use of cleaners containing abrasives, alcohol or other organic solvents, whether performed by a contractor, service company, or yourself, are excluded from this warranty.

DeerValley responsibility under this limited warranty is limited to only to replacement parts and no other costs. DeerValley will not be responsible for labor charges and/or damage incurred by installation, repair or replacement, nor for any indirect incidental or consequential damages, losses, injury or costs of any nature relating to this product Except as provided by law, this limited warranty is in lieu of and excludes all other warranties, conditions, and guarantees, whether expressed or implied, statutory or otherwise, including without restriction those merchantability of fitness for use.

RESPONSIBILITIES OF OTHERS

Inspecting the unit prior to installation is the responsibility of the installer or building contractor who acts on behalf of the user. They are responsible for ensuring the unit is free of defect or damage.

Notices are placed on and in the unit and on the shipping carton advising the installer of this responsibility.

In the event of a problem, the unit must not be installed. DeerValley is not responsible for failures or damage that could have been discovered, repaired, or avoided by proper inspection and testing prior to installation.

Damage occurring in transit is the responsibility of the carrier. The user or installer **MUST** open the crate and inspect the unit for damage when it is delivered. If damage is discovered, it must be reported immediately to the seller and the carrier in writing, and an inspection requested. Failure of the carrier to respond should be reported to the seller and the carrier. Your freight claims should be filed promptly thereafter.

LIMITATIONS AND EXCLUSIONS

This warranty does not cover instances of negligence, misuse, abuse, improper installation, carelessness, accident, hard water or mineral deposits, exposure to corrosive materials, misapplication, damages caused by improper maintenance, alteration of the product, or failure to follow care or installation instructions enclosed with your product. The warranty becomes invalid if the DeerValley product undergoes any alterations or if attempts are made to carry out repairs using unauthorized accessories or parts from DeerValley.

DeerValley will not be liable for loss of use of the DeerValley products, inconvenience, or any other incidental or consequential costs, expense or damages. Please note that some states do not allow the exclusion or limitation of incidental damages.

DISCLAIMER

Except as expressly provided, there shall be no warranty or obligation, express or implied, oral or statutory. No dealer or other person has the authority to make any warranties or representations concerning DeerValley or its products. In no event shall DeerValley be held responsible for any such warranties or representations.

WARRANTY SERVICE

NOTE: When requesting warranty, be sure to have the following:

- Copy of original invoice
- Date of installation
- Description and pictures of defect
- Model number or description of model

To obtain warranty service and replacement part, please contact DeerValley Customer Service. DeerValley will determine whether to repair or replace your product, issue a refund, or issue a credit.