 
 


PARTS AND HARDWARE


Avoid using sharp objects such as a knife to cut open packing as you may accidentally damage the upholstery.




A. Table Top
1x




B. Table Glass
1x

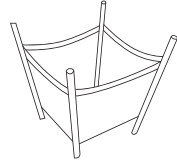

C. Table Base
1x

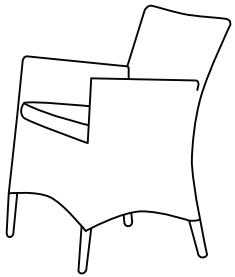

 
D. Chair
4x




E. Cushions
4x



 F. Bolt
4x



 G. Washer
4x





H. Allen Key
1x

ASSEMBLY INSTRUCTIONS

Do not fully tighten bolts until assembly is complete.

- 1 Assemble the Table Base to the table top using bolt (F) and washer (G). After you have attached the top to the base, carefully Place the Glass top on top of the Assembled table base.

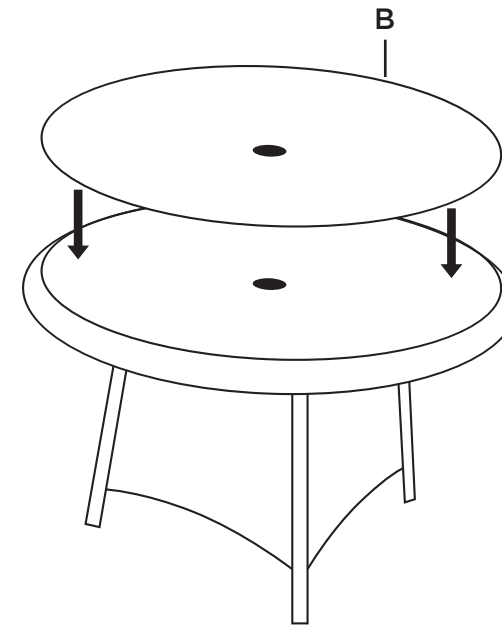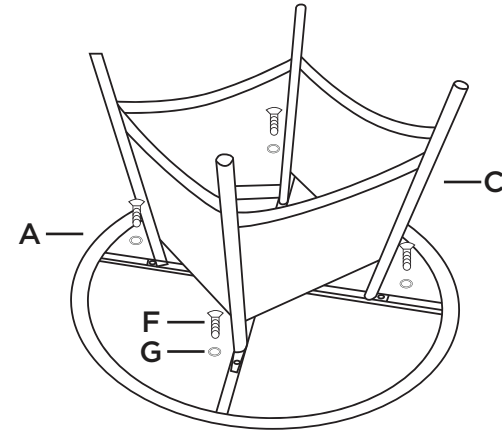


2 The Chairs for your set come completely assembled. Unpack and place seat cushions and enjoy your new outdoor dining Set.


Model: _____

Lot No: _____

Date of Purchase: _____

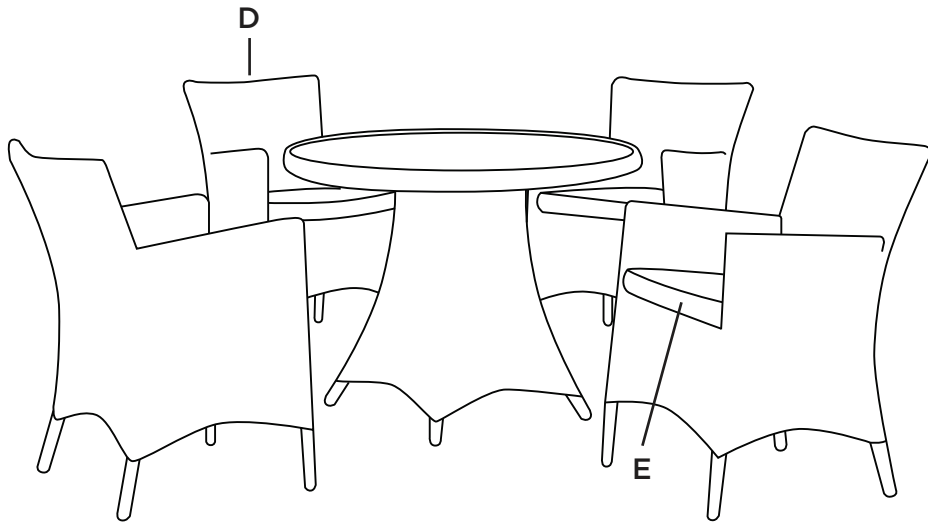

5 PC SET

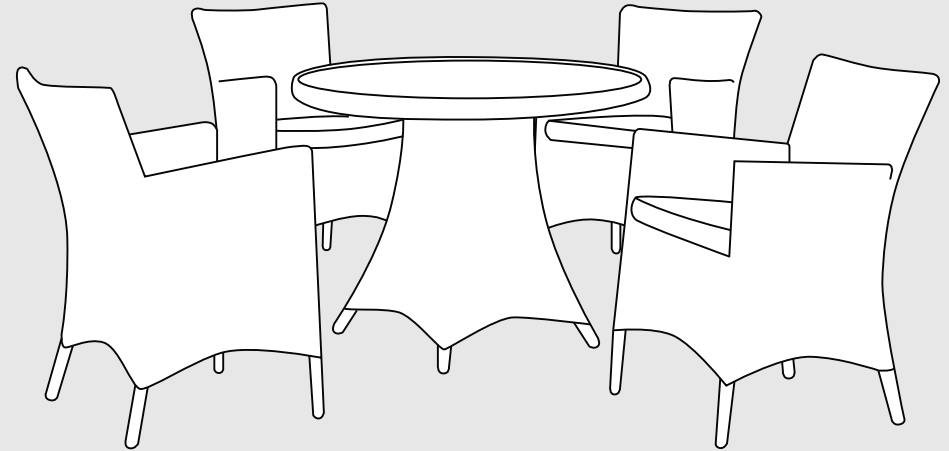

ADULT ASSEMBLY REQUIRED

If you are missing any parts or have any questions regarding assembly, do not return this item to the retailers store. Please call our toll-free customer service number and have this assembly manual open to the parts list ready to provide the model name, and part name or number.



WARNING: This product may contain small components, please ensure they are kept away from small children.