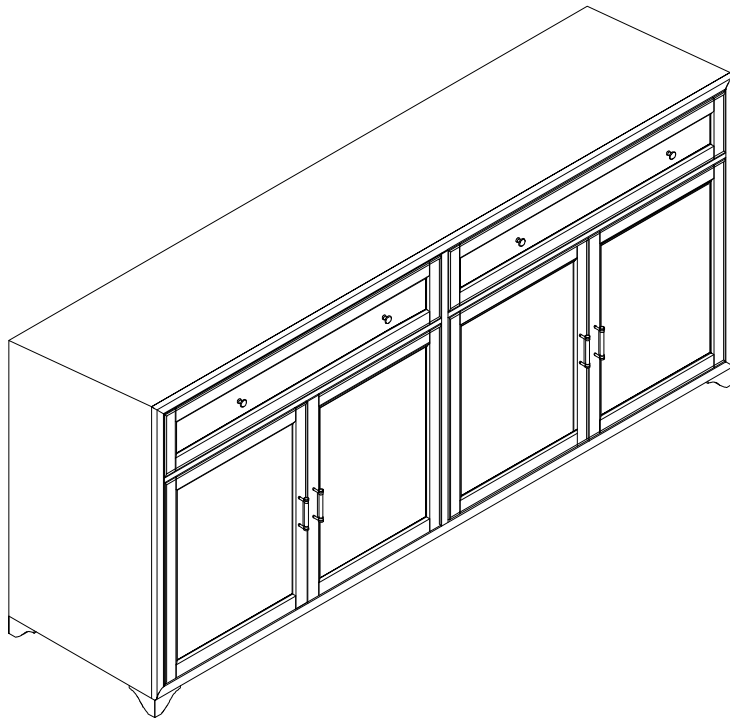


# **CROSLEY**

















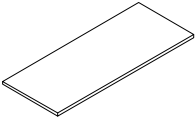
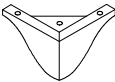

 
---

## FURNITURE




 



 
 



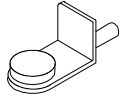



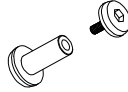




Sideboard  
CF4209

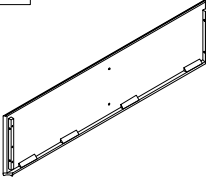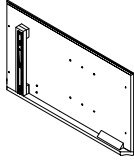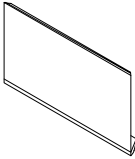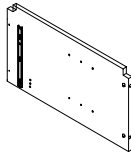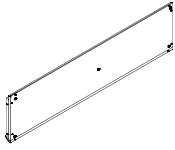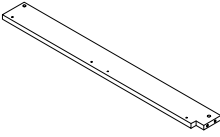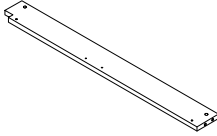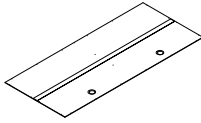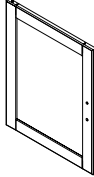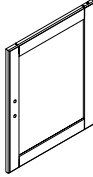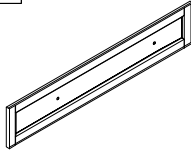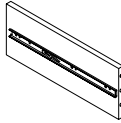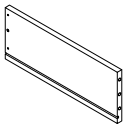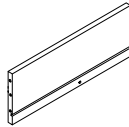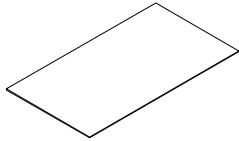

# PART LIST

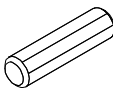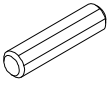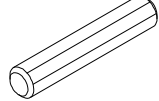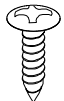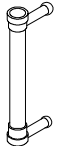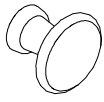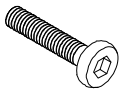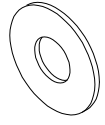A2 	B2 	C2 	D3 	E2 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Partition Panel 1 PC	Bottom Panel 1 PC
F2 	G2 	H3 	I2 	J2 
Left Cross Rail 1 PC	Right Cross Rail 1 PC	Back Panel 1 PC	Left Door 2 PCS	Right Door 2 PCS
K2 	L3 	M3 	N3 	O3 
Drawer Front Panel 2 PCS	Drawer Left Panel 2 PCS	Drawer Right Panel 2 PCS	Drawer Back Panel 2 PCS	Drawer Bottom Panel 2 PCS
P3 	Q3 	R2 	S2 	T 
Drawer Bottom Rail 2 PCS	Adjustable Shelf 2 PCS	Leg 4 PCS	Support Leg 1 PC	Cover 2 PCS

# HARDWARE LIST
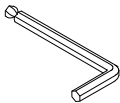
#1  Ø8*30mm Wood Dowel 10 PCS (Extra 1)	#2  Ø6*30mm Small Wood Dowel 8 PCS (Extra 1)	#3  Ø8*50mm Large Wood Dowel 1 PC (Extra 1)	#4  Double Magnet 2 PCS	#5  Round Head Screw 4 PCS (Extra 1)
#6  Handle 4 PCS	#7  Knob 4 PCS	#8  Short Round Head Bolt 4 PCS (Extra 1)	#9  Long Round Head Bolt 8 PCS (Extra 1)	#10  Bolt 12 PCS (Extra 1)
#11  1/4"*13mm Flat Washer 4 PCS (Extra 1)	#12  1/4"*10mm Spring Washer 4 PCS (Extra 1)	#13  Shelf Holder 8 PCS (Extra 1)	#14  Screw 22 PCS (Extra 1)	#15  Cam Bolt 28 PCS (Extra 1)
#16  Cam Lock 28 PCS (Extra 1)	#17  Binding Post 2 PCS (Extra 1)	#18  Cam Sticker 28 PCS (Extra 1)	#19  M2 Small Allen Wrench 1 PC	#20  M4 Allen Wrench 1 PC
#21  Safety Strap Kit 1 SET				

## ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.





Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

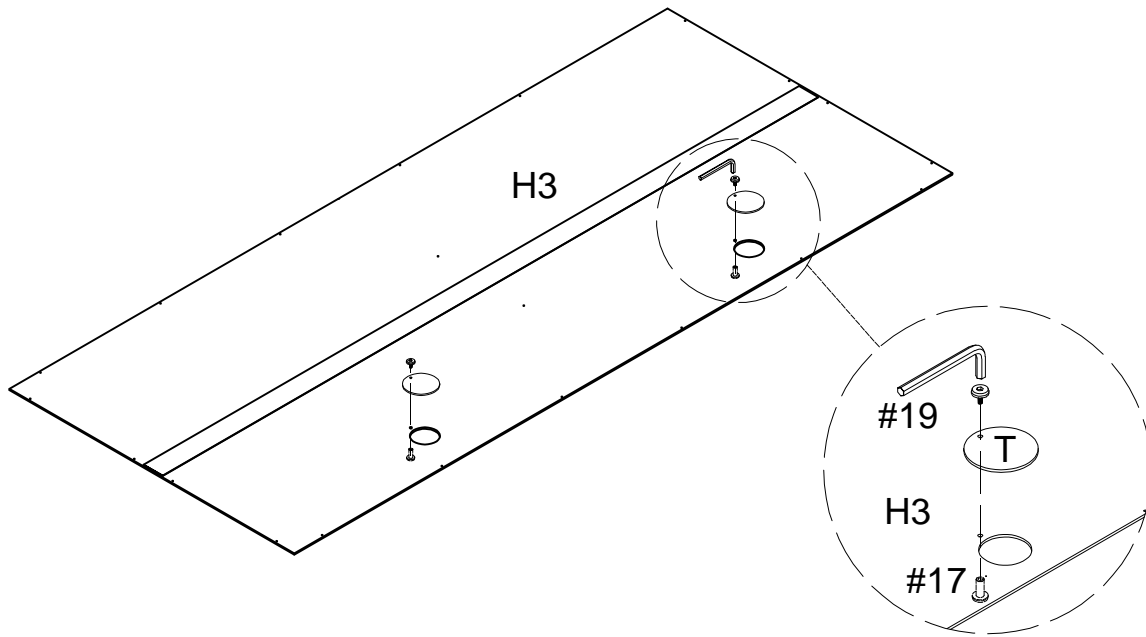





Step 1. Attach covers (part T) to back panel (part H3) using binding posts (part #17) and small allen wrench (part #19).

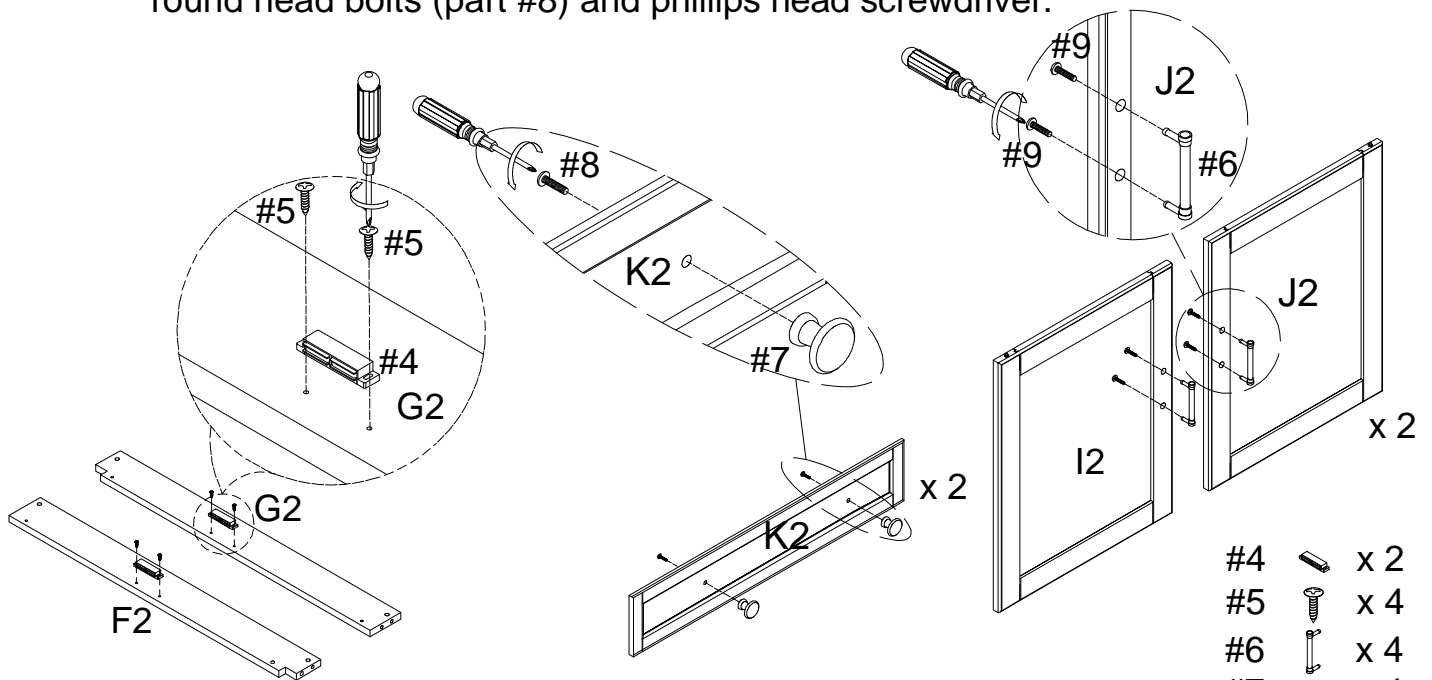

- #17  x 2
- #19  x 1


Step 2. Attach double magnets (part #4) to rails (parts F2 & G2) using round head screws (part #5) and phillips head screwdriver. Attach handles (part #6) to doors (parts I2 & J2) using long round head bolts (part #9) and phillips head screwdriver. Attach knobs (part #7) to drawer front panels (part K2) using short round head bolts (part #8) and phillips head screwdriver.



- #4  x 2
- #5  x 4
- #6  x 4
- #7  x 4
- #8  x 4
- #9  x 8


Step 3. Insert cam bolts (part #15) into pre-drilled holes of panels (parts A2, B2, C2, D3, E2, K2, L3, M3 & P3) using phillips head screwdriver.

Note: Do not overtighten cam bolts. Stop tightening once threads on cam bolts are no longer visible.

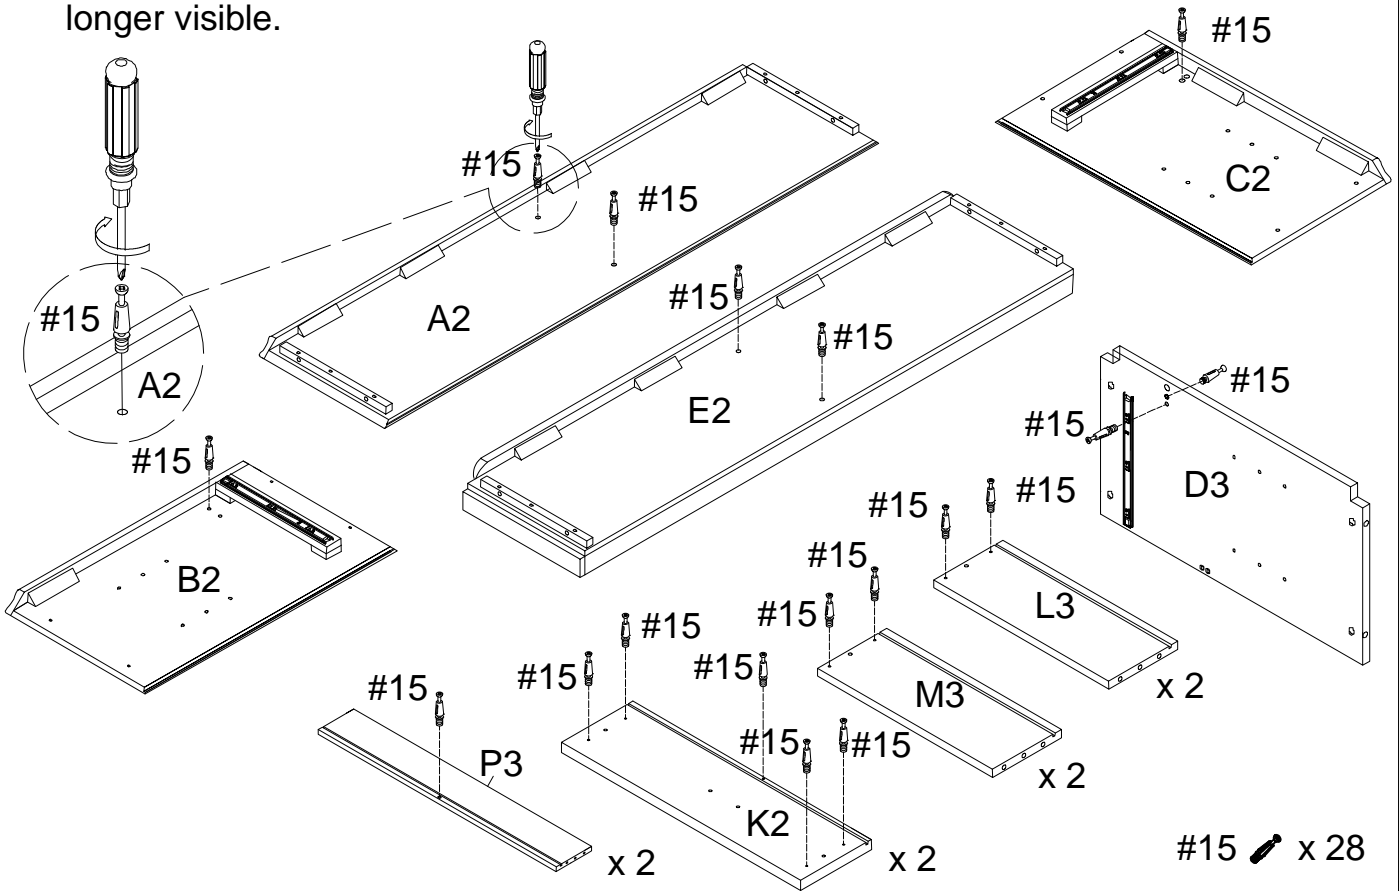


Step 4. Attach drawer panels (parts L3 & M3) to drawer back panel (part N3) using small wood dowels (part #2), cam locks (part #16) and phillips head screwdriver. Slide drawer bottom panel (part O3) into grooves of assembled unit (parts L3, M3 & N3). Attach drawer bottom rail (part P3) to drawer back panel (part N3) using cam lock (part #16) and phillips head screwdriver. Attach drawer front panel (part K2) to assembled unit (parts L3, M3, O3 & P3) using small wood dowels (part #2), cam locks (part #16) and phillips head screwdriver. Repeat for remaining drawer.

Note: Cam locks must rotate a full 180°. See pictured insert.

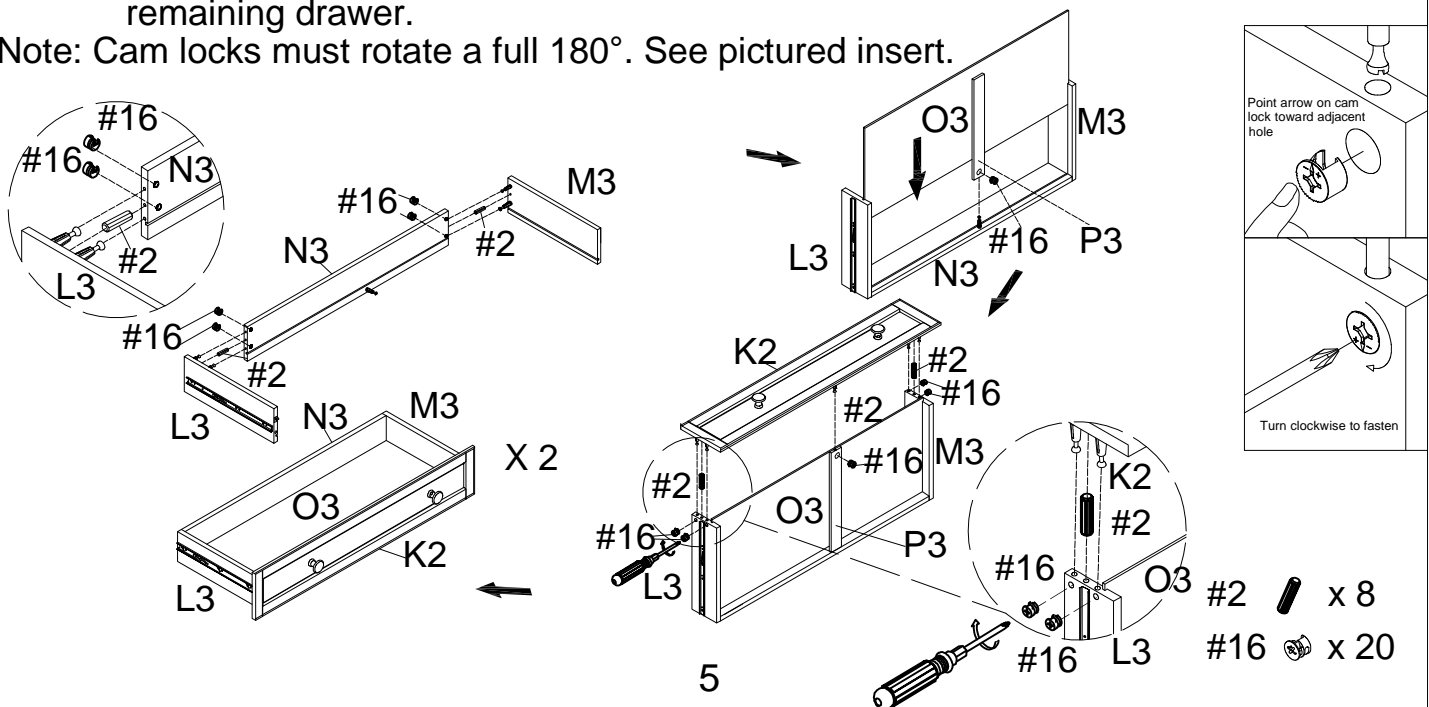


Step 5. Attach legs (part R2) to bottom panel (part E2) using wood dowels (part #1), bolts (part #10), flat washers (part #11), spring washers (part #12) and allen wrench (part #20). Attach support leg (part S2) to bottom panel (part E2).

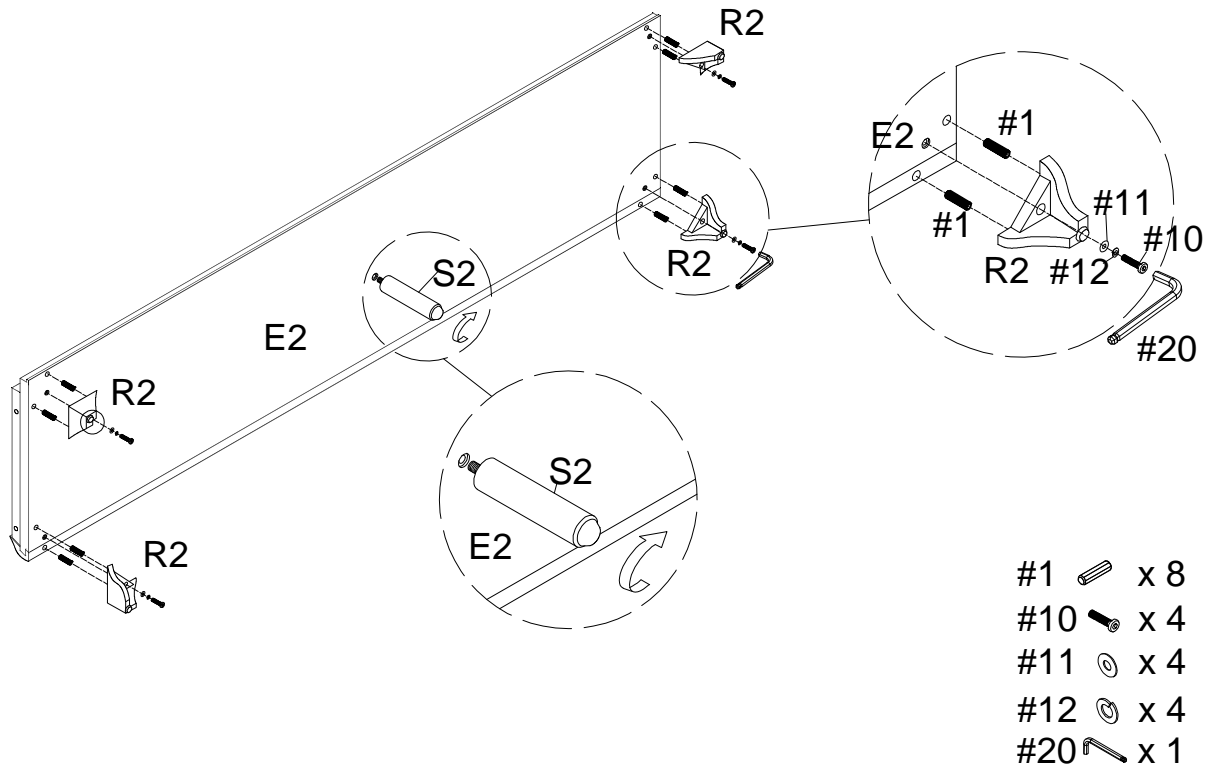


Step 6. Attach partition panel (part D3) to bottom panel (part E2) using cam locks (part #16) and phillips head screwdriver. Attach left cross rail (part F2) to partition panel (part D3) using cam lock (part #16) and phillips head screwdriver. Attach left panel (part B2) to bottom panel (part E2) and left cross rail (part F2) using bolts (part #10), cam lock (part #16), allen wrench (part #20) and phillips head screwdriver. Attach right cross rail (part G2) to partition panel (part D3) using large wood dowel (part #3), cam lock (part #16) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.

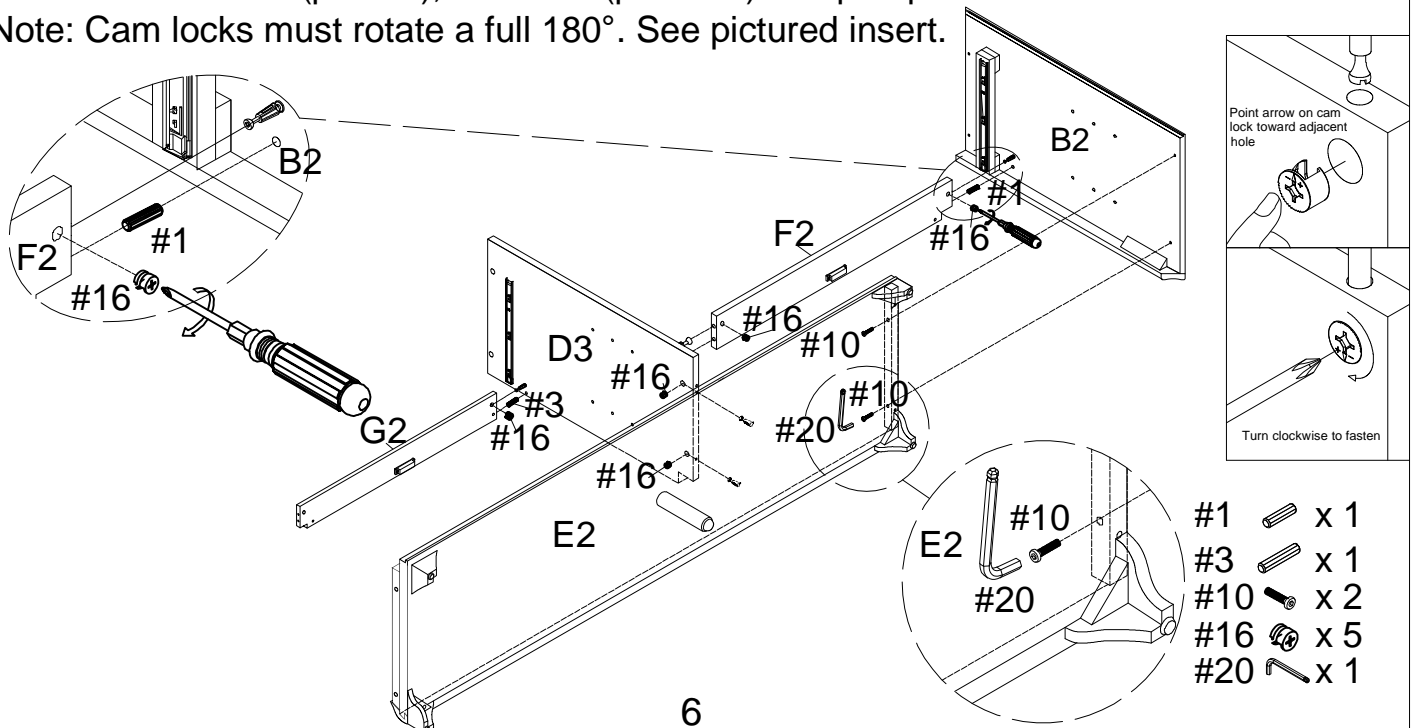


Step 7. Attach right panel (part C2) to bottom panel (part E2) and right cross rail (part G2) using wood dowel (part #1), bolts (part #10), cam lock (part #16), allen wrench (part #20) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.

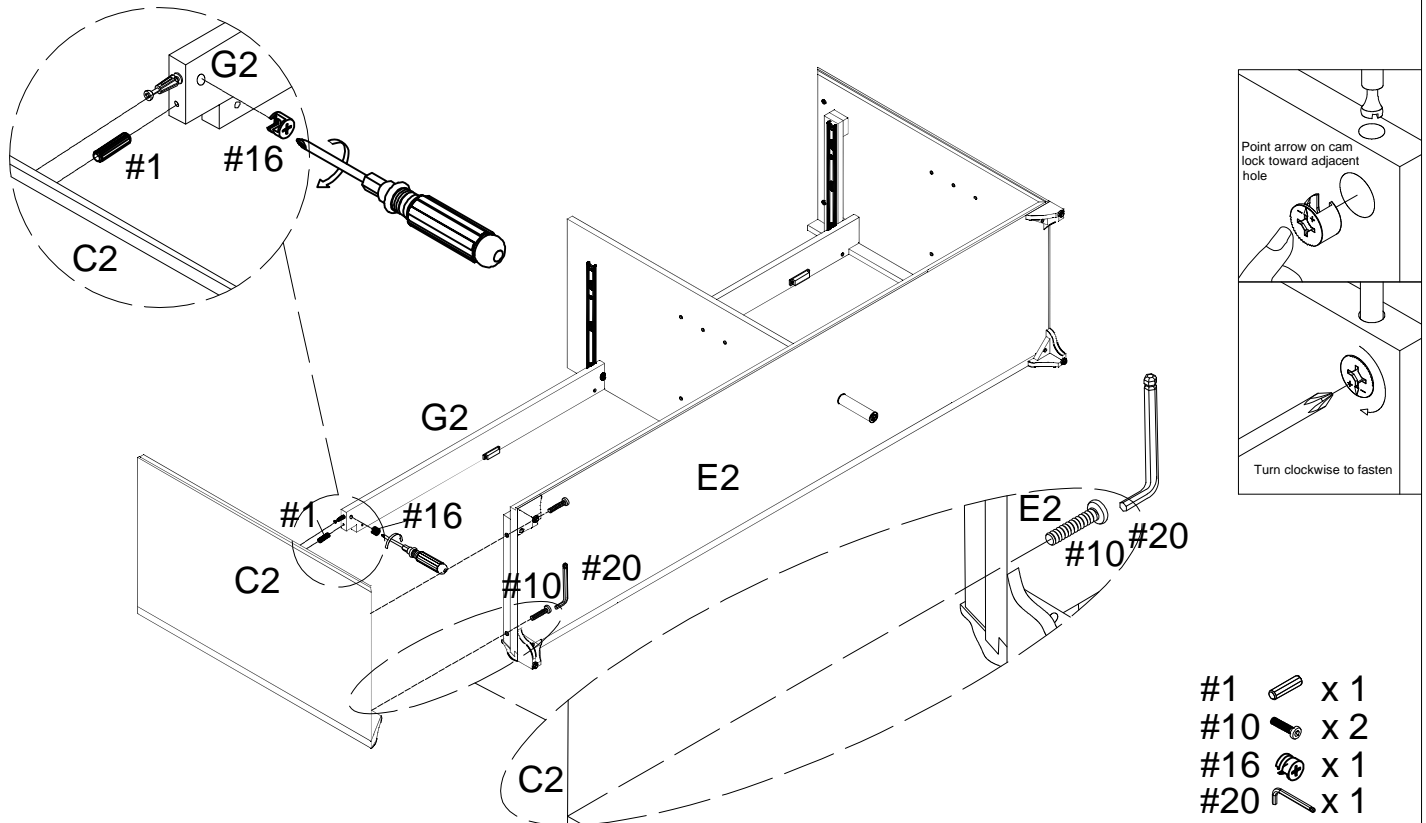


Step 8. Attach top panel (part A2) to assembled unit (parts B2, C2 & D3) using bolts (part #10), cam locks (part #16), allen wrench (part #20) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.

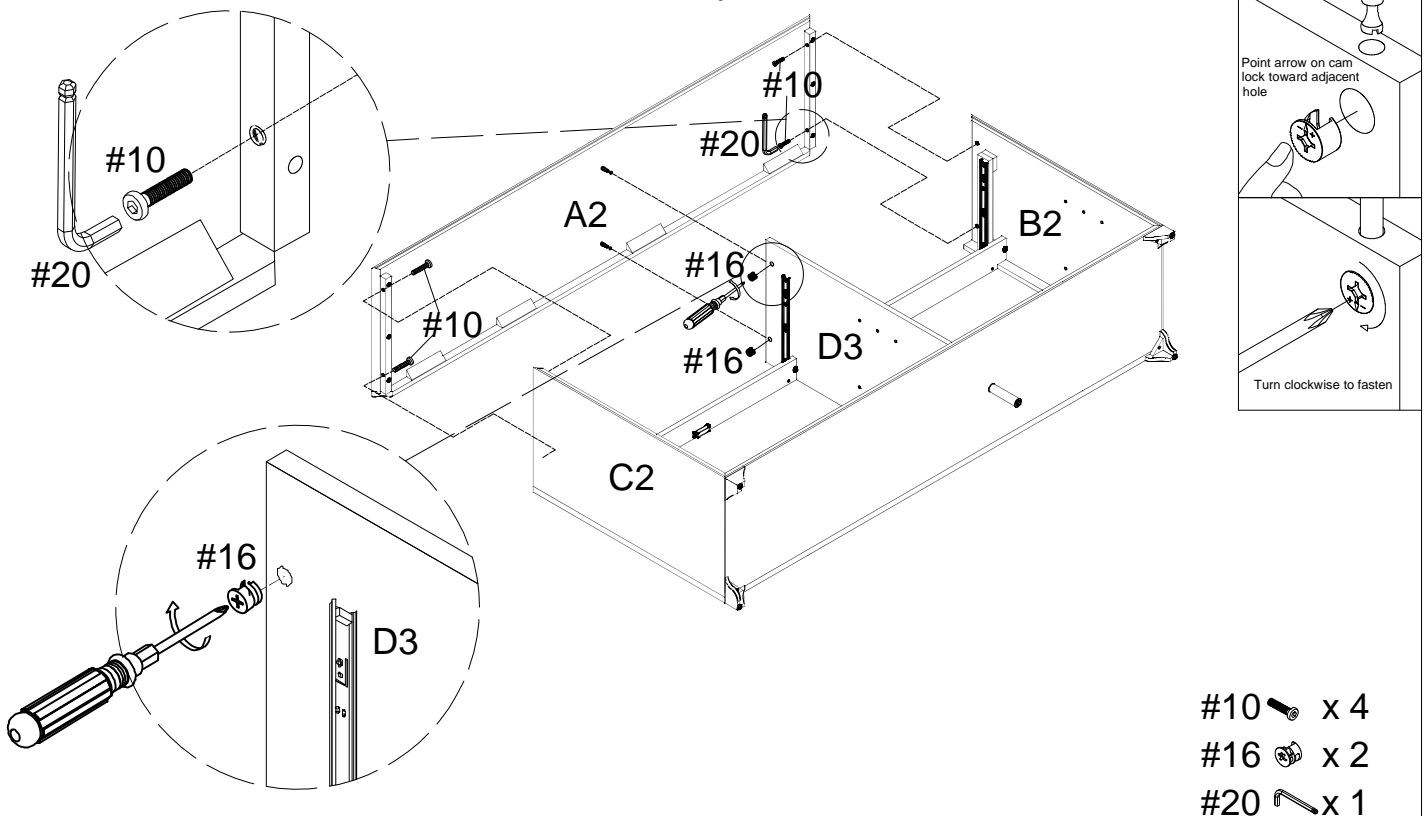


Step 9. Attach back panel (parts H3) to assembled unit (parts A2, B2, C2, D3 & E2) using screws (part #14) and phillips head screwdriver.

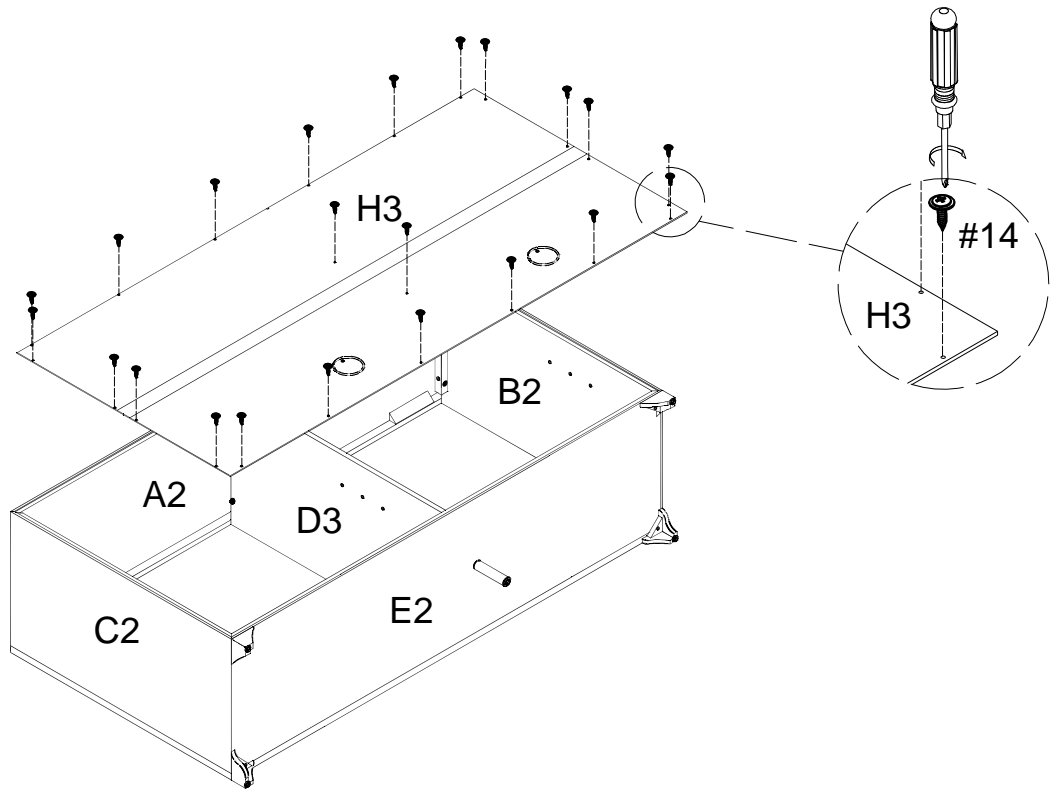


#14  x 22

Step 10. Carefully turn unit upright. Slide assembled drawers into place.  
Note: To release trigger disconnect levers push one side up and the other down.

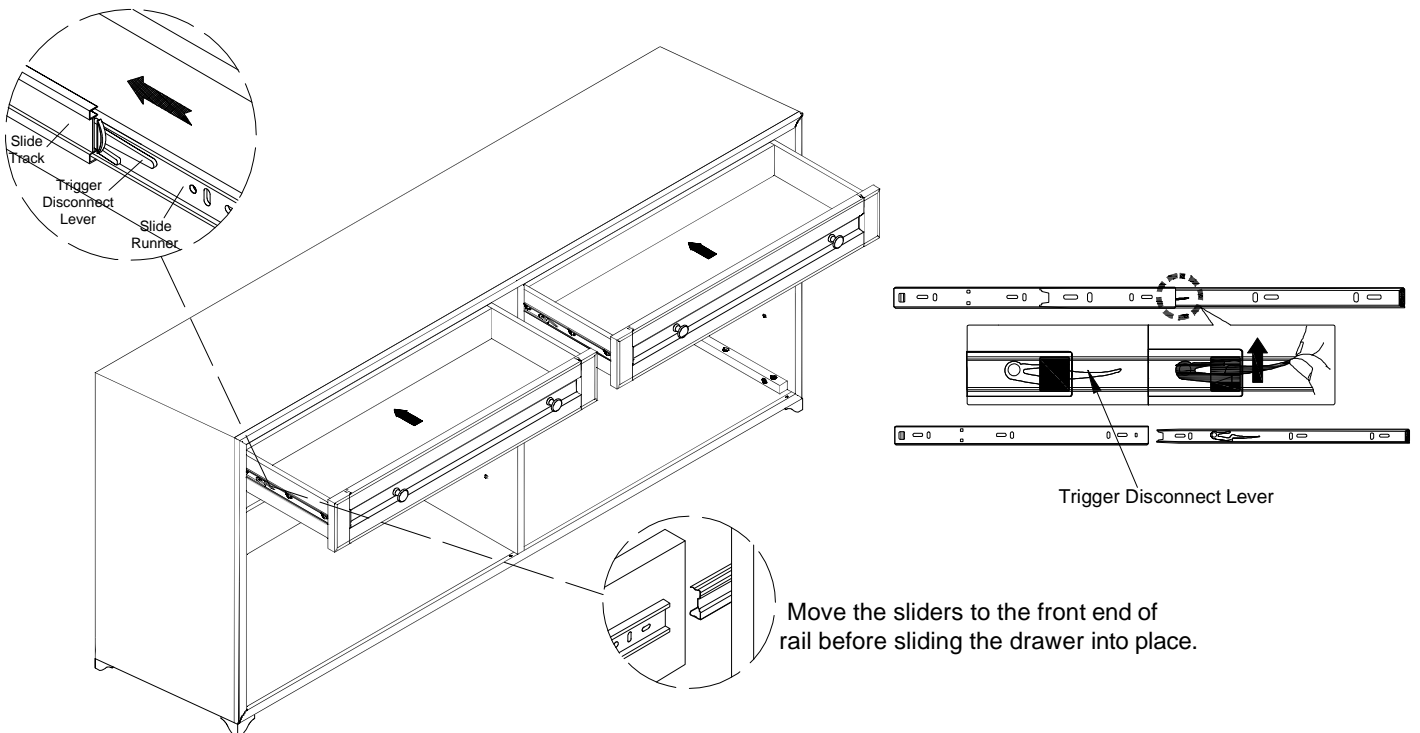

Step 11. Place shelf holders (part #13) into desired position and then slide adjustable shelves (part Q3) into place.

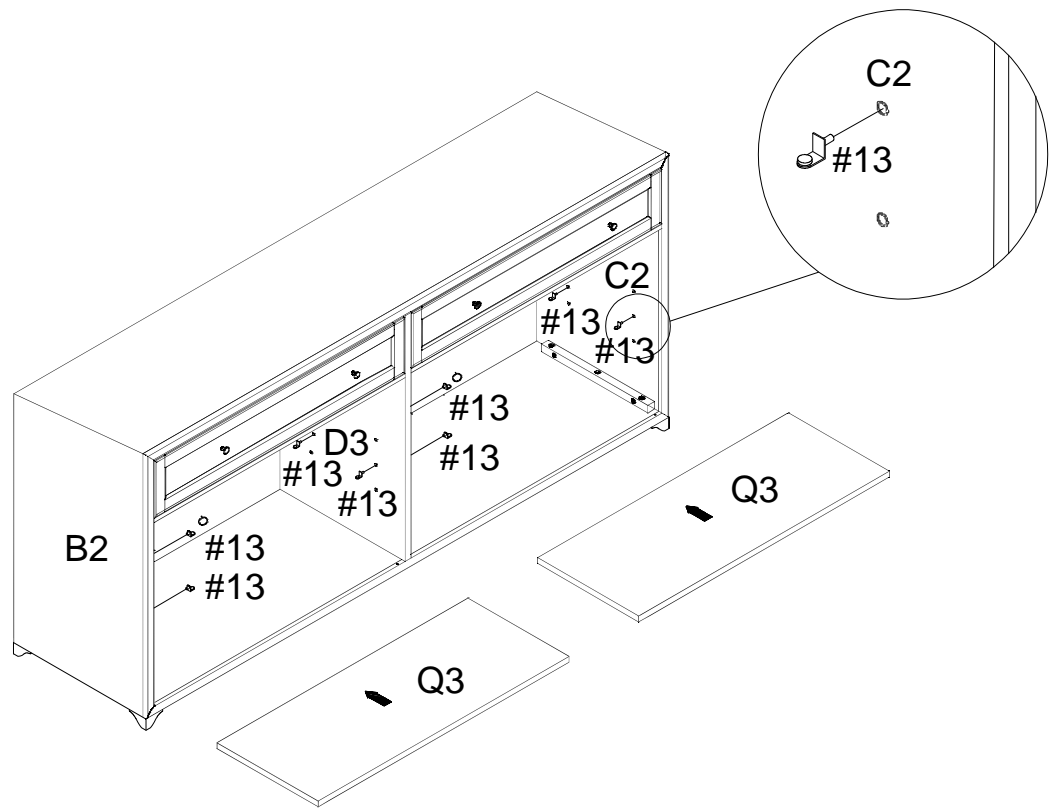


#13  x 8

Step 12. Attach doors (parts I2 & J2) by placing bottom pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part E2). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of cross rails (parts F2 & G2). Using cam stickers (part #18) cover all cam locks (part #16).





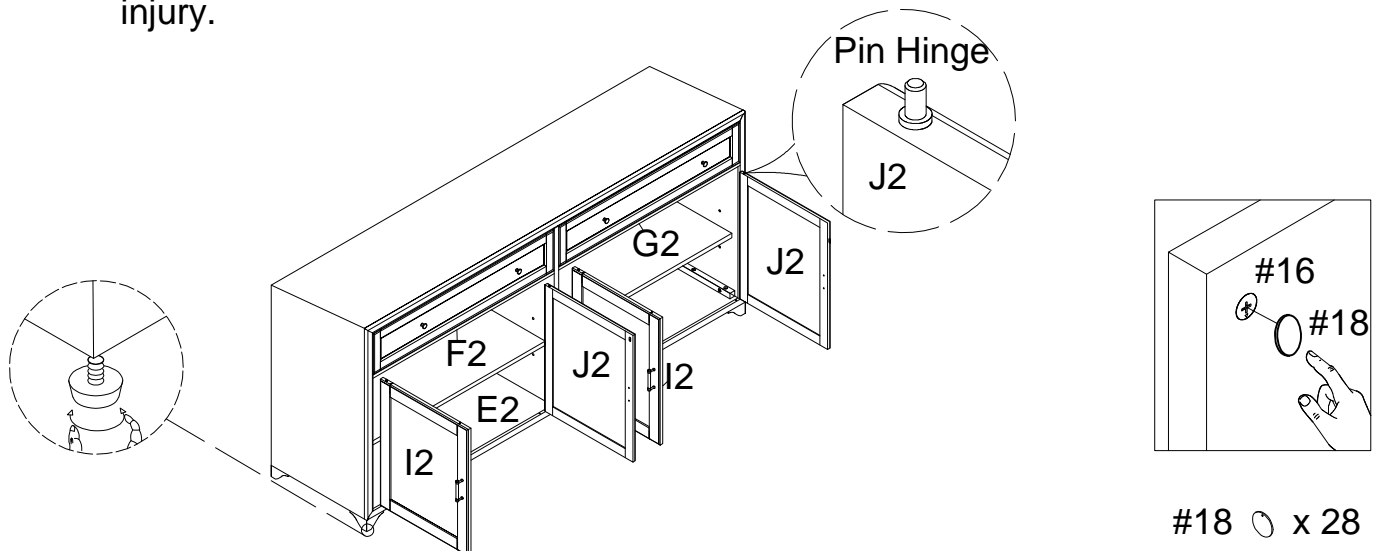

NOTE: Be sure top and bottom pin hinges are fully extended to secure doors in place.

NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

Important: Safety strap kit (part #21) must be installed to prevent tipping, damage and/or injury.



#18  x 28


#21	A	B	C	D	E
			 8*3*15mm	 8*4*35mm	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

## SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A2) using phillips head screwdriver.
2. Drill a 1 1/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A2) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

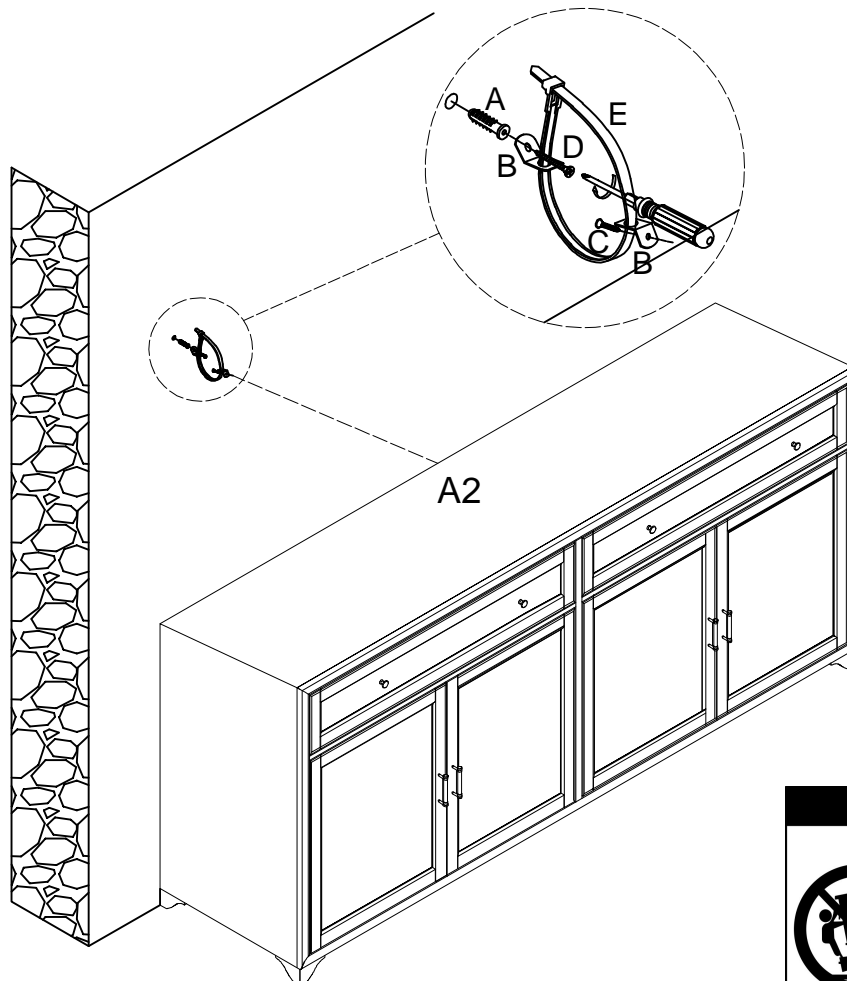

**⚠ WARNING**

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- For use with televisions weighing 50lbs(23kg) or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label. Do not remove!*