 


# ELECTRONIC GUN SECURITY CABINET

 
INSTRUCTION MANUAL

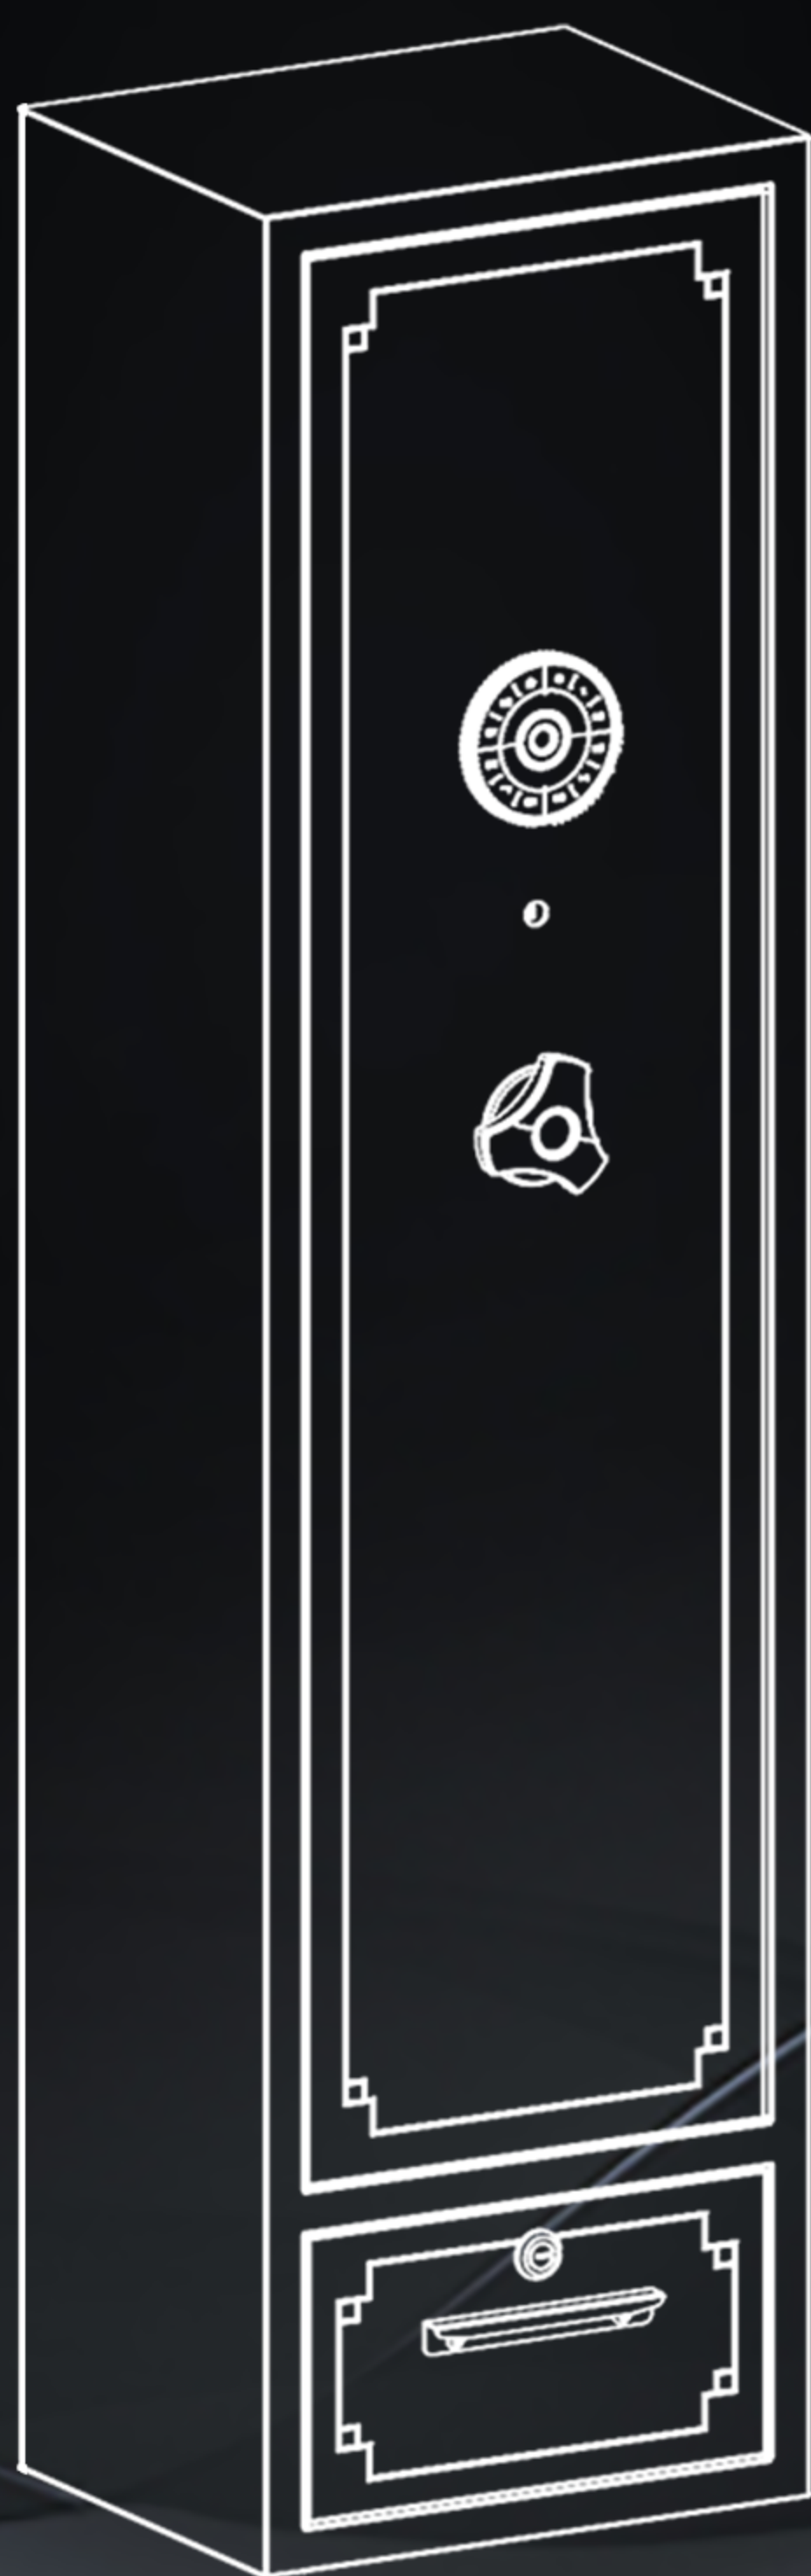





*Keep children or unauthorized persons away from your guns*

# COMPONENT DESCRIPTION

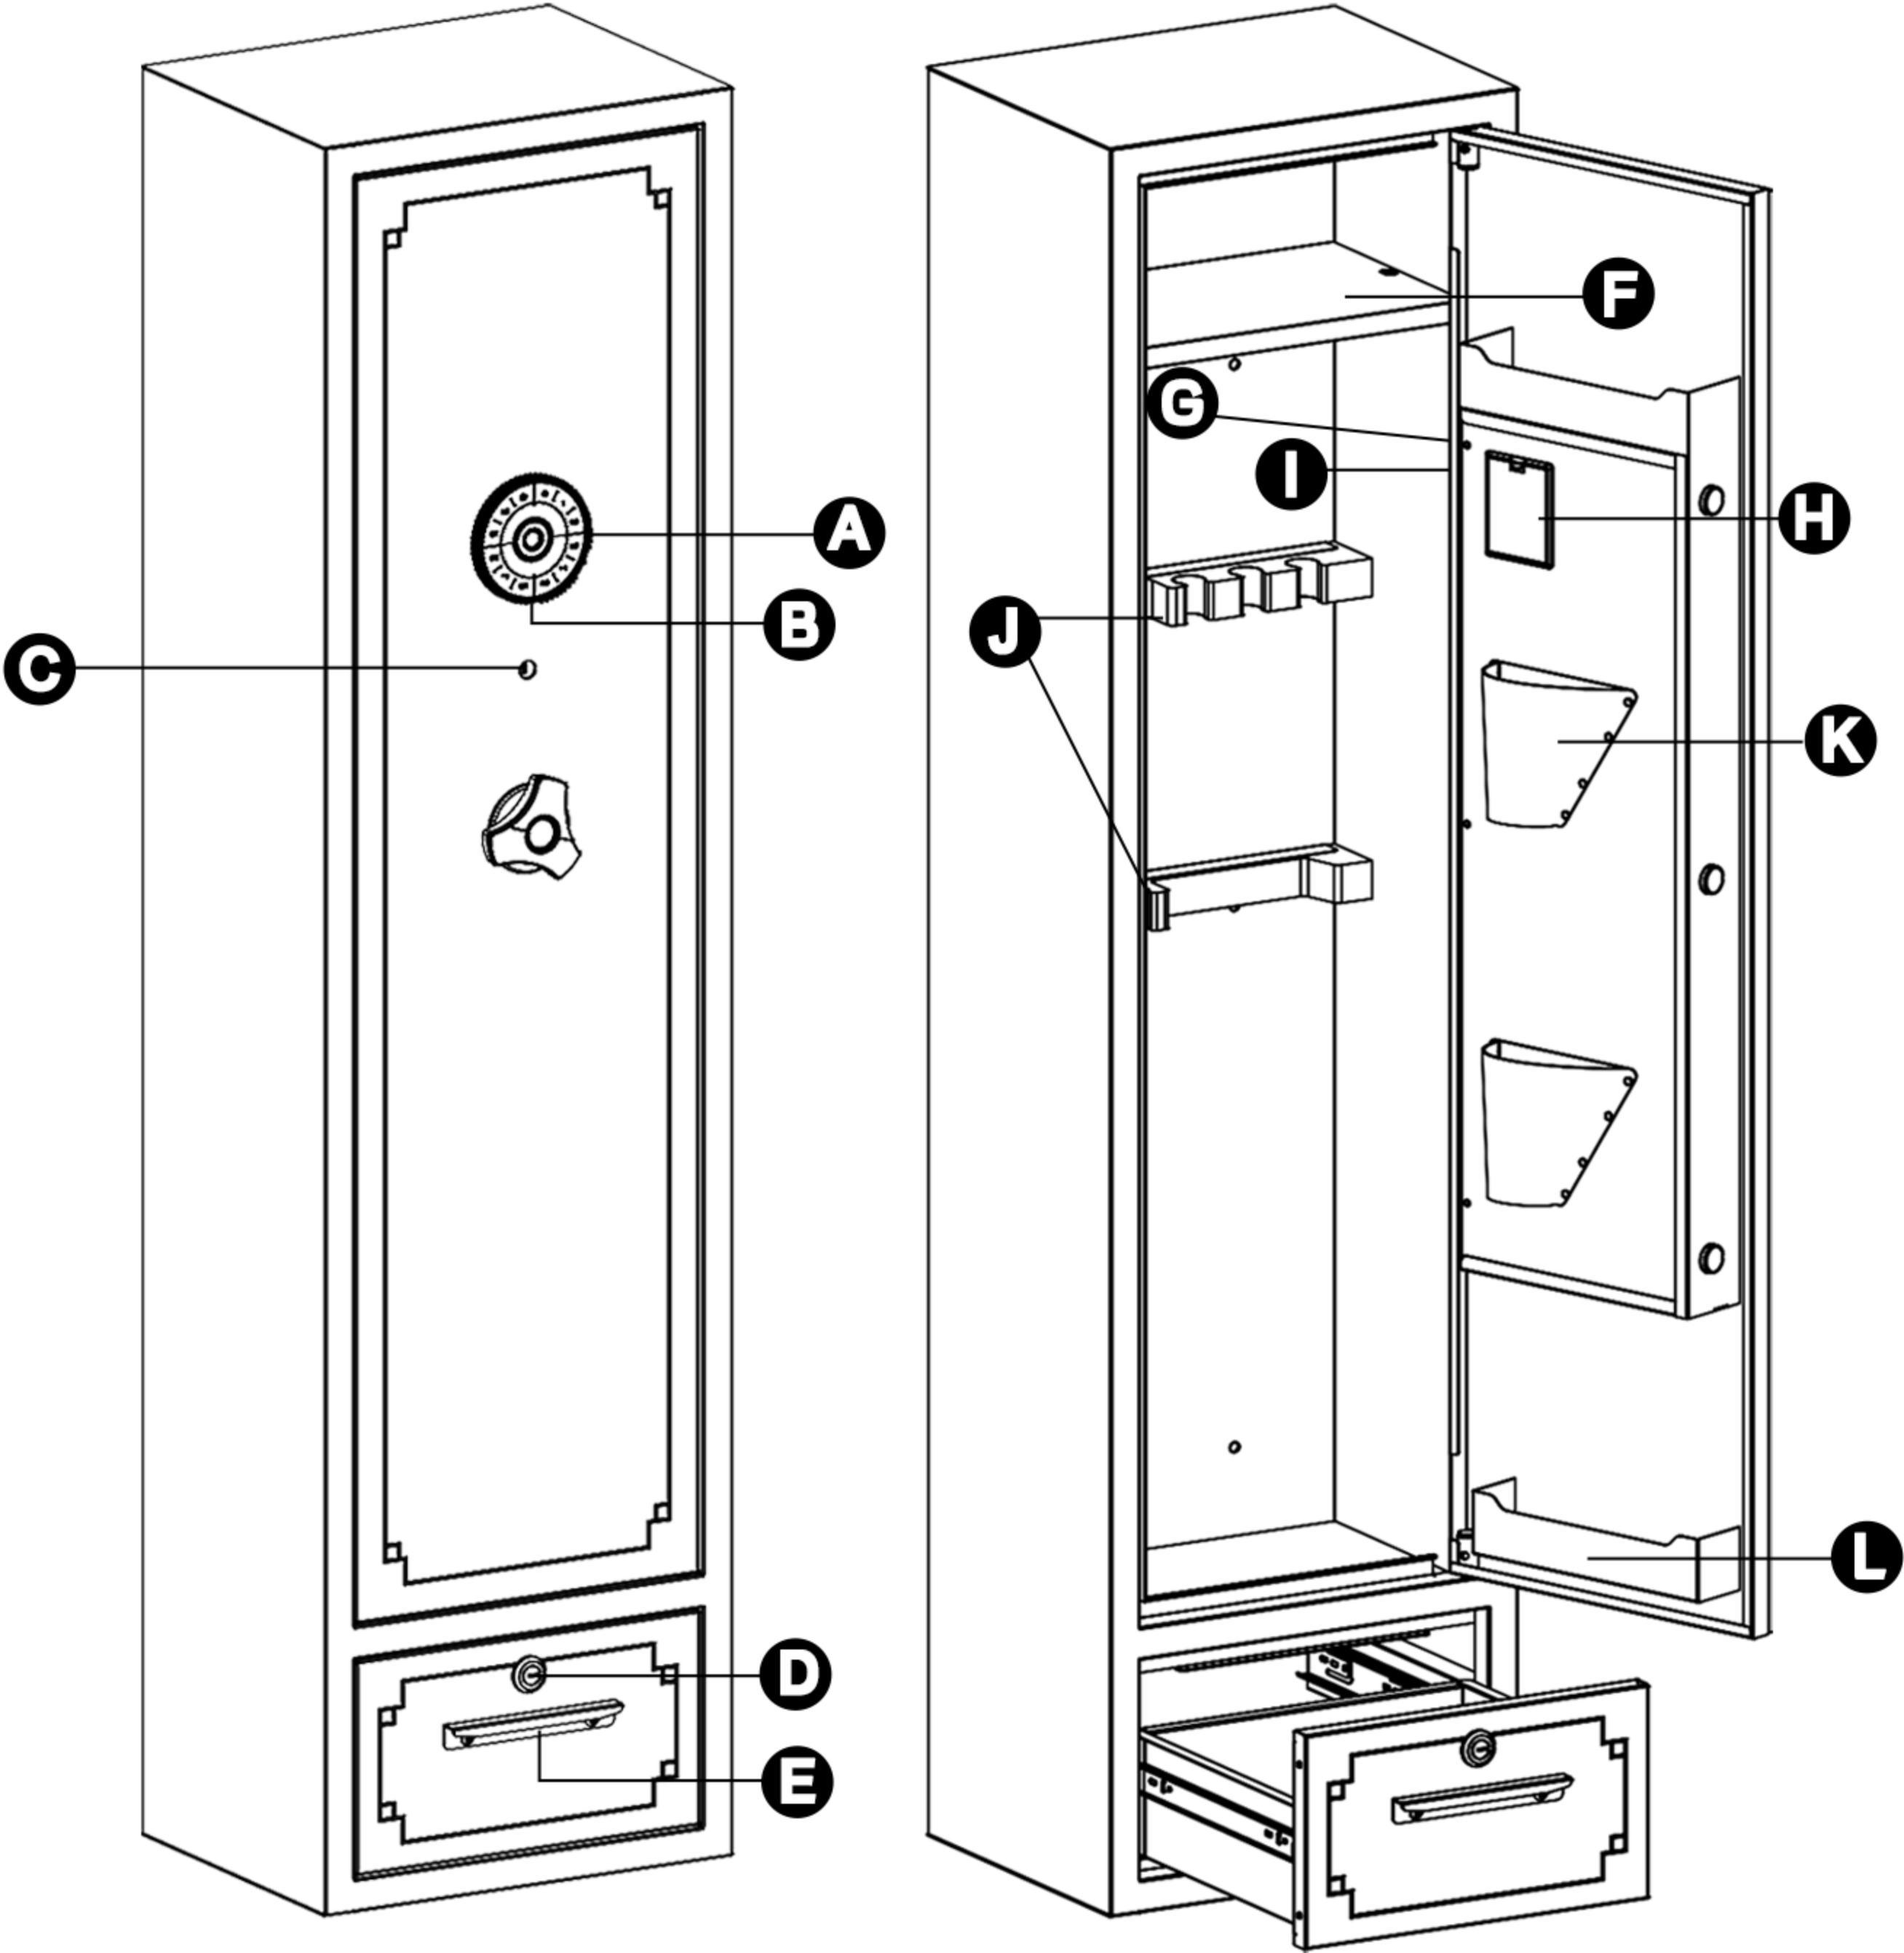

 

Hi friend,  
Thank you for your purchase, please take a few minutes to read the instruction manual for better use of the product. If you have any questions, please contact the seller for your service.

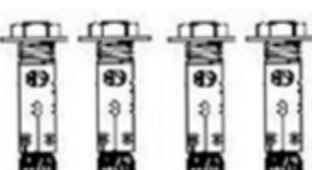

<b>A</b> Electronic Keyboard	<b>D</b> Drawer Keyhole	<b>G</b> LED light	<b>J</b> Adjustable Gun Holder
<b>B</b> External Battery Socket	<b>E</b> Drawer Handle	<b>H</b> Battery Box	<b>K</b> Pistol Pouch
<b>C</b> Emergency Key hole	<b>F</b> Removable Shelf	<b>I</b> Green Setting Button	<b>L</b> Storage Box

Emergency key*2		Drawer key*2	
Expansion bolt* 4		External power box*1	

# THE FIRST TIME OPENING

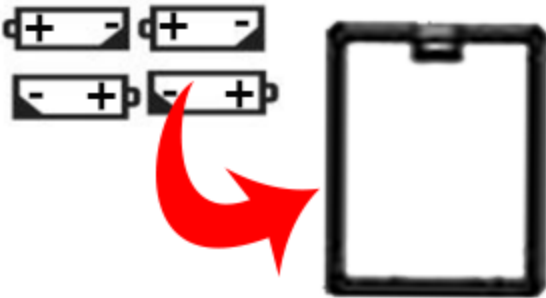 1.Insert the key		2.Turn the handle	
3.Insert 4 AA alkaline batteries (not included)		Please do not use rechargeable or different brands of batteries	


# PERSONAL PASSWORD SETTING

 Original factory password: 123456

This gun safe can be set with two sets of passwords

## SET UP THE FIRST PASSWORD

1. In the open state, press the green setting button inside of the gun cabinet, the buzzer will sound once and the keyboard light on.

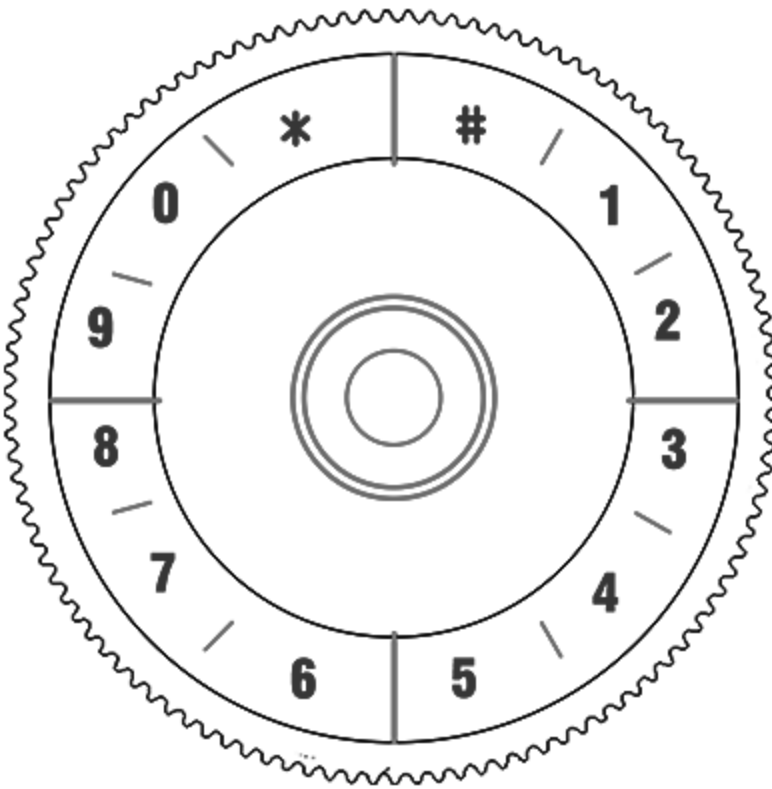

2. Enter any new 3-12 digits code, press the "#" button to confirm. The buzzer will sound once and the blue indicator light will be off. Password is set successfully.

**Note: After setting your password, please test the new password to ensure it is valid.**



## **SET UP THE SECOND PASSWORD**

- 1. In the open state, press '00', the keyboard light on. Then press the green setting button inside the door.**
- 2. Enter another new code within 3-12 digits, and then press "#" key to confirm. The buzzer sound and the blue indicator light will be off, the second code is set successfully.**

## **HOW TO OPEN THE GUN SAFE**

- 1. Touch any code on the keyboard to wake up the keyboard, And enter the password you set.**
- 2. Press the "#" key to confirm, the blue indicator light is on, and the buzzer beeps twice, indicating that the password is entered correctly.**
- 3. Turn the handle clockwise.**

**NOTE: Input wrong password, The keyboard will sound beep for 4 times, and the alarm sound can only be eliminated after entering the correct password.**

## **SYSTEM INITIALIZATION**

**Press the green setting button for 5 seconds, the system will restore the initialized settings and clear all passwords.**

## LOW BATTERY ALERT

1. The gun cabinet uses four 1.5V alkaline batteries, if the voltage is insufficient to open the door after the continuous reminder of "beep" twice, the power indicator light flashes for about 30 seconds before shutting down, reminding you of the low battery. You need to replace the batteries promptly.

2. If the battery voltage is insufficient, you can use the emergency power supply or mechanical emergency key to open the safe.

**\* This electronic lock has the function of no power protection code never disappear.**

## MUTE MODE

1. Tap to activate the touch screen, enter "11#"

2. The buzzer "beep--" a long sound, indicate the mute and non-mute mode set successfully.

## TECHNICAL PARAMETERS

1. Working power supply : 4 No. 5 "AA" alkaline batteries

2. Working voltage range : 4.2V-7V

3. Working undervoltage point :  $4.6V \pm 0.20V$

4. Operating current :  $\leq 380mA$

5. Static current :  $35\mu A$

Q

What if I lose my keys?

A

Please contact us by email for the key code (the code is next to the keyhole) and we will make a replacement for you!

Q

What if the battery is run off?

A

 
Open the battery box cover, Insert 4AA batteries, Insert the external battery box hole and enter the code to open the gun safe

## Easy Installation

1. Drill appropriately sized holes wherever you like.

2. Hand thread the expansion screws through the pre-drilled holes in the safe.

3. Tighten the screws and check that they are secure.

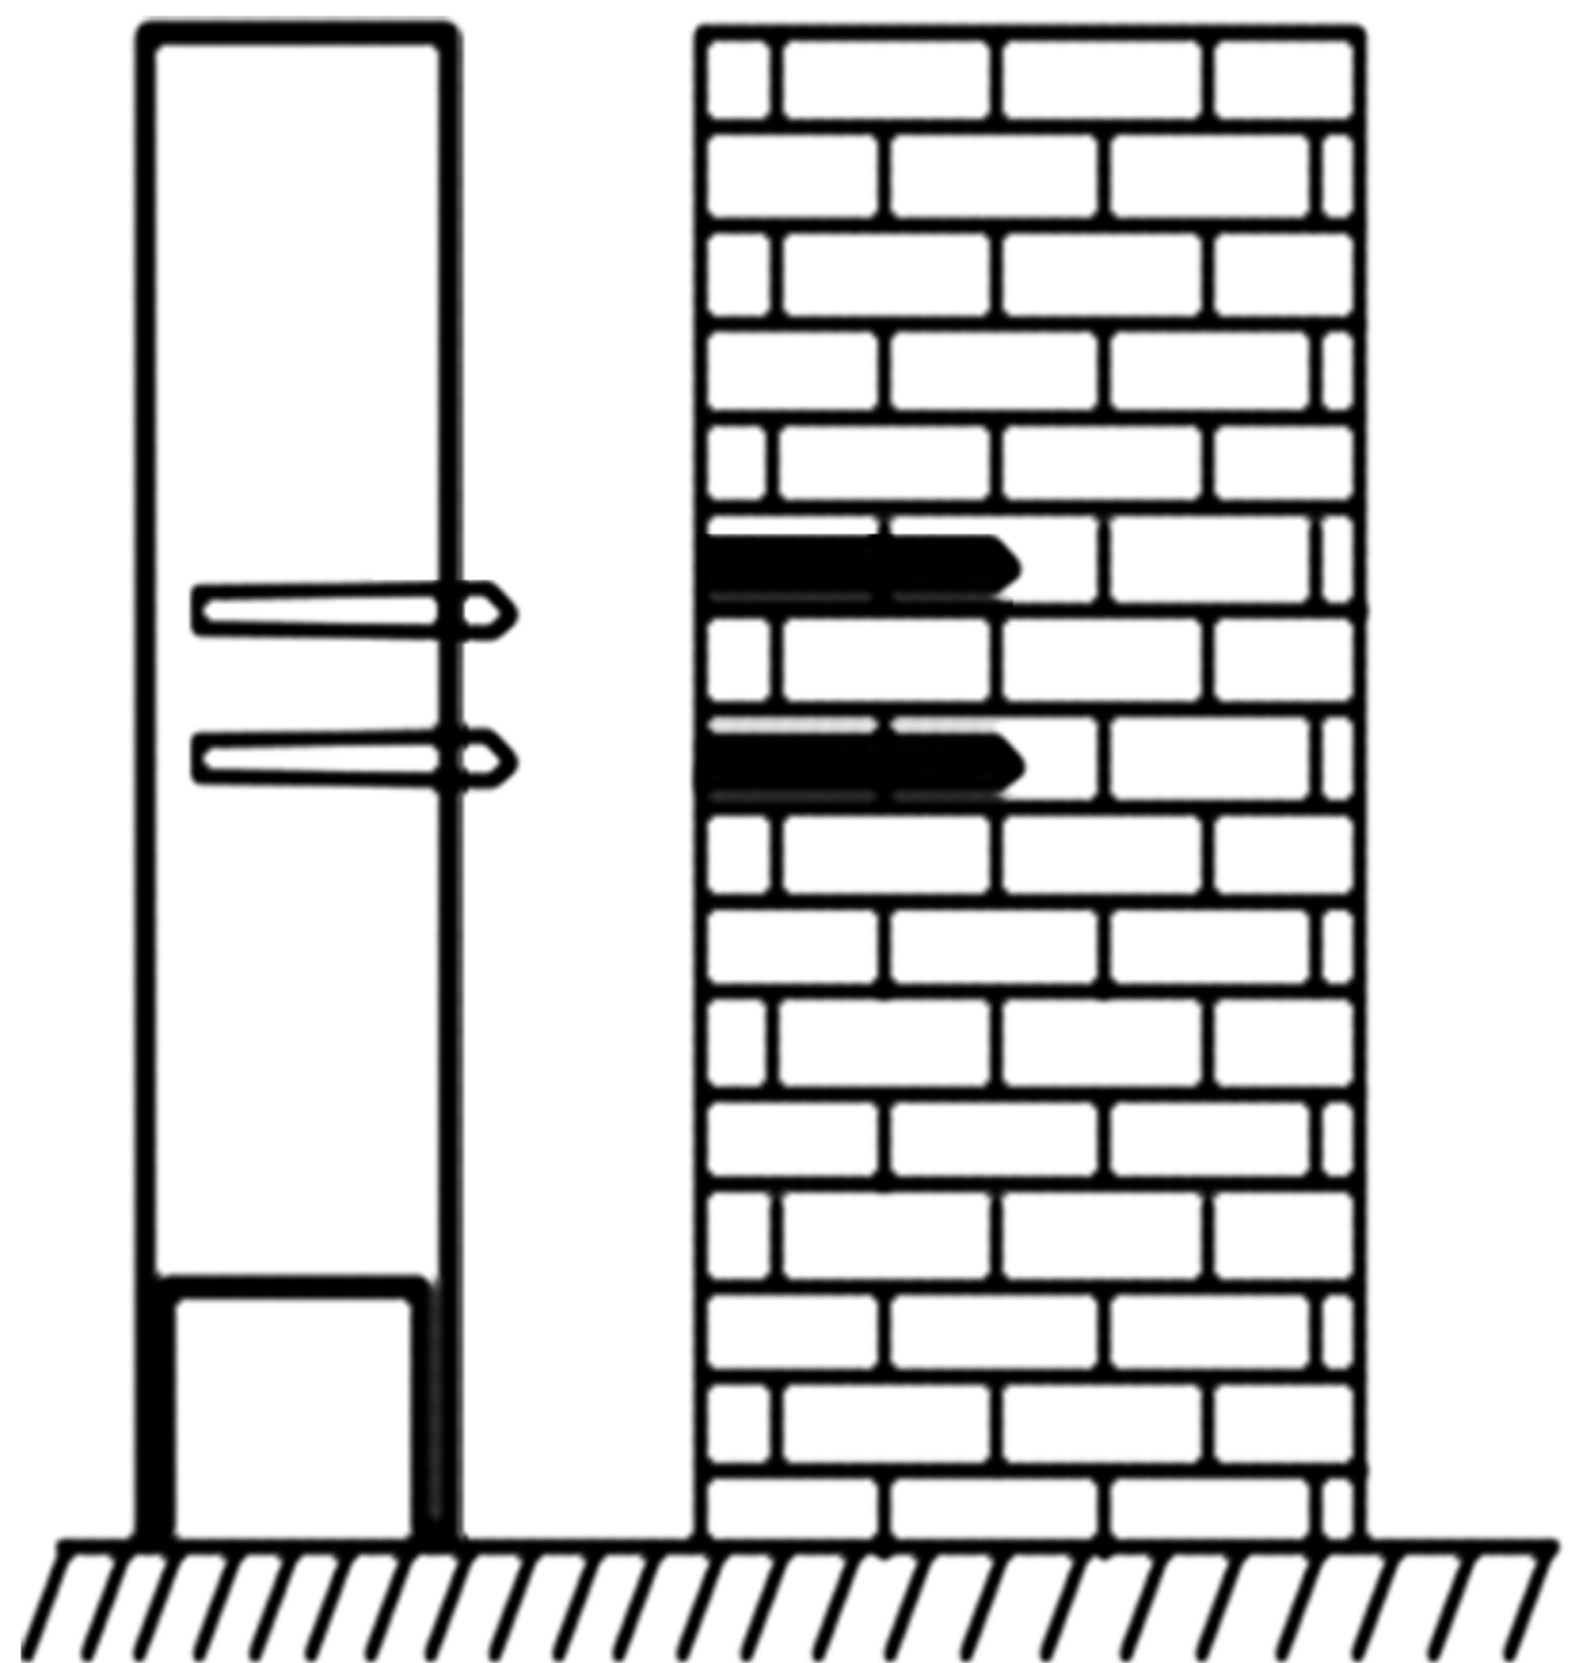

**WARNING**



### ***Tip Over Hazard***

- Please secure the gun safe to a wall or floor before use to prevent children or adults from tipping the safe over and causing death or serious injury.
- Children should not play around the safe at any time.

# PERFECT SERVICE

Hi, my order number is  
111-\*\*\*\*\*, I have problems  
with.....



**Dear Customer.**  
**Thank you very much for contacting us  
through your e-mail address.**  
**You are now our VIP member!**  
**Could you please describe your problem in  
detail?**  
**Attach a picture so we can solve it faster.**  
**We will provide you with a perfect solution.**  
**Best wishes to you!**



**Please email us to get a special VIP discount code before your  
next order.**



**Problem with the order? Please email us, give us a chance to  
help you firstly.**



**Do you love your new product? Help others find it by leaving  
a product review online!**