 
 


Product Instruction

 
 
N704P380550D

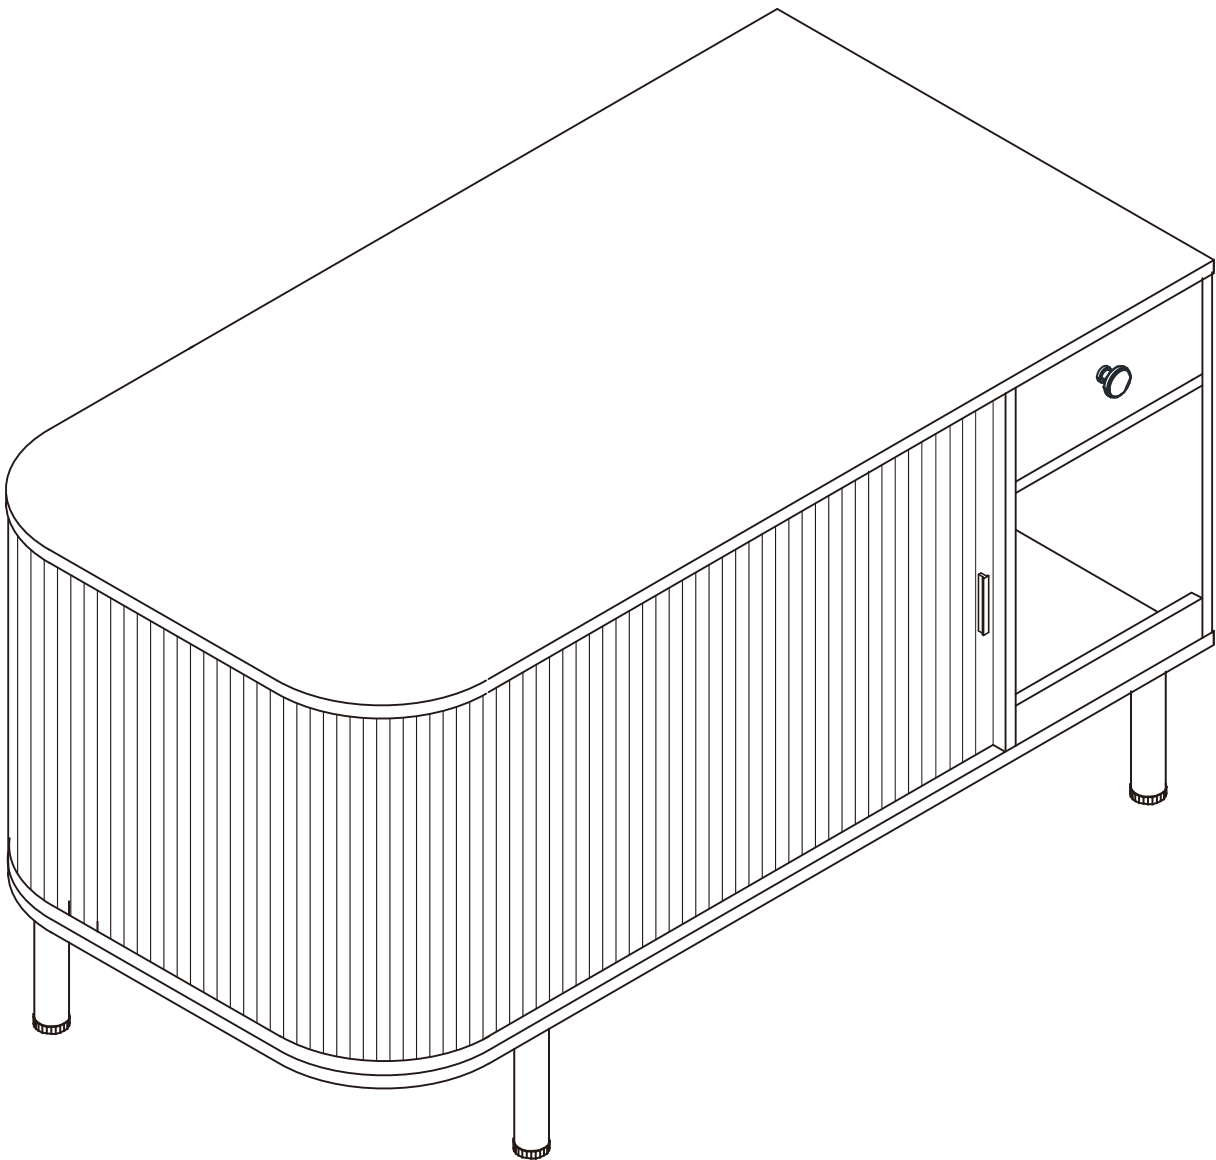

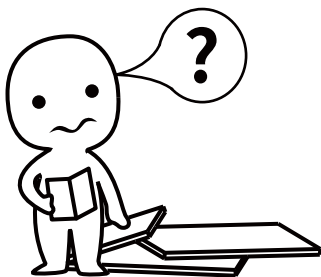


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

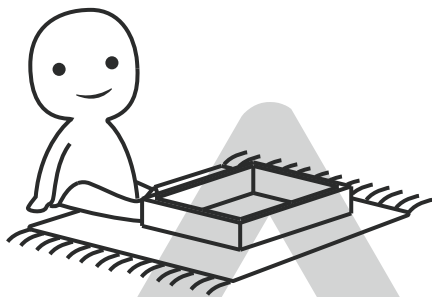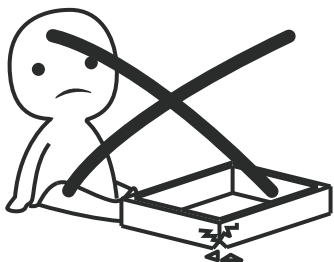



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.

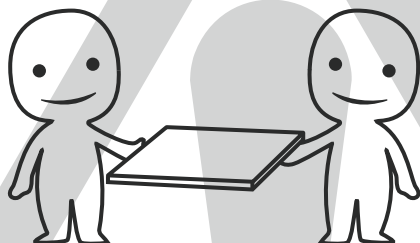

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

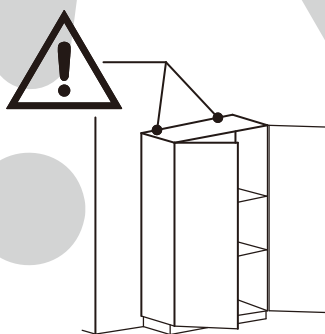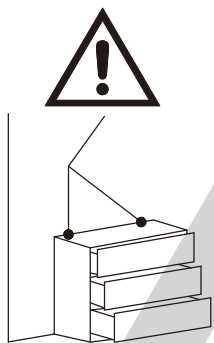

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.


For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

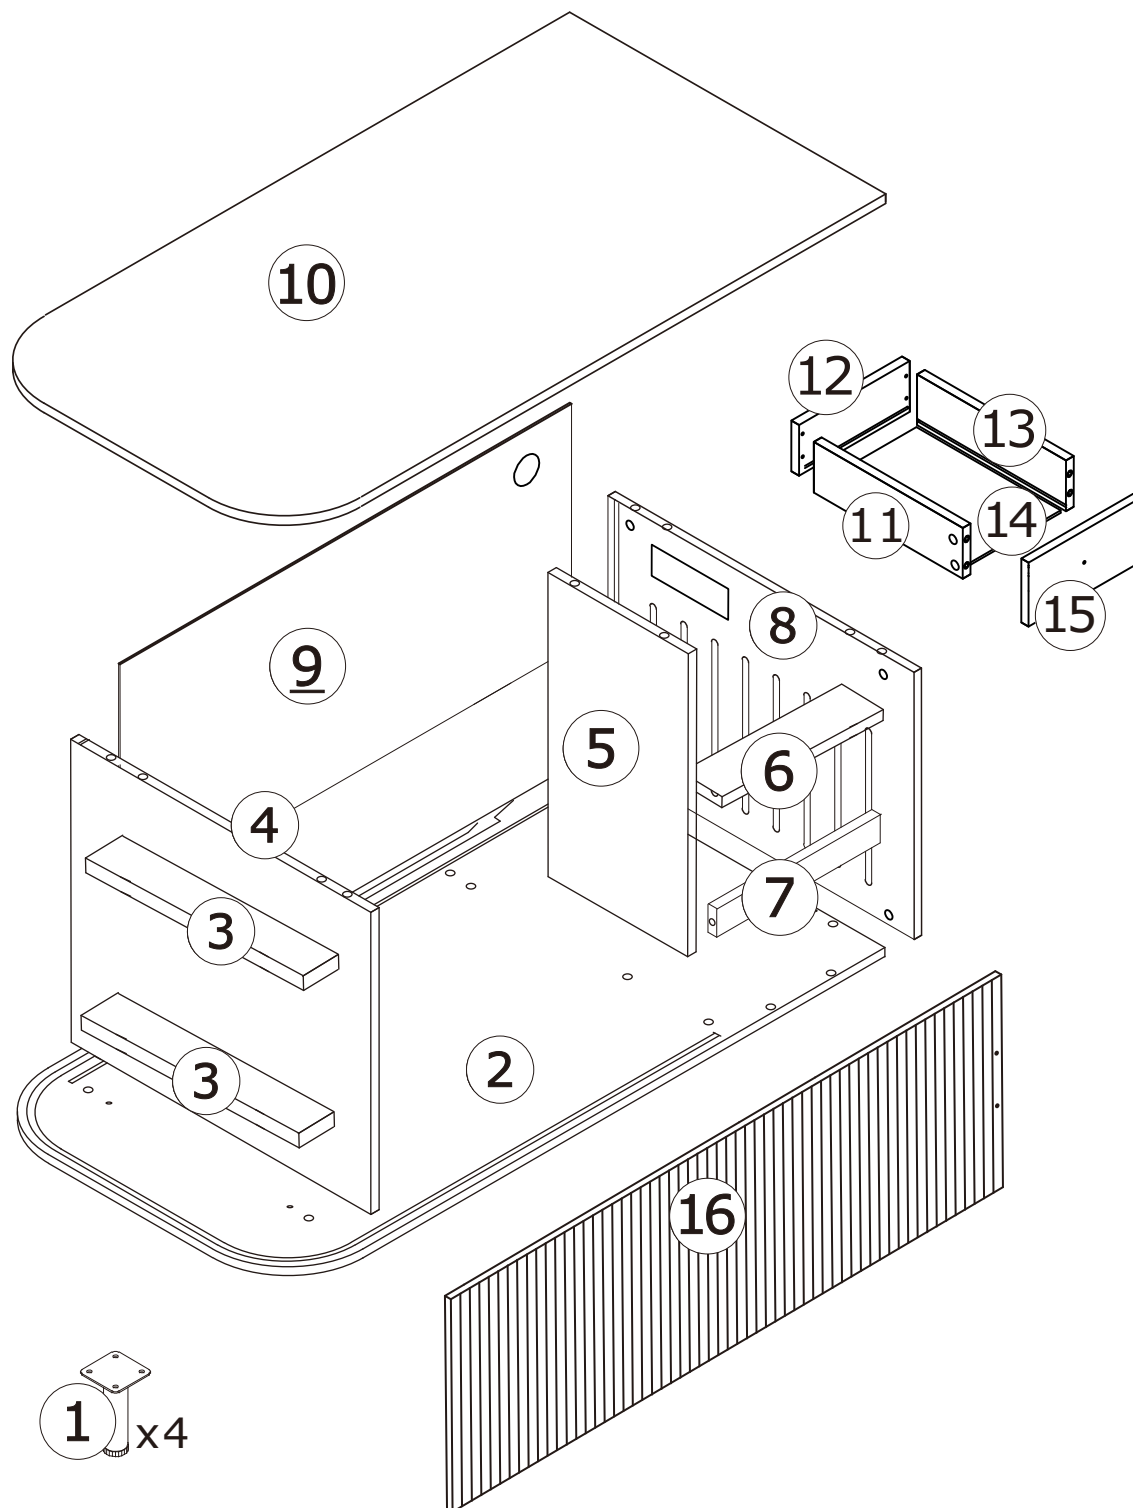


Note:

 1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure it remains stable.
3. Tighten up all screw with tools gradually.
4. If screw are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all screws, adjust it on a flat ground and tighten up all screws again.
6. Note: If one or some screws are fully tighten during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

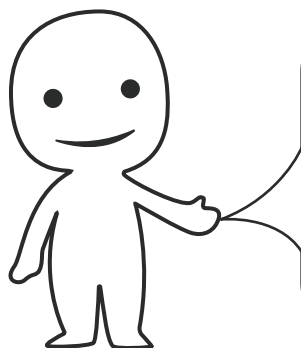


Please prepare the following tools

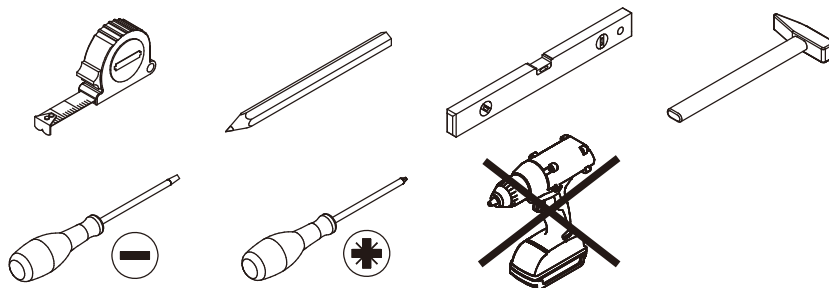 


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 22+2

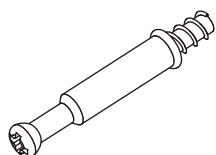


Ø 6 x 35 mm

 B x 22+2

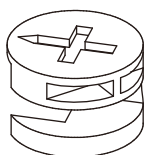

Ø 15 x 9.5 mm

 C x 13+1

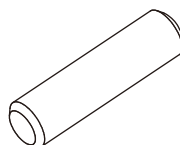

Ø 6 x 30 mm

D x 1



 
L= 300mm

E x 16+2



Ø 3 x 12mm

F x 4




Ø 4 x 30 mm

G x 16+1



Ø 4 x 12mm

 H x 1

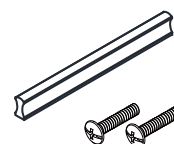


Ø 4 x 18 mm

J x 1



Ø 4 x 16 mm

 K x 4




Ø 5*40mm

L x 2



Ø 3.5 x 14 mm

 
M x 1




N x8+2



 O x1




P x22+2

 


Q x1



 
CARTON CONTENT:




① x 4

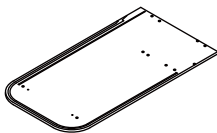 

② x 1

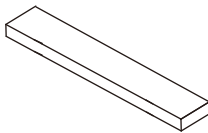 


③ x 2

 


④ x 1



 
⑤ x 1

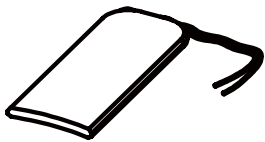


HARDWARE

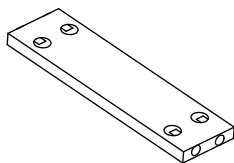 


⑥ x 1

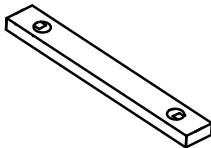 


⑦ x 1

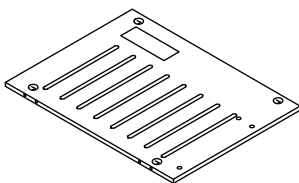 


⑧ x 4

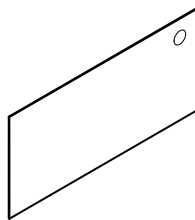 


⑨ x 1

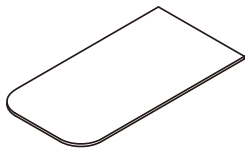 


⑩ x 1

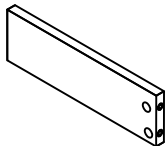 


⑪ x 1

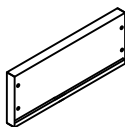 


⑫ x 1

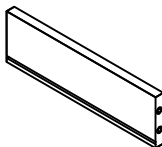 


⑬ x 1

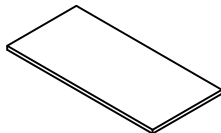 

⑭ x 1

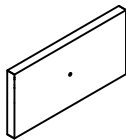 




⑮ x 1

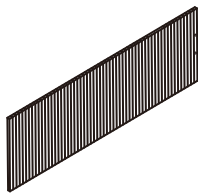 

⑯ x 1

1

   G x 16
Ø 4X12mm

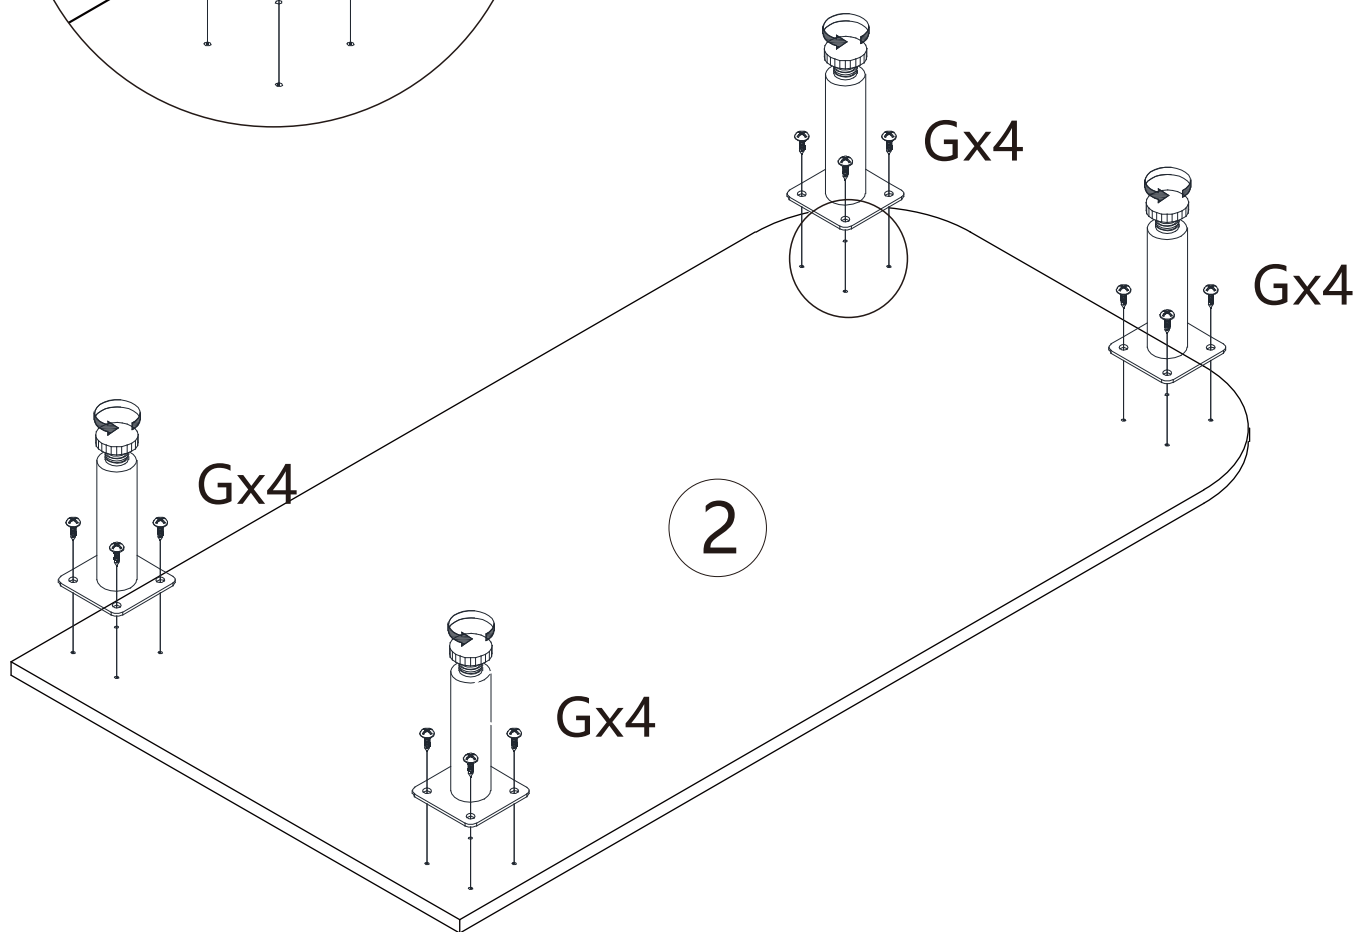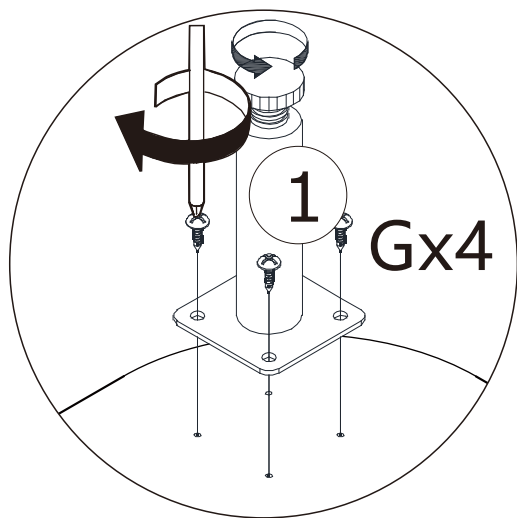

2

A x 6

 
 
 


Ø 6 x 35 mm

C x 7



Ø 6 x 30 mm

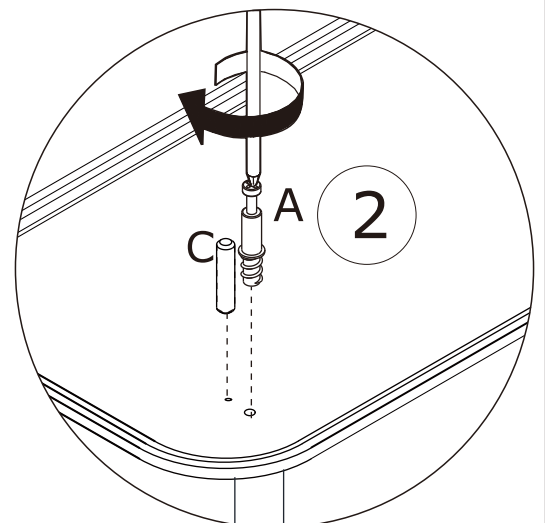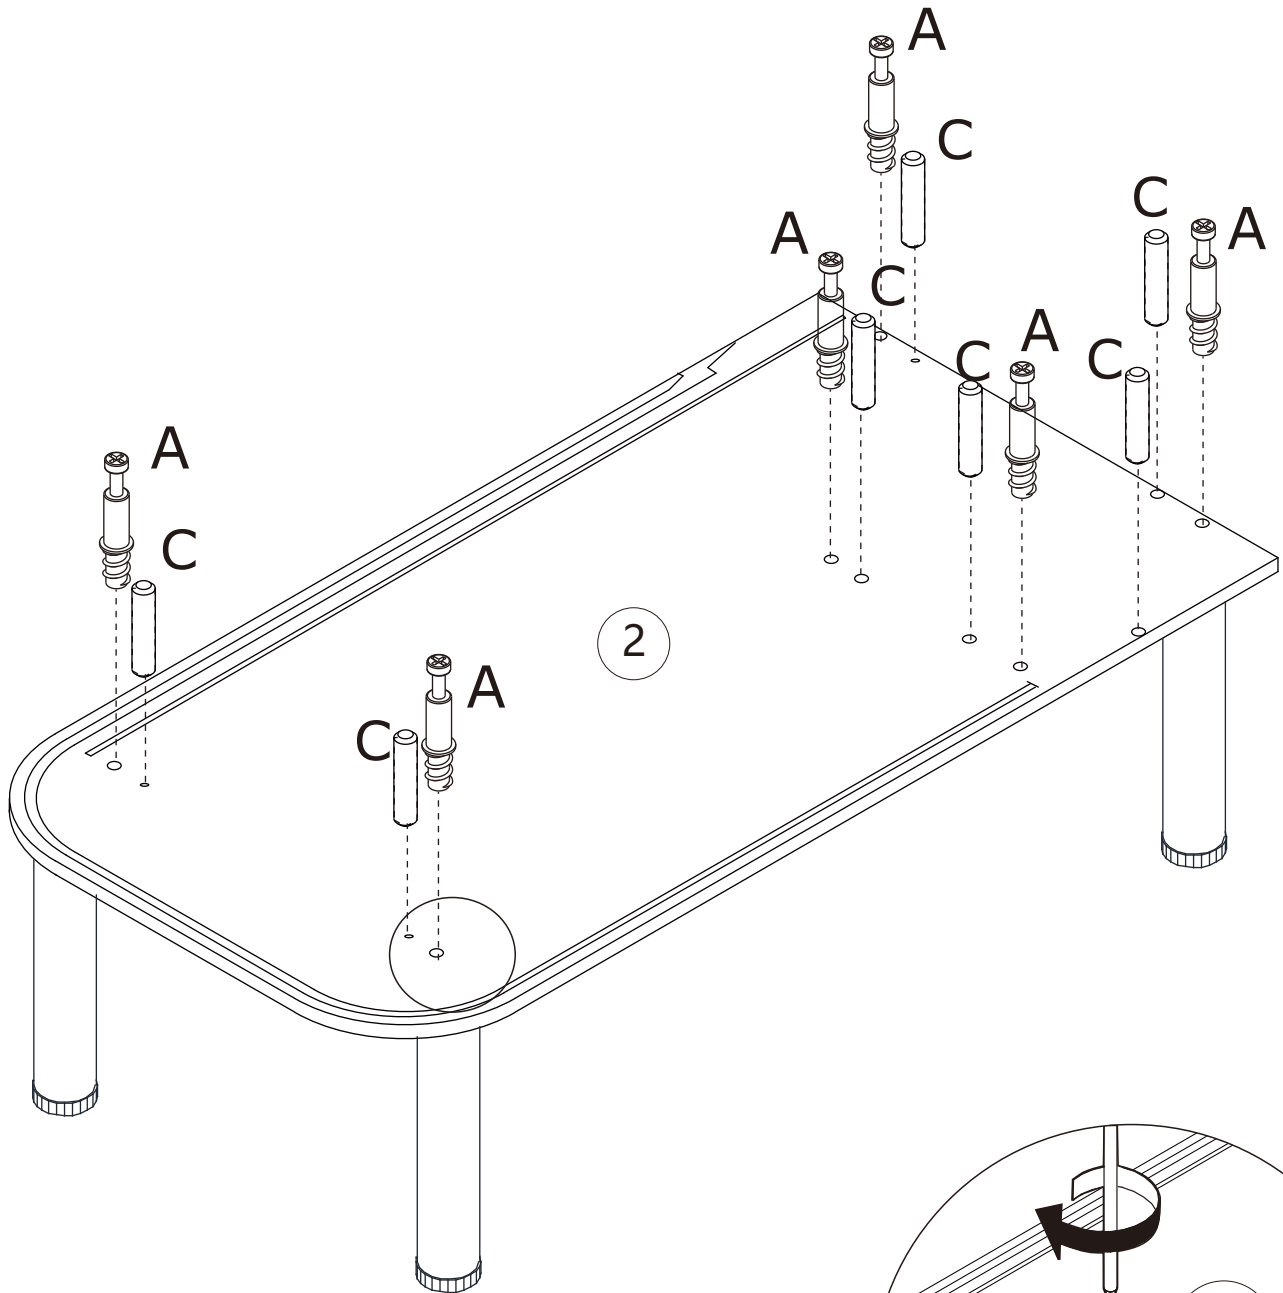


3

Dx1
L=300mm

Ex2
Ø 3 x 12 mm

 A x 3
Ø 6 x 35 mm


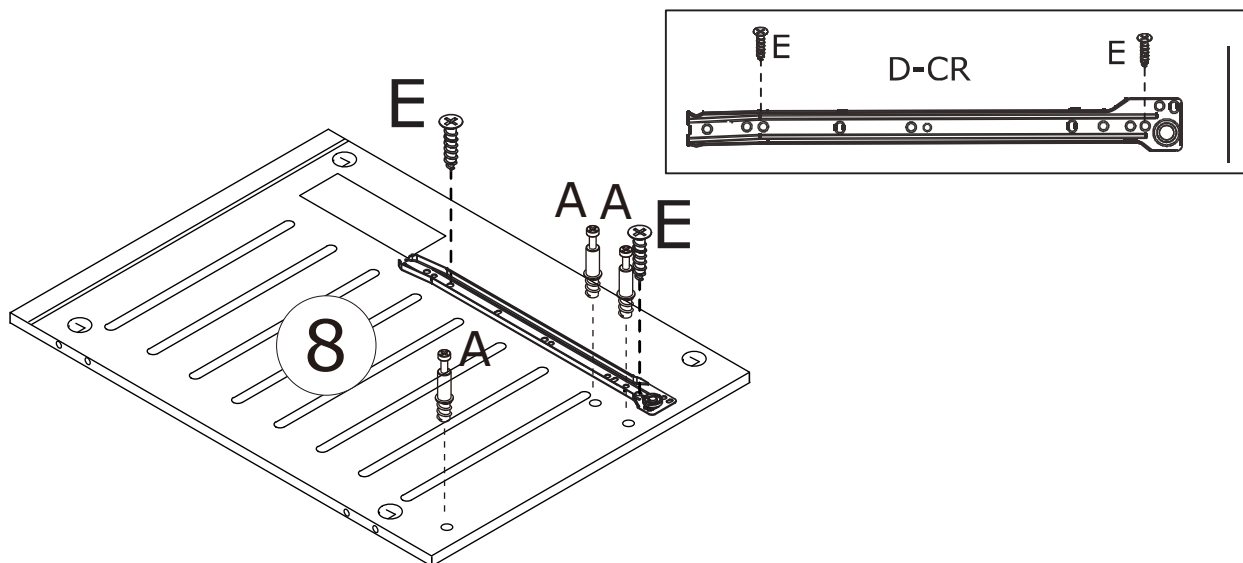


4

Dx 2
L=300mm


Ex2
Ø 3 x 12 mm

  A x 2
Ø 6 x 35 mm

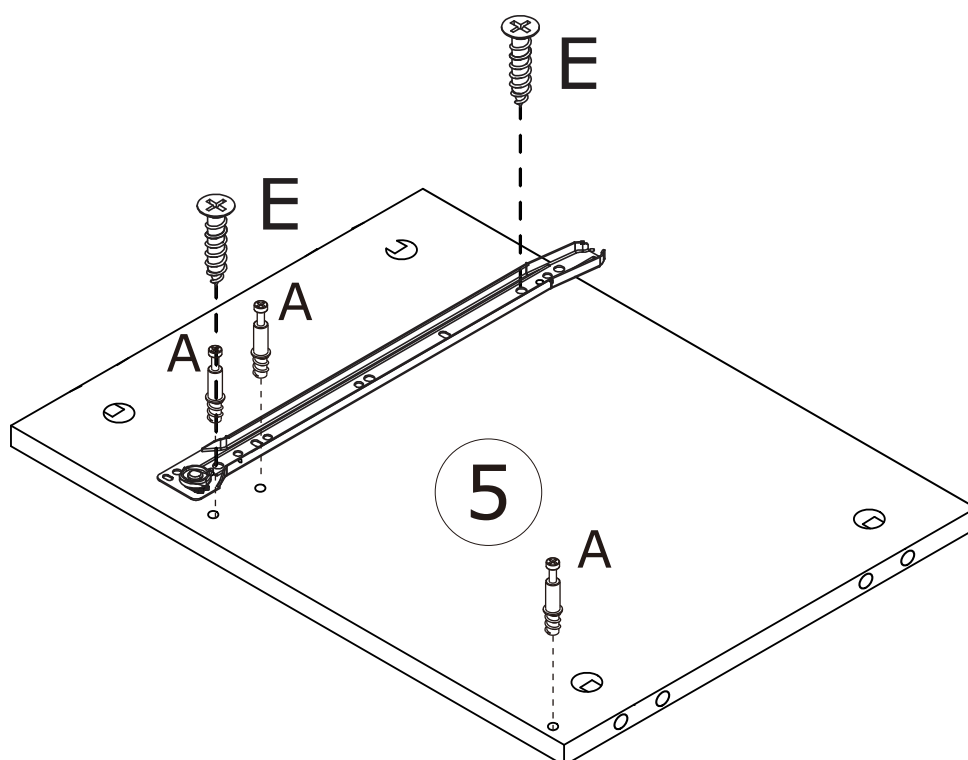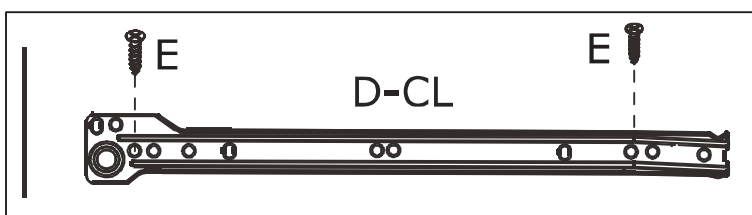


5

 B x 3

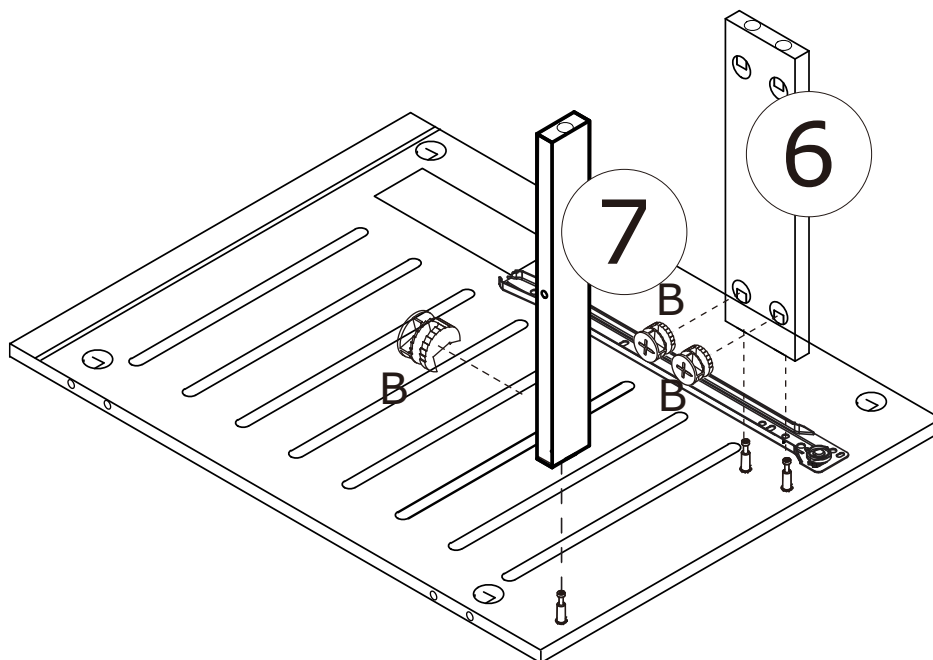 $\varnothing 15 \times 9.5 \text{ mm}$ 

6

 B x 3


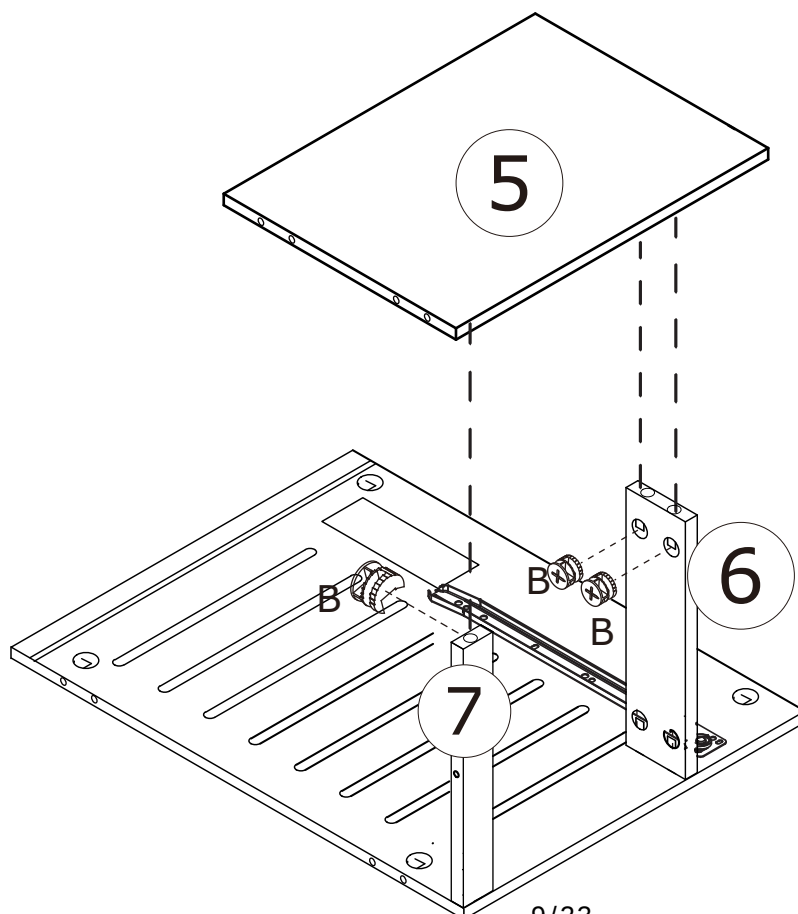
 $\varnothing 15 \times 9.5 \text{ mm}$ 

7

B x 4



  Ø 15 x 9,5 mm

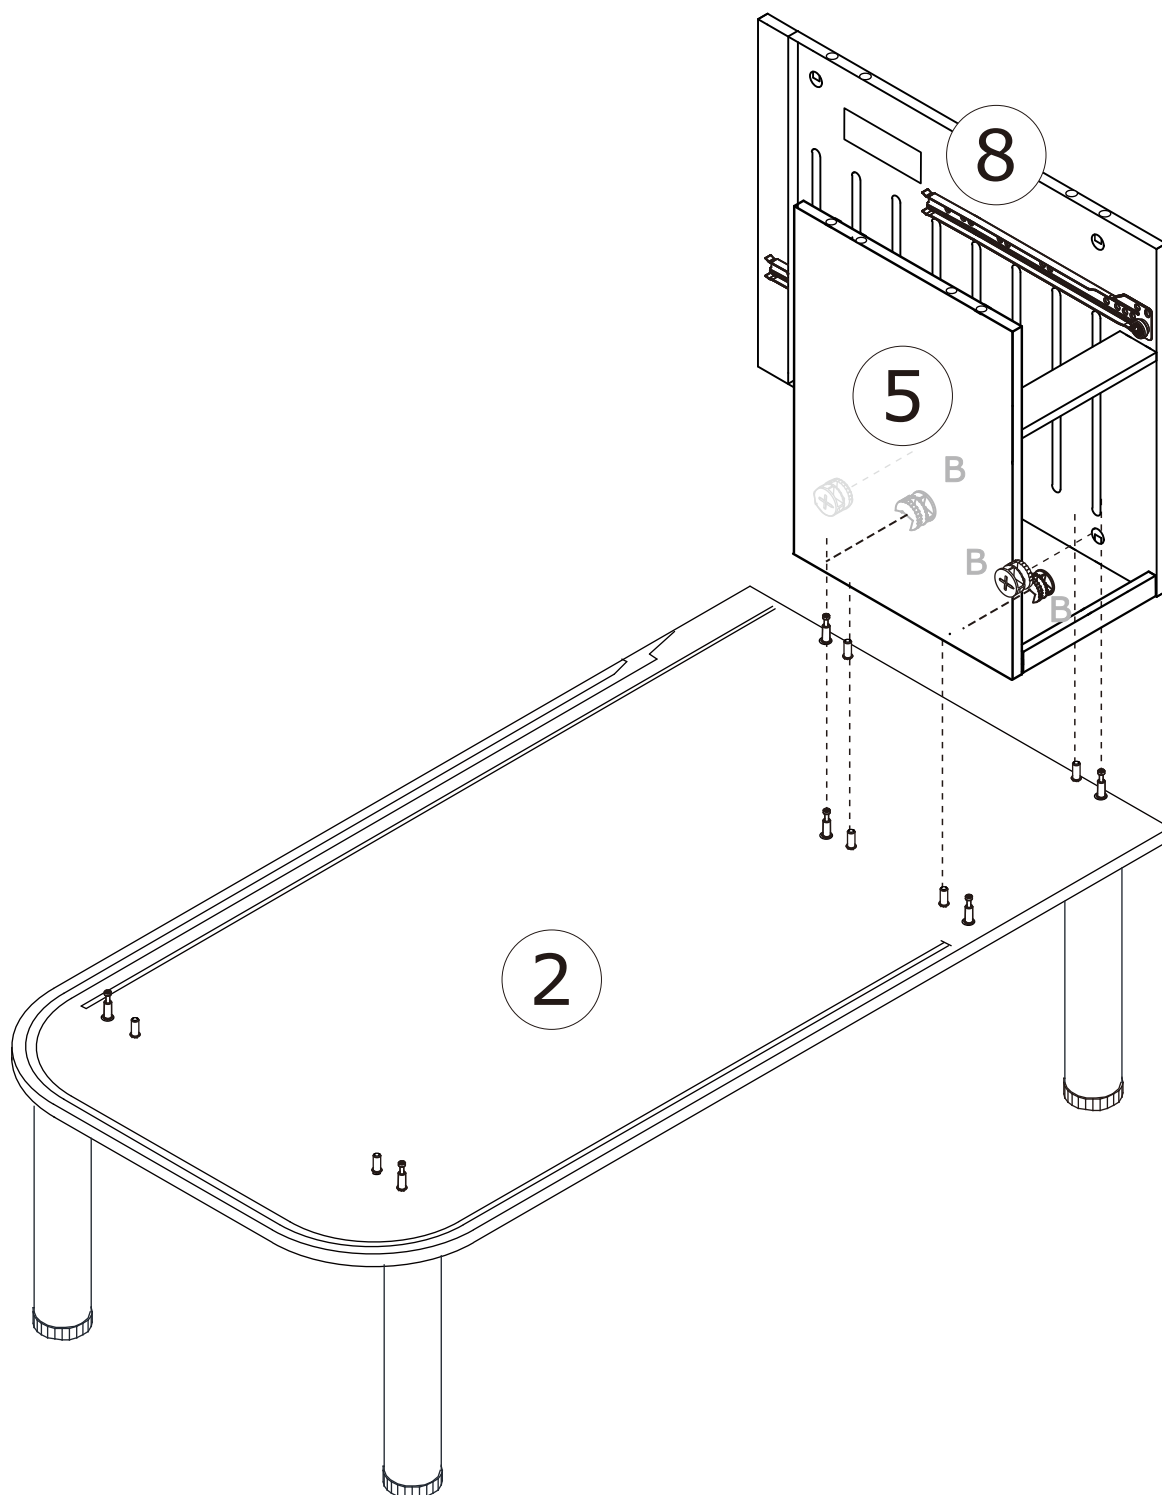

8

B x 2

 
 
 


Ø 15 x 9.5 mm



K x 4



Ø 5*40mm

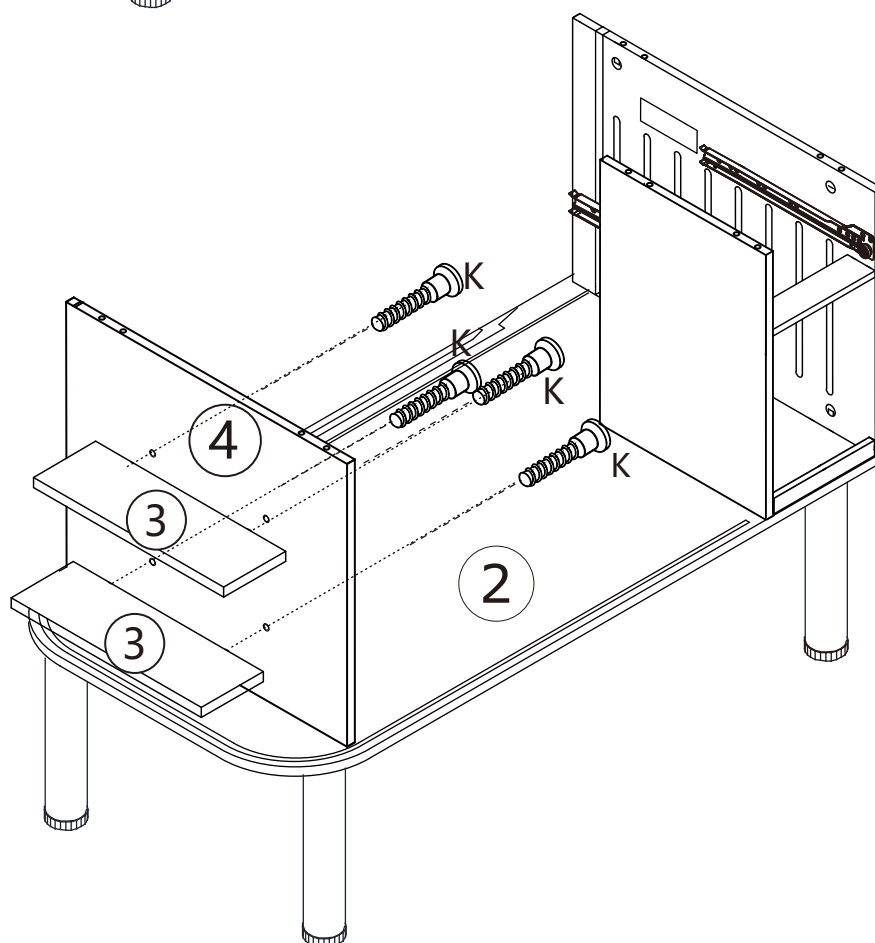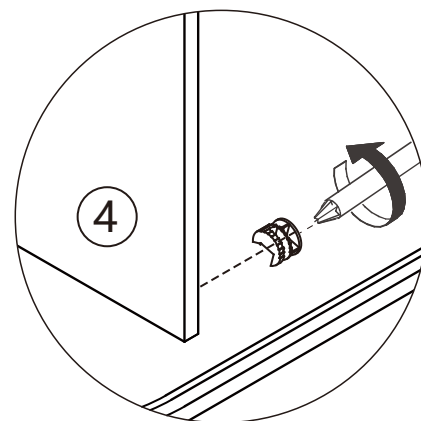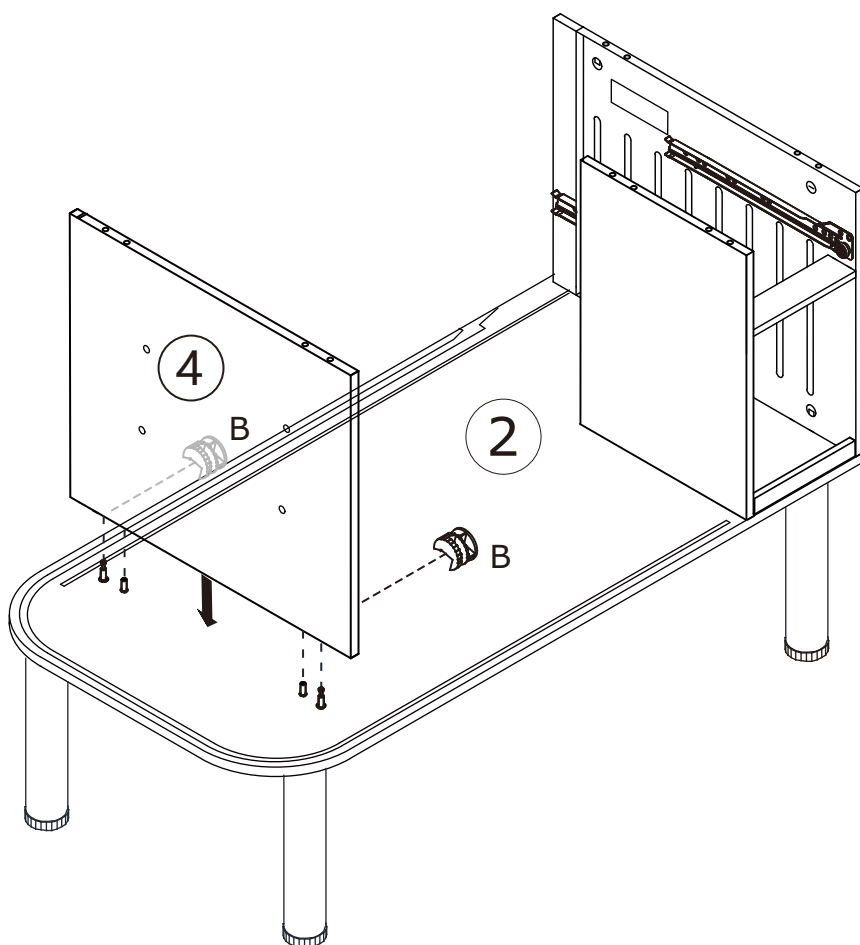

9

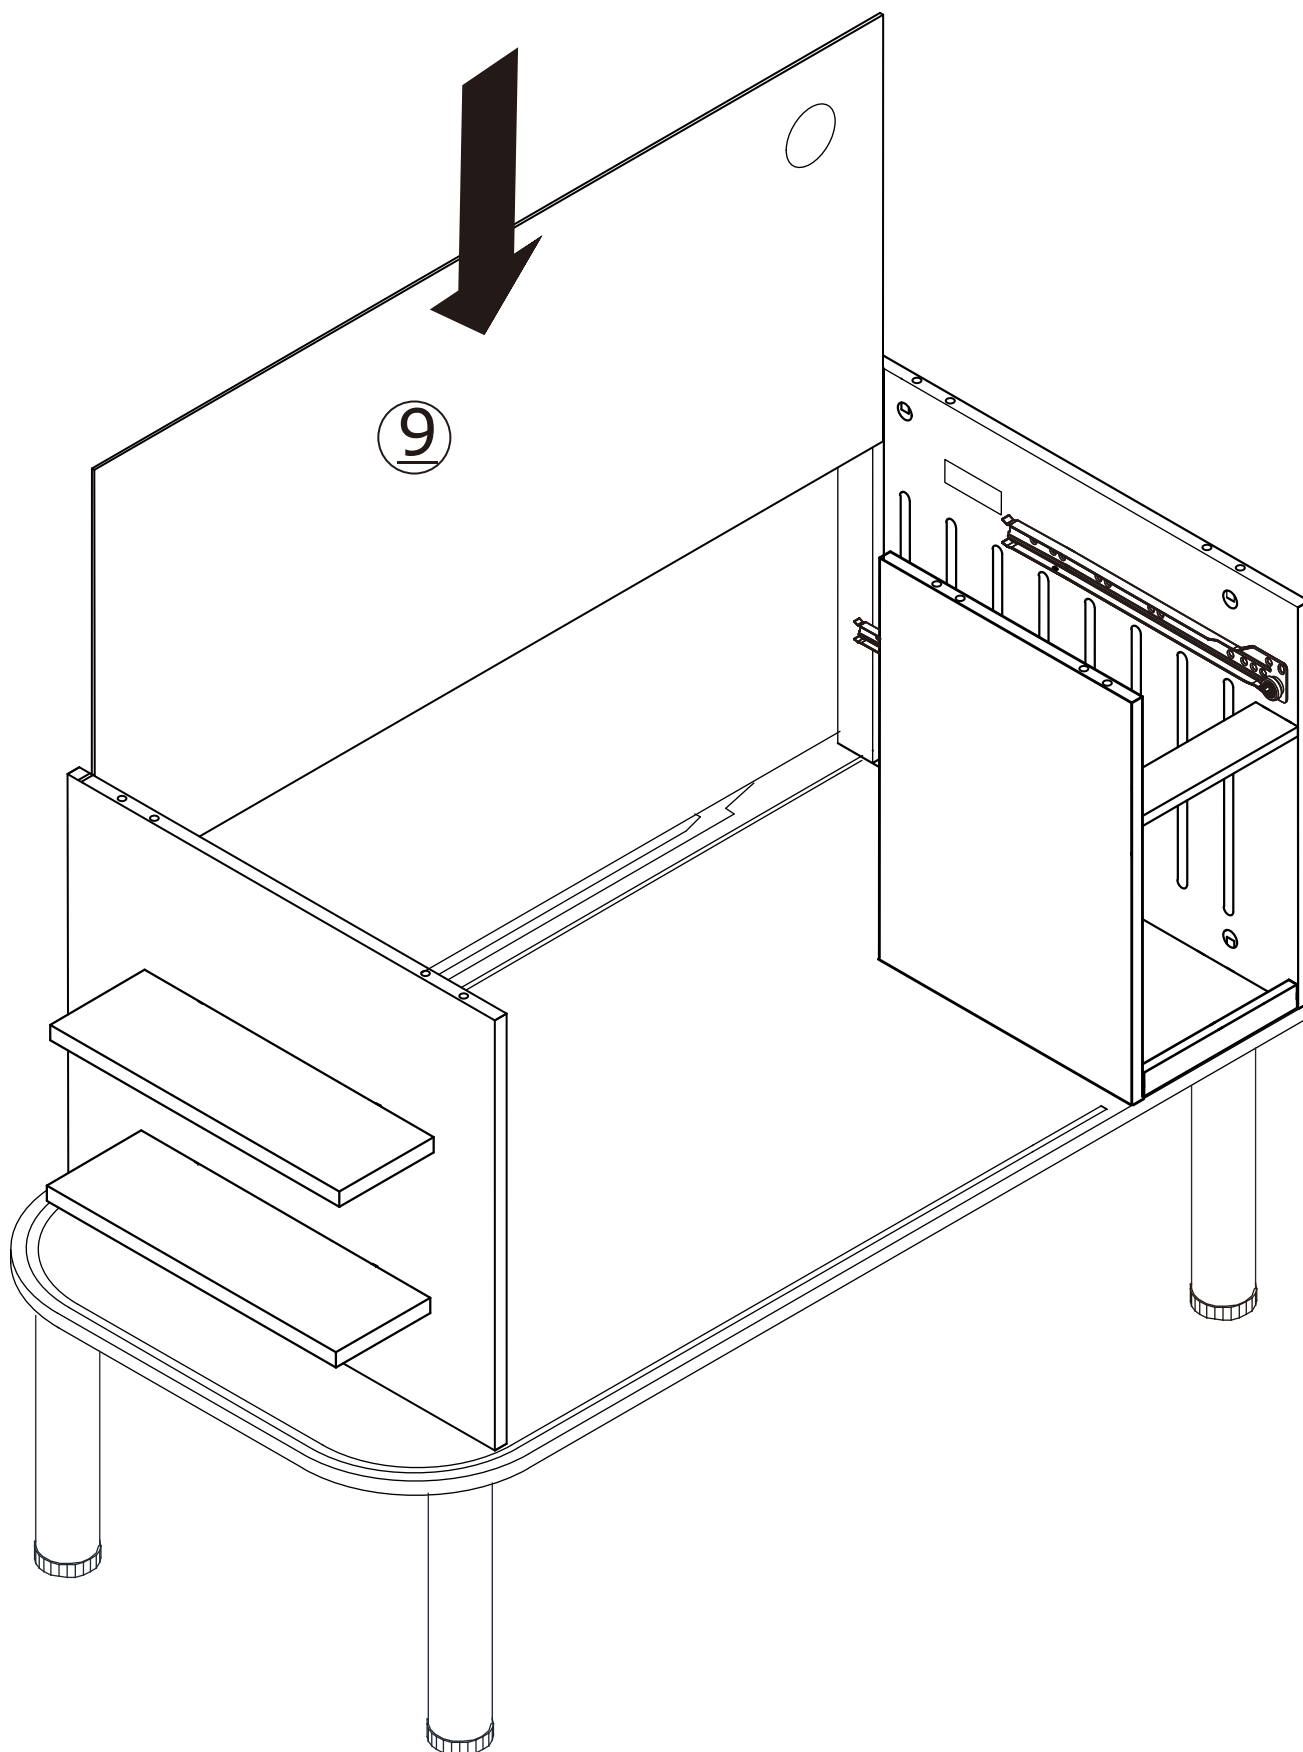  

10

A x 6

 
 
 


Ø 6 x 35 mm

C x 6



Ø 6 x 30 mm

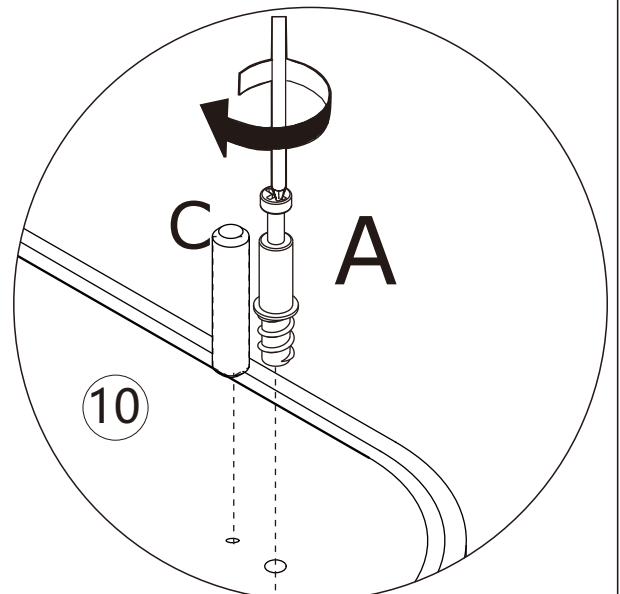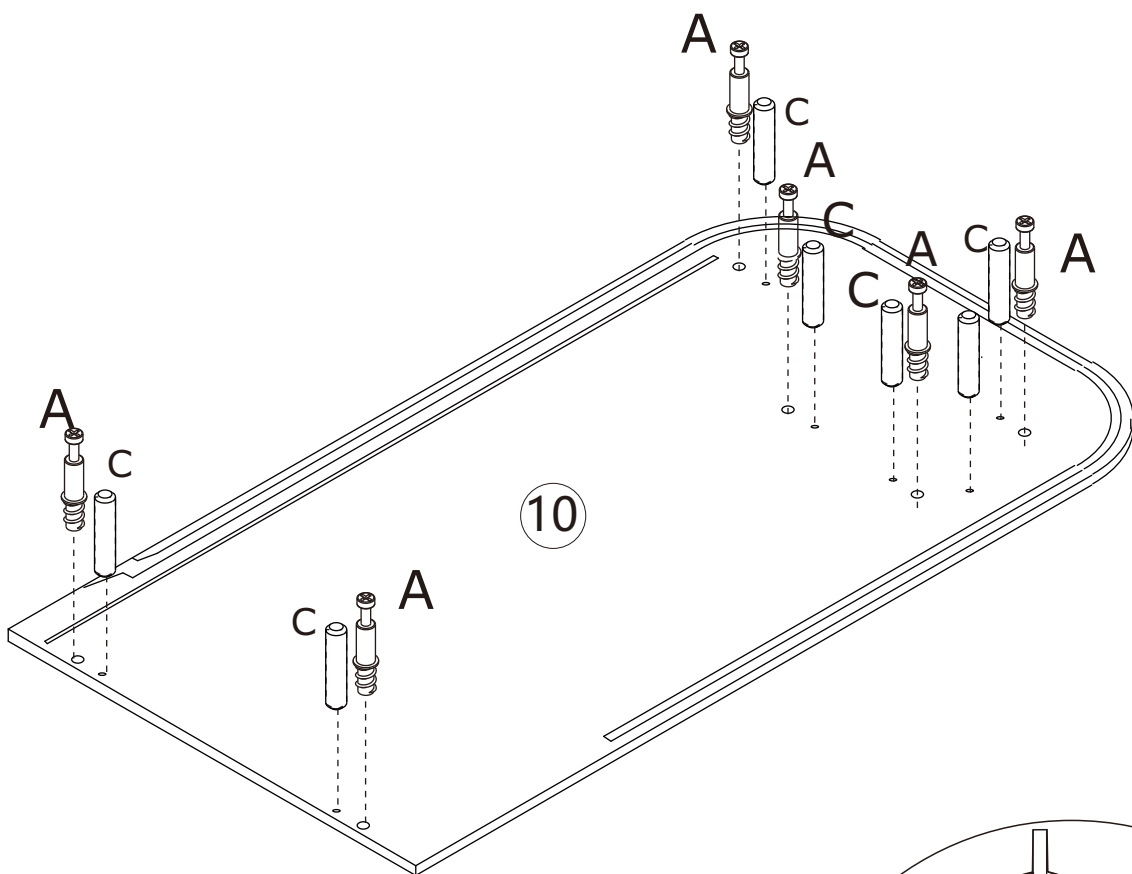



11




B x 6



  Ø 15 x 9.5 mm

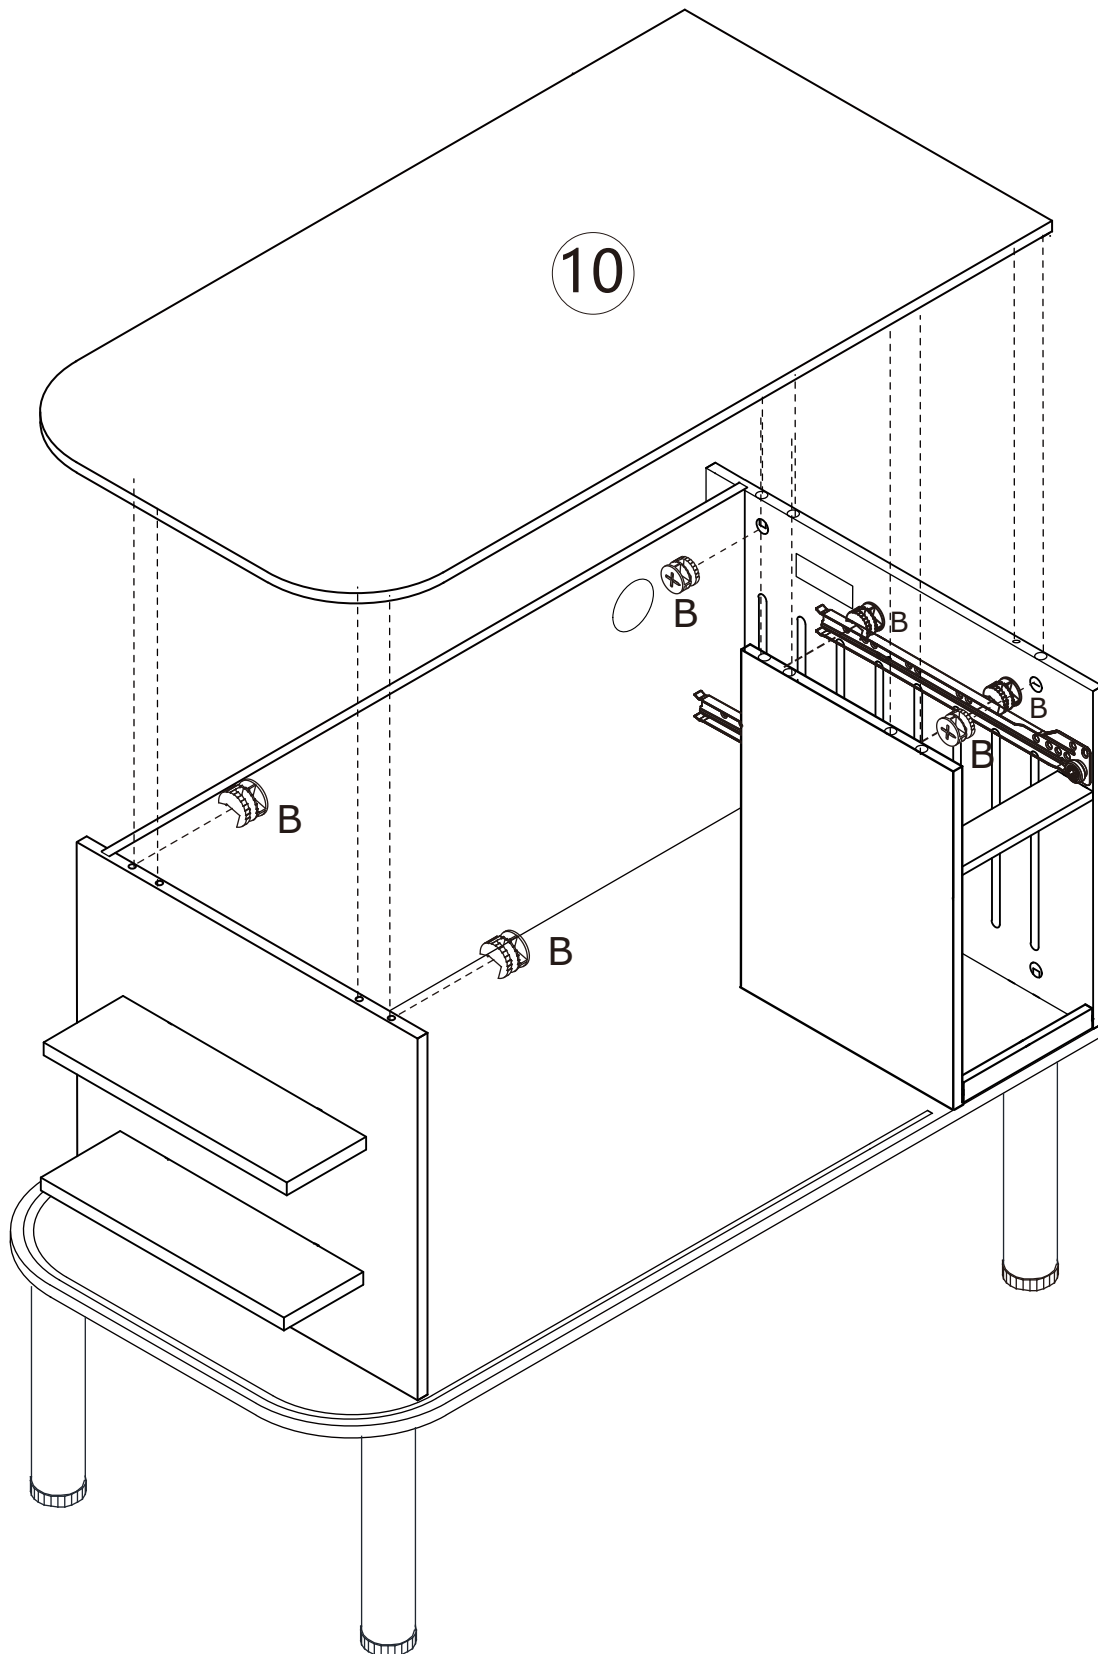

12

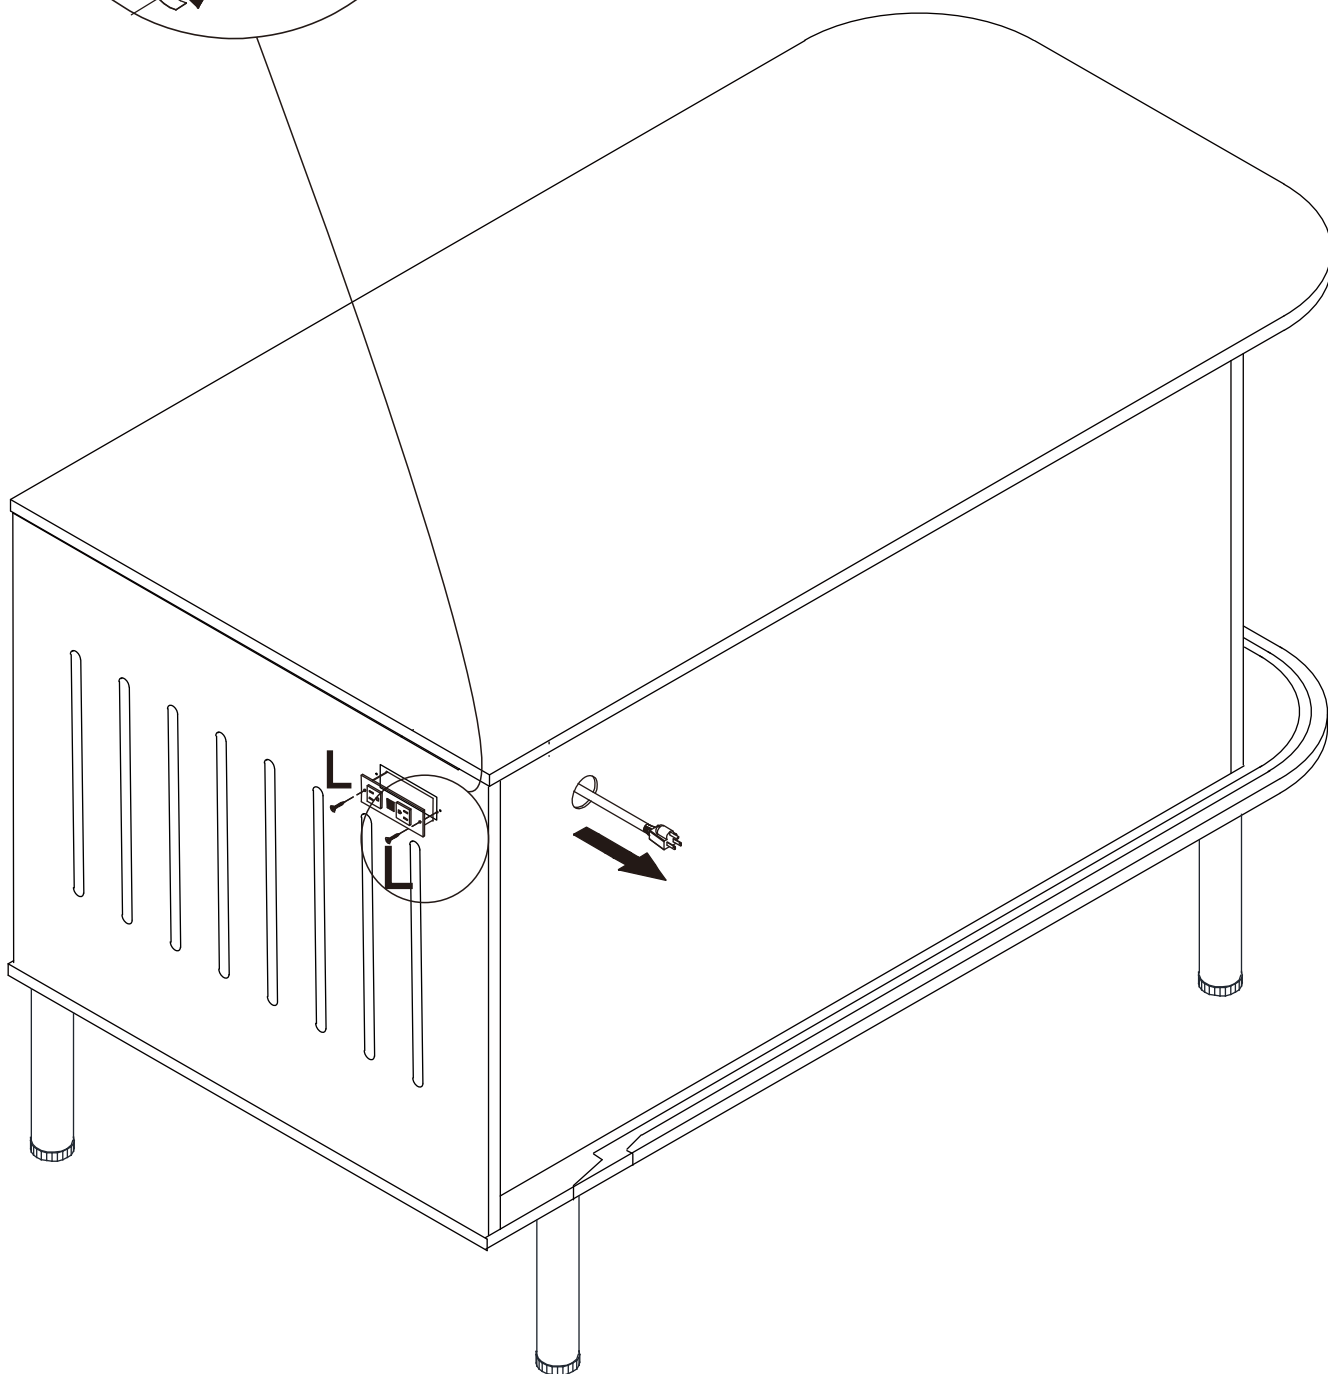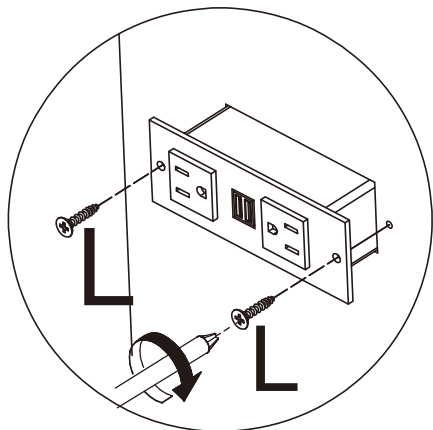  
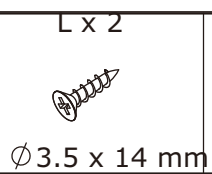 


13



F x4



  Ø4 x 30 mm

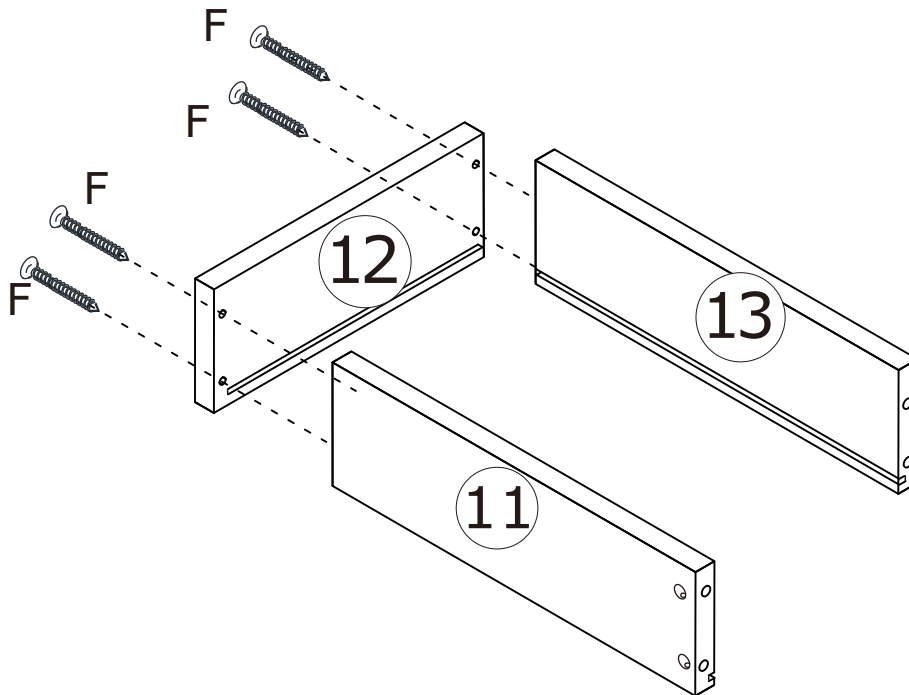



14

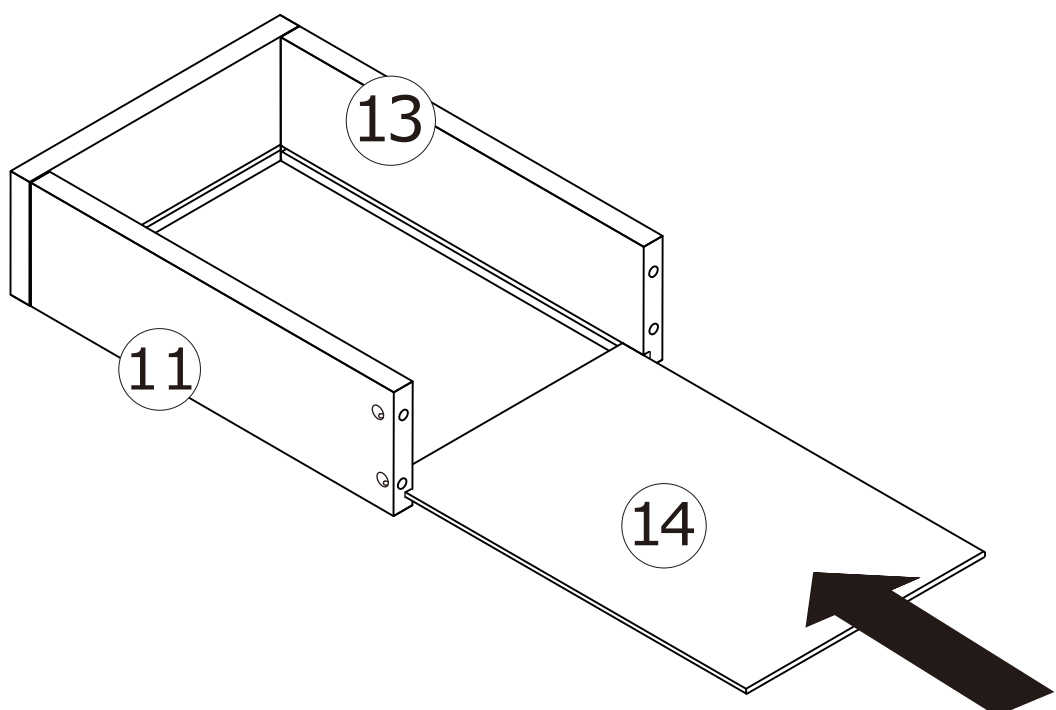  

15

Ax4

   $\phi 6 \times 35 \text{ mm}$

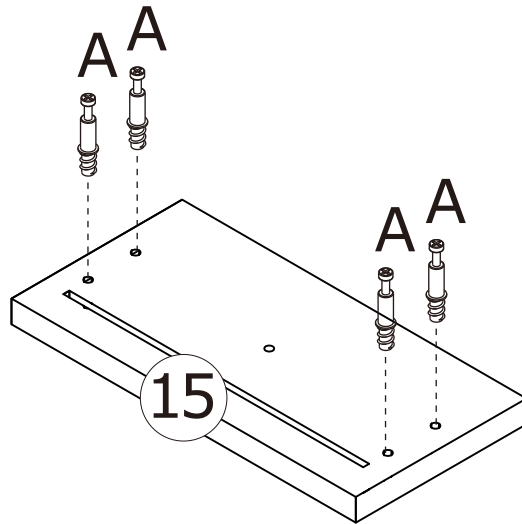



16

Bx4

 $\phi 15 \times 9.5 \text{ mm}$

J x1

   $\phi 4 \times 16 \text{ mm}$

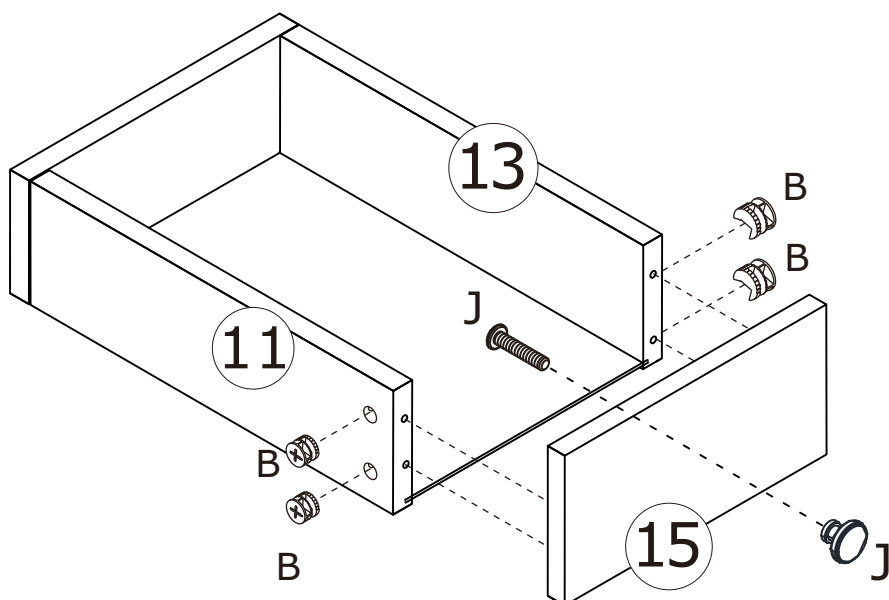

17

D x 1

 
 
 


L = 300 mm

E x 4



Ø3 x 12 mm

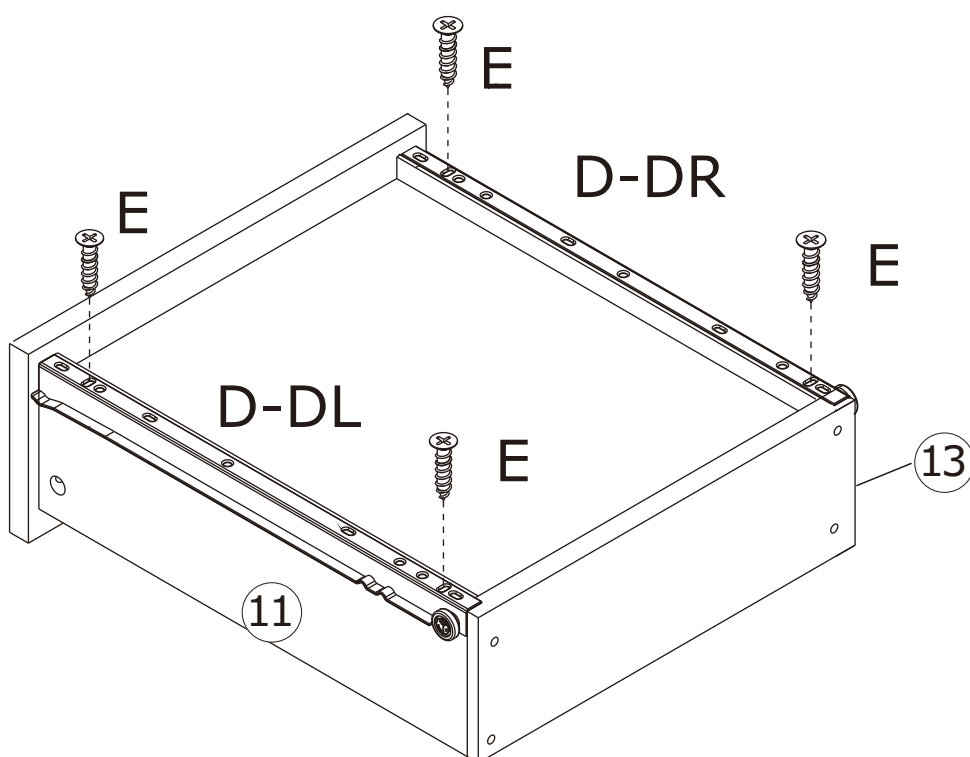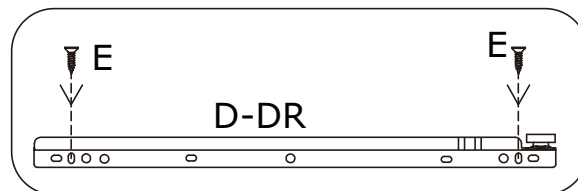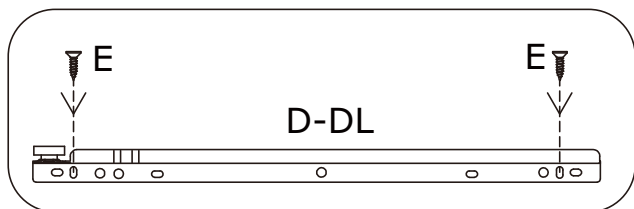


18






N x 8




 
E x 8




Ø 3 x 12 mm

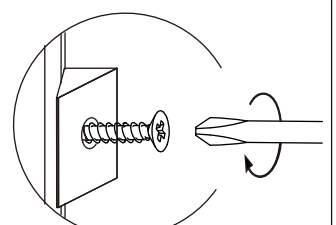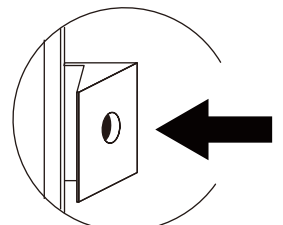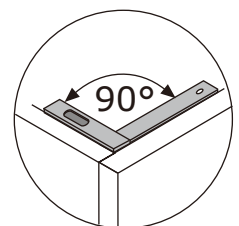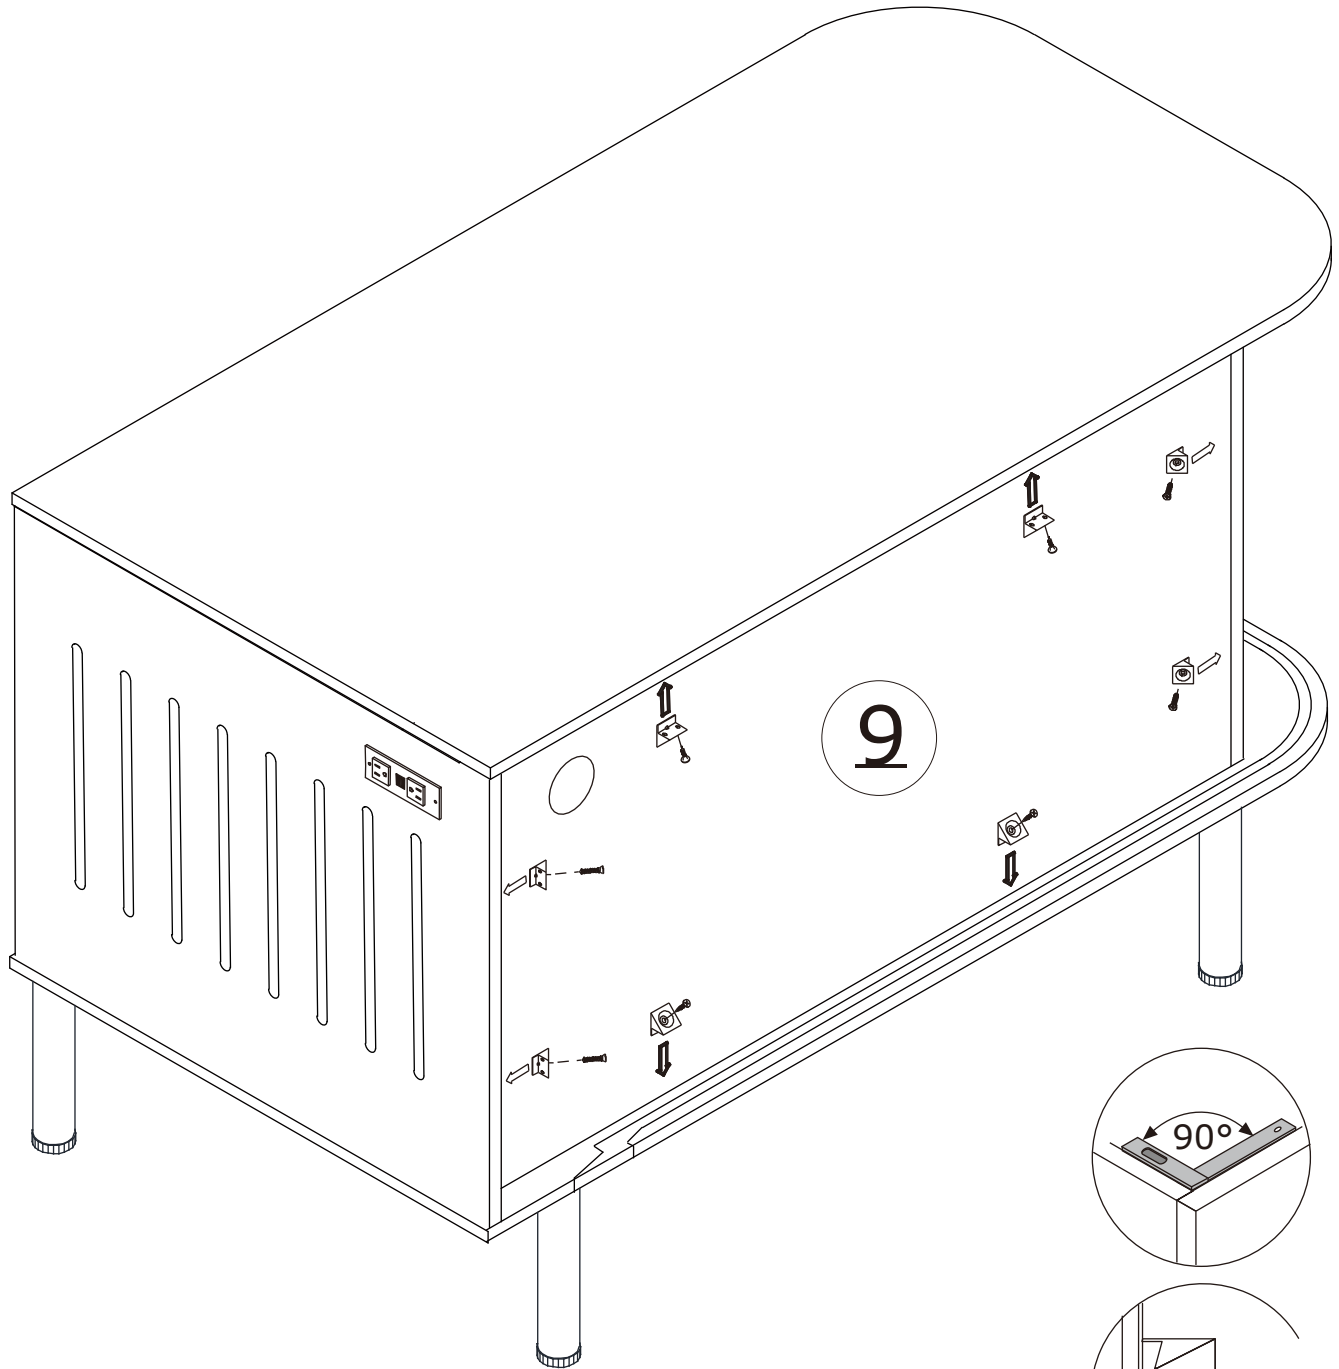     


19

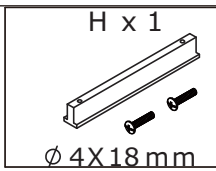  

16




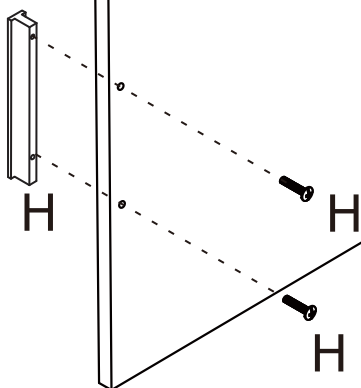 


20

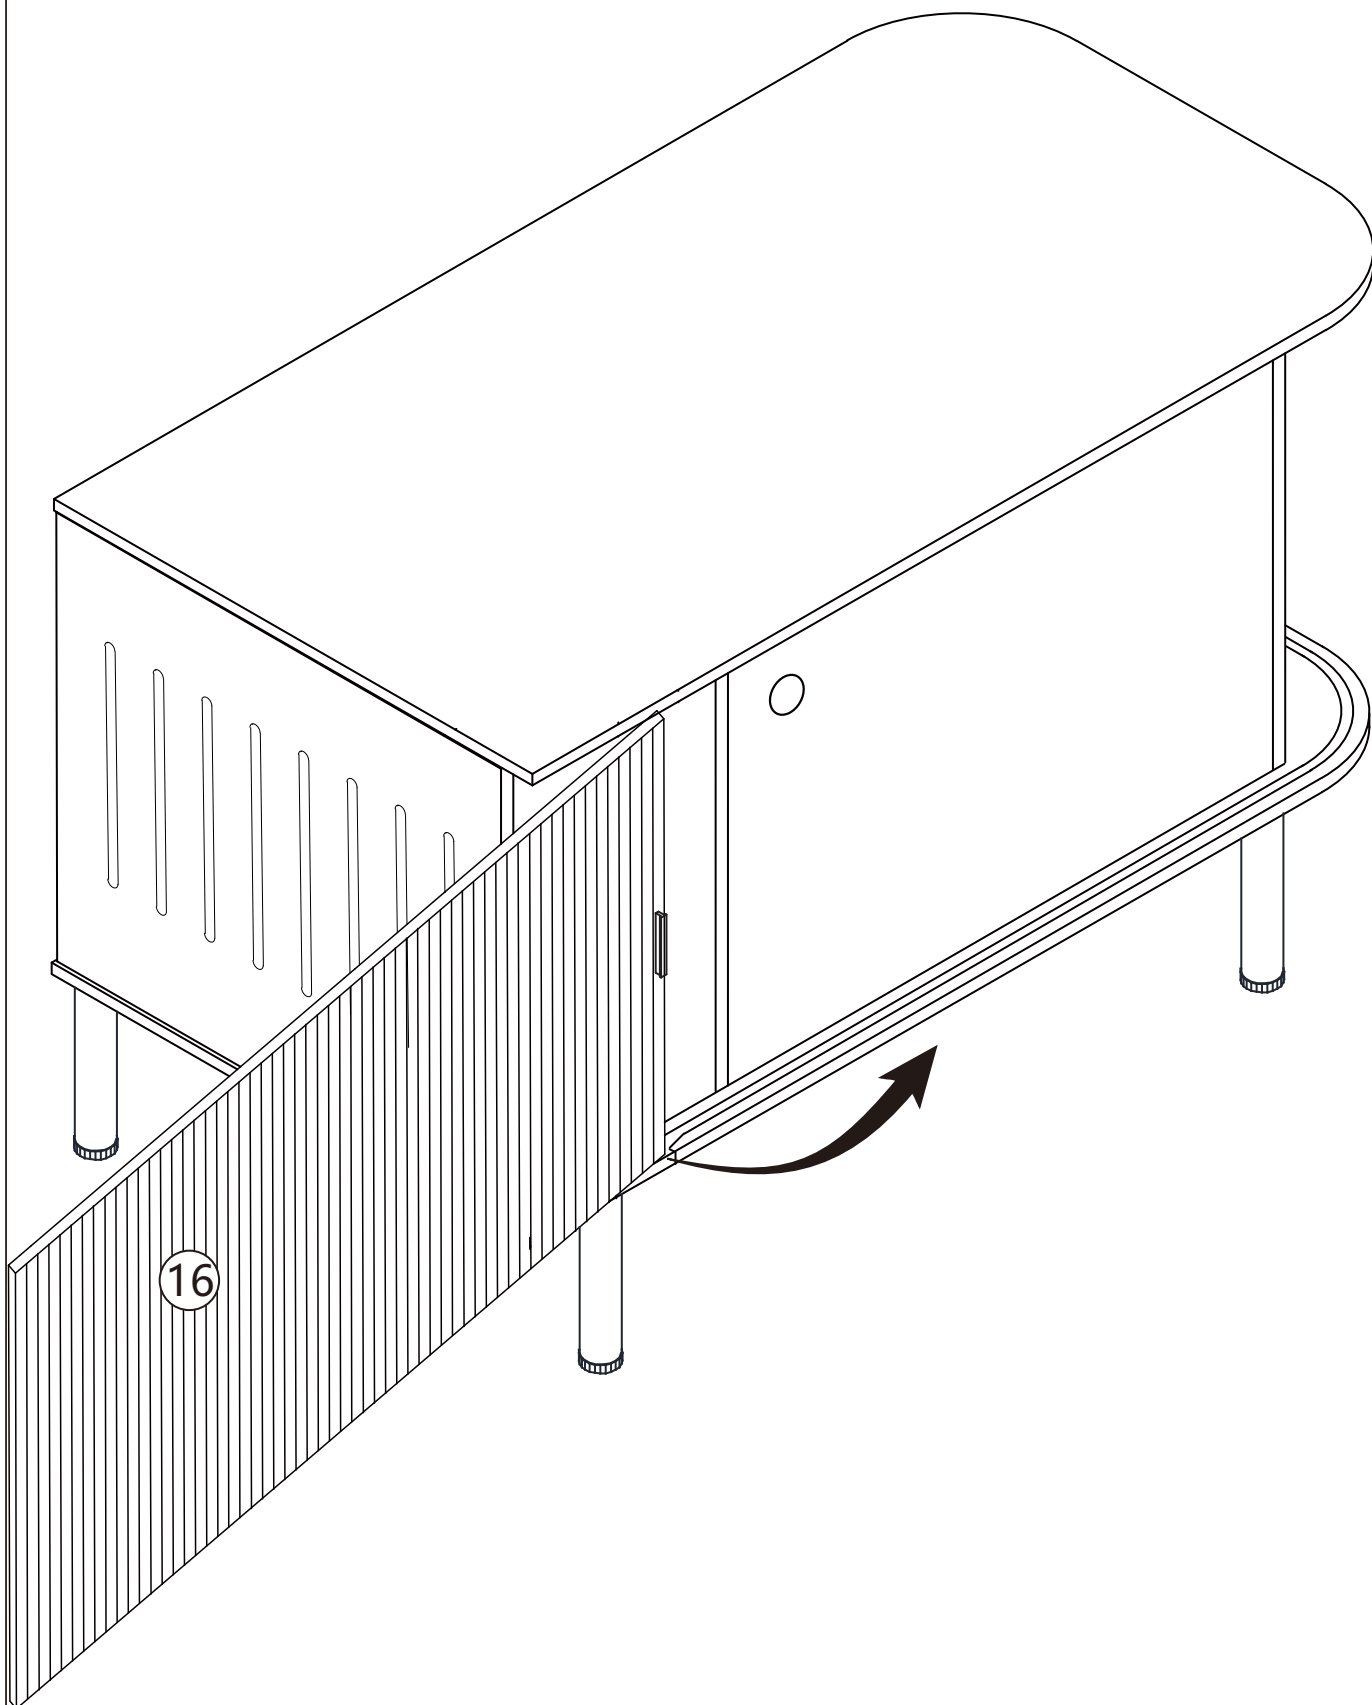 

21

    P x 22

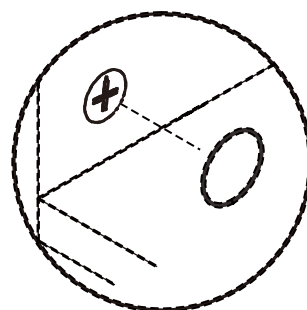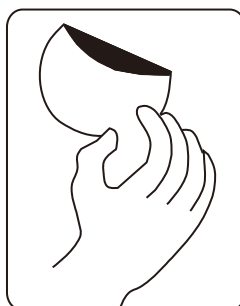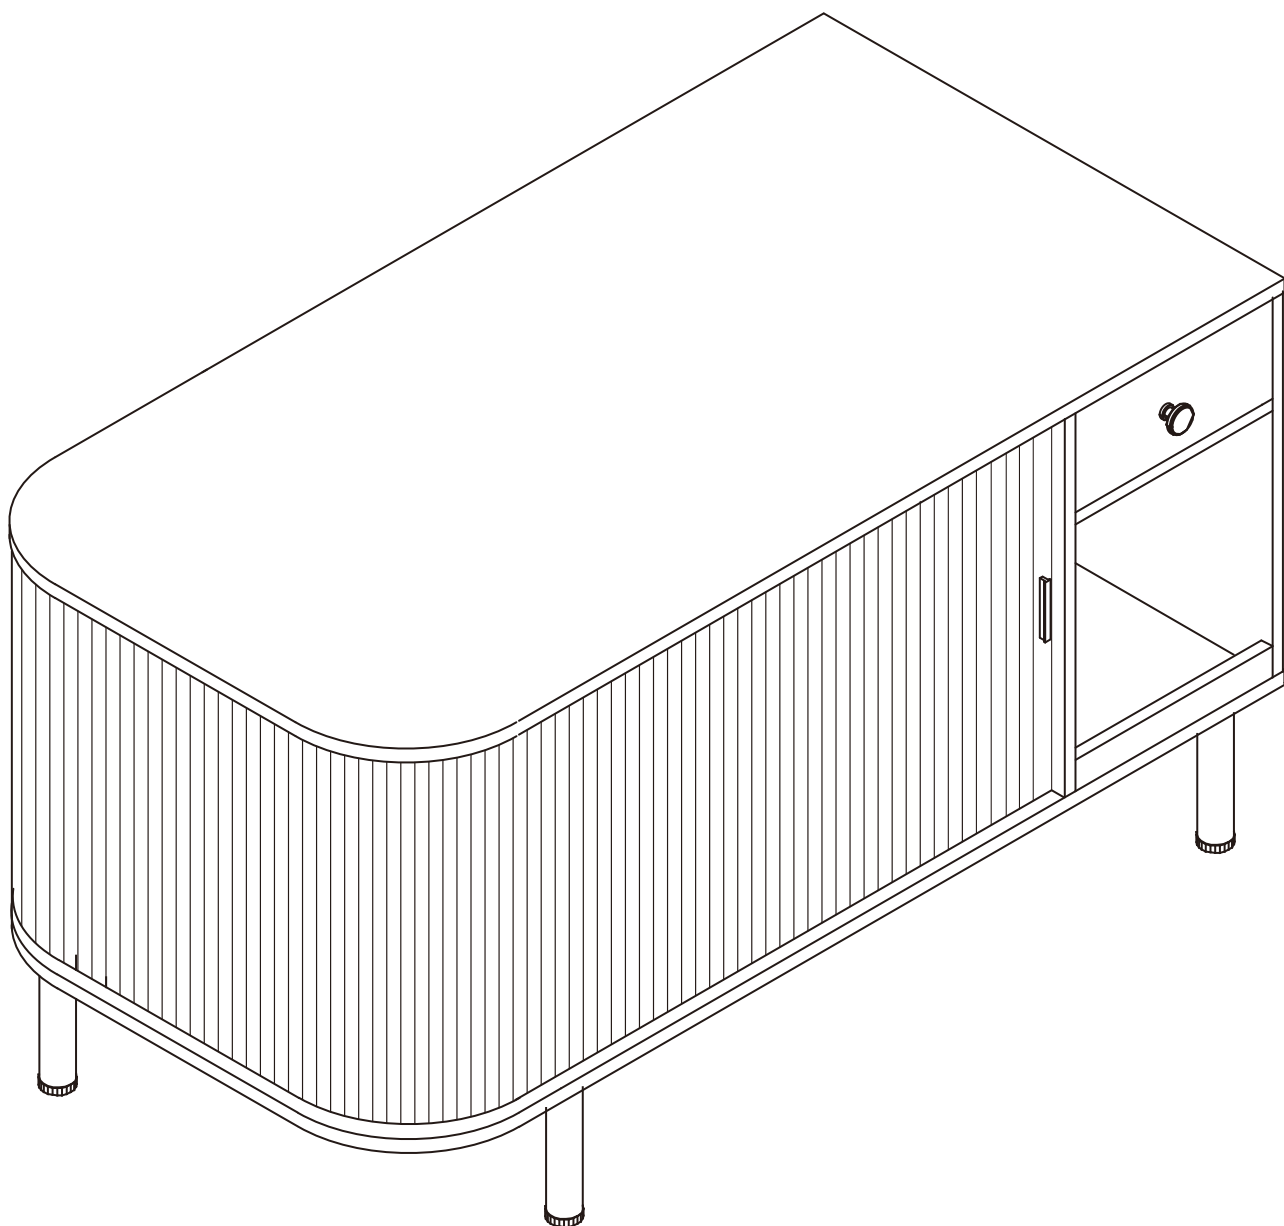

22

Q x1



After using it for a long time, if the door panel doesn't open and close smoothly, wipe it with Q.

Nach langer Zeit des Gebrauchs, wenn die Türklappe nicht mehr glatt öffnet und schließt, wische sie mit Q ab.

Après avoir utilisé pendant une longue période, si la porte ne s'ouvre et ne se ferme pas facilement, utilisez Q pour la nettoyer.

