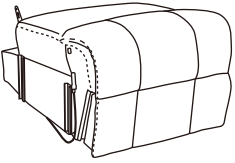
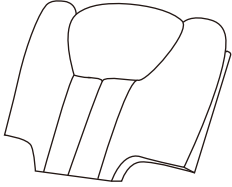
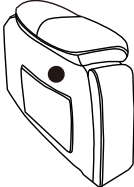
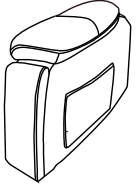
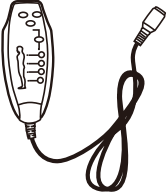
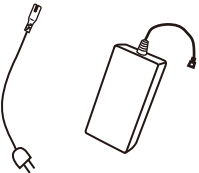
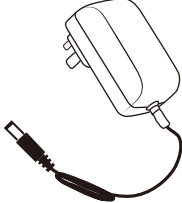
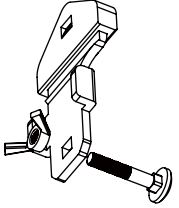


Assembly Instruction


Your recliner comes packaged in 3 boxes. Carefully remove all components from the packaging and set aside for assembly.

CAUTION:
DO NOT use any sharp objects to open plastic wrapped components as damage to product or components may result.


Package Contents

			
BOX 1	BOX 2	BOX 3	
A 1*Chair Seat	B 1*Chair Back	C 1*Left Armrest	D 1*Right Armrest
			
E Massage Remote	F Power Source	G Power Cord	H 2*Supporting Feet


Step 1: Find a small bag in the accessories box. Take out Supporting Feet(H) from the small bag. Assemble the two Supporting Feet as shown on the bottom of mechanism to avoid toppling and falling.

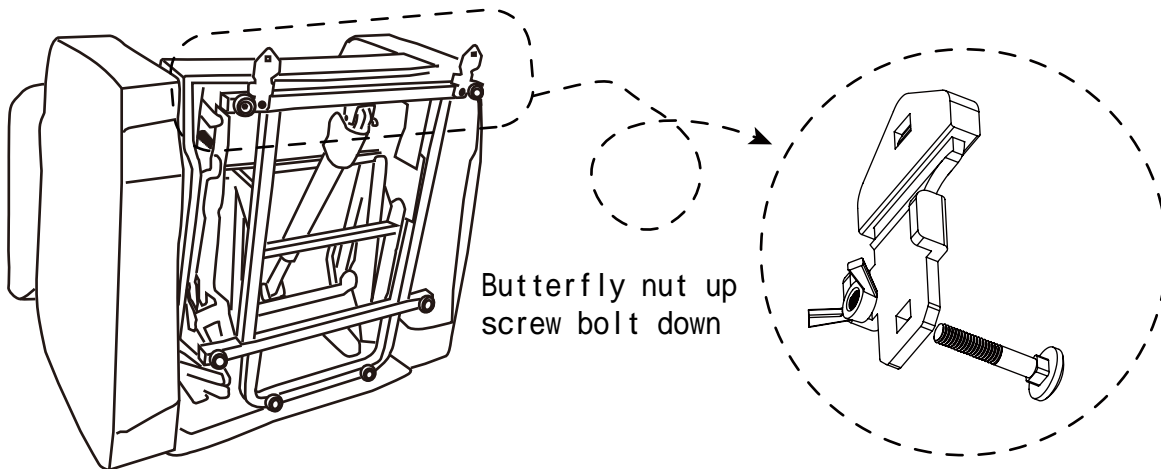

Step 2 Insert two armrests to the chair base, make sure the slots on the armrests fully assembled to the bottom part.

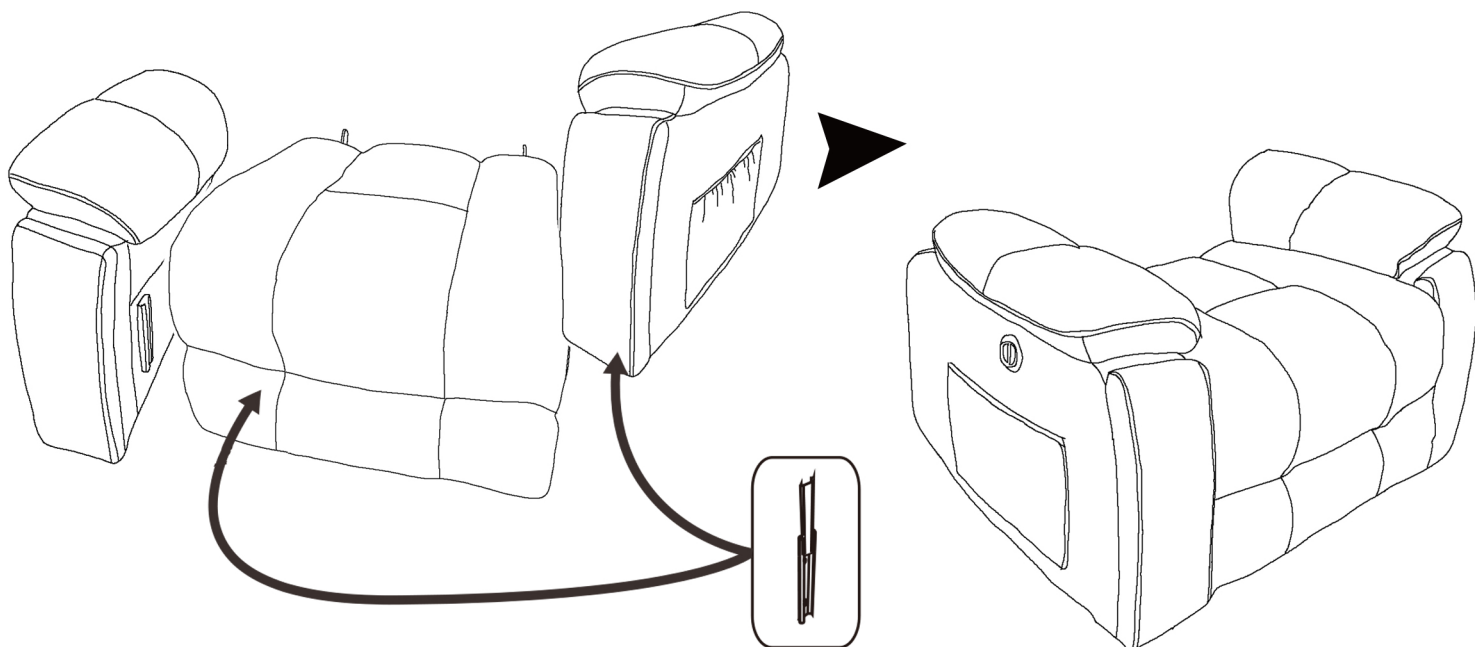

Step 3 Insert chair back to the chair base, make sure the slots on the back fully assembled to the bottom part.

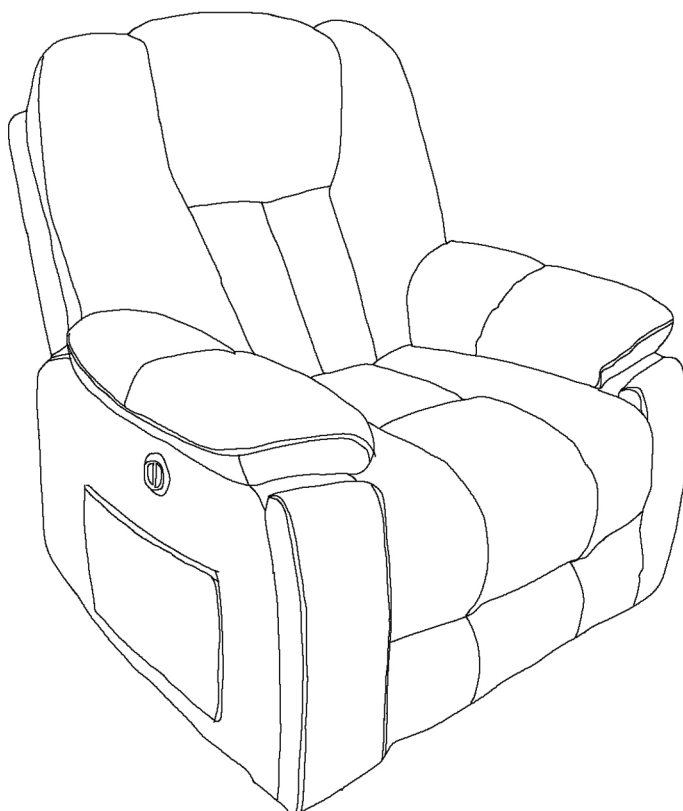

No.1 and No.2 wire connect with the backrest and chair seat.


No.3 wire connects with backrest and power cord(G).

No.4 wire connects with backrest and massage remote(E).

No.5 wire connect the motor and the wire from rightside armrest.

which use to connect the control panel.

No.6 wire connect the motor and power source (F).



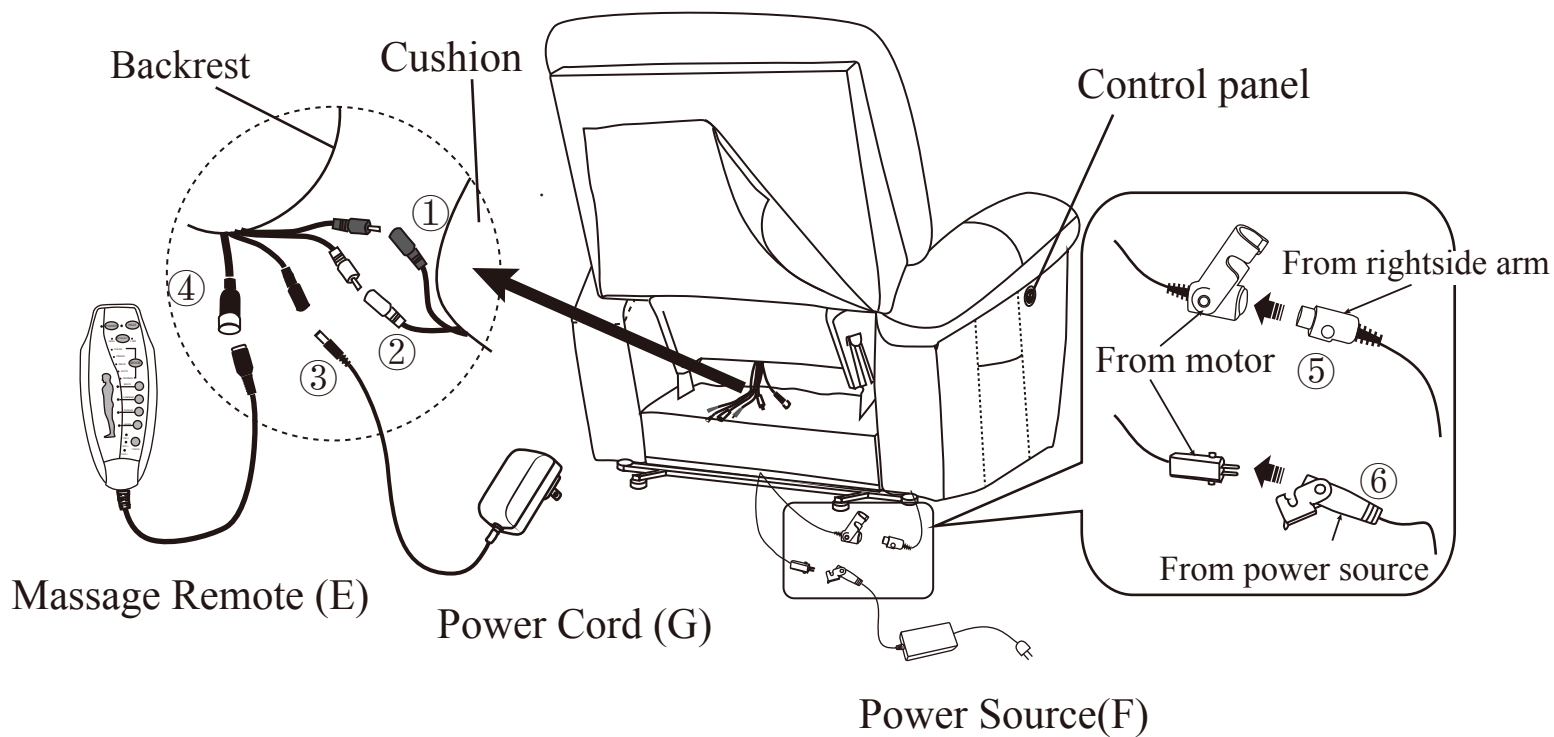


NOTE

1. The connection plugs have different colors, black to black, white to white, red to red.

2. Plug both the **Power Cord(G)** and **Power Source (F)** into outlet to get the recliner working.

Remote Operation Instruction

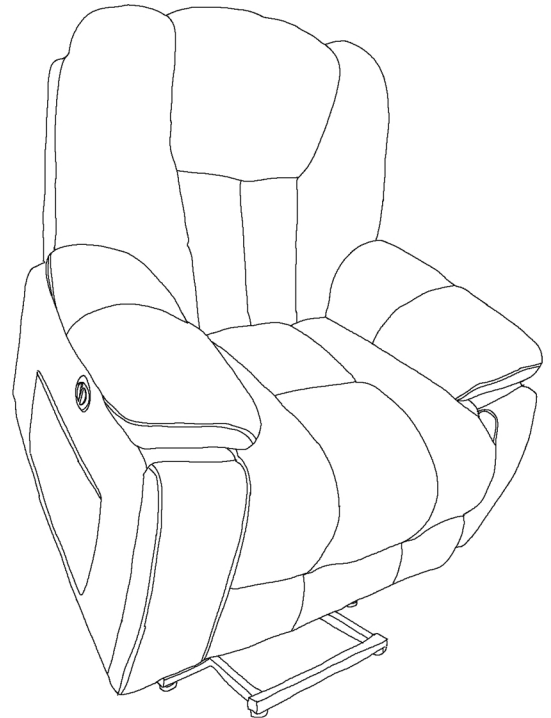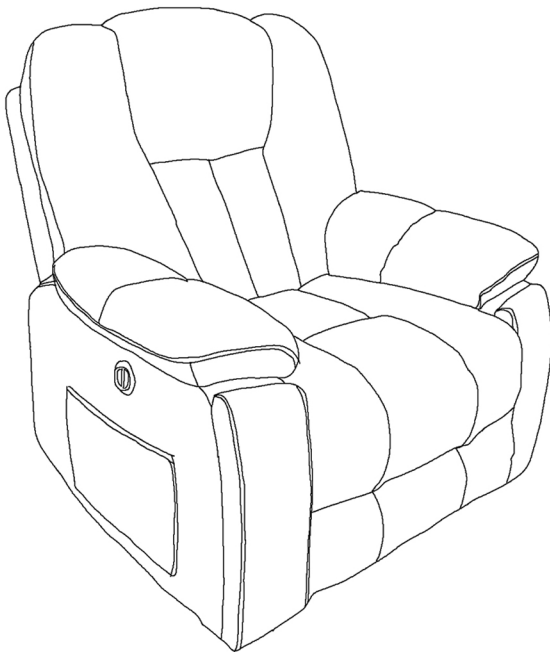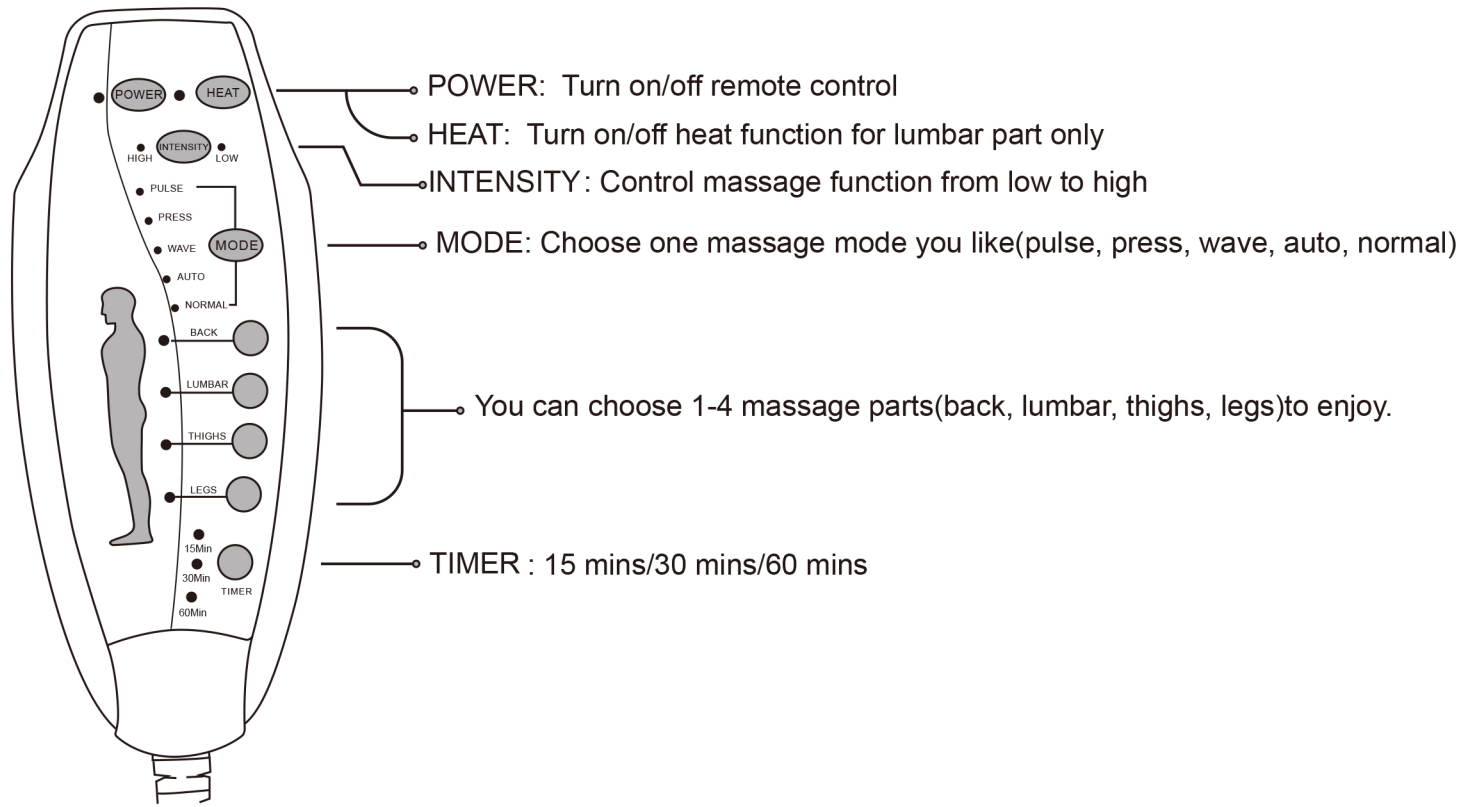

*Different positions by pressing **the button** to switch, the lift recliner chair can meet your various needs.*

Warnings

1. Please check if the components of the chair are all included and can be used normally.
2. Assemble all components according to the instruction correctly before you connect the chair to the power.
3. Please DO NOT sit on the armrests or footrest to eliminate the risk of tipping over.
4. If the chair is damaged or doesn't match the website description, please send clear pictures of the product and label of the carton to our service team for further help.
5. If the recliner doesn't work, you may try the following measures for self-checking firstly:
 - a) Check if all the cables are connected;
 - b) Check if the light of transformer is on.If the chair still doesn't work, please feed the information back to our customer service in time and we'll help you solve the matter as soon as possible.
6. If you have any questions with the product.

