



POPCORN MAKER



120V~60Hz,1200W

Thanks for your selection of our product. Please be sure to read this Manual carefully before using and keep safely for future reference.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all Instructions.
 2. Do not touch hot surfaces. Use handles or knobs.
 3. To protect against electric shock do not immerse cord or plugs in water.
 4. Close supervision is necessary when any appliance is used by or near children.
 5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
 6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
 7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
 8. Do not use outdoors.
 9. Do not let cord hang over edge of table or counter or touch hot surfaces.
 10. Do not place on or near a hot gas or electric burner, or in a heated oven.
 11. Use extreme caution when moving an appliance containing hot oil or other hot liquids.
 12. Always attach plug to appliance first, then plug cord in the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
 13. Do not use appliance for other than intended use.
 14. A popper that is plugged into an outlet should not be left unattended.
 15. Use extreme caution when unloading popcorn. Always turn the unit over a counter-top so that residual hot oil or water running out will not cause burns.
 16. A short power-supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
 17. If a long detachable power-supply cord or extension cord is used:
 - The marked electrical rating of the cord or extension cord should be at least as great as the electrical rating of the appliance.
 - If the appliance is of the grounded type, the extension cord should be a grounding 3-wire cord.
- All requested breaks must be followed.

- Please refer to the rating label for the maximum continuous usage time (KB 5 min is the maximum usage time).
- The breaks should last at least 10 minutes.
- 18. This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- 19. For safety reasons a damaged or defective supply cord should only be replaced by service center.
- 20. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

SAVE INSTRUCTIONS

USING THE POPCORN MAKER

- Place the Popcorn Maker on a level surface.
- Before first use, it is recommended to wipe the Popcorn Maker and accessories with a damp cloth.
- Measure the corns using the Measuring Cup provided. One full cup per session is enough. More than one full cup could overflow the Popcorn Maker and disturb the proper functioning of the Popcorn Maker.
- Preheating of the appliance is not necessary.
- Do not add any other ingredients such as: oil, shortening, butter, margarine, salt or sugar, as damage will occur.
- Pour the kernels into the Aluminum Heat Chamber through top.
- Replace the Measuring Cup into position inside the Top Cover after every use.
- Place a large bowl under the Spout so that the edge of the bowl is touching the body of the Popcorn Maker. It is important that the Popcorn ejects down the Spout into the bowl and not re-directed, blocked or otherwise interfered with, since the Popcorn is hot and premature contact may cause minor discomfort.
- Switch On the Popcorn Maker. After a few moments the continuous popping action will automatically feed Popcorn from the Aluminum Heat Chamber out through the Spout until all has popped. This process will last about 2-3 minutes.

- Turn off the Popcorn Maker and unplug from outlet when popping has stopped.
- If more Popcorn is needed, remove the Popcorn remaining in the Aluminum Heat Chamber. Use caution when handling the Top Cover and Measuring Cup. They are very hot when the Popcorn Maker is functioning.

NOTE: Wait for approx. 10 to 12 minutes before using the Popcorn Maker again.

WARNING:

- Place the Measuring Cup on top of the Top Cover, butter side up.
- Do not put butter into the Aluminum Heat Chamber.

CLEANING AND MAINTENANCE

- Before cleaning, unplug from outlet.
- Make sure the Popcorn Maker has cooled down completely before cleaning.
- Clean the plastic parts of the Popcorn maker with a damp cloth. Never use abrasive products as they could damage the Popcorn maker.
- The Top Cover and the Measuring Cup can be cleaned in warm soapy water.

STORAGE

When the Popcorn Maker is not in use, unplug the Popcorn Maker and store in a safe, dry place, out of reach of children.

CUSTOMER SERVICE

Contact us through our website:www.TeamCustomerService.com

If you have any question about assembly, use or possible missing part,
Please contact us and we will be glad to assist you.