 




Betty Crocker™

Mini Pizza & Meal Maker

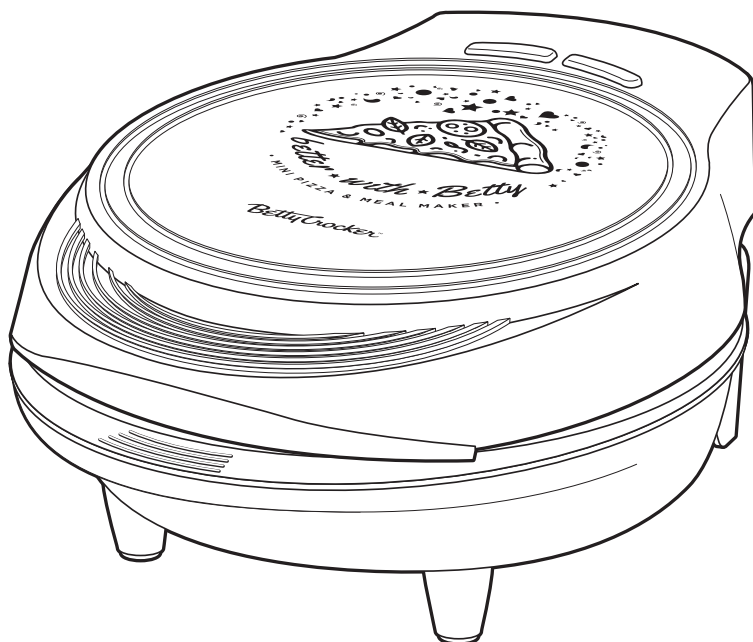

HOUSEHOLD USE ONLY

BC-5962RC

Table of Contents

Important Safeguards	3
Additional Important Safeguards	4
Power Cord and Plug Information	4
Before Your First Use	5
Know the Parts of Your Mini Pizza & Meal Maker	6
Using Your Mini Pizza & Meal Maker	7
Care and Cleaning	9
Limited Warranty One (1) Year	10
To Return for Service:	11

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury.

- 1. READ ALL INSTRUCTIONS CAREFULLY.**
2. Do not touch hot surfaces. Use handles or knobs. Parts become hot during use.
- 3. To protect against fire, electric shock, and injury to persons, do not immerse cord, plug, or unit in water or any other liquid.**
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug the Mini Pizza & Meal Maker from outlet when not in use and before cleaning. Allow to cool before cleaning.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock or injury and is therefore prohibited.
8. Do not use outdoors.
9. Do not allow the cord to hang over the edge of table or counter, or touch hot surfaces including the stove.
10. Do not place on or near a hot gas or electric burner or in a heated oven.
11. Preheat the unit until ready lamp turns on.
12. To disconnect appliance, turn any control off, then remove plug from wall outlet.
13. Extreme caution must be used when moving an appliance containing hot oil or other liquids.
14. Do not use this appliance for other than its intended use.
15. Do not twist, kink or wrap the power cord around the appliance as this may cause the insulation to weaken and split, particularly in the location where it enters the unit.
- 16. Do not leave appliance unattended while in use.**
17. The appliance is only to be operated in the closed position.

SAVE THESE INSTRUCTIONS
HOUSEHOLD USE ONLY

ADDITIONAL IMPORTANT SAFEGUARDS

1. Always place appliance on a heat resistant surface.
2. Use utensils specifically designed for nonstick surfaces to avoid scratching. Never remove the food item with a cutting device or metal kitchen utensil.
3. When using the appliance, allow for four to six inches of space above, behind and on either side of the appliance for air circulation.
4. Always unplug appliance immediately from outlet when not in use.
5. Always unplug and cool appliance before cleaning.

POWER CORD AND PLUG INFORMATION

Power Cord Instructions

1. A short power-supply cord is provided to reduce the hazard resulting from entanglement or tripping over a long cord.
2. Extension cords may be used if care is exercised. If it is necessary to use an extension cord, it should be positioned so that it does not drape over the counter or tabletop where it can be pulled on by children or tripped over unintentionally.
3. The electrical rating of the extension cord must be the same or more than the wattage of the appliance (the wattage is shown on the rating label located on the underside or back of the appliance).
4. Avoid pulling or straining the power cord at outlet or appliance connections.

Polarized Plug

1. Your appliance is equipped with a polarized plug (one blade is wider than the other).
2. To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way.
3. If the plug does not fit fully into the outlet, reverse the plug. If it does not fit, please consult a qualified electrician. Do not attempt to defeat this safety feature by modifying the plug in any way.

WARNING: Improper use of the power cord may result in electric shock. Consult a qualified electrician if necessary.

BEFORE YOUR FIRST USE

Carefully unpack the Mini Pizza & Meal Maker and remove all packaging materials from in and around the unit. To remove any dust that may have accumulated during packaging, wipe the baking plates and the exterior of the unit with a cloth or sponge moistened in warm water. Dry thoroughly.

WARNING: Do not immerse the unit, cord or plug in water or any other liquid. Do not pour or run water onto any part of the appliance. Do not use harsh or abrasive cleansers on any part of the appliance.

To maintain the quality of the nonstick finish on your Mini Pizza & Meal Maker we recommend the following: Using a paper towel, coat the nonstick surface with a small amount of vegetable oil or a nonstick cooking spray. Wipe off excess oil.

Before use, unwind the power cord completely and keep the cord away from the hot parts of the appliance.

NOTE: During the first use, the unit may emit a slight odor for a few minutes. This is normal. The odor is harmless and should not reoccur after the initial heating.



WARNING:

To protect against fire, electric shock, and injury to persons. DO NOT IMMERSE CORD, PLUG, OR UNIT IN WATER OR ANY OTHER LIQUID.

 


KNOW THE PARTS OF YOUR MINI PIZZA & MEAL MAKER

Ready-to-Bake
Indicator Light

Power-On
Indicator Light


Handle

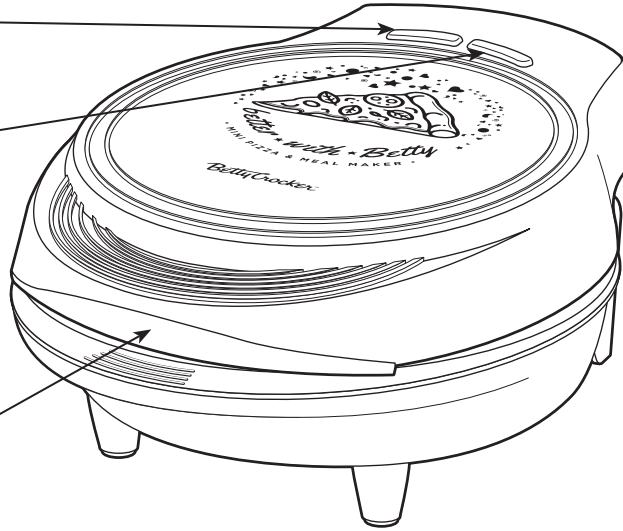

Top Nonstick
Baking Plate

Bottom Nonstick
Baking Plate

 Cord Wrap

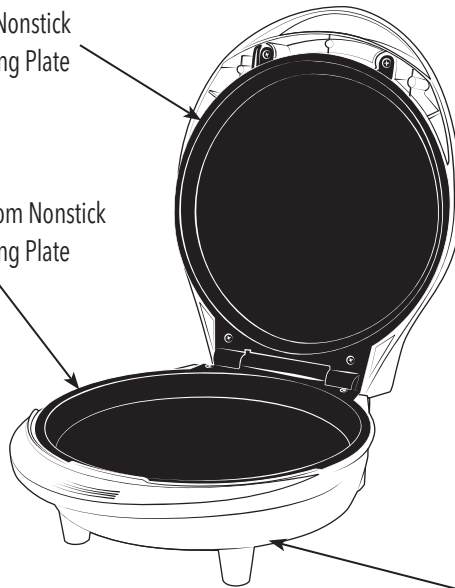

RATING: 120 V, 60 Hz, 1000 W, AC ONLY

USING YOUR MINI PIZZA & MEAL MAKER

 
1. Place unit on a clean, dry, heat resistant flat surface, such as a table or countertop.
2. To maintain the quality of the nonstick finish on your Mini Pizza & Meal Maker we recommend the following: Using a paper towel or silicone basting brush, coat the nonstick surfaces with a small amount of vegetable oil or a nonstick cooking spray. Wipe off excess oil.
3. Plug the power cord into a convenient 120V, 60 Hz, AC-only outlet. The red Power-On indicator light will illuminate. Lower the lid to the closed position.

NOTE: The Mini Pizza & Meal Maker must be allowed to preheat before using. During pre-heating you can prepare your ingredients and pizza dough.


4. The red Power-On Indicator Light comes on when the unit is plugged in. This light will stay on until the unit is unplugged.
5. The green Ready-to-Bake Indicator Light comes on when the unit has reached the required temperature for baking. For best results, wait until the green Ready-to-Bake Indicator Light comes on before placing your pizza on the Bottom Nonstick Baking Plate.
6. The green Ready-to-Bake light cycles off and on during the baking cycle as the unit maintains baking temperature. The baking plates will reach a temperature of up to 400°C (204°C).

NOTE: If you are preparing a fresh pizza ensure your dough is rolled out no larger than 7" in diameter. Your Mini Pizza & Meal Maker accommodates a 7" pizza.

WARNING: The housing of this unit gets hot during use. Always use the handle on the lid to open and close the unit. To prevent burns, never touch baking plates while hot. Always use oven mitts to protect your hands when opening and closing the unit as steam may emit from the sides and can cause burns.

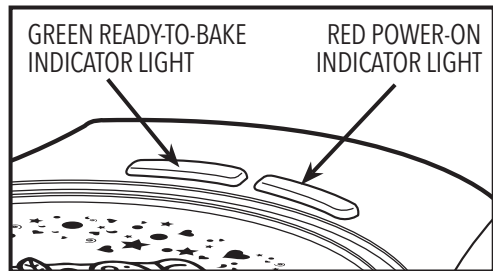

 7. Wearing oven mitts, use the handle to lift the lid into the upright position. Carefully place your homemade or frozen pizza onto the Bottom Nonstick Baking Plate.

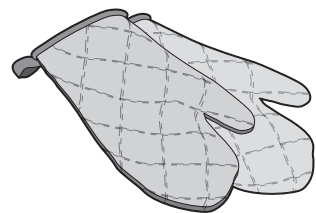

8. Close lid and allow to bake.
9. Most pizzas will be ready in approximately 10-25 minutes or until the cheese bubbles and turns golden brown. Recipes may vary in baking times depending on the thickness of the crust, type of crust, toppings used on your pizza and personal preference. Fresh pizzas will brown quicker than frozen pizzas. Thin crust will take less time than thick crust. Take note of perfect baking times for each type of pizza you create for future reference.
10. Wearing oven mitts, carefully open the unit using the handle. To test if the crust is baked all the way through insert a toothpick into the center of the pizza. If the toothpick comes out dry the crust is baked all the way through. You can also use a rubber tipped spatula to lift up an edge of the pizza to check if the bottom crust has browned to your preference.

NOTE: If necessary continue baking for 1 or 2 minutes until desired results are achieved.

11. When baking is complete, unplug the power cord from outlet.
12. **CAUTION:** Wearing oven mitts, remove the pizza from the unit using a utensil safe for nonstick surfaces. **Do not use metal utensils or cutting devices as they may damage the nonstick surface of the cooking plates.**
13. Once pizza is removed from the Bottom Baking Plate and placed on a cutting board, cut into slices and serve.

Baking Additional Pizzas

1. If additional pizzas are required, keep the Mini Pizza & Meal Maker lid closed to retain heat. Always wait until the green Ready-to-Bake Indicator Light illuminates before baking more pizza.
2. Additional pizza may bake quicker than your first baked pizza as extra heat has been retained inside your Mini Pizza & Meal Maker. It may be necessary to adjust to a shorter baking time.



CARE AND CLEANING

Always ensure the Mini Pizza & Meal Maker is unplugged and cool before moving, cleaning or storing.

Wipe the baking plates with a clean, damp cloth. If pizza dough still remains on the nonstick baking plates, pour a small amount of cooking oil on the hardened pizza dough. Allow the oil to set for 5 minutes, then wipe clean with a paper towel or soft cloth. To remove stubborn stains, use a soft nylon brush or other cleaning utensil safe for nonstick surfaces.

WARNING: Do not immerse the unit, cord or plug in water or any other liquid. Do not pour or run water onto any part of the unit. Do not place in dishwasher. Do not use harsh or abrasive cleansers on any part of the appliance.

The exterior of the unit may be wiped clean with a damp cloth. Dry thoroughly.

Ensure unit is clean and dry before storing.



WARNING:

**ALWAYS UNPLUG APPLIANCE IMMEDIATELY FROM OUTLET
WHEN NOT IN USE.**

DO NOT LEAVE THIS APPLIANCE UNATTENDED WHILE IN USE.

**DO NOT USE THIS APPLIANCE FOR OTHER THAN ITS
INTENDED USE.**

LIMITED WARRANTY ONE (1) YEAR

This warranty is the only warranty for this product. This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase, as evidenced by the receipt of purchase, and provided it is used for the purpose for which the product is intended. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option. If the product should become defective within the warranty period, we will repair it or replace it free of charge. If the product or component is no longer available, we will replace with a similar one of equal or greater value. We will return your product, transportation charges prepaid provided it is delivered prepaid to Formula Brands Inc. Any and all remedies relating to this warranty are limited to the amount of the purchase price of the product. This warranty extends only to the original purchaser, consumer or gift recipient.

This warranty does not cover failure caused by food build-up, water deposits, normal cosmetic discoloration, and inadequate maintenance of the product. This warranty will not cover damage or failure to function if the product has been dismantled or tampered with, if it has been damaged due to exposure to water or any other liquid, if it is not used in conformity with the printed directions of this product or if it has been accidentally or intentionally damaged.

This warranty does not cover the following parts which may be supplied with the appliance: plastic parts, glass parts, glass containers, ceramic containers, cutter/strainer, filters or nonstick surfaces.

This product is intended for use in a single-family household. This warranty will become null and void if the product is used for commercial purposes or any other purpose other than for single-family household use.

We exclude all claims for special, incidental and consequential damages caused by breach of any express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental or consequential damages, so the foregoing limitations may not apply to you.

BC-5962RC

10/25

TO RETURN FOR SERVICE:

1. Securely package and return the product PREPAID to:
FORMULA BRANDS INC.
45 Mural Street, Unit #7, Richmond Hill, Ontario, Canada L4B 1J4

NOTE: We recommend you insure your parcel for your protection.

2. Please enclose your name, return address, postal code, telephone number and a description of the defect.
3. To ensure prompt 'In-Warranty' service, be sure to include a proof of purchase (a copy of your store receipt).
4. For repairs not covered under warranty, you will be advised of the cost of the repair in advance, and upon receipt of your cheque or money order the repairs will be completed and the product returned to you.

If at any time you order parts or inquire about service, please quote the "MODEL NUMBER" stamped on the appliance nameplate.

For assistance regarding this appliance, please call
1-877-244-1110
between 9:00 am and 5:00 pm (EST) Monday to Friday
or write



FORMULA BRANDS INC.
45 Mural Street, Unit #7, Richmond Hill, Ontario, Canada L4B 1J4
or email:
customerservice@formulabrands.com

© General Mills. Betty Crocker and designs are trademarks of General Mills used under license.

