

COPPER FINISH RAISED FIRE PIT

Read the assembly instructions carefully and follow the care instructions. Save these instructions for future reference.

 
Assemble components on a soft, clean surface to avoid scratching or damaging the finish.





Inspect packaging to ensure all parts are accounted for before disposing of packing materials.
Save the packing slip.

| No. | PARTS | QTY. |
|-----|--------------------|------|
| A | Fire Bowl | 1 |
| B | Leg | 4 |
| C | Log Grate | 1 |
| D | Spark Screen | 1 |
| E | M6x15mm Bolt | 8 |
| F | M6x12mm Bolt | 4 |
| G | M8x25mm Grub Screw | 3 |
| H | Poker | 1 |

TOOLS REQUIRED (not included)



Phillips Screwdriver

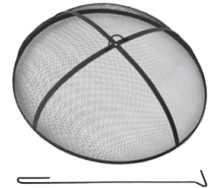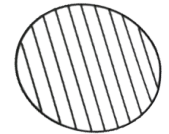

ASSEMBLY



1. Place Fire Bowl (A) upside down. Align four Legs (B) with the holes on the underside of the fire bowl; hand-tighten eight M6x15mm Bolts (E). Hand-tighten only!



2. Align the holes inside Fire Bowl (A) with the holes in the middle of Leg (B); hand-tighten four M6x12mm Bolts (F). Tighten all bolts.



3. Hand-tighten three Grub Screw (G) to the inside rim of Fire Bowl (A). Hand-tighten only!



4. Place Log Grate (C) into Fire Bowl (A) and Spark Screen (D) onto Fire Bowl (A).



USE & CARE

Use on a Safe Surface: Always use fire pits on a smooth, non-combustible surface; do not use on a wood deck or other combustible surfaces like dry grass, leaves, mulch, etc. Do not use fire pits near combustible structures such as vinyl or wood siding. Take care never to drop your fire pit, as any breakage could cause serious damage and costly repairs.

Avoid Accelerants: Never use accelerants to start a fire; this is dangerous and can damage your fire pit.

Avoid Plastic: Never use any plastic materials in or nearby a fire pit. It is very difficult to remove the residue later, and the burning of this residue can cause the emission of toxic fumes.

Extinguish: Let fires die down gradually, do not use water to put out a fire as the sudden drop in temperature may cause the metal and/or finish to crack.

Cleaning: All fire pits must be cleaned and inspected periodically. Clean out ashes between each use. Do not allow ash to accumulate in the bottom of the pit. Before cleaning, make sure the fire has completely died down and the metal is completely cool. Ensure ashes are cold and dispose of them properly.

Cover and Store: If you do not plan to use your fire pit for an extended period of time, cover and store it in a dry location; this will protect it from the elements and dust buildup. Do not allow the fire pit to be exposed to water. The manufacturer is not liable for rust due to weather conditions. Cover not included.

! SAFETY STATEMENTS & WARNINGS !

- For outdoor use only. Never use this product in an enclosed area.
- Always follow local laws and regulations when using wood-burning fire pits.
- Exercise the same care and precautions as you would with an open fire.
- Keep unit a safe distance away from buildings, balconies, or overhangs when in use.
- Only use this fire pit on a level, non-combustible surface.
- Do not use on or near combustible surfaces or structures such as wood decks, dry leaves or grass, mulch, vinyl or wood siding, etc.
- Keep away from all combustible materials including gasoline and other flammable liquids and vapors.
- Never use accelerants such as, but not limited to, gasoline, alcohol, paint thinners, kerosene, as this may cause serious injury or product damage.
- The fire pit becomes very hot when in use; let it completely cool before cleaning or moving.
- Keep out of reach of children.
- Do not overfill or use this unit to burn leaves or trash.
- Avoid using any fire pit during dry or windy conditions.
- Never leave unit unattended while hot or in use.
- Supervise children and pets when the fire pit is in use.
- DO NOT USE CHEMICAL-BASED CLEANERS as this may damage the product and/or ignite a flame during the next use.
- Extinguish the fire properly before leaving. Use a fire extinguisher or a bucket of sand to smother the fire if necessary. Do not use water to extinguish hot fires or embers as this may cause serious injury and may damage the product.
- Ashes can remain hot for a long time after fire is extinguished. Dispose of cold ashes properly.
- Ensure the unit is completely cool before covering, failure to do so will damage the cover and the unit.

Contact the local authorities regarding possible burn restrictions before using this product.

Any modification to the product or failure to follow recommended care will void the product warranty.

! WARNING: Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.