


Please check that all fittings are available and in good condition before assembly.
If you have any questions, please contact us , we will solve your problem in the first time.

PARTS LIST


Ax5	Jx1
Bx1	Kx1 (R&L)
Cx5	Lx13 M6x18mm
Dx1	Mx6 M6x22mm
Ex1	Nx4 M6x30mm
Fx1	Ox6 M6x16mm
Gx1	Px2 5mm
Hx1	Qx1
Ix1	

ASSEMBLE INSTRUCTION


1

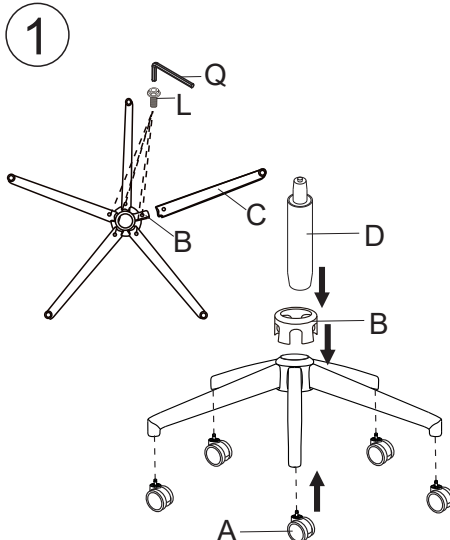


2

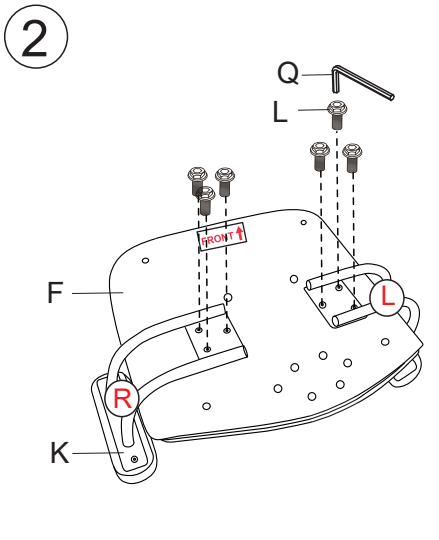

3

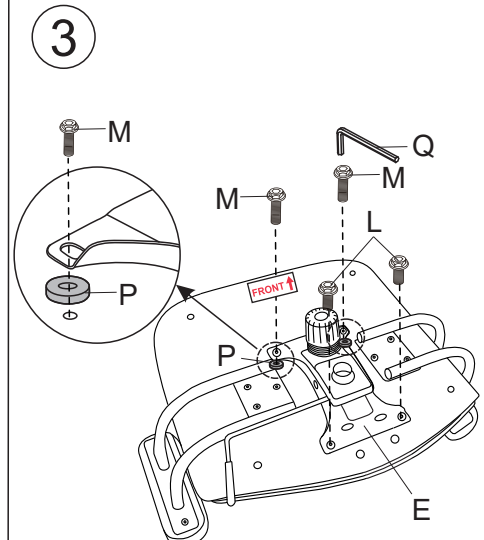


4

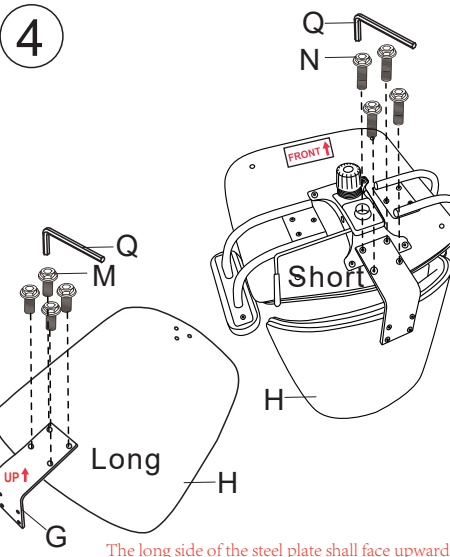

The long side of the steel plate shall face upward.

5

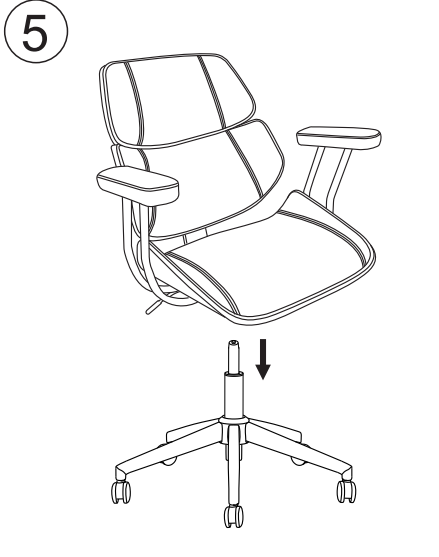

6

