 



ASSEMBLY INSTRUCTIONS

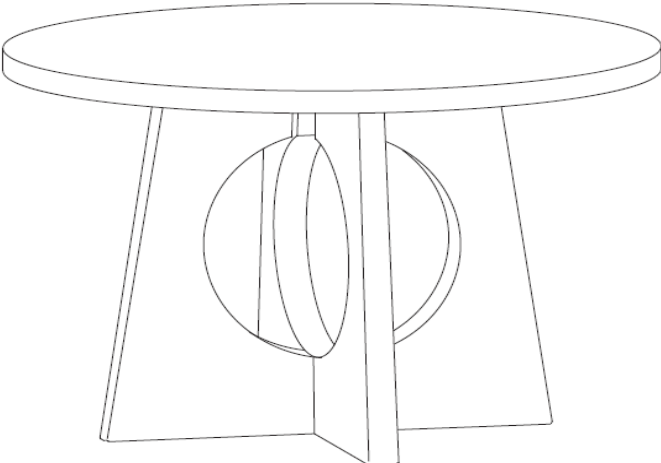

TOOLS REQUIRED



 Screwdriver
(Not included)



(Included)
Allen Wrench



2 - People

ASSEMBLY RATING



EASY —————> DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.



CHECK BEFORE STARTING

Are you missing anything?

Double-check all parts, hardware and accessories listed are all accounted for.

Check out our Quick Tips!

We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!

Should we send any replacements?

Are there any irregularities or flaws in the parts? We can send replacements!

Prep Time!

Please review the assembly instructions and all diagrams prior to assembling.

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.



Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.



Suitable Location

Assembling near the area of the intended location is highly recommended.



Sufficient Space

Make sure you have enough space to move around during the assembly.



Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches and damages.



Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

 
ASSEMBLY AND CARE ADVICE



FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.

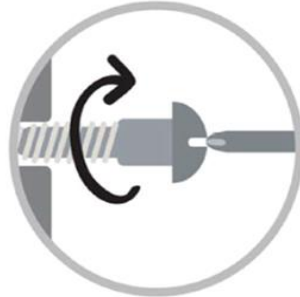

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.



Save the instructions and store any supplied tools for later maintenance.



 
After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

ROUND DINING TABLE



- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

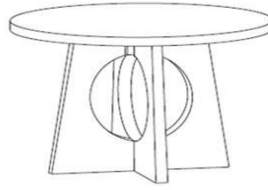

PARTS

P1 - 1PC

 


TABLE TOP

P2 - 1PC



PEDESTAL LEG A

P3 - 1PC



PEDESTAL LEG B

P4 - 1PC



MOUNTING PANEL

HARDWARE

H1 - 12 PCS



M6 X 35MM JCBC SCREW

H2 - 12 PCS



SPRING WASHER

H3 - 4 PCS



FLAT WASHER

H4 - 4 PCS

 


LEG ADJUSTABLE GLIDE

H5 - 1 PCS



ALLEN KEY

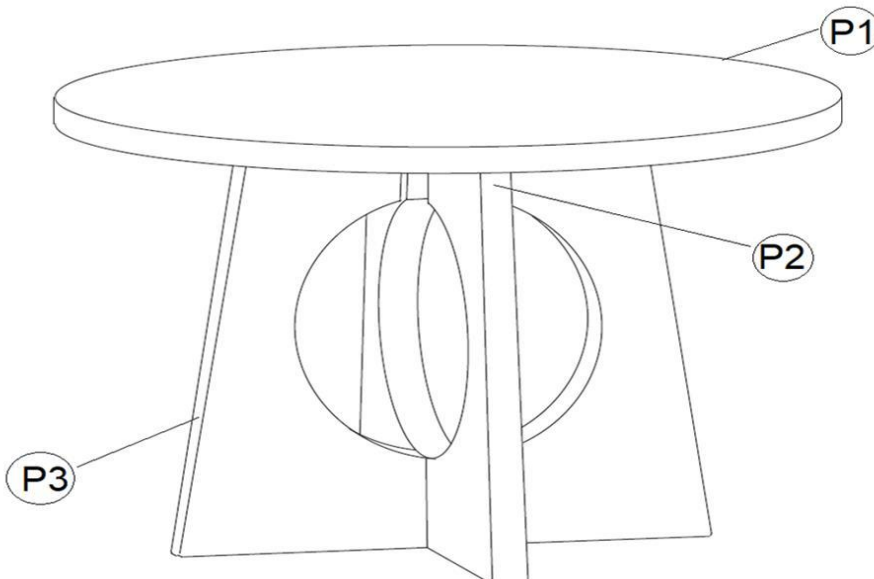

ASSEMBLY INSTRUCTIONS

Packed in 1 carton



 
 




Please read instructions carefully


Remove all wrapping materials, staples and packing straps from the carton. Refer to Parts List and Hardware List and ensure they are complete before you start assembling. Place all wooden parts on a clean, flat and soft surface (e.g carpet or rug) to prevent parts from being scratched.

CAUTIONS: 1) DO NOT FULLY TIGHTEN BOLTS AND NUTS UNTIL ALL PARTS HAVE BEEN ASSEMBLED.

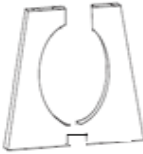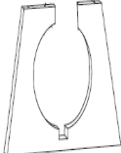2) DO NOT OVER-TIGHTEN BOLTS AND NUTS .

3) KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.

Carton	Designation	Part List	Hardware List
	Table Top	 P1 x 1pc	 H1 x 12pc
	Pedestal Leg A	 P2 x 1pc	M6x35 JCBC SCREW
	Pedestal Leg B	 P3 x 1pc	Spring Washer
	MOUNTING PANEL	 P4 x 1pc	 H3 x 4pc
			 H4 x 4pc
			Leg Adjustable Glide
			 H5 x 1pc
			Allen Key

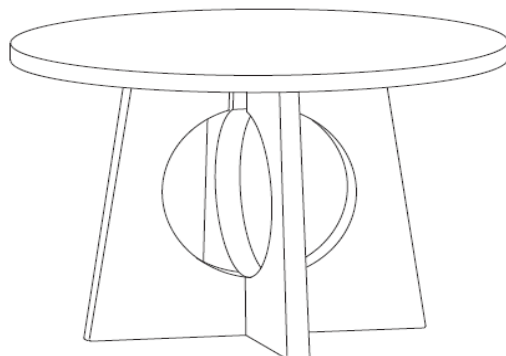 






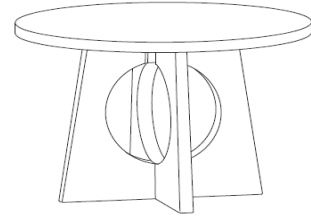 
COMPLETE ASSEMBLY

ASSEMBLY INSTRUCTIONS


ROUND DINING TABLE

PART LIST		
No	Description	Qty
P1	TABLE TOP	1
P2	PEDESTAL LEG A	1
P3	PEDESTAL LEG B	1
P4	MOUNTING PANEL	1

HARDWARE LIST		
No	Description	Qty
H1	M6 x 35mm JCBC BOLT 	12
H2	SPRING WASHER 	12
H3	FLAT WASHER 	4
H4	ADJUSTABLE LEG STUD 	4
H5	ALLEN KEY 	1



 
STEP 1

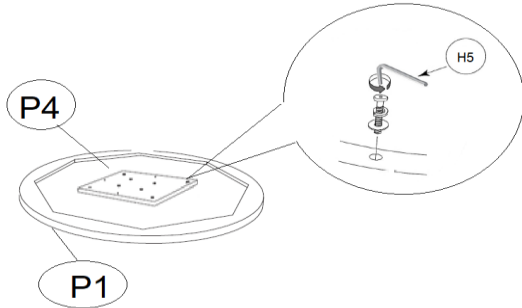

Detach the Mounting Panel (P4) from the Table Top (P1) before assembling the table .



STEP 2

 
Assemble the Pedestal Legs

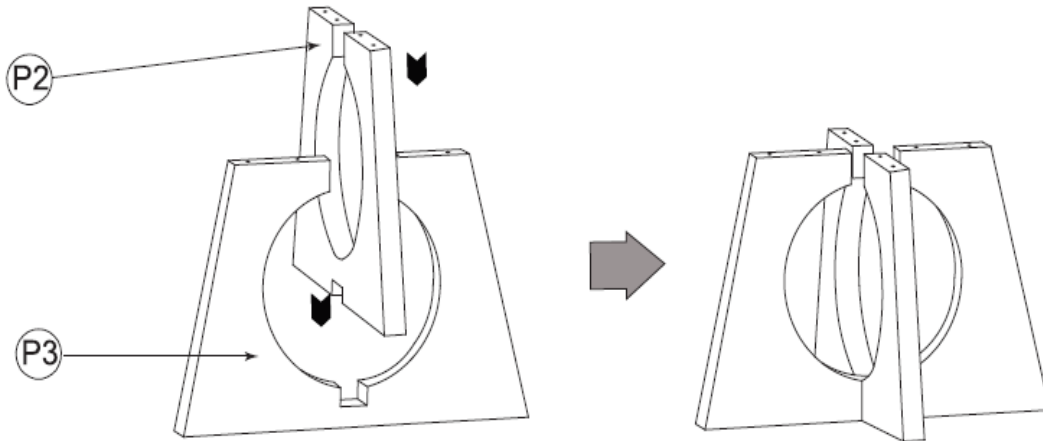

STEP 3

  Attach the Mounting Panel (P4) to the Pedestal Legs , next, align the Bolt (H1) together with Spring Washer (H2) . Tighten all the bolts using Allen Key (H5) .



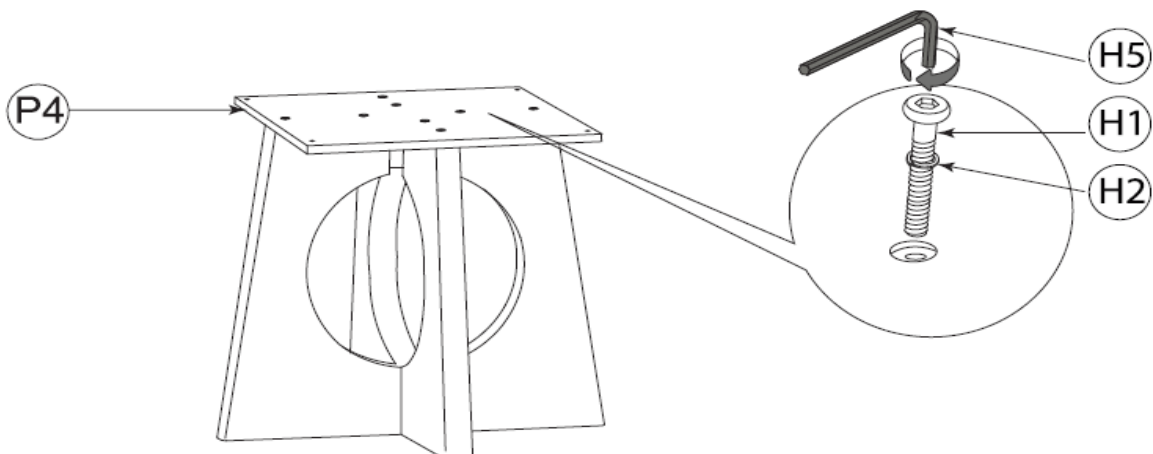
H1 x 8	 M6 x 35mm
H2 x 8	




ASSEMBLY INSTRUCTIONS

ROUND DINING TABLE

STEP 4



H1 x 4	
M6 x 35mm	
H2 x 4	
H3 x 4	

 With the help of two adults, carefully turn the Table leg upside-down. Next, attach the table leg to the Table Top (P1). Align the holes in the Mounting Panel (P4) with the holes in the Table Top. Secure them by aligning the Bolt (H1) that fitted with Spring Washer (H2) and Flat Washer (H3). Tighten the bolts using the Allen Key (H5).

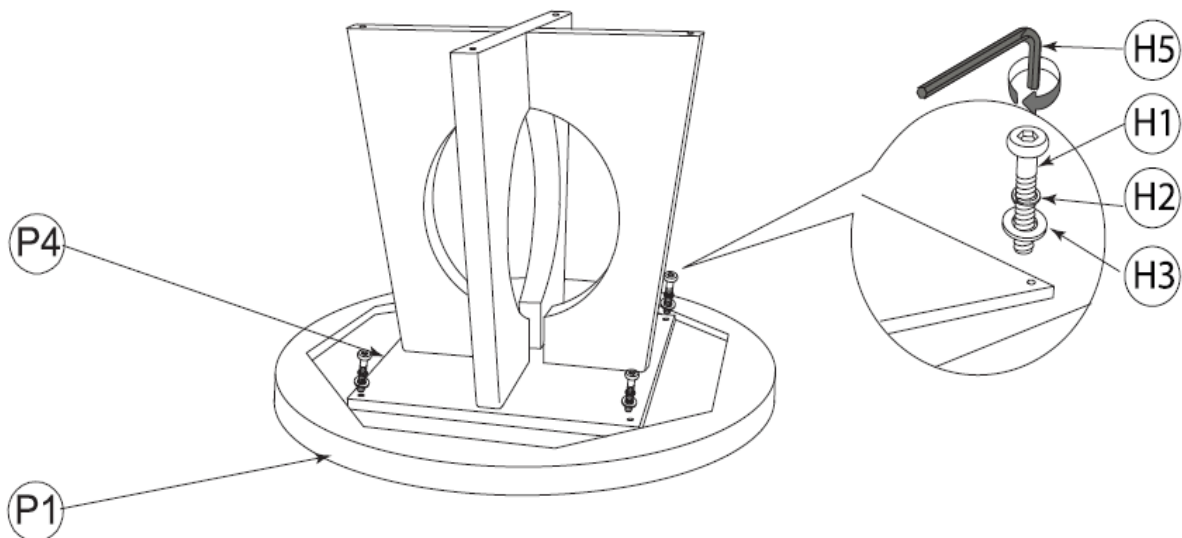

STEP 5

  H4 x 4

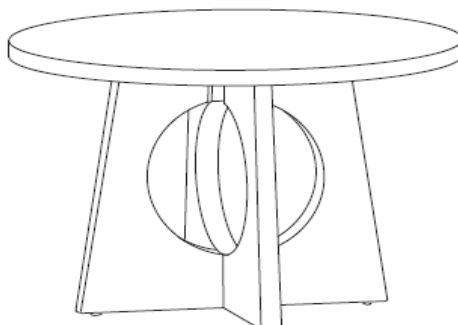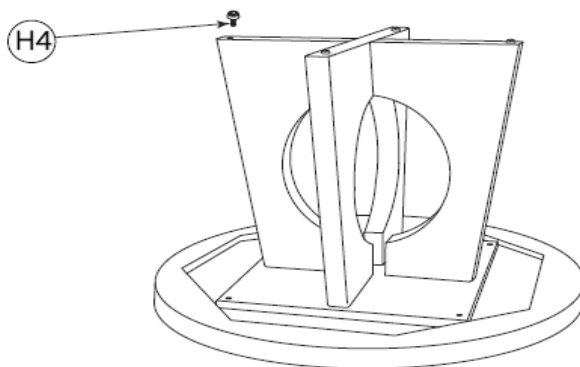


Carefully put the table upright by two or more adults people.



ADJUST THE LEVELERS TO LEVEL THE TABLE

CARE AND MAINTENANCE

 - SAFETY** - To avoid any risk of suffocation to children or animals, dispose off the plastic bags immediately.
CLEANING - Clean with damp cloth and mild detergent. Do not use bleach or abrasive products.
FITTINGS - Tighten bolts and nuts from time to time to ensure all parts of product are securely fitted.

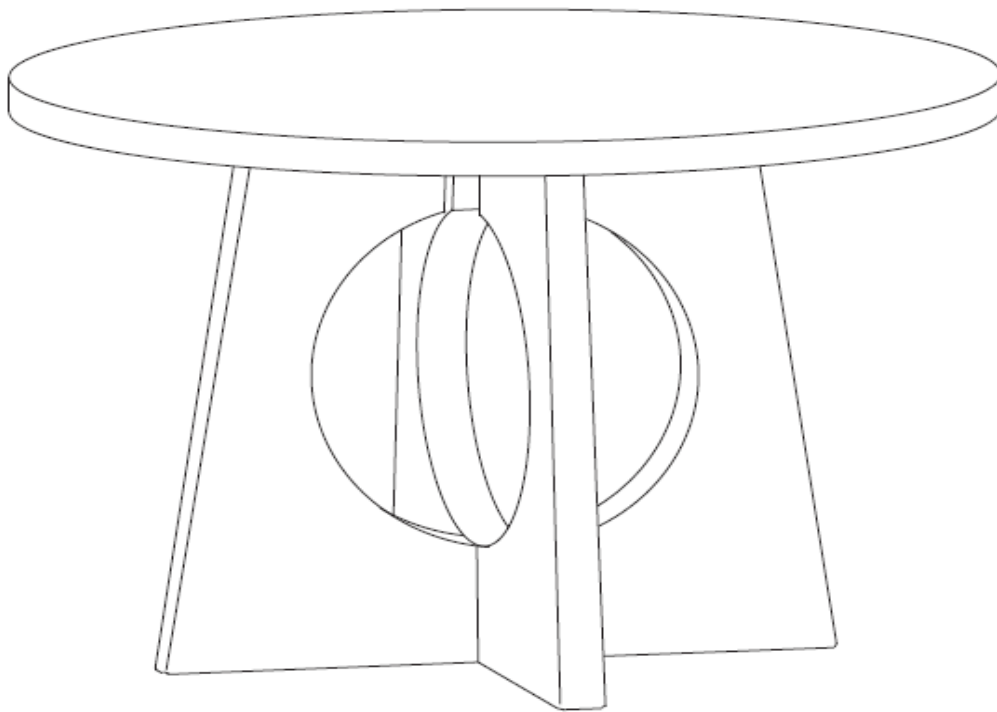

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.



Keep this handy!

Please retain this instruction manual and any order-related information for future reference.



Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting or adjusting the placement.

This product is intended for RESIDENTIAL USE ONLY and not for commercial use .

CARE AND MAINTENANCE

SAFETY - To avoid any risk of suffocation to children or animals, dispose off the plastic bags immediately.

CLEANING - Clean with damp cloth and mild detergent. Do not use bleach or abrasive products.

FITTINGS - Tighten bolts and nuts from time to time to ensure all parts of product are securely fitted.