

 
 

 
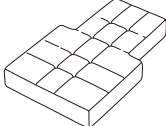


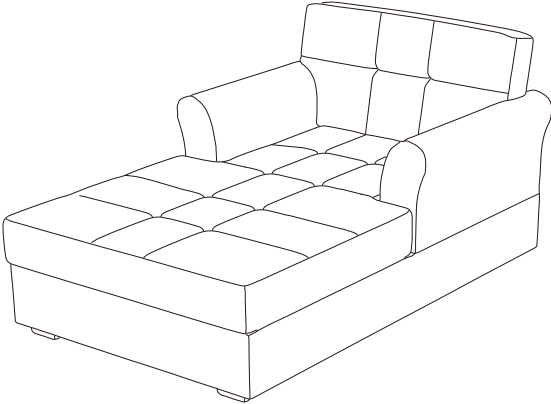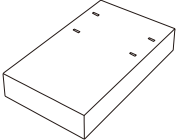




ASSEMBLY INSTRUCTION

ITEM NO: D2030 D2031 D2032




PARTS LIST

 A X1	 B X1	 C X1	 D X1
 E X1	 F X1	 F X4	
 1 X4	 2 X4	 3 X1	 4 X4


BEFORE ASSEMBLY

Open up Velcro of Non-Woven Fabric cover on the bottom of the seat frame to remove **ARM, back cushions, hardware** and **legs**.

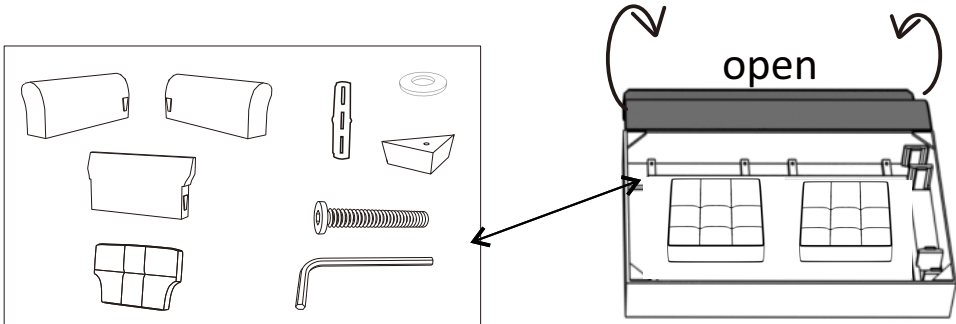


SOFA ASSEMBLY INSTRUCTION


Step1

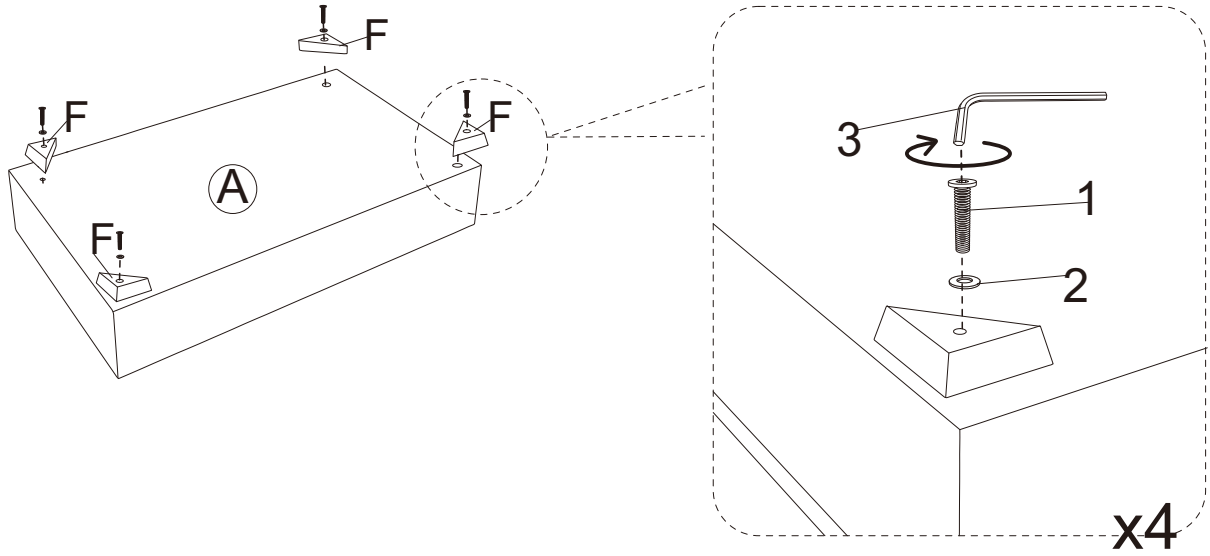

Step2

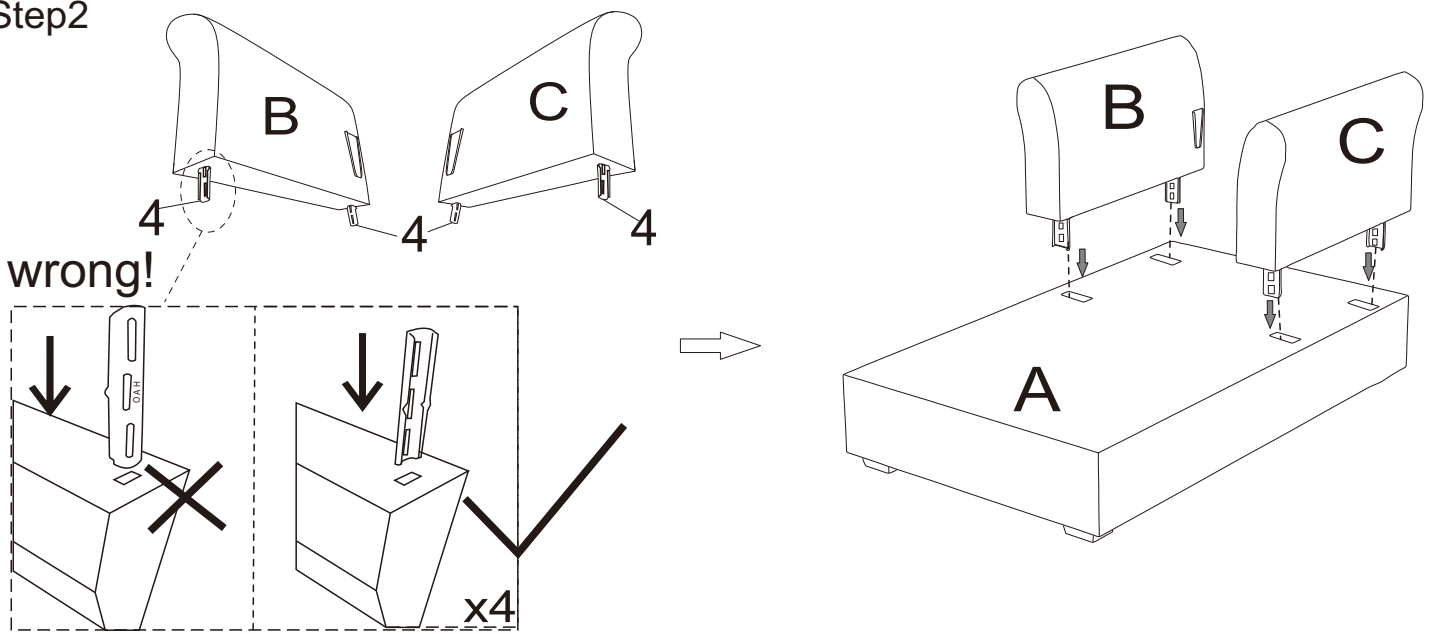

Step3

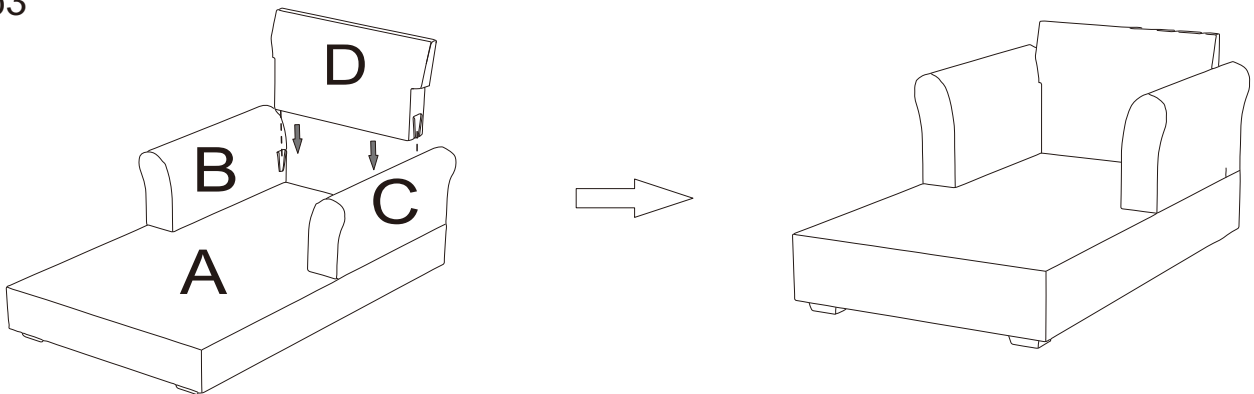

Step4

