 


Space Heater

Instruction Manual

AH-QNQ7DHY-32

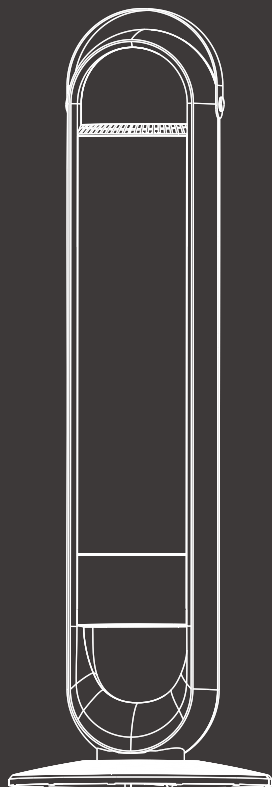

⌚ EST 9:00AM--17:00PM

✉ HJ-Customer-Service@outlook.com

☎ 6269443420 | 6267435564

Contents

Safety Instructions	01
Product Overview	02
Control Panel	03
Assembly Instruction	03
Operating Instruction	04
Remote Control	05
How to Use the Remote Control	05
Cleaning and Maintenance	06
Disposal	06
Warranty Information	06

 
WARNING: READ THIS MANUAL CAREFULLY BEFORE USE AND SAVE IT FOR FUTURE REFERENCE.

Safety Instructions

1. Read ALL instructions before using this appliance.
2. This appliance is rated at 120V~, 60Hz, 1500W.
3. **CAUTION:** Risk of electric shock. DO NOT open or try to repair the appliance yourself.
4. This appliance may get hot when in use. To avoid burns, DO NOT let bare skin touch hot surfaces. Use only handles when moving this appliance.
5. **CAUTION:** During operation, some parts of this appliance may become very hot and cause burns. Extreme caution should be exercised when children and vulnerable people are present.
6. Keep combustible materials, such as furniture, pillows, bedding, paper, clothes, and curtains, at least 3 ft from all sides of the appliance. DO NOT place towels or other objects on it.
7. Extreme caution is necessary when any appliance is used by or near children or persons with disabilities, or when left operating and unattended.
8. DO NOT operate any appliance with a damaged power cord or plug, or if the appliance malfunctions or has been dropped or damaged in any way. Contact our customer support for assistance.
9. This appliance is not intended for use in bathrooms, laundry areas, and similar indoor locations. NEVER locate the appliance where it may fall into a bathtub or other water container. DO NOT immerse the appliance in water or any other liquids to avoid electrical hazards.
10. DO NOT touch the control panel or plug with a wet hand.
11. DO NOT run the power cord under carpeting. DO NOT cover the cord with throw rugs, runners, or similar coverings. Route the cord away from walking areas to avoid creating a trip hazard.
12. DO NOT insert or allow foreign objects to enter any ventilation or exhaust openings, as this may cause an electric shock, fire, or damage.
13. DO NOT block the air openings in any way to prevent the risk of fire. DO NOT use on soft surfaces, such as beds, where openings may become blocked.
14. The appliance contains hot parts and parts that may create sparks or arcs. DO NOT use in areas where gasoline, paint, or explosive or flammable liquids may present. Keep the appliance away from heated surfaces and open flames.
15. Always plug the appliance directly into an energized wall outlet. Never use with an extension cord or relocatable power tap.
16. To avoid fire or electric shock hazard, plug the appliance directly into a 120V AC electrical outlet.
17. To disconnect, press the ON/OFF button, then unplug the appliance from the outlet. Pull firmly on the plug. DO NOT unplug by pulling on the cord.
18. Always unplug the appliance before moving, cleaning, or when not in use.
19. Use only for its intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or personal injury. DO NOT use attachments not recommended or sold by unauthorized dealers to avoid hazards.
20. Always use on a dry, level surface. Use on floor only.

21. DO NOT use outdoors.
22. **WARNING:** To reduce the risk of fire or electric shock, DO NOT use this appliance with any solid-state speed control device.
23. DO NOT attempt to repair or disassemble this appliance. Doing so will void your warranty. The appliance contains no user-serviceable parts. Contact qualified service personnel for any repairs.
24. DO NOT use this appliance with a programmer, timer, or any other device that switches the appliance on automatically.
25. If the power cord is damaged, it must be replaced by the manufacturer or qualified service personnel to avoid a hazard.
26. DO NOT locate the appliance directly under a wall outlet.
27. DO NOT use this appliance near a bath, a shower, or a swimming pool.
28. DO NOT throw the appliance in rolling trash cans. DO NOT dispose of electrical appliances as unsorted municipal waste. Recycle it at a designated collection point. Consult your local waste disposal authority for assistance. If electrical appliances are disposed of in landfills or dumps, hazardous substances may leak into the groundwater and get into the food chain, damaging your health and well-being.
29. DO NOT cover the appliance to prevent overheating.
30. This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if supervised or instructed concerning the safe use of the appliance and understanding the hazards involved.
31. DO NOT let children play with the appliance. Cleaning and maintenance should not be performed by children.
32. Keep children aged below 3 years away from the appliance unless continuously supervised.
33. **WARNING:** This appliance is not equipped with a device to control the room temperature. DO NOT use it in small rooms occupied by persons who cannot leave on their own, unless constantly supervised.
34. Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.
35. To avoid excessive room temperatures which can cause hyperthermia: DO NOT leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.

Product Overview

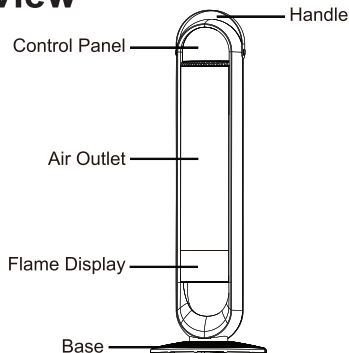

Control Panel

 
 


Assembly Instruction

1. Remove packaging materials and take out all parts.



Note: Before assembly, confirm all parts are complete and undamaged.

2. Align and connect two base parts to form a complete base. After aligning and inserting all four tabs, press the buckle inward until it clicks into place.

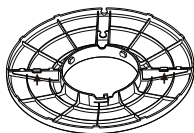


3. Turn the main unit over with the bottom facing upwards. Pass the power cord through the round hole of the base. Align the arrow at the bottom of the main unit with the "🔒" icon on the base, then rotate the base counterclockwise to lock into place. When locked, the arrow points to the "🔓" icon.

  Note: To disassemble the base, pull the tab outward and rotate the base clockwise. When unlocked, the arrow points to the "🔓" icon.

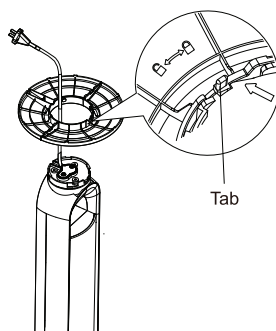

 4. Route the power cord through the designated slots and lock it into place.

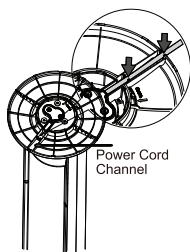

5. After installation, place the appliance properly.

Operation Instruction

Plug the power cord into a power outlet, and the appliance enters the standby mode.

Note: All functions can also be adjusted by the remote control.

1 ON/OFF

Press this button to turn on the appliance, the appliance operates at low-heat mode and the display shows the ambient temperature. Press it again to turn off and the appliance enters the standby mode.

2 MODE

When powered on, press this button repeatedly to cycle through the settings: low-heat, high-heat, and cold-air. The corresponding button will light up.

3 TIMER

Press this button to enter the timer setting. Each press increases by 1 h (the timer range: 0-15 h, cycling back to 0 after 15 h).

4 TEMPERATURE ADJUSTMENT

Press this button to adjust the temperature with a range of 59 - 95 °F (cycle in sequence). If not operated for 5 seconds, the current setting will be retained, and the display screen will show the ambient temperature. Press and hold this button to adjust temperature continuously.

5 CHILD LOCK/OSCILLATION

Press this button to turn on the horizontal oscillation function. Press it again to turn off. Press and hold this button to turn on/off the child lock function.

6 FLAME DISPLAY

Press this button to turn on the flame display. Press it again to turn off.

7 ERROR CODES

E1:Temperature probe open. E2:Temperature probe short. E3:Tipped over


Remote Control



	ON/OFF
	Horizontal Oscillation
	Mode: low-heat, high-heat, cold-air
	Flame Display
	Adjusts temperature ranging from 59 to 95°F.
	Adjusts timer ranging from 0 to 15h.
	Child Lock

How to Use the Remote Control

 1. Remove the battery cover and load 2 AAA batteries (not included).
2. When using the remote control, direct the emitter of the remote control to the receiving window on the appliance.
3. The remote can be used normally at a distance of about 13 feet (4 meters) from the front of the appliance and within a range of 30 degrees.
4. Keep the remote control safely to avoid impact and falling.
5. When replacing the battery, follow the steps shown in the diagrams. Pay attention to the battery polarity when loading the battery. Never reverse. (Use 2 AAA batteries.)

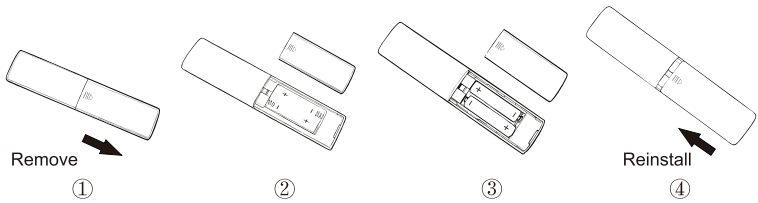

6. If not used for a long time, remove the batteries and store them properly to avoid damage to the remote control.

Cleaning and Maintenance

1. Press the ON/OFF button to turn off the appliance and unplug it before cleaning.
2. After the appliance is completely cooled, wipe the exterior with a soft cloth, and use a soft brush to clean the air openings.
3. After cleaning, until the appliance is completely dry, it is ready for use. Or put it into the original packaging, and place in a dry and ventilated area for proper storage.
4. DO NOT rinse directly with water for cleaning to avoid damage to the appliance.
5. DO NOT use thinners, toluene, acidic detergents, alcohol, or other chemical agents.

 
Disposal

This symbol indicates that this appliance may not be disposed of as household waste. Instead, it should be taken to an appropriate collection point for the recycling of electrical and electronic equipment.



Warranty Information

1. This product is covered by a **one (1) -year** limited warranty against defects in materials and workmanship, valid only for the original purchaser. The warranty period begins on the date of retail purchase and is non-transferable.
2. This warranty does not cover normal wear and tear, or any damage resulting from misuse, negligent use, use with improper voltage or current, failure to follow the operating instructions, or any disassembly, repair, or modification not authorized by our after-sales service.
3. Additionally, this warranty does not cover damages caused by Acts of God (such as fire, flood, hurricanes, or tornadoes) or force majeure events (such as arson, power outages, riots, or vandalism).
4. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state (or province to province). Some states (or provinces) do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

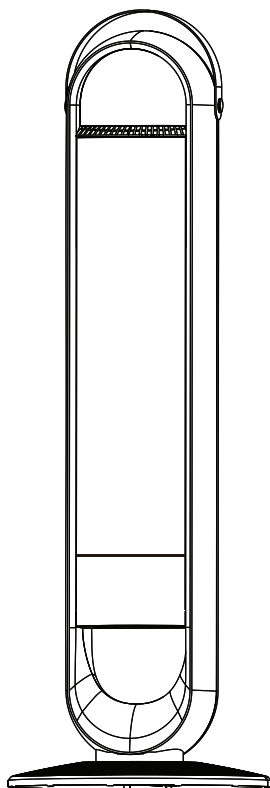

Technical Support

6269443420 | 6267435564

Other Info

HJ-Customer-Service@outlook.com

Thank you for choosing this product. We strive to provide you with the best quality products and service in the industry. Should you have any issues, please don't hesitate to contact us.