





 



Assembly Instruction



Accessories List

<p>(1) 4 Screws (M6×18)</p> 	<p>(2) Seat Cushion</p> 	<p>(3) Base Tube</p> 	<p>(4) Hexagon Wrench</p> 
<p>(5) 5 Castors</p> 	<p>(6) Air Rod</p> 	<p>(7) Base Plate</p> 	<p>(8) Central Base Buckle</p> 

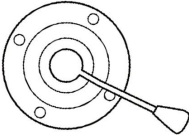Notice

 
- Do not stand in this chair or use the chair as a step ladder, use it as chair only.
- This chair is designed for one person to use at a time, weighting up to 300lbs (136kg).
- Do not use this chair unless all bolts, screws and knobs are firmly secured.
- Check all bolts, screws and knobs every 6 months. Tighten if any are loose.
- Failure to follow these instructions may result in serious injury or death of yourself and people around you.
- Some of the parts are heavy and/or have sharp edge, please install it carefully to avoid hurting you and people around you.
- Keep small parts (e.g. screws) out of children's reach to prevent choking hazards.

Instructions for Use

Step 1


Take out Castors (5). Insert Castors (5) into Base Tube (3).

* Caution: Confirm 5 Castors (5) must be inserted deeply. Otherwise the castors could easily fall out and the chair could fall down.

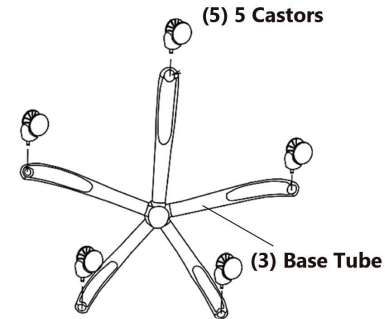

Step 2

 
Put Air Rod (6) through Central Base Buckle (8) into the hole of Base Tube (3) as shown.

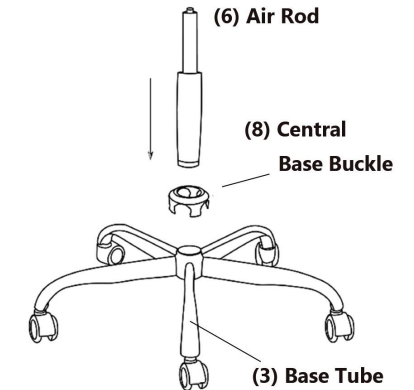

Step 3

Fix Base Plate (7) to the bottom of Seat Cushion (2). Tighten the 4 Screws M6X18 (1) with Hexagon Wrench (4) firmly.

 
* Caution: There is a FRONT letter print on the front of the Base Plate (7).

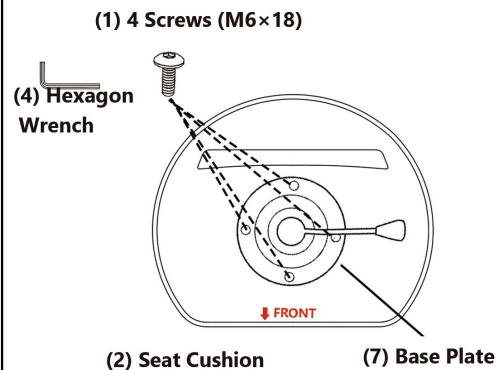

Step 4

Then insert the Air Rod (6) into the Base Plate (7), the Base Plate (7) has holes in the middle. Press the Seat Cushion (2) from top to bottom, with all the strength of your body.

 * Caution: If the Air Rod (6) doesn't insert to Base Plate (7) firmly, it's likely to fall off when the chair rises up.

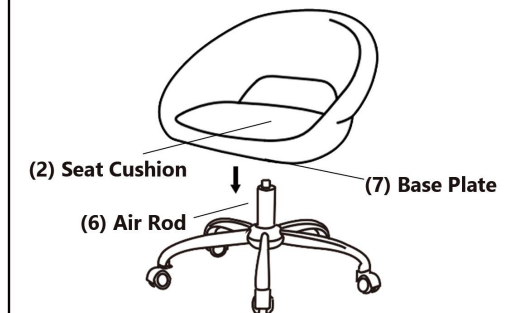


Assembly Instruction

Please assemble in a wide and flat place.

Step 1

 
Take out Split Base Tube (3) and Central Base Tube(4). Insert Split Base Tube (3) into Central Base Tube (4) as shown. You can see there are screw holes. Align with the holes, tighten Screws M6X20mm (9) with Hexagon Wrench (15) to fix 5 Split Base Tube (3) to Central Base Tube (4). Repeat it five times.

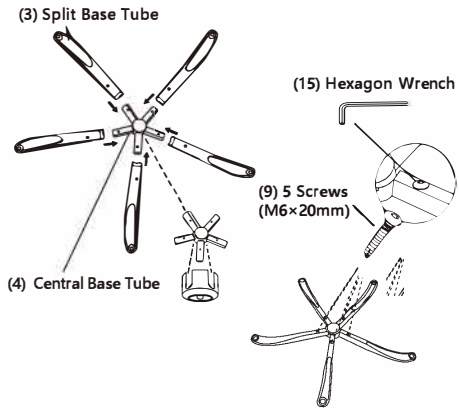

Step 2


Take out Castors (5). Insert Castors (5) into part of Step 1 as shown. There are 5 Castors (5) need to be inserted.

 * Caution: Confirm Castors (5) must be inserted deeply. Otherwise the castors could easily fall out and the chair could fall down.

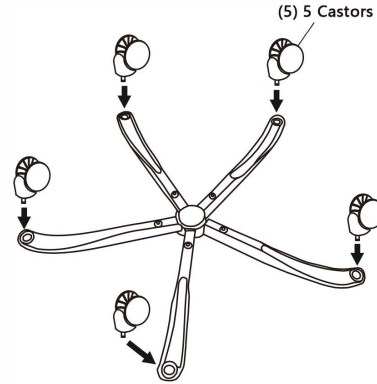


Step 3

 Take out Air Rod (6) .Put Air Rod(6) into the hole of Central Base Tube(4)as shown. Put it aside and we'll use it in Step 8.

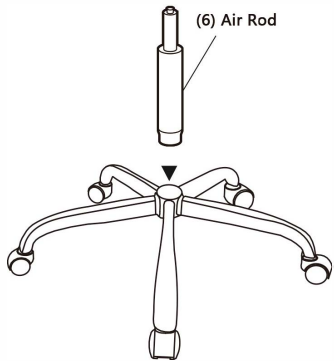

Step 4

 
Insert the Foot Ring (16) into the assembled Air Rod (6) at your desired height. But at least one inch from the top of the outer circle of Air Rod (6) as shown. Please follow the shown direction of the arrow to tighten the knob by hand on the Foot Ring (16) until the Foot Ring (16) is fixed.

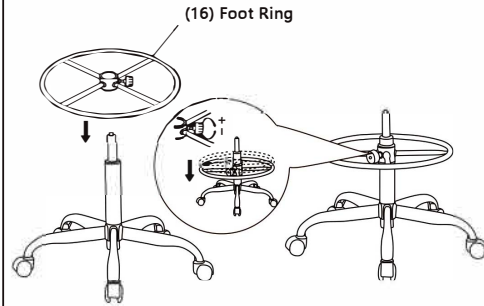

Step 5

Tighten the Screws M6X25mm(10) with Hexagon Wrench (15) to fix 2 Armrests (7) to the back of Backrest(1). Tighten the 4 screws firmly and then cover the screws with Decoration Caps(11).

 
* Caution: Do not tighten the bolts before the product is fully assembled.

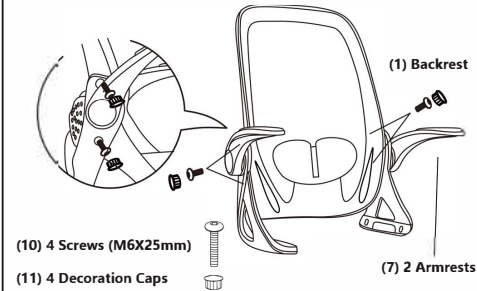

Step 6

After Step 5, fix the bottom of Armrests (7) to the back of Seat Cushion (2). Tighten the Screws M6X30mm (12) 4 Gaskets (14) with Hexagon Wrench (15) firmly.

 
* Caution: There is a FRONT sticker on the front of Seat Cushion (2).

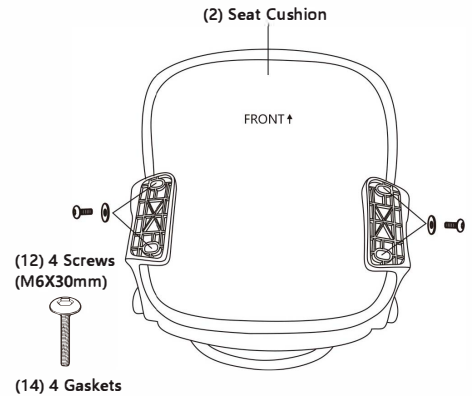

Step 7

Fix Base Plate (8) to the bottom of Seat Cushion (2). Tighten the Screws M6X18mm (13) with Hexagon Wrench (15) firmly.

 
* Caution: When you connect the armrest with the cushion, if the hole position of the armrest is not aligned with the hole position of the cushion, please force the armrest to align with the hole position of the cushion and install the screw.

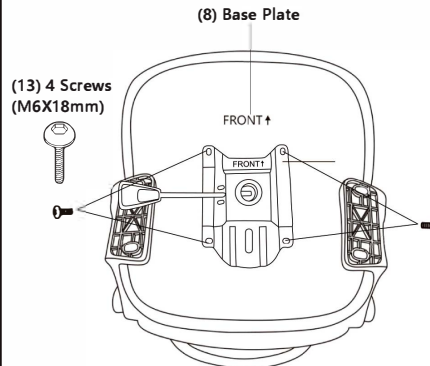

Step 8

Pick up the Step 4's Air Rod (6) and Central Base Tube(4). Insert the Air Rod (6) into Step 7's Base Plate (8). There's a hole in the middle of Base Plate (8). Press the Seat Cushion (2) from top to bottom, use your whole body's strength to insert it firmly, the assembly is complete now.

 * Caution: If the Air Rod (6) doesn't insert to Base Plate (8) firmly, it's likely to fall off when the chair rises up.

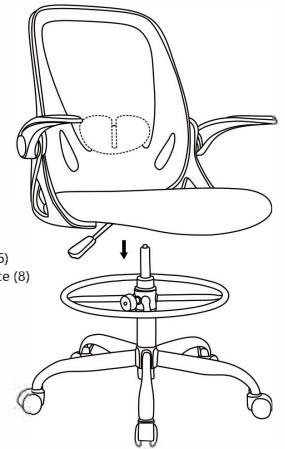

Activate Your Warranty Now!

We guarantee you a pleasant buying experience. Activate your warranty so that you can enjoy priority and better after-sales service.