

Assembly Instructions


(PLEASE READ CAREFULLY BEFORE ASSEMBLY)


INCANDESCENT FLOOR LAMP

IMPORTANT SAFETY INSTRUCTIONS WARNING! TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PERSONAL INJURY.

- Turn off/unplug and allow to cool before replacing bulb, cleaning or other maintenance.
- Do not remain in light if skin feels warm.
- Do not look directly at lighted bulb.
- Keep lamp away from materials that may burn.
- Use only with 150W and 40W or smaller bulb.
- Do not touch the bulb while it is still hot.

ASSEMBLY INSTRUCTIONS

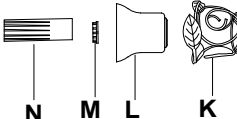1. Lay out all parts on smooth surface as shown in illustration.
 2. Screw post (B) onto base (A) and tighten.
 3. Screw post (C) onto post (B) and tighten.
 4. Screw post (D) onto post (C) and tighten.
 5. Screw post (E) onto post (D) and tighten.
 6. Screw the cup (F) onto the post (E) and tighten.
 7. Loosen out socket ring (I) from socket. Fit the leaf ring (G) and glass shade (H) onto the socket and tighten with socket ring (I).
 8. Loosen out socket ring (M) from socket. Fit the leaf ring (K) and glass shade (L) onto the socket and tighten with socket ring (M) by tool (N).
 9. Screw in one 150 Watt (Max) bulb (not included) for **floor** lamp and one 40 Watt (Max) bulb (included) for reading lamp into sockets.
 10. Plug into outlet and turn on the Rotary 4-Way switch and enjoy.
- 

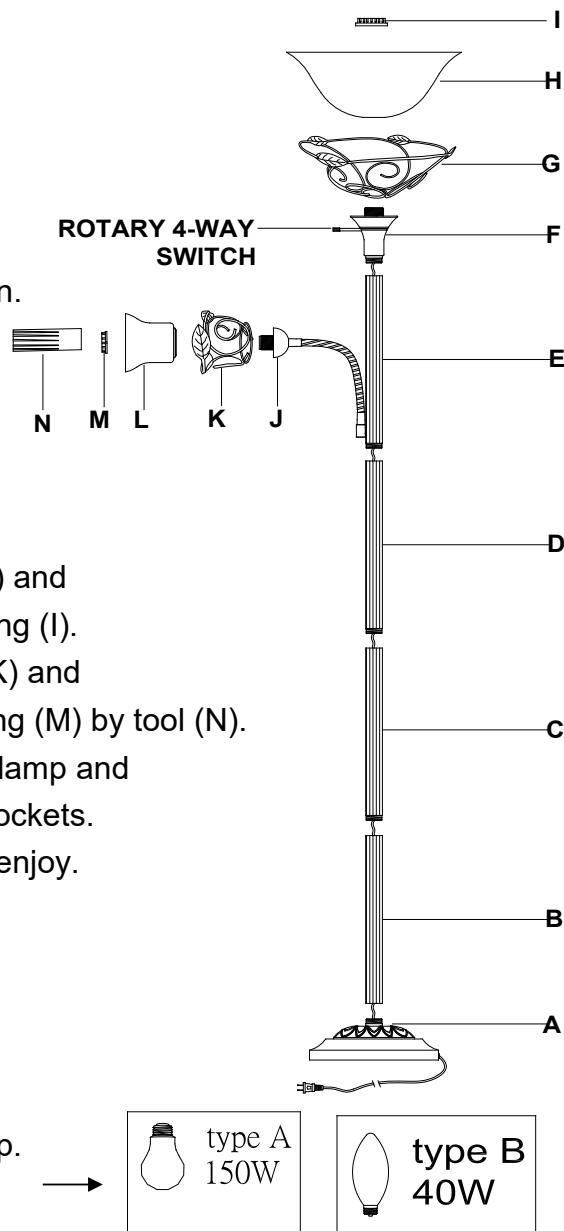

MAINTENANCE:

- Light bulb recommended.
 - Use one E26 150W (Max) Type A light bulb for floor lamp.
 - Use one E12 40W (Max) Type B light bulb for reading lamp.
- To clean, use soft cloth only.
- Do not use any chemical or abrasive cleaners.

"SAVE THESE INSTRUCTIONS"

