



# Assembly Instructions


## Parts

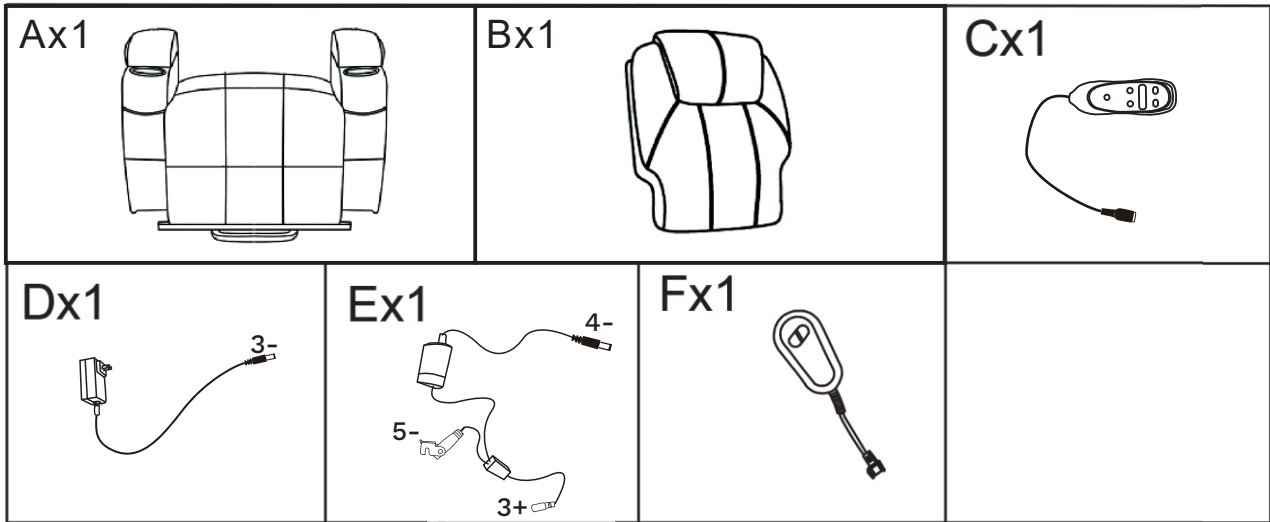


- ① INSERT THE ARMREST INTO THE SEAT. GENTLY PUSH DOWN UNTIL THE BACK LOCKS INTO POSITION. THEN INSERT THE BACK ON THE SEAT.

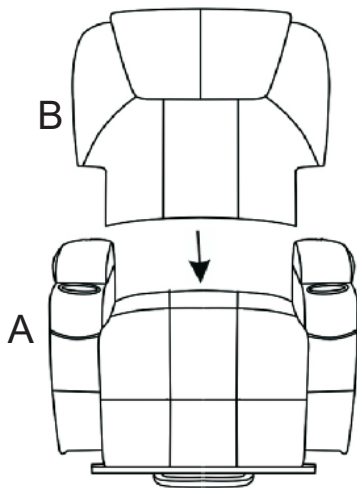


- ② Match the plugs with the right numbers or colors.

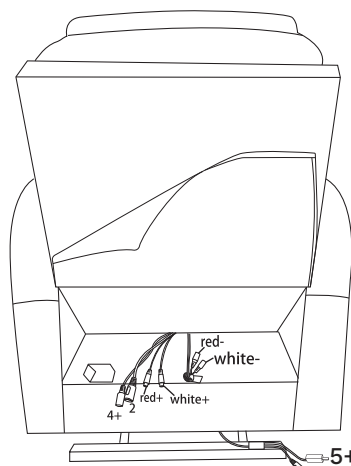

Connect the plug line with the switching power line white to white, red to red.

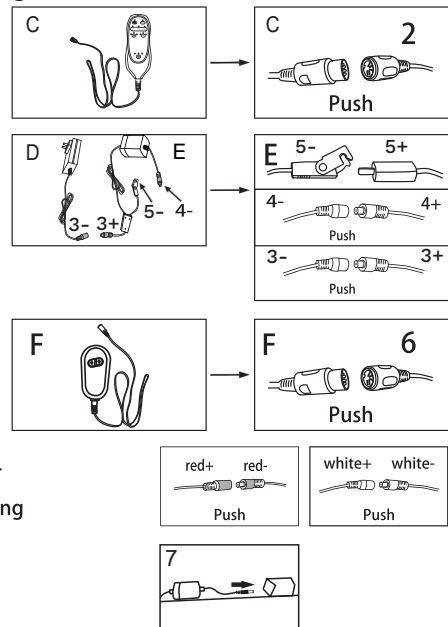


## Congratulations

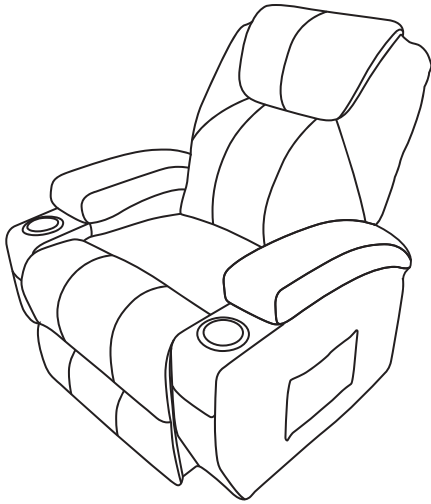


Use the controller to open the recliner.



Use the controller to lift the recliner up to support the person standing.

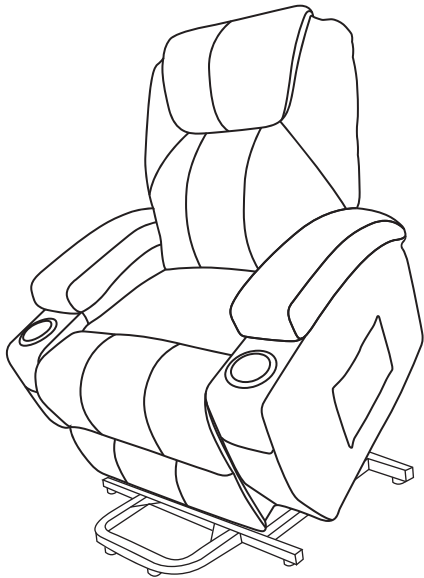

Use the controller to position the chair to recline position.

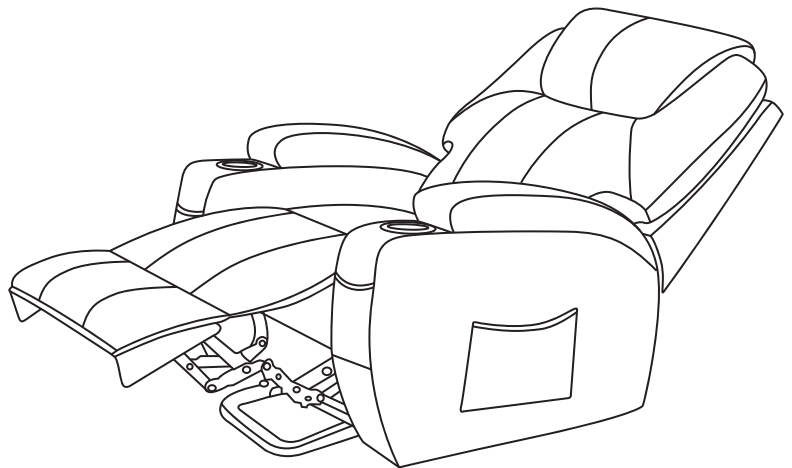

### Warning:

1. Do not stand on this chair, do not use this chair as a step ladder.
2. Use this chair only for seating one person at a time.
3. Do not use this chair unless all bolts, screws and knobs are firmly secured.
4. Check all bolts screws and knobs on a regular basis.
5. This chair should not be used with damaged or missing parts. Contact an authorised service provider to repair or replace parts damaged or missing.
6. Failure to follow these warnings could result in serious injury.
7. This product is compressed packaging, after the assembly is completed, the surface of the product will appear wrinkled, please wait for a period of time, you can return to the original.

**Notice:** The remotes are placed in the small box in behind of the chair seat.  
Please handle the remote control with care.