

All in One System

Ironing Board with Pressurized Steam Iron

Model SAG399



INSTRUCTIONS

Please Read These Instructions Before Use.

IMPORTANT SAFETY INSTRUCTIONS


Please Read These Instructions Before Use:

When using electrical appliances, always follow basic safety precautions, including the following:

1. This appliance is only used indoors.
2. Use this product for its intended purpose only.
3. To protect against risk of electrical shock, do not submerge the appliance in water or other liquids.
4. **THIS APPLIANCE IS NOT A TOY. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance**
5. Unplug from electrical outlet when not in use, before putting on or taking off parts, and before filling with water, emptying, or cleaning.
6. Avoid contact with hot parts. Keep hands, hair, and clothing away from hot parts to prevent burns. Burns can occur by touching hot parts, hot water, or steam
7. Don't operate any appliance with a damaged power cord or plug, after it malfunctions, or is dripped or damaged in any manner. A damaged power cord, plug or unit may result in fire, electrical shock, or injury. Please replace the power cord through manufacturer, authorized agent or a qualified electrician. Do not leave the appliance unattended while in operation.

Caution: To reduce the risk of electric shock, don't disassemble or attempt to repair the appliance, take it to a qualified service person for examination and repair, incorrect reassembly or repair could cause a risk of fire, electric shock or injury to person when the appliance is used.

IMPORTANT SAFETY INSTRUCTIONS

8. Allow the unit to cool before storage.
9. Accessories not recommended or sold for this appliance may cause fire, electrical shock, or injury.
10. Always turn the switch to the "Off" position before plugging in or unplugging the unit.
11. Do not let the power cord touch hot surfaces or water. The power cord should not be kinked or obstructed in any way.
12. Care should be taken when using the appliance due to the emission of steam.
13. Do not operate steamer without properly filling the water container. Unplug the appliance during filling and cleaning.
14. This appliance has a grounded plug. As a safety feature, this plug will fit in a three-prong outlet only one way. If the plug does not fit in the outlet, do not attempt to defeat this safety feature.
15. Never pull the power cord to disconnect it from an outlet. Instead, grasp the plug to remove it from the outlet.
16. To reduce the likelihood of a circuit overload, do not operate another high-wattage appliance on the same circuit as your steamer.
17.  This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

IMPORTANT SAFETY INSTRUCTIONS

18. To reduce the risk of contact with hot water and steam, always check the appliance for steam leaks. Operate the base, hose, handle, and nozzle for steam leaks.
19. If an extension cord is absolutely necessary, a 3-pronged cord rated for at least 20 amperes should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be inadvertently pulled or tripped.
20. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
21. Cleaning and user maintenance shall not be made by children without supervision.

PRODUCT INFORMATION

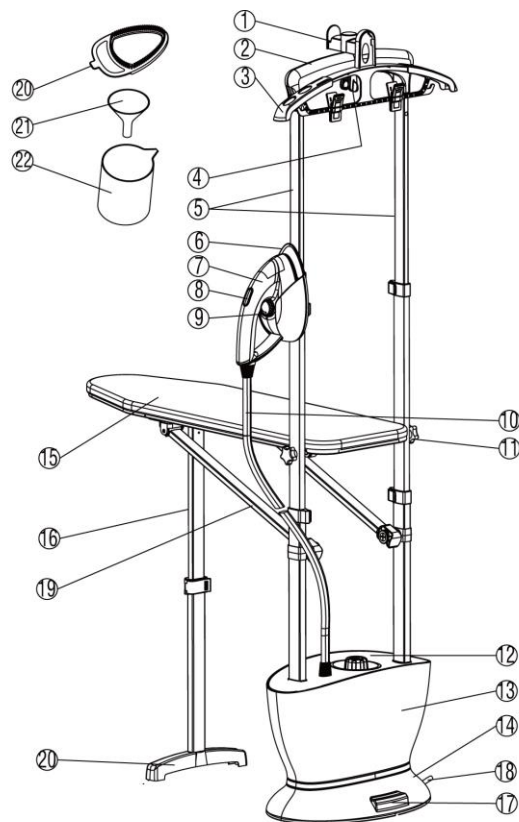


Figure 1

Model No.: SAG399

Rating: AC120V 60Hz, 1600W

Water Tank Capacity: 1000ML

1. Hanger hook
2. Connecting rod
3. Clothes-hanger
4. Clips
5. Telescopic pole
6. Iron holder
7. Iron
8. Steam button
9. Temperature adjust knob
10. Hose
11. Hand screw
12. Safety cap
13. Unit body
14. Drain plug
15. Ironing board
16. Support pole
17. Power switch
18. Power cord
19. Supporting foot
20. Fabric brush
21. Funnel
22. Measure Cup

Assembly your Pressurized Garment Steamer

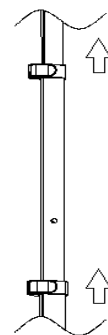


Figure 2

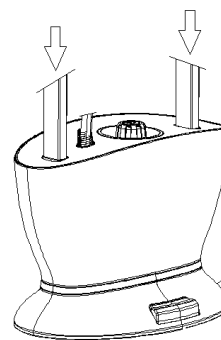


Figure 3



Figure 4

1. Take the unit and all the other parts out of the package, then check and be sure all the parts are available reference the Figure 1 show.
2. Fully extend the telescopic pole by open the clips and loosen the poles, then fully extend the pole, at last close the clips on the pole and to lock the poles. As (figure 2) shows. Make sure that the pole is securely locked into place and cannot be pushed down.

NOTE: The Telescopic Pole must be fully extending (3 sections) during steamer operation to insure enough height for steam clothes.

3. Insert the bottom of the telescopic poles into the pole base (see Figure 3), and make sure the pole not move.
4. Fix the Iron holder on the telescopic pole (see Figure 4), and attach the steam nozzle on its holder like the figure 5 shows.

Caution: Do not upside down the nozzle like the (figure 6) show, it is very dangerous due to the Nozzle easy fall off.



Figure 5



Figure 6

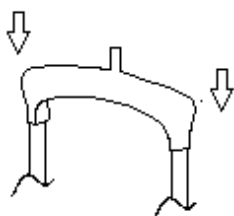


Figure 7

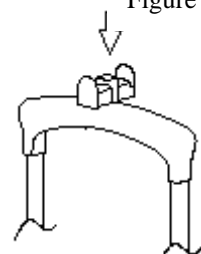


Figure 8

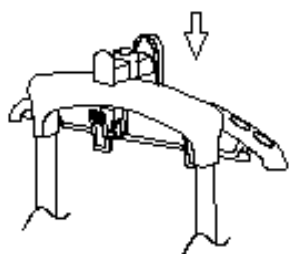


Figure 9

5. Attach the connecting rod to the poles as Figure 7 shows. To attach the hanger attachment, align the hole of hanger with pole top and push down, (Figure 8).
6. Attached the clothes hanger to the pole top hanger, you should align the clothes hanger hole with pole hanger tab and push down let it hold in place, like figure 9 shows.
7. Refer to ironing board installation instruction for how to install the ironing board.
8. Take out the ironing board, and align the ironing board to the fixing holes of two side's poles, screw the M8 screws by hand. (see figure 10)
9. Fit the two supported poles onto the hook of the extension poles. (see figure 11)
10. Put the cloth cover on the ironing board, and tighten it.



Figure 10



Figure 11

Using Your_Pressurized Garment Steamer

1. Filling with water, unscrew the safety cap from unit, reference to figure 12 filling water into boiler.

Caution: Only filling water, no any other cleaning detergent allowed.

NOTE: To prolong the lifetime of your steamer, we recommend using distilled or de-mineralized water.

2. Screw back the safety cap like the figure 13 shows, be sure the cap screw tighten with boiler, otherwise there is steam leakage from there.
3. Plug the unit into a properly grounded three-pronged outlet. Make sure the electric voltage is same as the unit spec required.
4. Step the pedal switch on light, the switch is illuminated in RED light, pre-heating 8-10 minutes; the light will turn to Blue once the steam is ready. See figure 14.

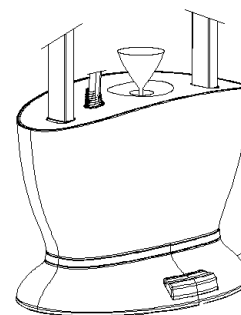


Figure 12

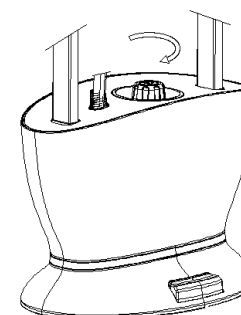


Figure 13

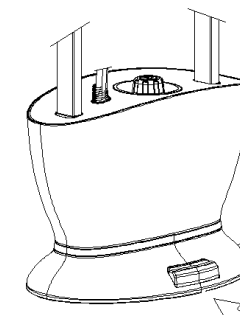


Figure 14

CAUTION: Close the power switch or pull the plug in time if there is no steam out. Dry boiler will affect the service life or damage it.

Pressing With Steam

1. Vertical ironing

Place garment on clothes hanger, and place the hanger on Hanger Hook, fold the ironing board, and start ironing garment.

CAUTION: Before ironing, please set temperature to MAX, references the figure 15.

Note: Please iron cloth once the power light turn to Blue color, which means steam is ready. If you iron in the Red light, the iron may spray water since the steam is not ready,

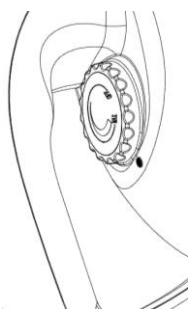


Figure 15

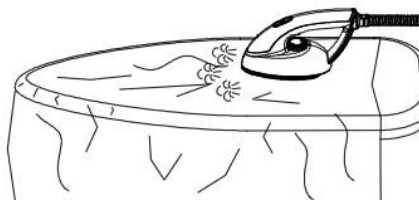


Figure 16

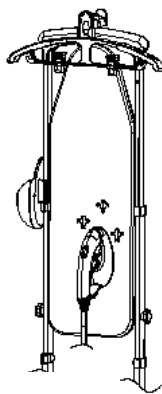


Figure 17

Temperature setting: Dial the knob as the clothes material required to align with the black dot. Clockwise direction is rising the temperature, counterclockwise direction is lower the temperature.

Try iron: After sets temperature, it's better to try on clothes, to check if the temperature is too high or not. If the temperature is too high that will burn the clothes.

CAUTION: Do not press steam button when setting the temperature, otherwise the Hot Steam may escape from the nozzle to burn.

Vertical ironing board could be used as a support for ironing. Fold the ironing board, and lock it. Hang your cloth on the cloth hanger, and then press the steam button, the pressurized Steam will come out from the soleplate of Steam iron head, slide the iron head from the bottom to the top of the garment until remove all the wrinkles and refresh the clothes as figure 16 shows.

2. Horizontal ironing

Lay down the ironing board, and adjust to a proper height. Put your cloth on the ironing board, and then press the steam button, the pressurized Steam will come out from the soleplate of Steam iron head, Slow slide the iron head, from the bottom to the top of the garment until remove all the wrinkles and refresh the clothes. As figure 17 shows.

WARNING! Never unscrew the fill cap during use, only can unscrew it until all pressure has been released.

Refill water

When the water used up, no steam will spray out even pressing the Steam Button. Now the water needs to be refilled if you still want to use the garment steamer.

To refill the water, please do as following:

- Unplug from the electrical outlet.
- Unscrew the Safety Cap slowly. Before unscrewing it completely, wait for the hissing noise created by residual steam to stop.
- Keep the unit cool after 30min at least**
- Unscrew the Safety Cap completely and use the measuring cup and funnel to fill water into the boiler, Be carefully not to let the water leak out.
- Screw the Safety Cap back on.
- Plug in the electrical outlet and continue to use it.

Note: This unit with high pressure and high temperature, if filling the water when the unit still hot, the water may sprays out.

Quick Storage

1. Step the pedal switch to off the power.
2. Unplug the Power Cord.
3. Make the unit cool for 40 minutes.
4. Remove the clothes hanger and hanger hook from pole, and remove the ironing board and the telescopic pole.
5. Tilt the unit or invert it, unscrew the bottom drain plug to drain away the remaining water. As figure 28 shows. It's better to loosen the safety cap before unscrew drain device, which is easy way to drain water fully clean. Screw the safety cap and the drain plug before storage.

CAUTION: DON'T SCREW THE SAFETY CAP WHEN BOILER IS HOT, THERE IS HOT STEAM AND HOT WATER REMAINS IN BOILER, WILL BURNS WITH HOT STEAM.

6. Put the unit to a convenient storage location.

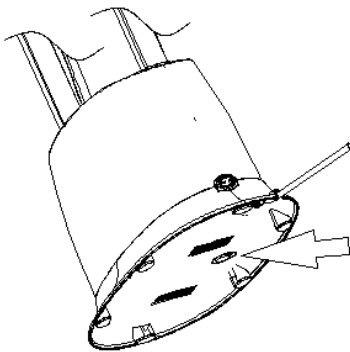


Figure 18

Cleaning and Long Term Storage

We recommend you follow this procedure at least once a month. Use of **distilled or de-mineralized water** reduces cleaning and prolongs the life of your pressurized steamer.

1. Step the pedal switch to off the power.
2. Unplug the unit from the power outlet.
3. Wait for the unit to cool completely (at least 40 minutes).
4. Remove the Telescopic Pole and others from the unit, and put them aside.
5. Mix a solution of 50% vinegar and 50% water. In most cases, 1000ml of this solution will be sufficient,
6. Unscrew the safety cap, and filling the water-vinegar solution 1000ml to the boiler wait for 30 minutes. Then Carry the unit to a sink or tub.
7. Unscrew the bottom drain plug and drain out remaining water in the boiler, and then Rinse the boiler with fresh water. Tilt or upside downs the unit to remove of the water.
8. Flush the boiler with fresh water until no vinegar smell.
9. Re-screw safety cap and drain plug, Reattach the Telescopic Pole and hook hanger and nozzle. Wipe the outside of the appliance with a wet cloth
10. If the unit surface is dirty, we recommend to use a dry cotton cloth or with some 30% alcohol solution to cleaning.


TO PROLONG SERVIE LIFE OF THE STEAMER, WE SUGGEST YOU TO CLEAN THE UNIT FREQUENTLY.

Problem Solving Guide


PROBLEM	CAUSE	SOLUTION
The unit fails to steam. The light on the Pedal Switch does not illuminate.	Steamer is not plugged in.	Plug into electrical outlet.
	Household Circuit Breaker/Ground Fault Interrupter is tripped or Fuse is blown.	Reset the Circuit Breaker/Ground Fault Interrupter, or replace the fuse. If you need assistance, contact a qualified electrician.
The unit fails to steam. The light on the Pedal Switch does illuminate.	Mineral buildup in the unit.	Follow the cleaning ways Procedure in this manual.
	The Water Tank is empty.	Refill the Water Fill Tank using the procedures in this manual.
Water drips from nozzle	Temperature setting is too low.	Follow the temperature setting procedure in this manual re-setting the temperature.
Burn the clothes	Temperature setting is too high.	Follow the temperature setting procedure in this manual re-setting the temperature.

Ironing board Installation Instructions


1. All parts for ironing board are as followings:

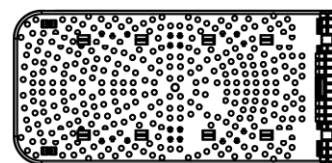

Big Board*1

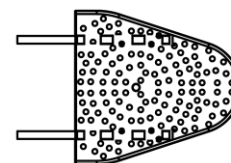


Joint plate*1

 

Instructions*1




Cloth Cover *1

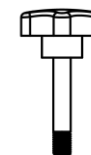


M8Screw*2


2. Insert the joint plate to the hole of the big board as picture 1 shows.
Note: let the plate feet aiming at the holes of the big board, which will be easier to install.
3. Pull the stand foot of the ironing board to 90 degree, and fixed; Loosen clip and extend the pole, then lock the clip. Refer to picture 2.
4. Fix the ironing board to the telescopic poles, aim at the holes and screw the M8 screws by hand as picture 3 shows.
5. Put the two supported poles of the ironing board onto the extension poles like picture 4 shows.

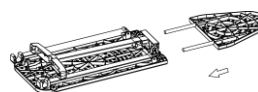

Picture 1

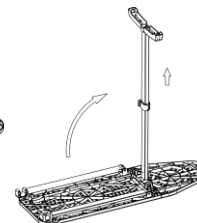

Picutre2

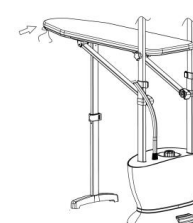

Picture3



Picture 4