 


72 INCH WIDE TV MEDIA STAND

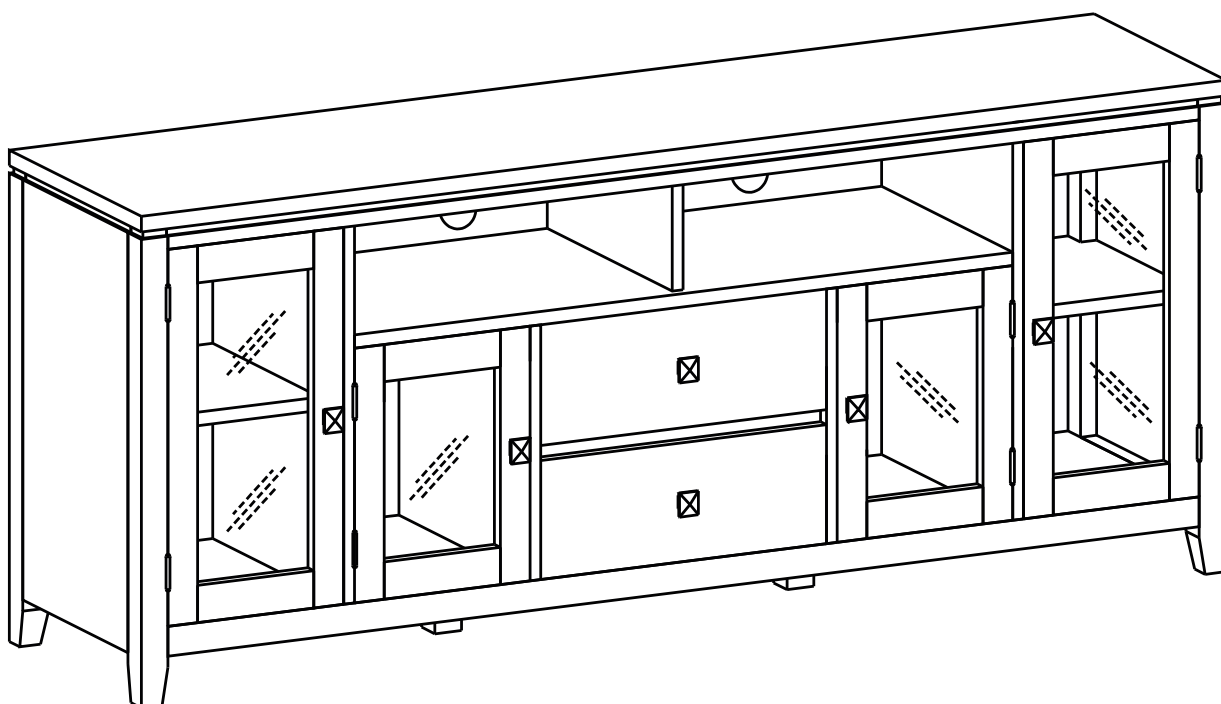



Questions, problems, assembly help, missing parts?

No need to return the product, we will gladly help and ship your replacement parts free of charge

Please call Customer Service
or go to our website

In order to assist you in a timely manner, please have the following information ready:

Model # _____ Part Number or Letter _____

Purchased at _____ Date of Purchase _____

If you wish to return the product, please contact the retailer where the product was purchased.

IMPORTANT : Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

SAFETY INFORMATION

CAUTION: Injuries and damage can occur from furniture tip over if product is not properly anchored to the wall. Use the Furniture Anti-Tipping Restraint provided with the product. Consult our assembly instructions for help.

If the Furniture Anti-Tipping Restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

May require 2 people for ease of assembly.

IMPORTANT : Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

CARE and MAINTENANCE

Perhaps the greatest environmental damage to wood furniture comes from wide swings in relative humidity (RH) in our homes. Wood absorbs and desorbs water as relative humidity rises and falls, and in doing so it swells and shrinks. Making matters worse, it expands and contracts unequally along different grain directions. As humidity changes, the components of wooden objects are continually pushing and pulling against each other. This pressure often results in parts of furniture no longer fitting together closely or becoming distorted or breaking from their own internal stresses.

The response to relative humidity changes begins with determining the annual average RH for your particular space. Then try to keep the RH in the space where your furniture is as close to that average as possible, generally within about 10% up or down. De-humidify in the summer and humidify in the winter.

Be aware that raising the temperature lowers the humidity and vice versa. Thus, modern heating systems, which can drive down interior RH in the winter, almost invariably cause problems for furniture. To counteract their effect, you can either modify the RH by keeping furniture containing spaces cooler in the winter or most importantly, have a good working humidifier for your home. A humidistat automatically works to balance the humidity in your home so it is constant. Dry indoor air can suck enough moisture from its surroundings to do permanent damage to wood, causing it to crack or split.

Remember, that not all woods are created equal. Two factors that help determine how rapidly a wood will lose moisture are pore size and surface hardness. A piece made from a dense and hard wood will dry less rapidly than pieces made from softer woods.

Furniture that is sealed and lacquered will lose moisture more slowly than an unfinished piece while pieces with veneer finishes are not only stronger, but lose moisture more slowly than other finishes.

 
To help protect your wood furniture, take these steps:

- Use a humidifier, preferably one with an automatic control system that can sense the humidity level and adjust itself accordingly. Don't over-humidify; that can damage wood by causing it to expand and contract.
- Keep furniture out of direct sunlight, which can cause it to dry out, crack and warp.
- If you can avoid it, don't put furniture near heating vents. If you must, keep the piece 3 to 4 inches away from the wall, giving the heat and air space to circulate.
- Dust with soft dry cloth.
- Do not use liquid or aerosol products.
- To avoid marking, do not place rubber on surface (foot pads, etc.)
- For soil build-up, wipe with damp cloth & dry.
- Do not use abrasive cleaners.

PRE-ASSEMBLY INFORMATION


PARTS DESCRIPTION

A

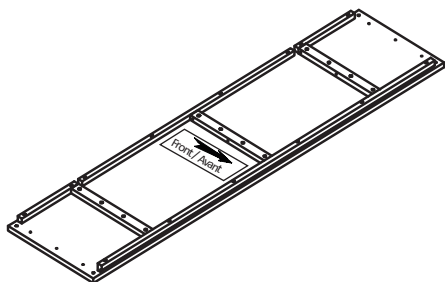


TOP
QTY 1

 BL

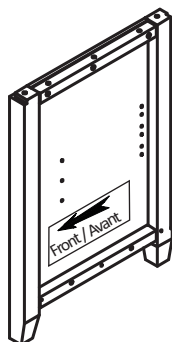


LEFT SIDE
QTY 1

 BR

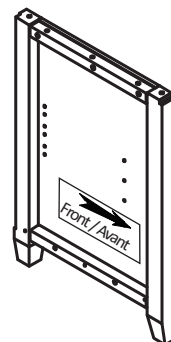


RIGHT SIDE
QTY 1

 C

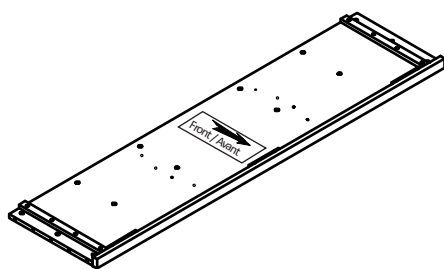


BOTTOM SHELF
QTY 1

 D

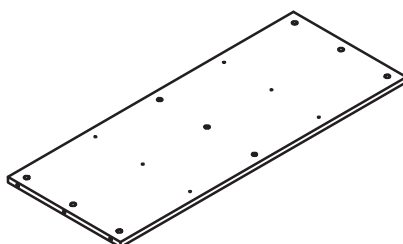


TOP SHELF
QTY 1

 E

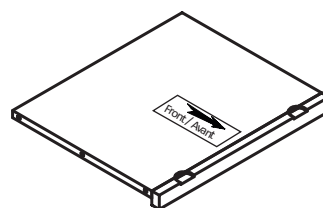


CENTRE SHELF
QTY 1

 F

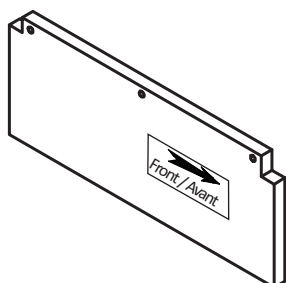


TOP DIVIDER
QTY 1

 GL

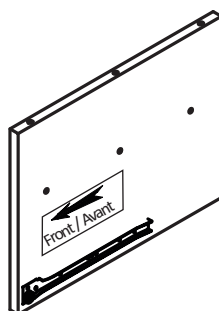

LEFT MIDDLE DIVIDER
QTY 1

 GR

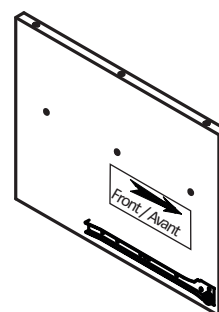


RIGHT MIDDLE DIVIDER
QTY 1

NEED HELP? For help with assembly or if you are missing a part,
Please call customer service

PRE-ASSEMBLY INFORMATION


PARTS DESCRIPTION

 HL

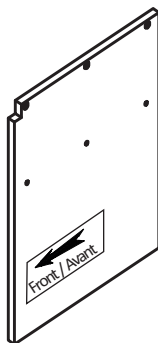


LEFT DIVIDER
QTY 1

 HR

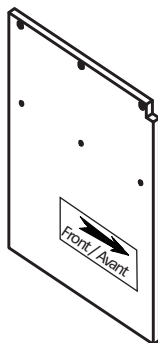


RIGHT DIVIDER
QTY 1

 IL

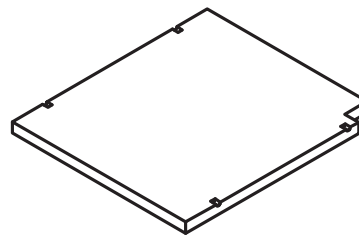


LEFT SHELF
QTY 1

 IR

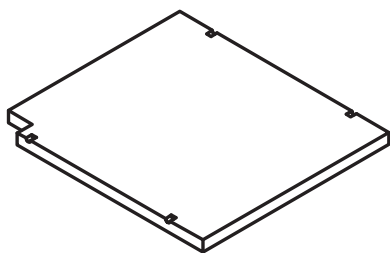


RIGHT SHELF
QTY 1

 J

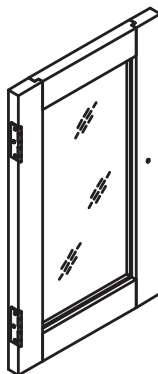


LARGE DOOR (L&R Same)
QTY 2

 K

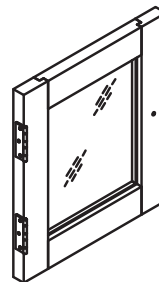


SMALL DOOR (L&R Same)
QTY 2

 LL

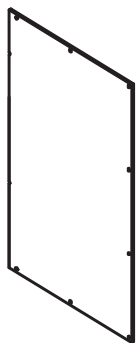


LEFT BACK PANEL
QTY 1

 LR

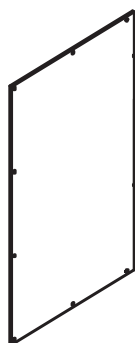

RIGHT BACK PANEL
QTY 1

 L1








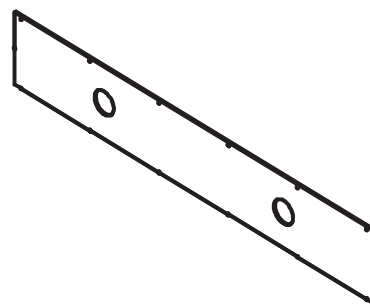


TOP BACK PANEL
QTY 1

NEED HELP? For help with assembly or if you are missing a part,
Please call customer service

PRE-ASSEMBLY INFORMATION

        PARTS DESCRIPTION

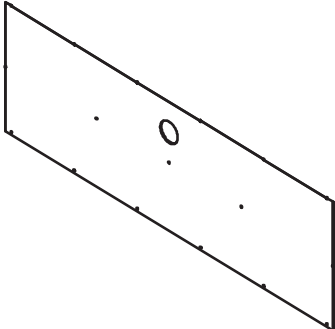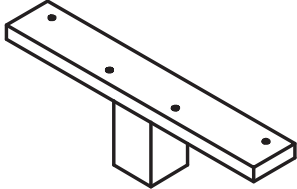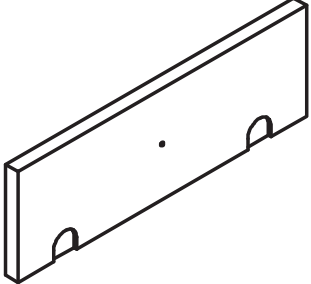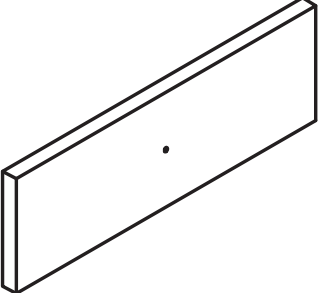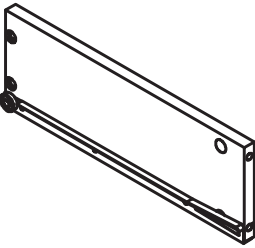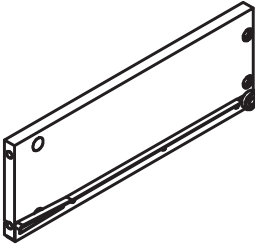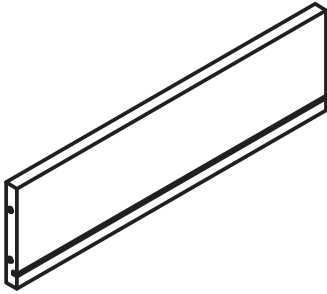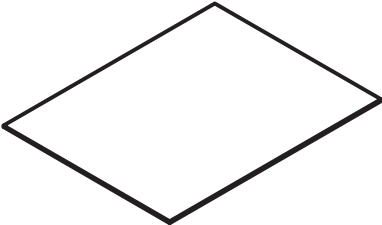
<div>L2</div> <div></div> <div>BOTTOM BACK PANEL QTY 1</div>	<div>M</div> <div></div> <div>BOTTOM SUPPORT LEG QTY 2</div>	<div>N</div> <div></div> <div>FLIP DOWN DOOR QTY 1</div>
<div>O</div> <div></div> <div>DRAWER FRONT QTY 1</div>	<div>PL</div> <div></div> <div>LEFT DRAWER SIDE QTY 1</div>	<div>PR</div> <div></div> <div>RIGHT DRAWER SIDE QTY 1</div>
<div>Q</div> <div></div> <div>DRAWER BACK QTY 1</div>	<div>R</div> <div></div> <div>DRAWER BOTTOM QTY 1</div>	

NEED HELP? For help with assembly or if you are missing a part,
Please call customer service

PRE-ASSEMBLY INFORMATION


HARDWARE DESCRIPTION

 1




ALLEN KEY SCREW
M6 X 30 mm
QTY 34

 2




CAM LOCK PIN
CAM LOCK
QTY 22 SETS

 3




ALLEN KEY
QTY 1

 4

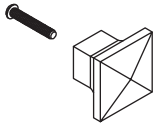


HANDLE
M4 X 25 mm
QTY 6 SETS

 5




PHILLIPS SCREW ROUND HEAD
M4 X 15 mm
QTY 41

 6

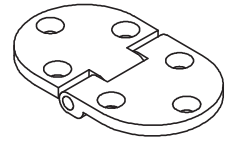


HINGE
QTY 2

 7

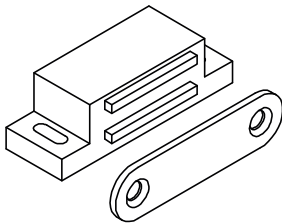


MAGNET AND PLATE
QTY 4 SETS

 8

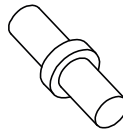


SHELF SUPPORT
QTY 12

 9




PHILLIPS SCREW
M3 X 12 mm
QTY 28

 10



PHILLIPS SCREW
M3 X 15 mm
QTY 16

 11




PHILLIPS SCREW
M4 X 25 mm
QTY 8

12




WOOD DOWEL
Ø8 X 30 mm
QTY 22

 13

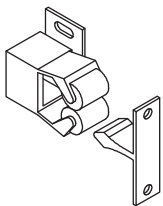

LATCH
QTY 1 SET

 14

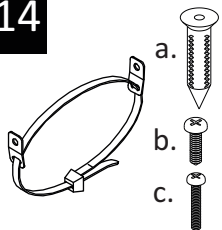


FURNITURE TIP OVER RESTRAINT
QTY 1 SET

- a. M4 X 25 - QTY 2
(1 is extra)
- b. M4 X 15 - QTY 1
- c. M4 X 25 - QTY 1

15



 
PHILLIPS SCREW
M3.5 X 15 mm
QTY 12



Required -
Flathead screwdriver
Phillips screwdriver
Rubber mallet
Not Included


NEED HELP? For help with assembly or if you are missing a part,
Please call customer service

 COMPONENTS – KEY DIAGRAM

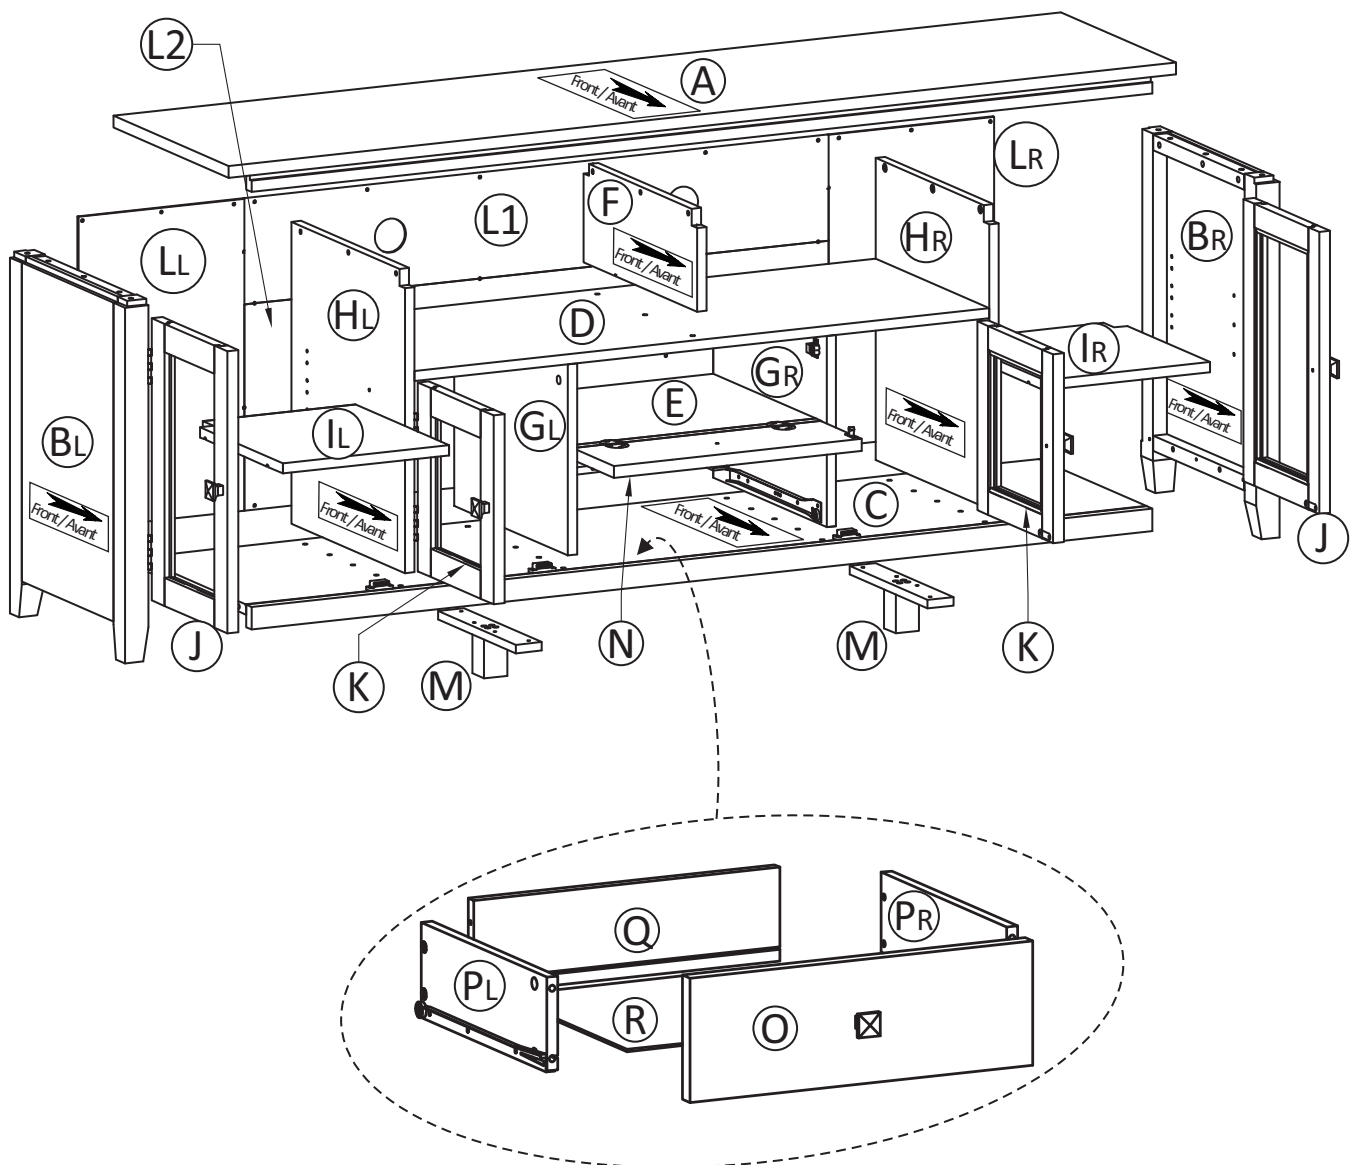


ASSEMBLY

 STEP 1

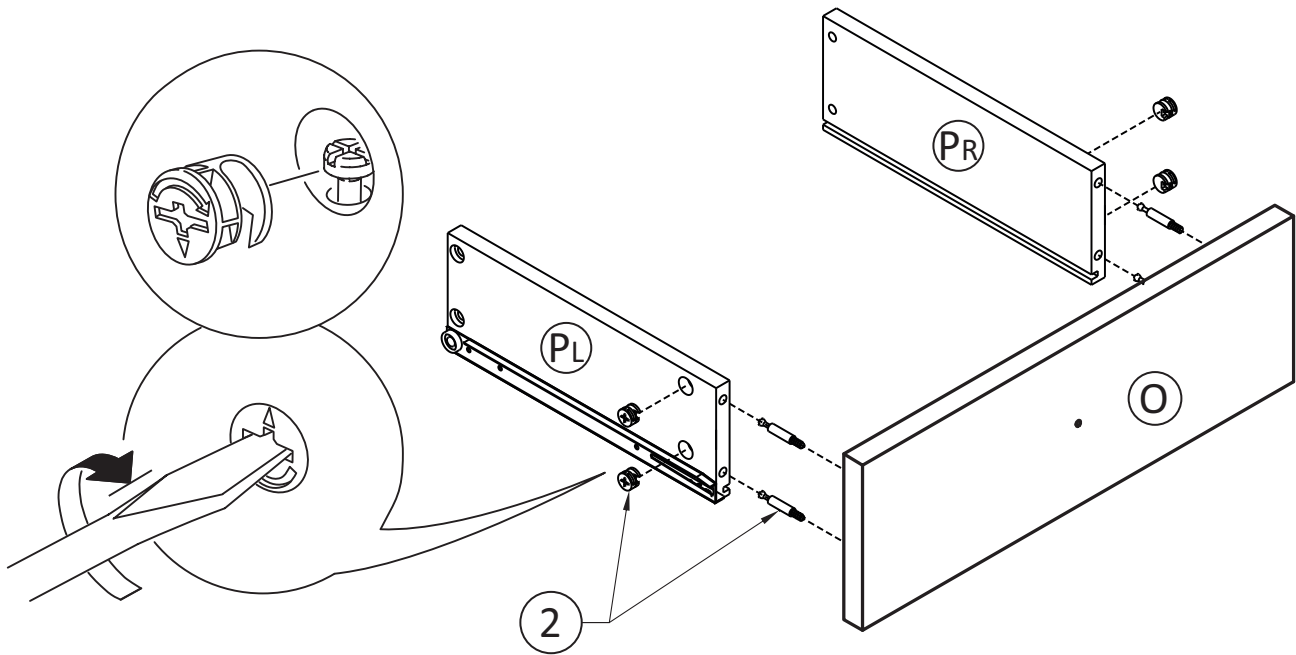

1. Attach 4 Cam Lock Pins (2) to back of Drawer Front (O).
2. Align Cam Lock Pins with pre-drilled holes and attach Drawer Sides (PL, PR).
3. Insert 2 Cam Lock (2) into pre-drilled holes on each Drawer Side (PL, PR).
4. Use flathead screwdriver to secure Cam Locks.

 
STEP 2

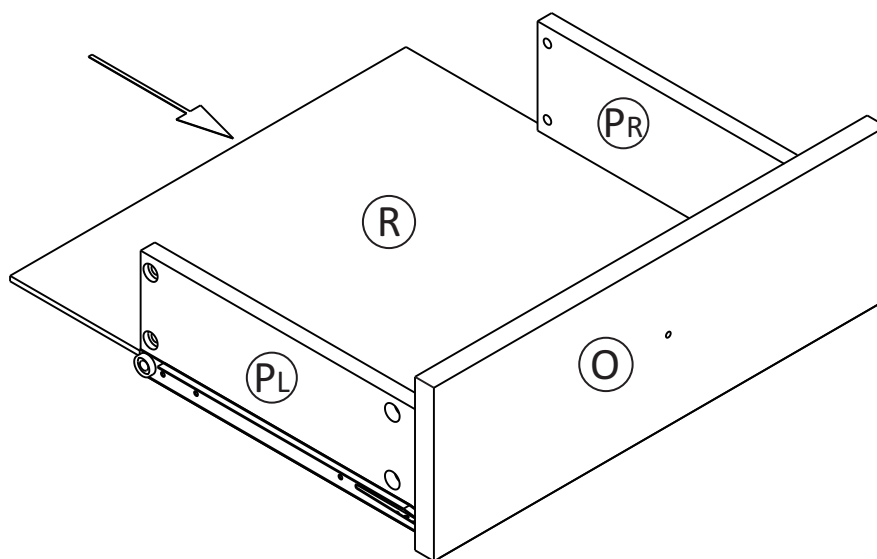

1. Slide Drawer Bottom (R) firmly into slots on Drawer Sides (PL, PR) and Drawer Front (O).



ASSEMBLY

 STEP 3

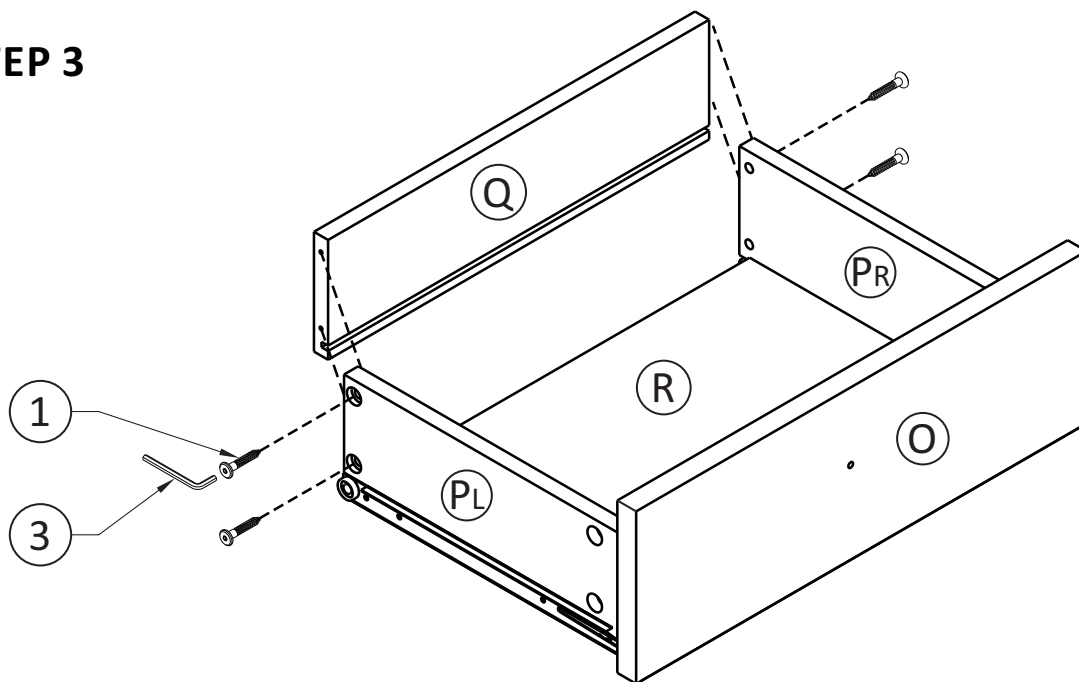


1. Align Drawer Back (Q) with Drawer Bottom (R) and press firmly into slot .
2. Attach back using 2 Allen Key Screws (1) through pre-drilled holes on each side.
3. Use Allen key (3) to tighten. Do not over tighten.

  STEP 4

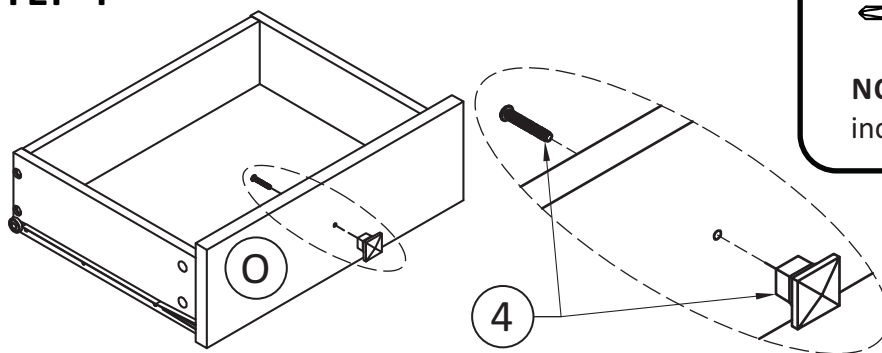


NOTE: The screwdriver is not included in the hardware pack.

 1. Use Phillips Screwdriver to attach Handle (4) to Drawer Front (O).

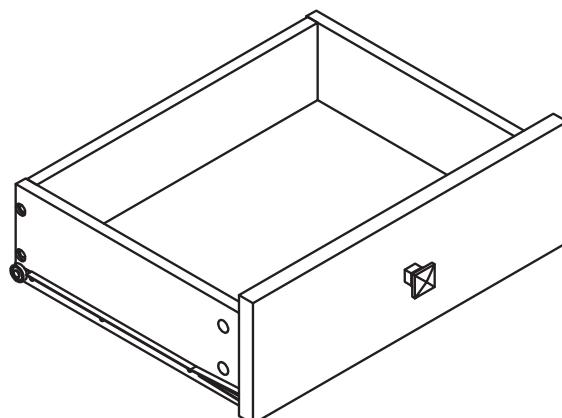


ASSEMBLY

 STEP 5

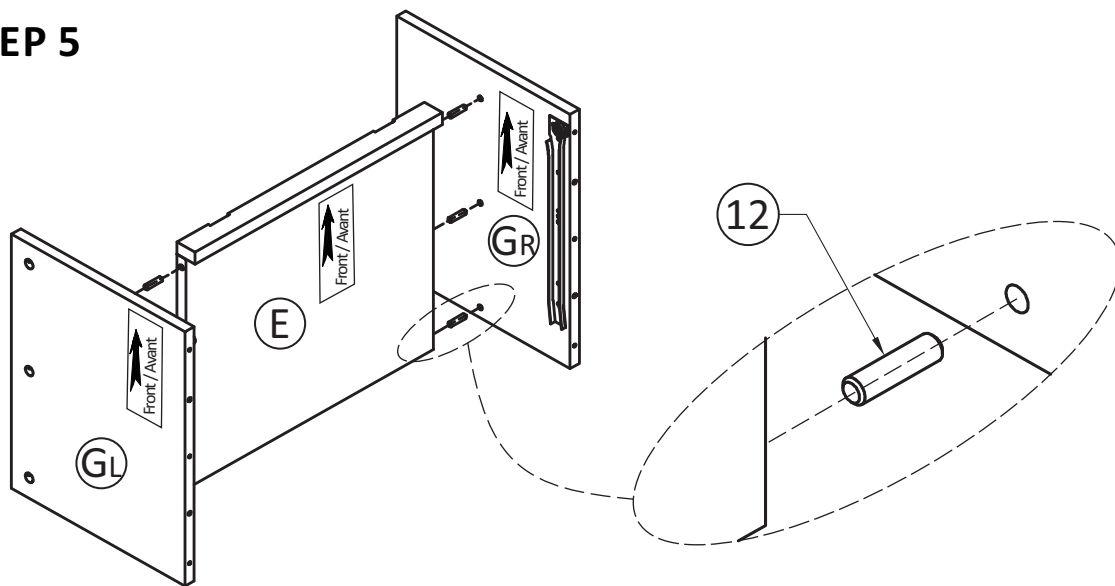

1. Insert 6 Dowels ⑫ into Centre Shelf ⑤.
2. Use rubber mallet to tap Dowels ⑫ into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Align Dowels ⑫ with pre-drilled holes and attach Middle Divider ④, ⑤.

 
STEP 6

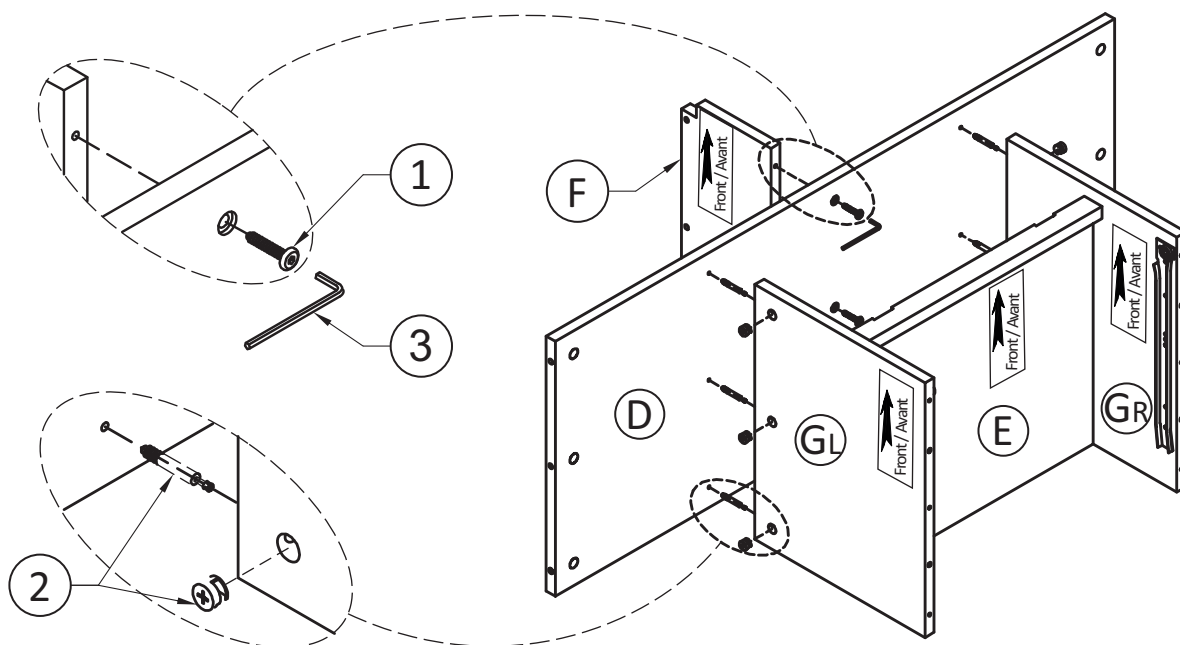

1. Attach 6 Cam Lock Pins ② to Top Shelf ④.
2. Align Cam Lock Pins with pre-drilled holes and attach Middle Dividers ④, ⑤.
3. Insert 3 Cam Lock ② into pre-drilled holes on each Middle Divider ④, ⑤.
4. Use flathead screwdriver secure Cam Lock.
5. Using 3 Allen Key Screws ① attach Top Shelf ④ to Top Divider ⑥.


ASSEMBLY

 STEP 7

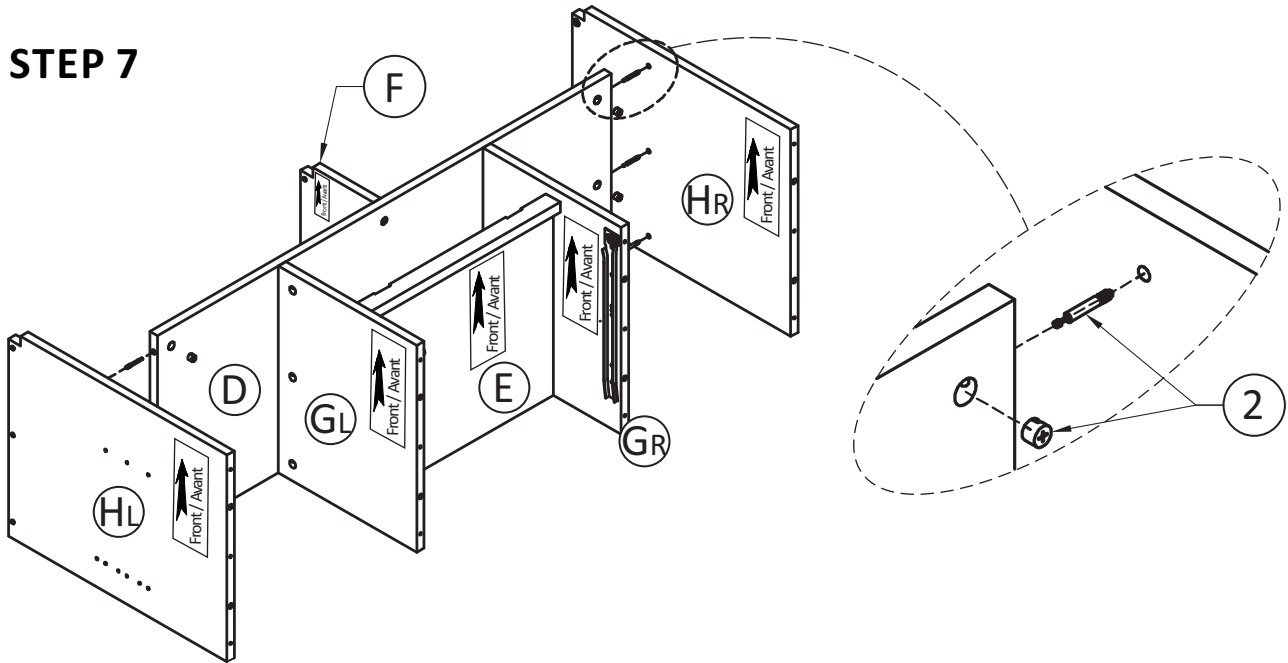

1. Attach 3 Cam Lock Pins (2) to each Divider (HL), (HR).
2. Align Cam Lock Pins pre-drilled holes and attach Top Shelf (D).
3. Insert 6 Cam Lock (2) into pre-drilled holes on Top Shelf (D).
4. Use flathead screwdriver secure Cam Lock.

 
STEP 8

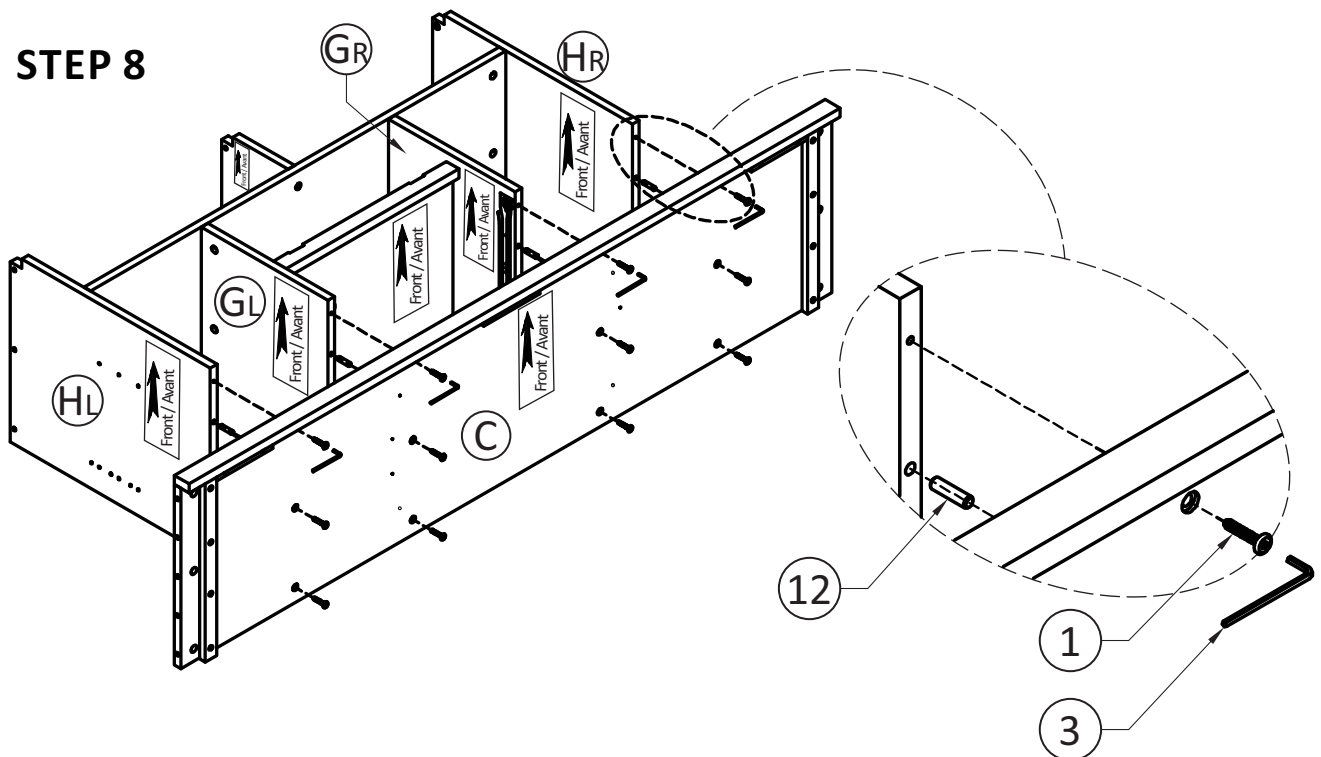

1. Insert 2 Dowels (12) into each Divider (HL), (HR) & (GL), (GR).
2. Use rubber mallet to tap Dowels (12) into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Align Dowels (12) with pre-drilled holes and attach Bottom Shelf (C).
4. Using 12 Allen Key Screws (1) attach Bottom Shelf (C) to Dividers (HL), (HR) & (GL), (GR).

ASSEMBLY

 
STEP 9

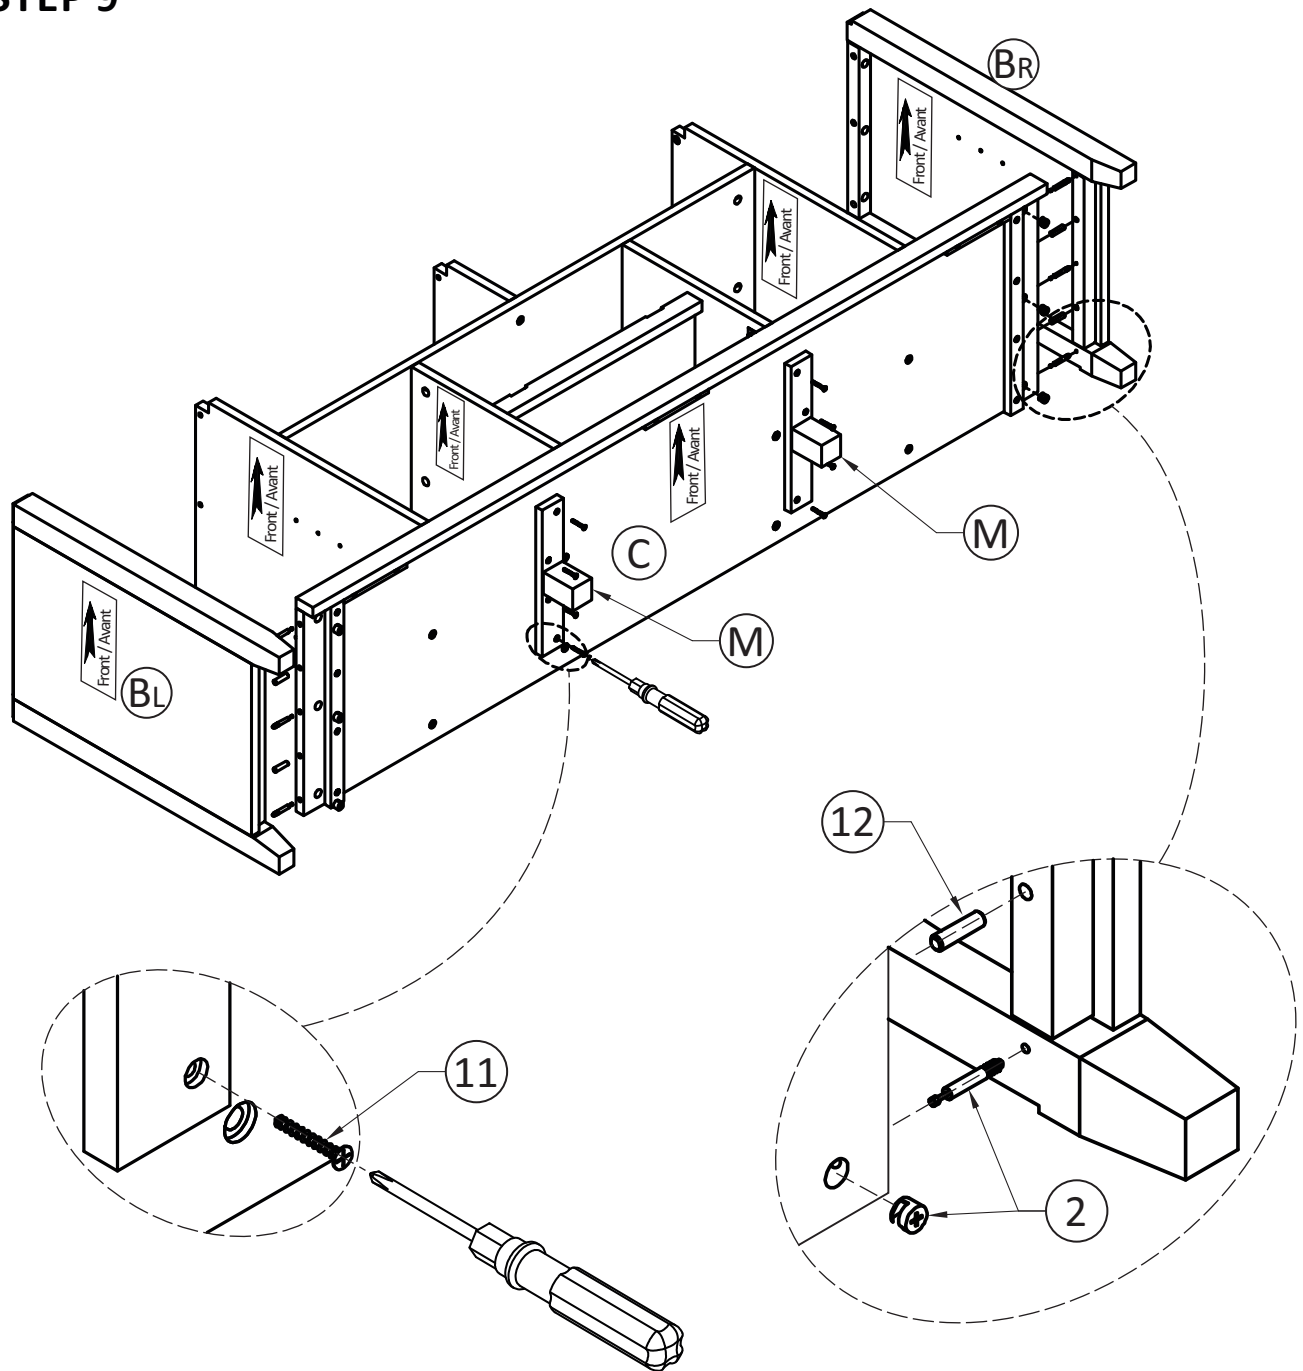

1. Insert 4 Dowels (12) into Bottom Shelf (C).
2. Use rubber mallet to tap Dowels (12) into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Attach 3 Cam Lock Pins (2) to each Side (BL), (BR).
4. Align Cam Lock Pins with pre-drilled holes and attach Bottom Shelf (C).
5. Align pre-drilled holes on Sides (B) with Dowels (12) in Bottom Shelf (C).
6. Insert 6 Cam Lock (2) into pre-drilled holes on Bottom Shelf (C).
7. Use flathead screwdriver secure Cam Lock.
8. Using 8 Phillip Screws (11) attach 2 Bottom Support Legs (M) to Bottom Shelf (C).

ASSEMBLY

 
STEP 10

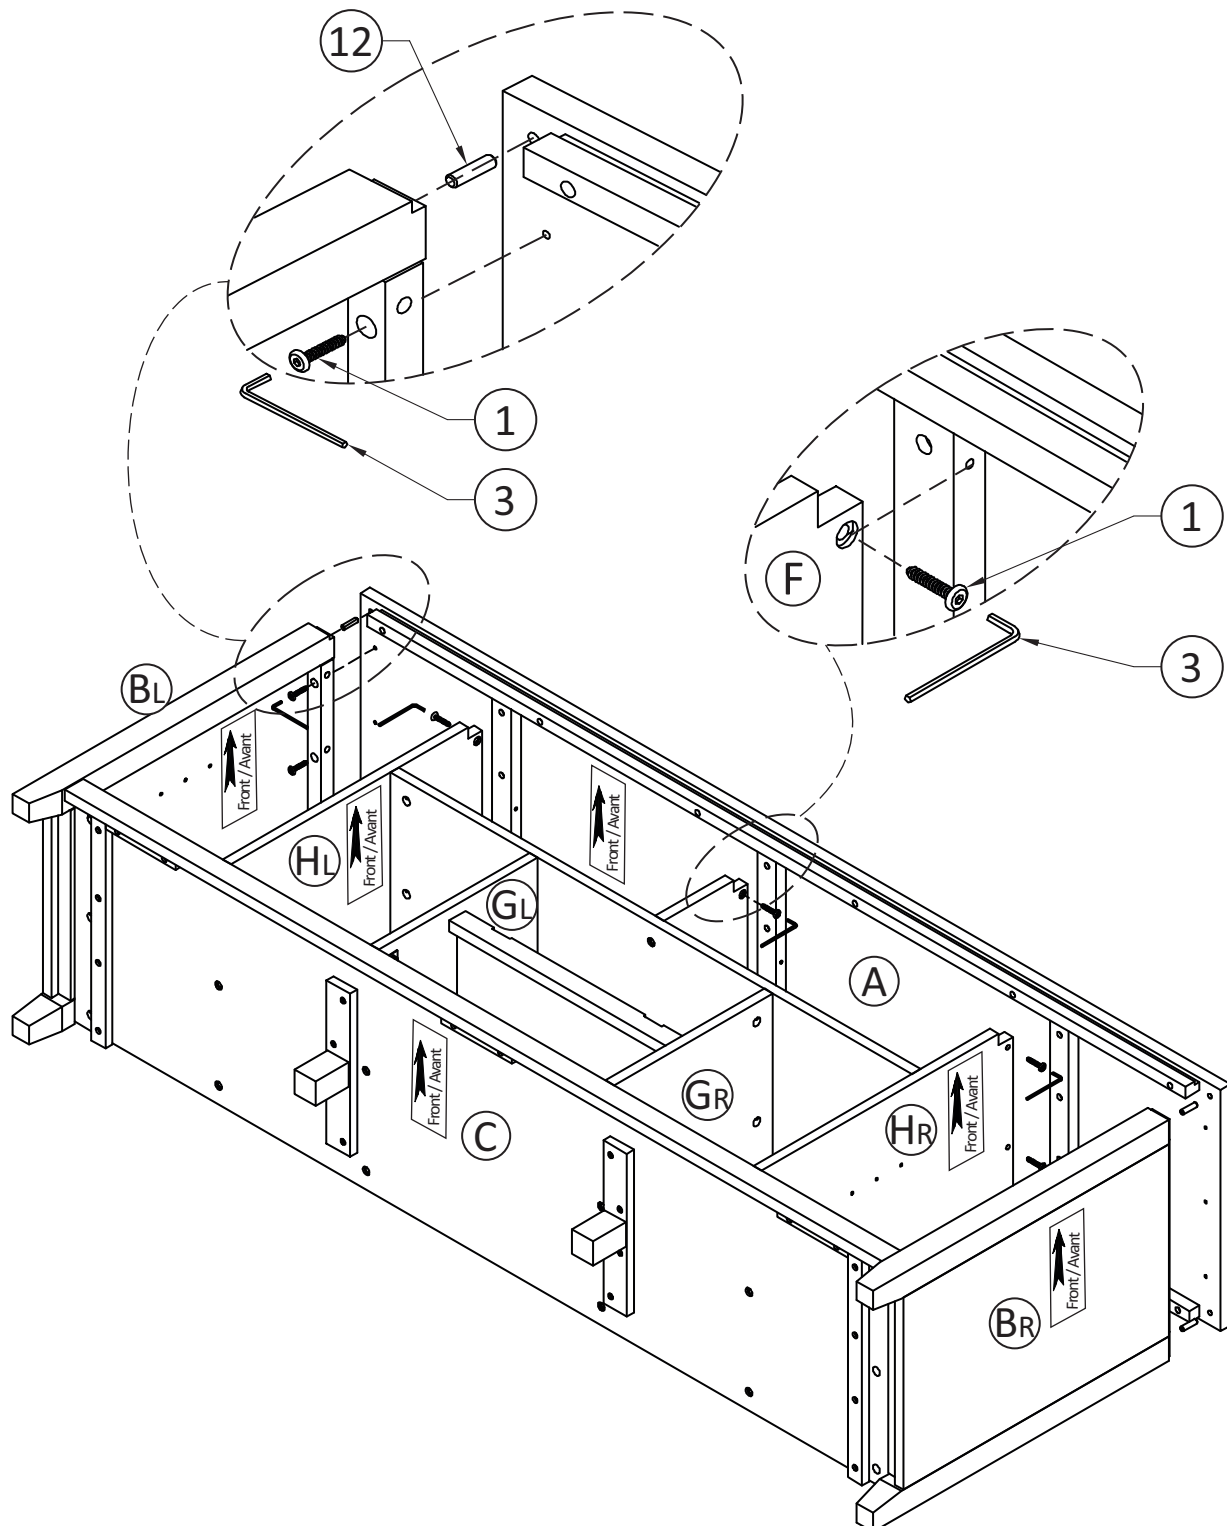

1. Insert 2 Dowels ⑫ into top corners of each Side ⑩L, ⑩R.
2. Use rubber mallet to tap Dowels ⑫ into bottom of holes securely. 1/2 length of Dowels should be exposed.
3. Align pre-drilled holes on bottom corners of Top ⑩A with Dowels ⑫ in Sides ⑩L, ⑩R.
4. Using 15 Allen Key Screws ① attach Top ⑩A to Sides ⑩L, ⑩R, Dividers ⑩H, ⑩H & ⑩F.

ASSEMBLY

 
STEP 11

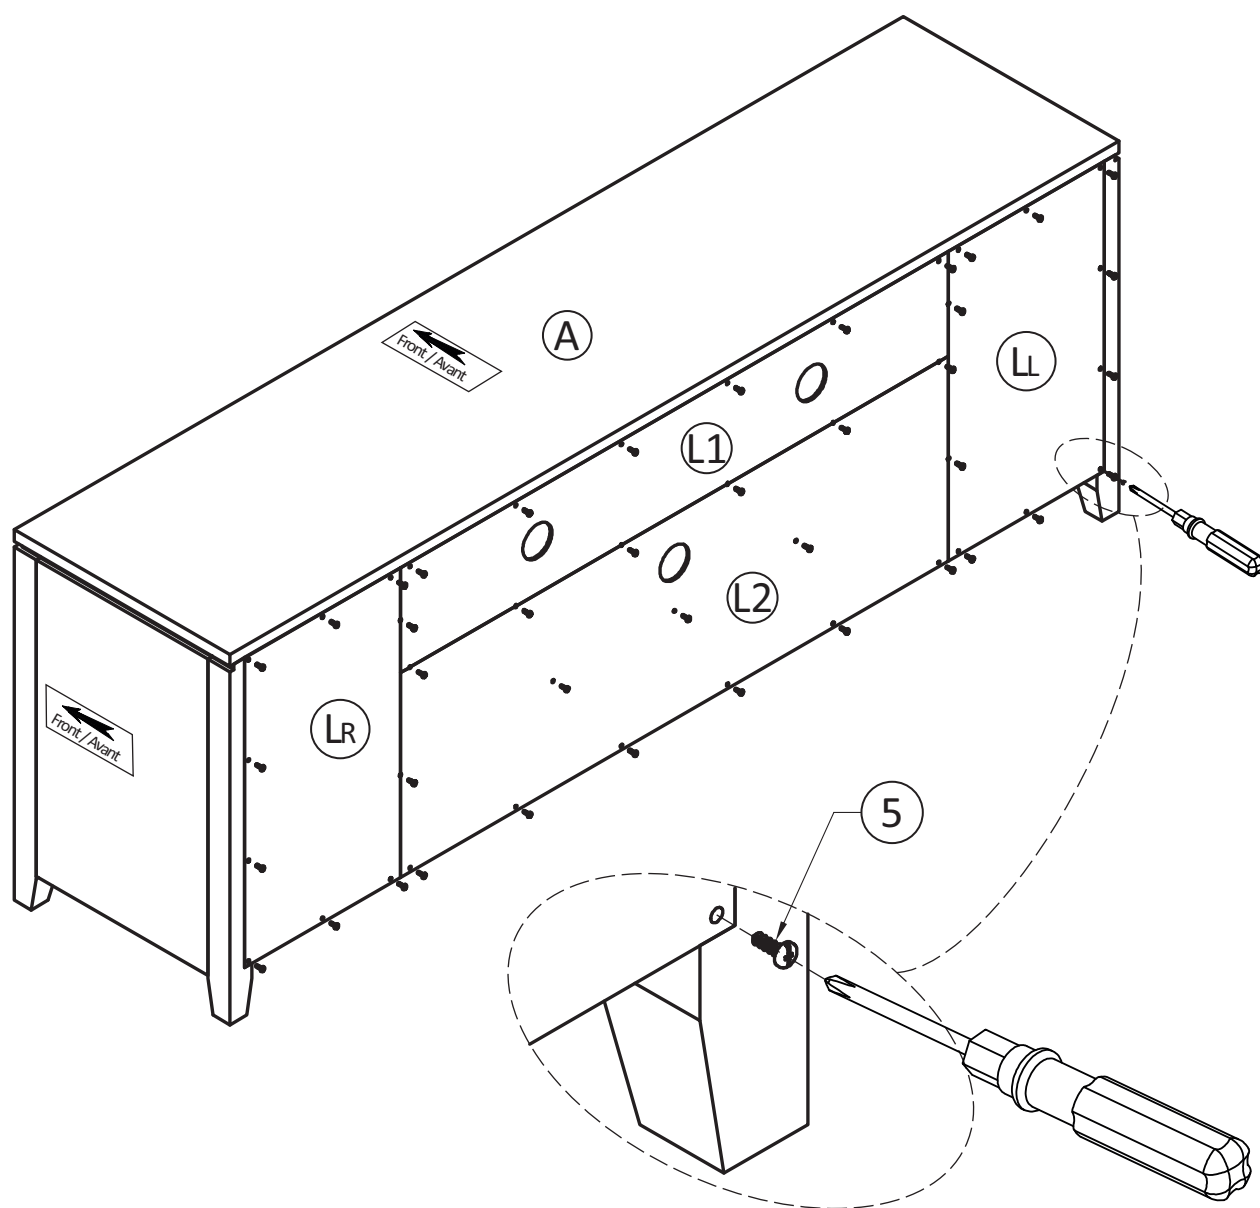

1. Attach Back Panels (LL), (LR), (L1), (L2) to back of TV stand using Phillips Screws Round Head ⑤ into pre-drilled guide holes.
2. Use Phillips screwdriver to tighten screws.

ASSEMBLY

 
STEP 12

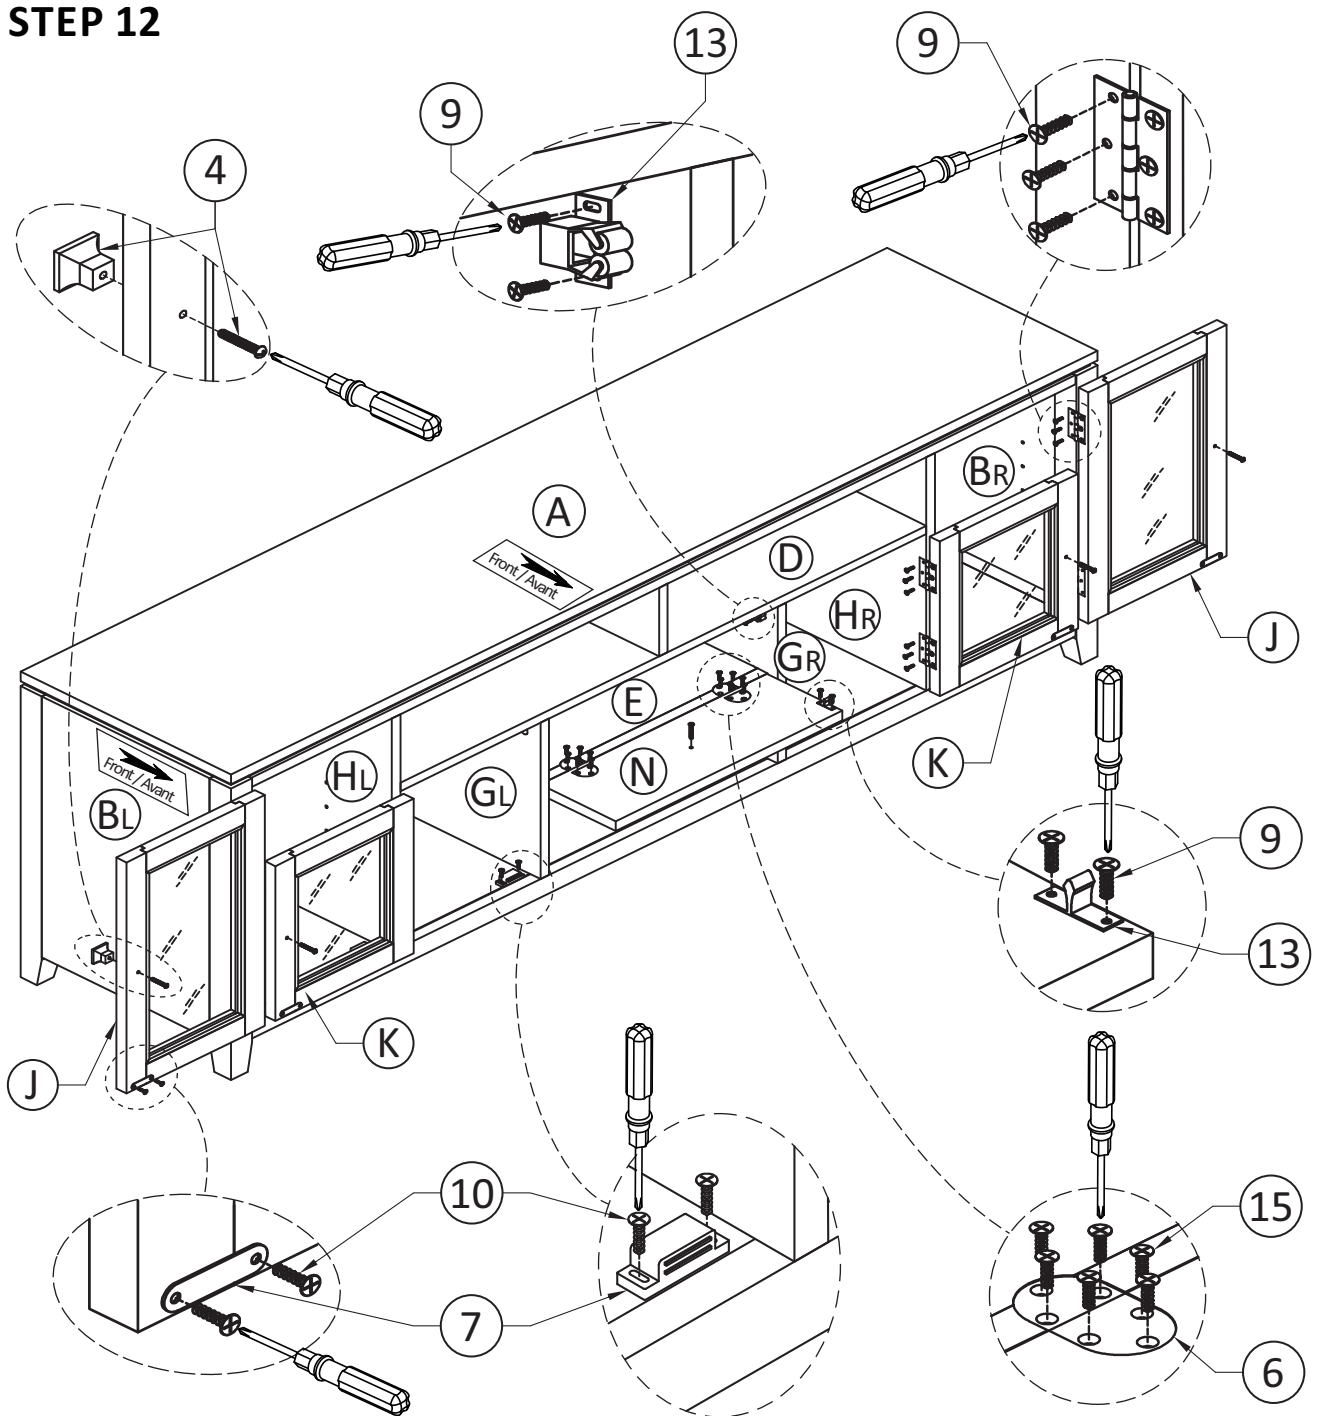

1. Attach hinges on Large Doors (J) and Sides (BL, BR) using Phillips Screw (9).
2. Attach hinges on Small Doors (K) and Dividers (HL, HR) using Phillips Screw (9).
3. Attach Hinges (6) to Flip Down Door (N) and Centre Shelf (E) using Phillips Screw (15).
4. Attach Magnet Plates (7) to bottom corner of Doors (J & K) using Phillip Screw (10) into guide holes on Doors (J & K).
5. Attach Magnets (7) using Phillip Screws (10) into guide holes Bottom Shelf (C).
6. Attach Latch (13) into hole on Top Shelf (D) and Flip Down Door (N).
7. Use a Phillips screwdriver to attach Handles (4) into guide holes Doors (J & K).

ASSEMBLY

 STEP 13

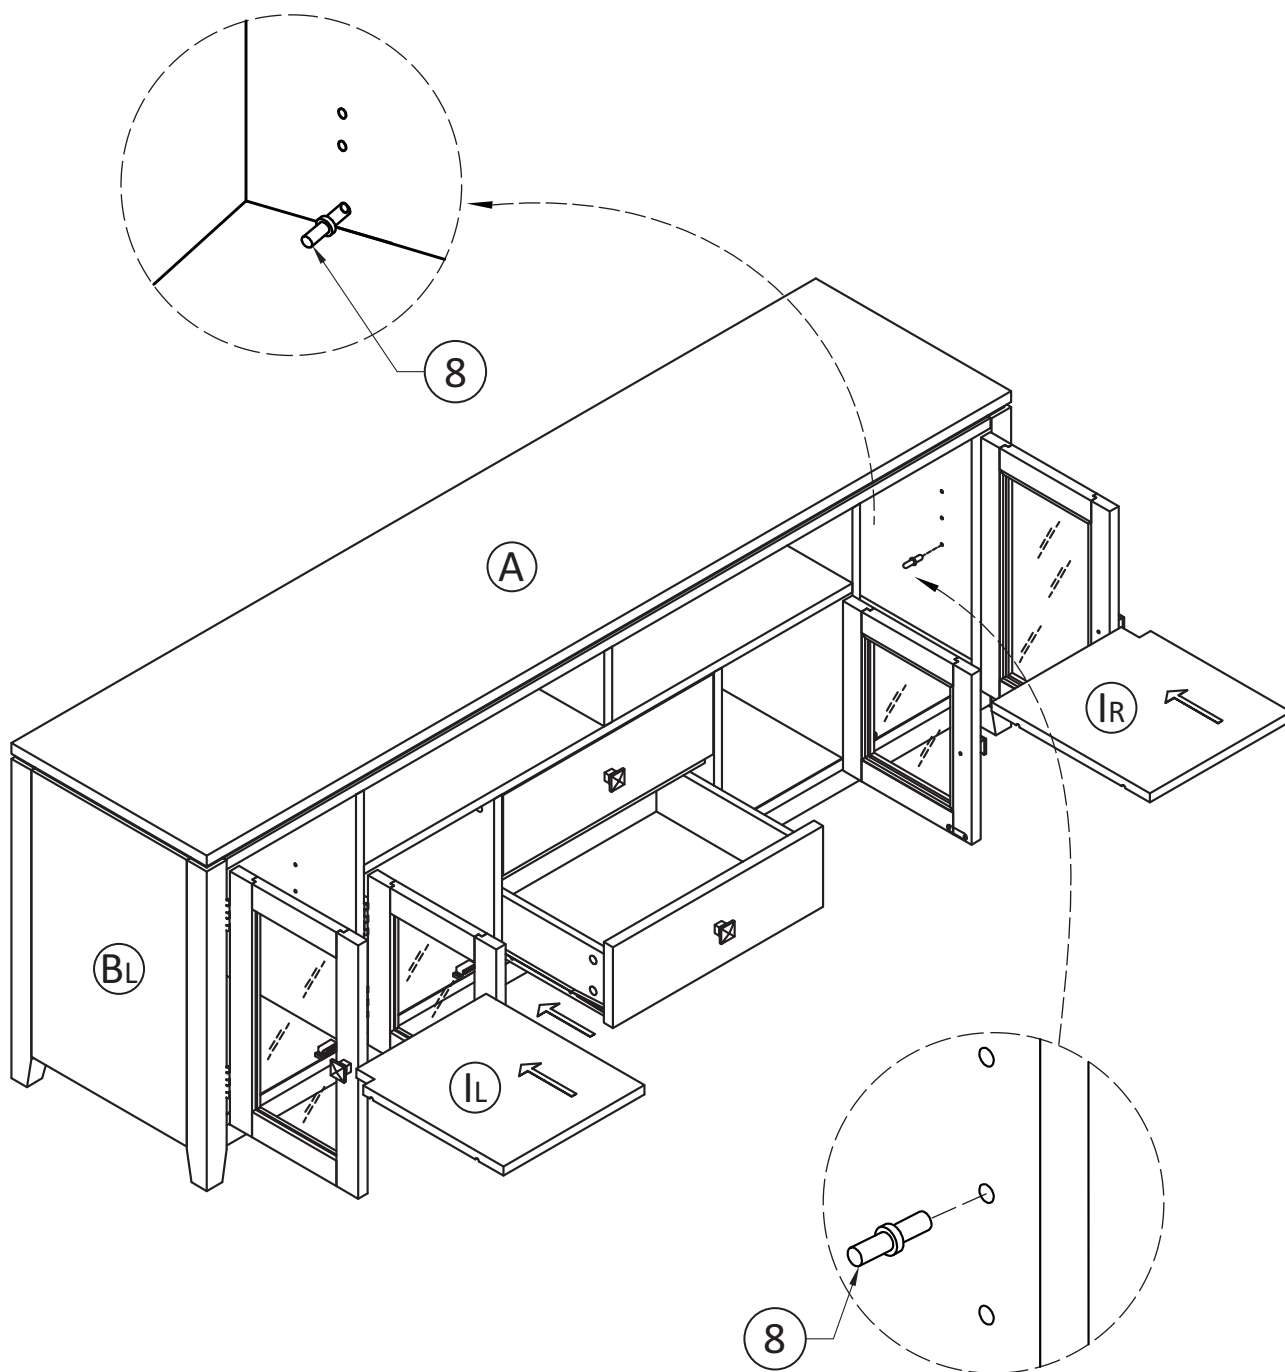

1. Use 4 Shelf Supports ⑧ for each shelf ①L, ①R in desired location.
2. 2 Shelf Supports ⑧ may be used on back top of each shelf ①L, ①R as a tipping restraint.

 
FURNITURE TIP OVER RESTRAINT ASSEMBLY



WARNING


Serious or fatal crushing injuries can occur from furniture tip-over.

If the furniture tip over restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.



NOTE: The screwdriver is not included in the hardware pack.

 
STEP 14

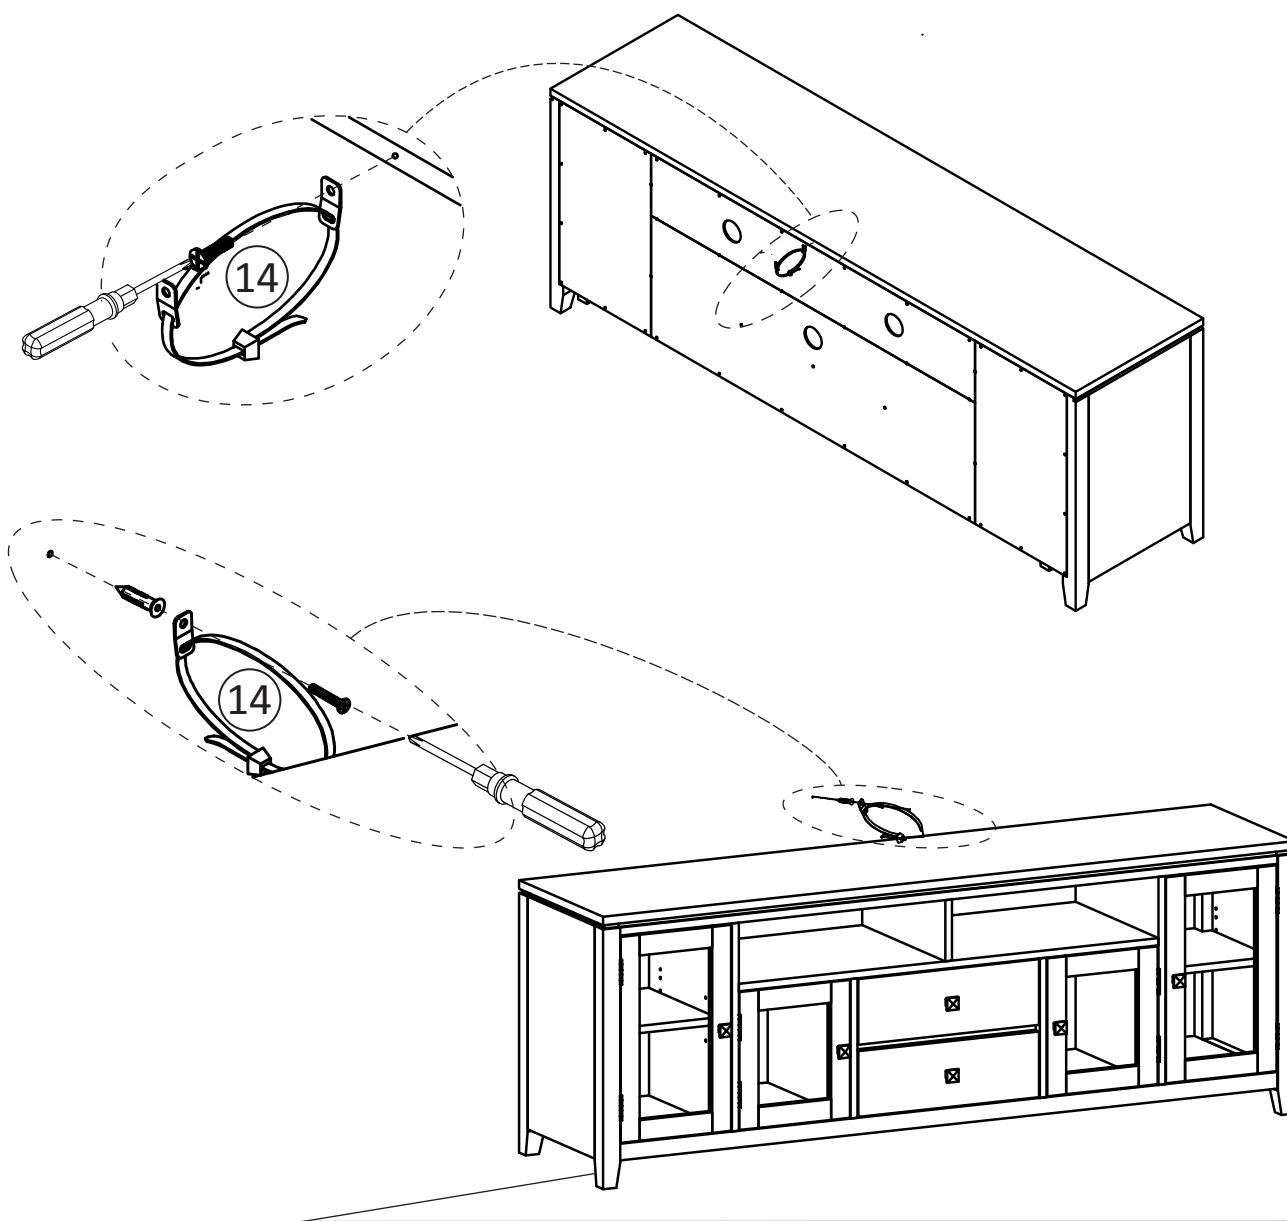


FURNITURE TIP OVER RESTRAINT ASSEMBLY

Furniture Tip Over Restraint Instructions:

 
1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the shorter screw.

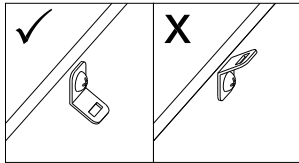

 2. Determine where furniture is to be placed and mark location on the wall for mounting bracket screw hole approximately 2 inches **below** the bracket mounted to the furniture.

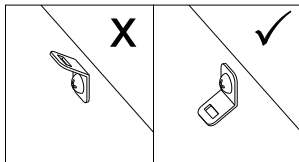

3. Drill a 3/16 inch hole in the wall. Press the plastic anchor into the hole and gently tap until the flange on the anchor is against the wall surface.
4. Position the bracket over the anchor and use the longer screw to securely attach the bracket to the wall.
5. Place the furniture so the back edge is in line with the bracket on the wall.
6. Lace an end of the nylon zip-tie strap down through each bracket. Bring both ends together and slide the smooth side upright through the square-shaped end and pull through to create the "locked" position.
7. Check to make sure the strap is securely laced and locked to the brackets.

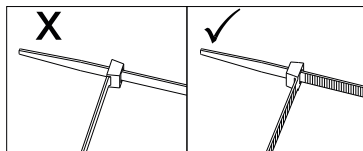 

- **DO NOT** place heavy objects in top drawers
- **DO NOT** let children climb or hang on drawers, doors or shelves

WARRANTY

Thank you for purchasing our product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

In case of any malfunction of your product (failure, missing parts, etc.) please contact us at our toll free service line or by email.

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.