


**GREENEVER**

PTC Fan Heater

# USER MANUAL

YND-JS-2A

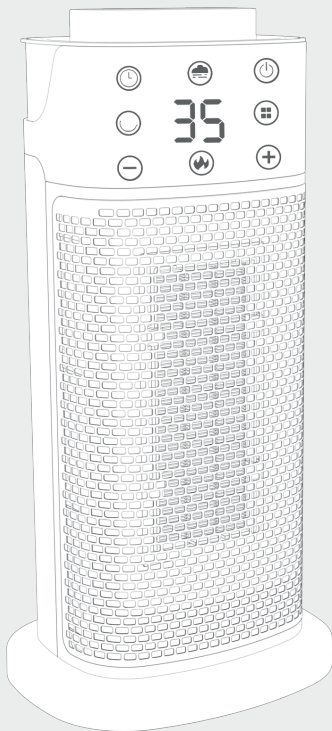

Thank you for purchasing this product,  
please read the manual carefully before use.

## IMPORTANT SAFETY INSTRUCTIONS

**When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons and hypothermia, including the following:**

### Model specification

| Model     | Rated voltage | Rated frequency | Rated power |
|-----------|---------------|-----------------|-------------|
| YND-JS-2A | 120V          | 60Hz            | 1500W       |

### Precautions:

1. Before using it for the first time, please check that the voltage you are using matches the one required by the product nameplate.
2. If the power cord is damaged, in order to avoid danger, it must be replaced by the manufacturer or the professional staff of the maintenance department.
3. Do not use the product near objects that can be easily absorbed such as curtains, and avoid places where there are obstacles and instability around.
4. This product is strictly prohibited to use in the environment with flammable and explosive materials, and the use environment should not exceed 30 degrees, and leave combustible materials at least 1 meter to prevent fire.
5. When leaving or not used for a long time, please make sure to cut off the power and unplug the power supply.
6. Make sure the machine is disconnected from the power supply when the power is off or moving.
7. Please check the power cord and plug for damage before use.
8. Do not bend or pull the power cord to avoid poor contact.
9. When using the apparatus should be avoided on the sloping surface, should be placed on a flat surface to use and can not be put down to use.
10. Prohibit the use of touching the air outlet iron mesh, in order to avoid burns.
11. Before pulling out the plug should first turn off the power, do not pull the power cord, should hold the plug head pull out.
12. Do not use wet hands to pull the power plug, the risk of electric shock.
13. Do not use this product to heat around the bathtub, nozzle or swimming pool.
14. Electric heater should not be placed directly under the power outlet.
15. When working, it is absolutely forbidden to insert hands or foreign objects into the body of the machine.
16. When there is a strange smell or sound during use, please stop using it immediately and unplug it from the power supply.
17. Do not use if the power cord is exposed or damaged.
18. Children should be supervised to ensure that they do not play with the machine.
19. The machine should not be used by people (including children) with physical, sensory and intellectual impairments or lack of experience and common sense, and should be used in the presence of a guardian who is able to provide adequate supervision and instruction on how to use the machine.

20. Electric heating surface stains, use a soft cloth with soap to wipe clean, do not use gasoline or alcohol and other organic solutions, clean the machine first cut off the power, unplug the power.
21. Do not use in high temperature, humid, dusty or volatile places such as acid and alkali oil.
22. Do not spray pesticides and flammable sprays around the product.
23. If there is a problem with the product, it is strictly forbidden to disassemble the machine by yourself, and the machine should be sent to a service point for repair.
24. Do not use this heater with an external programmer, timer or any other device with automatic power on because the heater can cause a fire hazard if it is covered or in correctly placed.
25. Without supervision, children should not clean and maintain the appliance.
26. This product is limited to use in the home or similar indoor locations.

**CAUTION - High temperature, keep electrical cords, drapery, and other furnishings at least 3 feet (0.9 m) from the front of the heater and away from the side and rear.**












## **WARNING-Risk of Heat Stroke (Hyperthermia)**


 


Hyperthermia can result in death in infants or others  
Use caution to avoid overheating individuals  
Read and follow all instructions before use  
**REMOVE BEFORE USE!**








### **Instructions**

When using the unit, please plug it into a standard socket with the specified current and voltage.

- ※ Touch the  key, the product enters the power-on mode, the default natural wind.
- ※ Press the  key again, the product enters the standby state, the fan delayed air supply 30 seconds.
- ※ Touch the  key, the product begins to shake the head left and right, and then touch to stop shaking the head.
- ※ Touch the  key, the product set temperature intelligent switching gear.
- ※ Touch the  key to switch the product to  natural wind **II** low heat, **III** high heat. The corresponding indicator lights up.
- ※ Touch the  key product timing settings, respectively 1-12H, a total of 6 time settings.
- ※ Touch the  key The flame effect starts working.
- ※ Touch the  key The humidifying atomisation starts working

### **Shaker Instructions**

- ※ Press the  key product into the power-on mode, and then press this key, the machine enters the standby state.
- ※ Press the  key to start the product to shake the head left and right, and then press to stop shaking the head.
- ※ Press the  key to switch the product to  natural air, **II** low heat, **III** high heat. The corresponding indicator light is on.

- ※ Press the  key to switch the product to  natural air,  low heat,  high heat. The corresponding indicator light is on
- ※ Press the  key to set the temperature of the product intelligent switching gears.
- ※ Press the  key The flame effect starts working.
- ※ Press the  key The humidifying atomisation starts working

## Shaker Precautions

- ※ Shaker must be equipped with 2 pack of AAA Batteries(not included), when loading the battery, pay attention to the polarity must not be installed in reverse.
- ※ When using the remote control, the front end of the remote control must be aligned with the receiving window (digital display screen) of the machine.
- ※ Avoid direct sunlight on the receiving window, so as not to affect the effect of reception.
- ※ Please keep the remote control in a safe place to avoid impact and dropping.
- ※ When not in use for a long time, please take out the battery to avoid the battery leakage and damage to the remote control.
- ※ When replacing the battery of the remote control, please replace it according to the assembly diagram on the back of the remote control.

## Simple Troubleshooting

- ※ Machine does not start:
  - a. Please check whether the power cord plug into the socket;
  - b. Whether the power switch on the back of the machine;
  - c. Whether the power socket is connected to the power.
- ※ Machine operation noise: check whether the machine is placed on the ground is balanced, whether shaking.
- ※ Heating time is too short and on: check whether the air inlet and outlet are blocked (such as curtains, plastic bags, pieces of paper, etc.), eliminate the factors and then cool the machine and start again.
- ※ After the above checks fail to exclude the fault, please contact the local after-sales service center, do not dismantle the machine for repair without authorization to avoid injury.

## Storage and Maintenance

- ※ Before cleaning, please turn off the power and unplug the power supply.
- ※ Allow the machine to cool completely before wiping the outer surface with a wet soft cloth, and use a soft brush to brush the ventilation holes.
- ※ After cleaning, wait until the machine is completely dry before powering on and using or putting into the original packaging, and place in a dry and ventilated environment.
- ※ Do not rinse directly with water during the cleaning process to avoid damage to the machine.
- ※ Do not use thinner, toluene, acidic detergent, alcohol and other chemical reagents to wipe the machine.

## ONE YEAR LIMITED WARRANTY

- ※ You should first read all instructions before attempting to use this product.
- ※ This 1 year limited warranty applies to repair or replacement of product found to be defective in material or workmanship. This warranty does not apply to damage resulting from commercial, abusive, unreasonable use or supplemental damage. Defects that are the result of normal wear and tear will not be considered manufacturing defects under this warranty. Some jurisdictions do not

considered manufacturing defects under this warranty. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

- ✖ This warranty gives you specific legal rights, and you also may have other rights which vary from jurisdiction to jurisdiction. This warranty applies only to the original purchaser of this product from the original date of purchase.
- ✖ This warranty does not cover damage resulting from any unauthorized attempts to repair or from any use not in accordance with the instruction manual.
- ✖ Please be sure to specify a model number and order ID

NOTE: IF YOU EXPERIENCE A PROBLEM, PLEASE CONTACT CONSUMER SERVICE-  
✖ FIRST OR SEE YOUR WARRANTY.

- ✖ DO NOT RETURN THE HEATER TO THE ORIGINAL PLACE OF PURCHASE.
- ✖ DO NOT ATTEMPT TO OPEN THE MOTORHOUSING YOURSELF, DOING SO MAY VOID YOUR WARRANTY AND CAUSE DAMAGE TO THE PRODUCT OR PERSONAL INJURY.

### **For customer service and warranty, contact us here:**



support@greeneverhome.com



www.greeneverhome.com

When replacing the battery of the remote control, please replace it according to the assembly diagram on the back of the remote control.

Thanks for Choosing  
**GREENEVER!**

YND-JS-2A

**Contact us to get expert support.**



[support@greeneverhome.com](mailto:support@greeneverhome.com)



[www.greeneverhome.com](http://www.greeneverhome.com)