
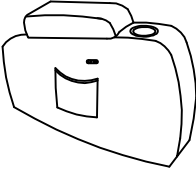
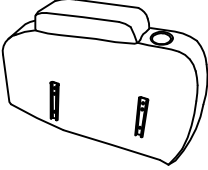
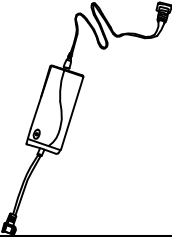
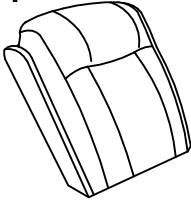


Assembly Instruction


Parts

Ax1 	R 	L 	Cx1 
Dx1 	Ex1 	Gx1 	


① INSERT THE BACK ON THE SEAT.
GENTLY PUSH DOWN UNTIL THE
BACK LOCKS INTO POSITION.
UNTIE THE CORD AT THE BOTTOM
OF THE RECLINER

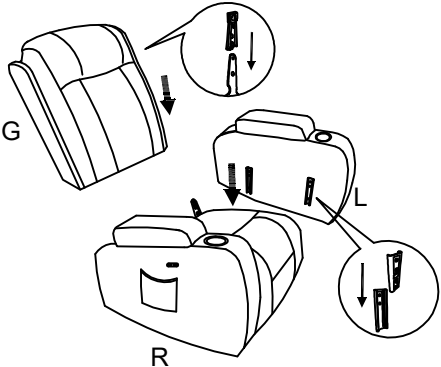

 ② CONNECT THE PLUG LINE WITH
THE SWITCHING POWER LINE
WHITE TO WHITE, RED TO RED



 
③ CONNECT THE PLUG LINE
WITH THE SWITCHING POWER
LINE







④ CONNECT THE PLUG LINE WITH
THE SWITCHING POWER LINE



⑤ THE RECLINER IS FINISHED

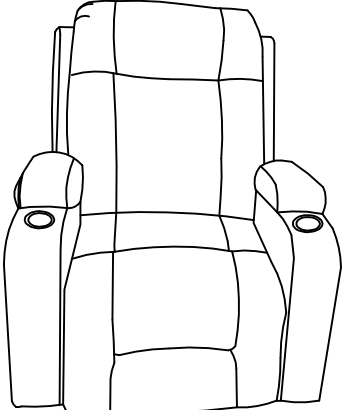

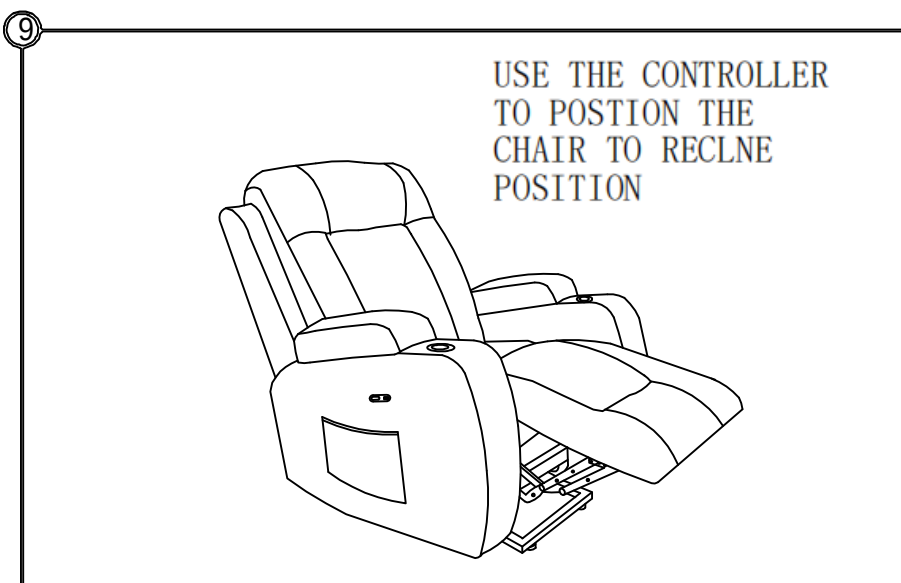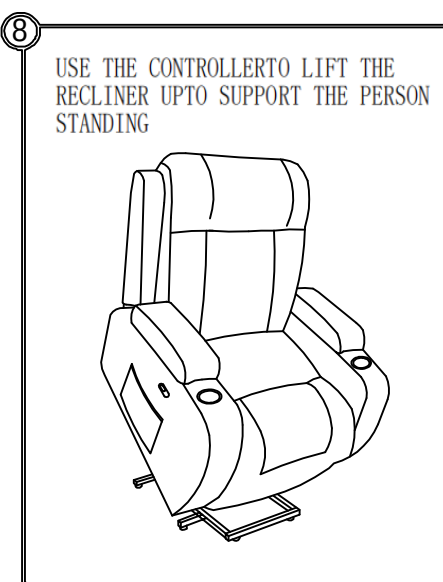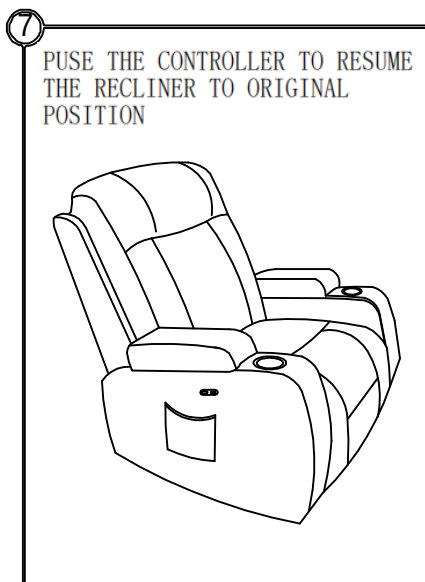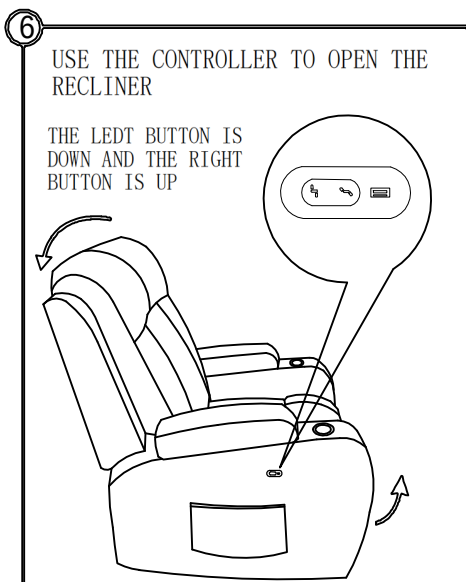

WARNING:

1. DO NOT STAND ON THIS CHAIR. DO NOT USE THIS CHAIR AS A STEP LADDER.
2. USE THIS CHAIR ONLY FOR SEATING ONE PERSON AT A TIME.
3. DO NOT USE THIS CHAIR UNLESS ALL BOLTS, SCREWS AND KNOBS ARE FIRMLY SECURED.
4. CHECK ALL BOLTS SCREWS AND KNOBS ON A REGULAR BASIS.
5. THIS CHAIR SHOULD NOT BE USED WITH DAMAGED OR MISSING PARTS. CONTACT AN AUTHORISED SERVICE PROVIDER TO REPAIR OR REPLACE PARTS DAMAGED OR MISSING.
6. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.



NOTICE: The remotes are placed in the small box under the chair bottom.
Please handle the remote control with care.