 
ASSEMBLY INSTRUCTIONS

ASSEMBLY REQUIREMENTS 1-Person Assembly 1 Hour Assembly Time (Approximate)

Tools Required (Not Provided)

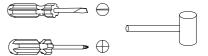

Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product.

Contact our customer service department in case there are any missing or damage parts or hardware. Replacement parts are normally shipped within 2 or 3 days.

We appreciate your business!

ASSEMBLY PREPARATION:

- 1. Remove all packaging materials, staples and packing straps from the carton.
- 2. Refer to Parts List and Hardware List and ensure parts and hardware are correct before assembly. Contact customer service for missing parts.
- 3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent scratch and damage to parts

SAFETY PRECAUTION:

- 1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
- 2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

TIPS FOR ASSEMBLY:

- 1. Allow ample room for assembly and in close proximity to where product will be placed.
- 2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
- 3. Identify all of the parts, hardware and quantities required for each step.
- 4. During assembly, do not over-tighten any fittings as this may cause damage.
- 5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
- 6. Always place the product on a flat, level surface.
- 7. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE:

- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g. hot drinks) directly onto the wood surface.
- Do not drag and pull your furniture.

This product is for indoor and household use only - not for commercial or industrial use.

ASSEMBLY INSTRUCTIONS



HARDWARE LIST

NO	DESCRIPTION		QTY	EXTRA
А		CSK SCREW M3.5 X 12MM	8	1
В		CSK SCREW M3.5 X 15MM	8	1
С		CSK SCREW M4.5 X 32MM	8	1
D	8 220	EURO SCREW M6 X 9MM	8	1
Е	emm	EURO SCREW M6 X 13MM	12	1
F	@	JCBC(W) SCREW M6 X 40MM	4	1
G		WOOD DOWEL Ø6 X 20MM	4	1
Н		WOOD DOWEL Ø8 X 25MM	2	1
J		CAM-BOLT DU319 20X5MM	8	
K		CAM-LOCK 15/15	4	
L	Æ	CAM-LOCK 15/12	4	


				EV(TD :
NO		DESCRIPTION	QTY	EXTRA
М		METAL HANDLE Ø15MM MATT BLACK 6030 = (1PC) WITH	2	
///		SCREW (M4 X 22MM) = (1PC)	SETS	
N		METAL H HANDLE MATT BLACK 3001B (114MM) = (1PC) WITH	1	
14	Summer States	SCREW (M4 X 22MM) = (2PCS)	SET	
P1	000 00 00 00000	DRAWER SLIDE CR	2	
		(350MM)		
P2	©∞00 00 00 00 00 00 00 00 00 00 00 00 00	DRAWER SLIDE CL	2	
ΓΖ	(a) 00 00 00 00 00 00 00 00 00 00 00 00 00	(350MM)		
Q1	C26 0 0830	DRAWER RUNNER DR	2	
QI	<u> </u>	(350MM)		
Q2	[7]B 0 080g	DRAWER RUNNER DL	2	
QZ	0 000	(350MM)		
R		METAL 12° BRACKET	4	
K		(1.5 X 53.5 X 50.5MM) ZB	4	
S			1	
3		ALLEN KEY M4	'	
Т		BACKPLY STOPPER	8	
		DACKFLI SIOFFER	<u> </u>	
IJ		GLUE	1	
U		GLUE	•	

^{*}EXTRA HARDWARE FOR SPARE USE.

PARTS LIST


NO.	PART NAME	QTY	NO.	PART NAME	QTY
1	LEFT PANEL	1	7	DRAWER LEFT PANEL	2
2	RIGHT PANEL	1	8	DRAWER RIGHT PANEL	2
3	TOP PANEL	1	9	DRAWER BACK PANEL	2
4	BOTTOM PANEL	1	10	DRAWER BOTTOM PANEL	2
5	TOP DRAWER FRONT PANEL	1	11	BACK PANEL	1
6	BOTTOM DRAWER FRONT PANEL	1	12	LEG	4

PARTS ASSEMBLY OVERVIEW

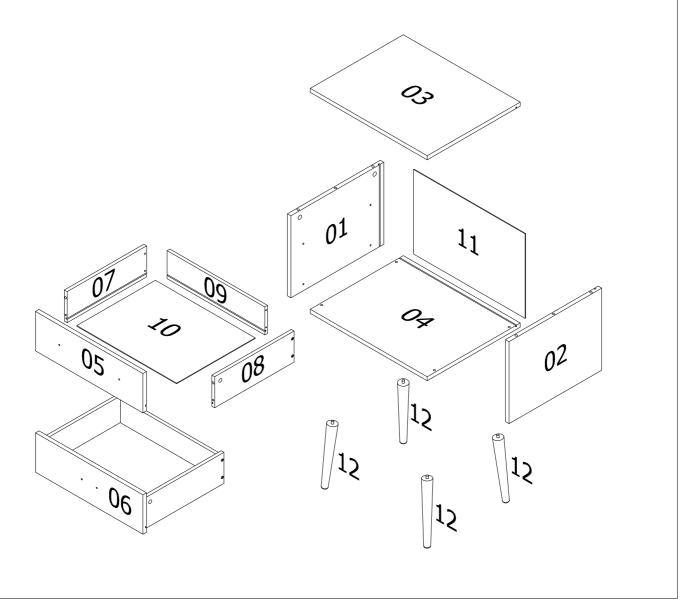


INSTRUCTION FOR CAM-BOLT & CAM-LOCK



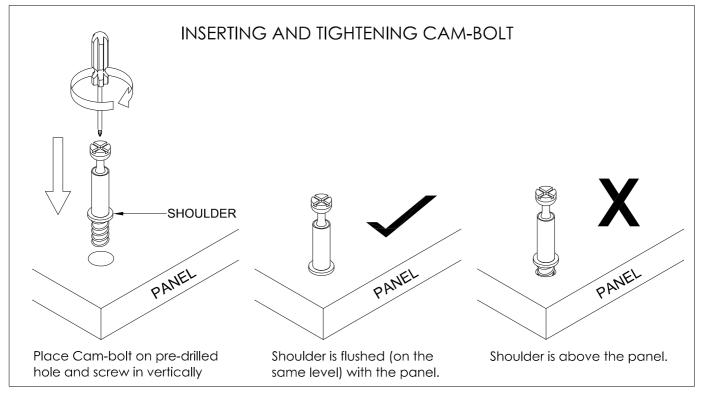


Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.

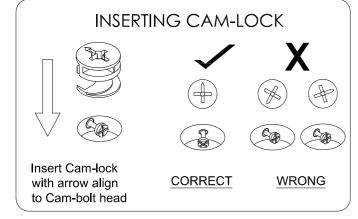


CAM-LOCK


Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

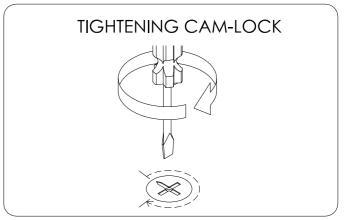


Use a Flat-head Screwdriver to turn Camlock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) — over-tightening could damage Cam-lock or/and Cam-bolt.

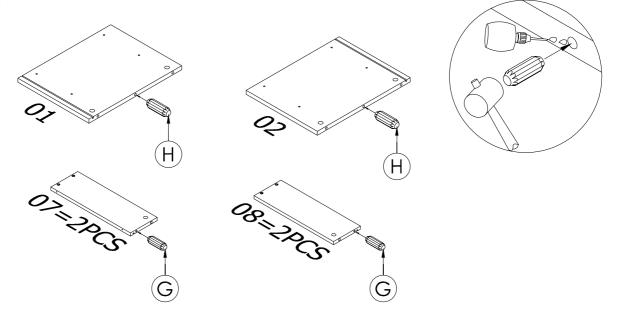

 
- a) Lay Left Panel (1), Right Panel (2), Left Drawer Panel (7) and Right Drawer Panel (8) as shown and identify the designated holes for Wood Dowels (H & G) on each part.
- b) Apply a small amount of Glue (U) into the designated hole and insert Wood Dowel (H) for (1 & 2) and Wood Dowel (G) for (7 & 8). Use a mallet or hammer to lightly tap in wood dowel if necessary.

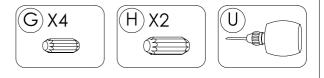

STEP 2

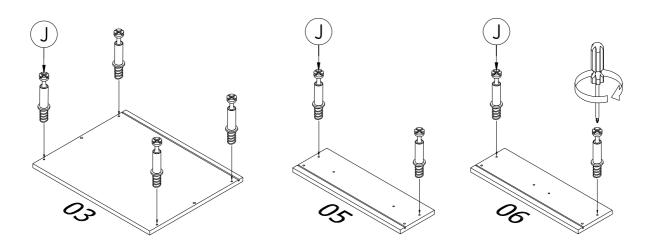


 a) Lay Top Panel (3), Top Drawer Front Panel (5) and Bottom Drawer Front Panel (6) as shown and screw in Cam-bolts (J) into the designated holes. Refer to Page 4 for instructions on screwing and tightening cambolts.

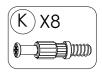


STEP 3 - Assemble Drawer

STEP 3A

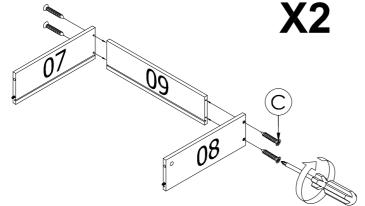


Attach Drawer Left & Right Panel (7 & 8) to Drawer Back Panel (9) as shown - note the groove on each panel is at the bottom. Use Phillips screwdriver to drive Screw (C) to fasten side panels to back panel. Do not tighten screws completely until both screws are in place in each panel.

STEP 3B

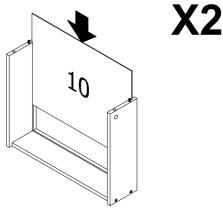



Fit Drawer Bottom Panel (10) by inserting the edge of (10) into the groove on drawer side and back panels.

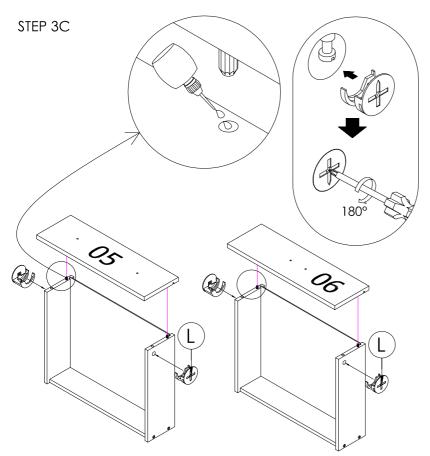

- Apply Glue (U) to designated hole for Wood Dowel on Drawer Left & Right Panel.
- Attach Drawer Front Panel (5) and (6) to Drawer Left & Right b) Panel via cam-bolt and wood dowels on the respective parts. Check that the top edge of Bottom Panel fits into the groove on (5) and (6).
- c) Insert Cam-lock (L) into designated holes on Drawer Left and Right Panel and turn clockwise to lock onto Cam-bolt. Refer to Page 4 for instructions on inserting and tightening cam-bolt.



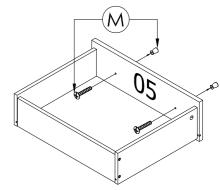

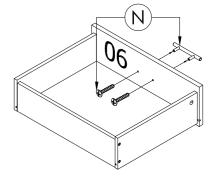

 
Affix Handle (M) and (N) to Drawer Front Panel (5) and (6), respectively, using screws included in the handle set package.











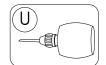


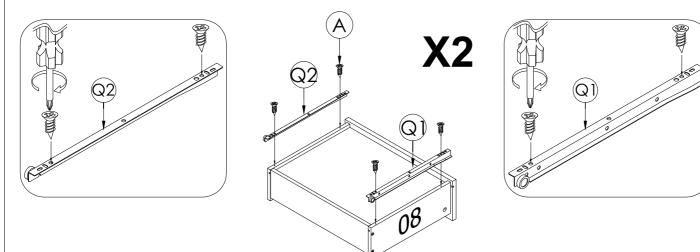


 
- a) Place completed drawer assembly from STEP 3 bottom-side up as shown.
- b) Attach Drawer Runner (Q1 & Q2) to Drawer Side Panels (8 & 7), respectively and fasten with Screws (A).

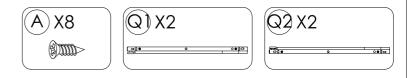


  STEP 5

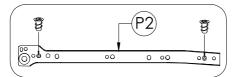


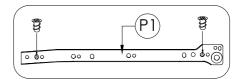

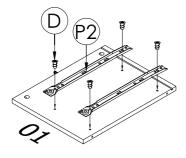


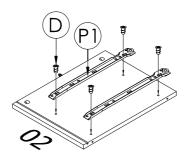


 - a) Place Left and Right Panel (1 & 2) with interior surface facing up as shown and locate pilot holes for drawer sliders.
- b) Position Drawer Slider (P2) and (P1) to align the designated screw holes to the pilot holes on Left and Right Panels, respectively.
- c) Use Screw (D) to fasten Drawer Sliders to the Panels. Do not tighten the screws completely until both screws are in place on each drawer slider.

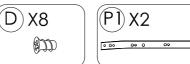



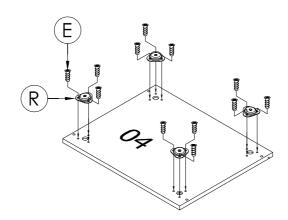

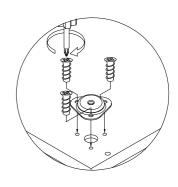


- a) Place Bottom Panel (4) as shown and align screw holes on Metal Bracket (R) to pilot holes at each corner of (4). Note: Metal Bracket should be placed with the flat, lower side on the surface of (4) refer to enlarged drawing.
- b) Use Screw (E) to fasten (R) to the Panel. Do not tighten the screws completely until all three screws are in place on each bracket.






STEP 7

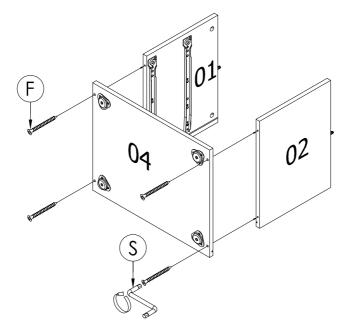

- a) Lay the parts as shown.
- b) Use Allen Key (S) to drive Screw (F) to fasten Left and Right Panel (1 & 2) to Bottom panel (4).
- c) Do not tighten (F) completely until both screws are in place on each panel.






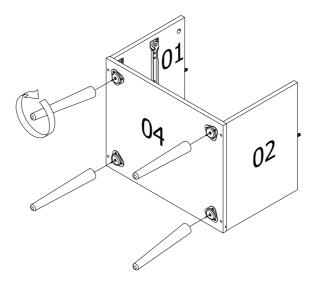


Screw in Leg (12) to metal bracket until bolt-end of leg fits snugly.

STEP 9

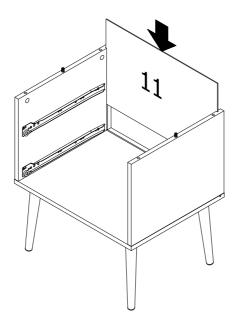


Fit Back Panel (11) by inserting the side edge of (11) into the groove on side and bottom panels.

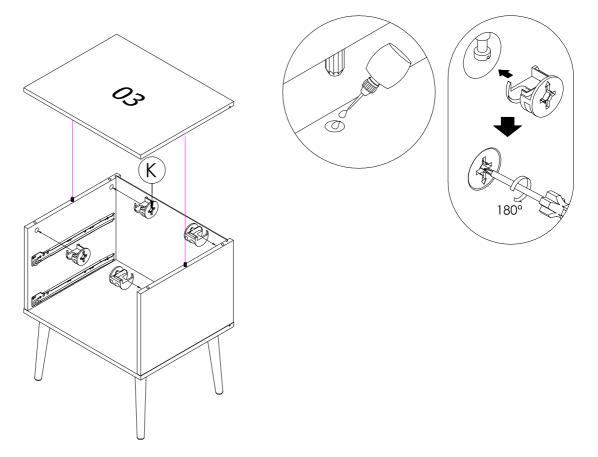


 - a) Attach Top Panel (3) to Left & Right Panel via cam-bolt and wood dowels on the respective parts. Check that the top edge of Back Panel fits into the groove on the bottom side of (3) at the rear edge.
- b) Insert Cam-lock (K) into designated holes on Left & Right panel and turn clockwise to lock onto Cam-bolt.



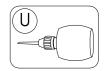



STEP 11

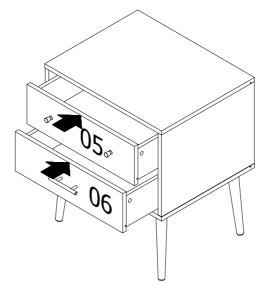

Insert the Drawers - insert lower drawer first.


Position roller on the Drawer Runner on the side of drawer to be above the roller on Drawer Slide on Left and Right Panel, and slide roller on Drawer Runner into track rail on Drawer Slide. Next, push drawer squarely and gently to allow Drawer Runner to slide into Drawer Slide.

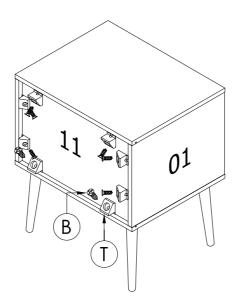

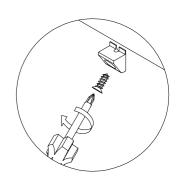

 Insert Back Stopper (T) at the locations as shown to fit into the groove and against Back Panel (11) and fasten with Screw (B).




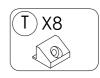

STEP 3



The assembly of the Night Stand is complete.

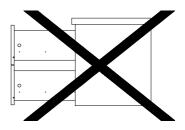

CAUTION:
PLEASE DO NOT FULLY
OPEN DRAWERS
SIMULTANEOUSLY AS IT
WILL CAUSE THE DRAWER
CHEST TO TIP OVER.