

ATTENTION



To install behind a gas ranges without a back control panel or metal plate, you must preserve a safety zone (without Smart Tiles) of 8" (20 cm) on the back wall to prevent direct exposure to open flame (see illustrations A & B). A protective stainless steel panel can be used to safely fill that area. For small appliances such as toasters, counter ovens and others, leave a gap of 2 inches (6 cm) between the Mosaik and the appliance.

