 


OUTDOOR PLAYHOUSE

Instruction manual

TLG 91045

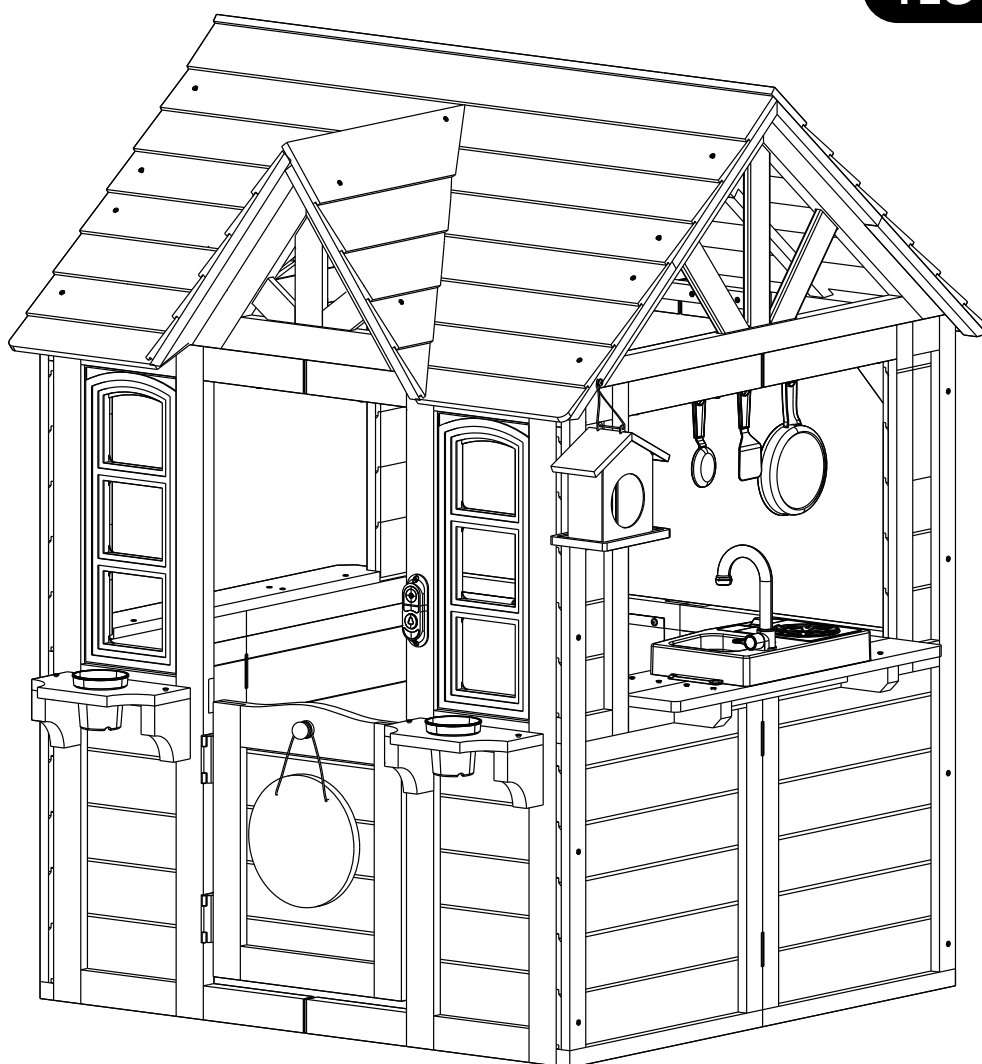

WARNING:
Adult assembly required.



WARNING:

To reduce the risk of serious injury, please read and follow these instructions. Keep and refer to instructions as needed and pass along to any future owners of this item.

E-mail Service : bierumbaby@hotmail.com

Please read and keep the manual properly, it contains important information.

WARNINGS AND SAFE PLAY INSTRUCTIONS

 **CONTINUOUS ADULT SUPERVISION REQUIRED.** Most serious injuries on playground equipment have occurred while children were unsupervised! Our products are designed to meet mandatory and voluntary safety standards. Complying with all warnings and recommendations in these instructions will reduce the risk of serious or fatal injury to children using this play system. Go over the warnings and safe play instructions regularly with your children and make certain that they understand and follow them. Remember on-site adult supervision is required for children of all ages.



WARNING

CHOKING HAZARD/SHARP EDGES & POINTS

Adult assembly required. This product contains smallparts and parts with sharp edges and points. Keep parts away from children until fully assembled.

STRANGULATION HAZARD

- **NEVER** allow children to play with ropes, clotheslines, pet leashes, cables, chains or cord-like items when using this playhouse or to attach these items to the playhouse.
- **NEVER** allow children to wear loose fitting clothing, ponchos, hoods, scarves, capes, necklaces, items with draw-strings, cords or ties when using this playhouse.
- **NEVER** allow children to wear bike or sport helmets when using this playhouse.

Failure to prohibit these items, even helmets with chin straps, increases the risk of serious injury and death to children from entanglement and strangulation.

TIP OVER HAZARD

Choose a level location for the equipment. This can reduce the likelihood of the playhouse tipping over and loose-fill surfacing materials washing away during heavy rains.

DO NOT allow children to play on the playhouse until the assembly is complete.

PLACEMENT

Place the toy on a level surface at least 2m from any structure or obstruction such as fences, garages, house, overhanging branches, laundry or electrical wires.



WARNING – Safe Play Instructions

- ✓ Dress children with well fitting and full foot enclosing footwear.
- ✓ Check for splintered, broken or cracked wood; missing, loose, or sharp edged hardware. Replace, tighten and or sand smooth as required prior to playing.
- ✓ Replace defective parts in accordance with manufacturer's instructions.
- ✗ Do not allow children to wear open toe or heel footwear like sandals, flip-flops or clogs.
- ✗ Do not permit climbing on equipment when it is wet.
- ✗ Do not permit rough play or use of equipment in a manner for which it was not intended. Standing or climbing on or jumping from the roof.

 
Instructions for Proper Maintenance

Your Playhouse System is designed and constructed of quality materials with your child's safety in mind. As with all outdoor products used by children, it will weather and wear. To maximize the enjoyment, safety and life of your Playhouse, it is important that you, the owner, properly maintain it.

Check the following at the beginning of the play season:

HARDWARE:

- ✓ Check metal parts for rust. If found, sand and repaint using a non-lead paint complying with 16 CFR 1303.
- ✓ Inspect and tighten all hardware. On wood assemblies **DO NOT OVER-TIGHTEN** as to cause crushing and splintering of wood.
- ✓ Check for sharp edges or protruding screw threads, add washers if required.

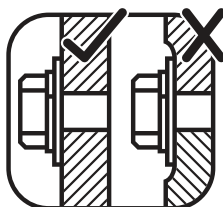

WOOD PARTS:

- ✓ Check all wood members for deterioration, structural damage and splintering. Sand down splinters and replace deteriorated wood members. As with all wood, some checking and small cracks in grain is normal.
- ✓ Applying a water repellent or stain (water-based) on a yearly basis is important maintenance to maintain maximum life and performance of the product.

Check twice a month during play season:

HARDWARE:

- ✓ Inspect for tightness. Must be firmly against, but not crushing the wood. **DO NOT OVER-TIGHTEN.** This will cause splintering of wood.
- ✓ Check for sharp edges or protruding screw threads. Add washers if required.

If you dispose of your playhouse: Please disassemble and dispose of your unit so that it does not create any unreasonable hazards at the time it is discarded. Be sure to follow your local waste ordinances.

KEYS TO ASSEMBLY SUCCESS

Tools Required

• Carpenters Level • Carpenters Square	• Claw Hammer • Tape Measure • #1 Phillips, #2 Robertson and Screwdriver	• Standard or Cordless Drill • Pencil	• Safety Glasses • Adult Helpers
--	--	---	--

Part Identification Key

On each page, you will find the parts and quantities required to complete the assembly step illustrated on that page. Here is a sample.



ABOUT OUR WOOD

Classic outdoor playhouse systems uses only premium playset lumber, ensuring the safest product for your children’s use .Although we take great care in selecting the best quality lumber available ,wood is still a product of nature and susceptible to weathering which can change the appearance of your set.

What causes weathering? Does it affect the strength of my Play System?

One of the main reasons for weathering is the effects of water (moisture); the moisture content of the wood at the surface is different than the interior of the wood. As the climate changes, moisture moves in or out of the wood, causing tension which can result in checking and or warping. You can expect the following due to weathering. These changes will not affect the strength of the product:

- 1. **Checking** is surface cracks in the wood along the grain. A post (4” x 4”) will experience more checking than a board (1” x 4”) because the surface and interior moisture content will vary more widely than in thinner wood.
- 2. **Warping** results from any distortion (twisting, cupping) from the original plane of the board and often happens from rapid wetting and drying of the wood.
- 3. **Fading** happens as a natural change in the wood color as it is exposed to sun-light and will turn a grey over time.

How can I reduce the amount of weathering to my Play System?

At the factory we have coated the wood with a water repellent or stain. This coating decreases the amount of water absorption during rain or snow thus decreasing the tension in the wood. Sunlight will break down the coating, so we recommend applying a water repellent or stain on a yearly basis (see your local stain and paint supplier for a recommended product).

Most weathering is just the normal result of nature and will not affect safe play and enjoyment for your child.

BATTERY WARNINGS



DANGER

Risk of explosion!

Risk of explosion if the battery is replaced by an incorrect type.

Please strictly observe the following use warnings, misuse or abuse may result in leakage, rupture, or fire, and may cause personal injury.

- Do not mix old and new batteries.
- Do not mix different types of batteries.
- Insert batteries with the correct polarity.
- Remove exhausted batteries from the toy.
- Follow the battery manufacturer's warnings and recommendations.
- Never attempt to recharge primary batteries.
- Never short circuit batteries as this may lead to high temperatures, leakage, or rupture.
- Never heat batteries to revive them.
- Remember to switch off the toy after use.
- Never attempt to disassemble, crush, puncture, or open batteries.
- Keep batteries out of the reach of children, especially small batteries that could be easily ingested.
- Clean the battery contacts and also those of the device before battery installation.
- Remove batteries from the toy that is not to be used for an extended period. Remove used batteries promptly.

BEFORE FIRST USE



DANGER

 
Risk of suffocation!

Keep any packaging materials away from children and pets-these materials are a potential source of danger, e.g. suffocation.


- Remove all the packing materials.
- Remove and review all components before starting assembly.
- Check the toy for transport damages.

PARTS


- 1

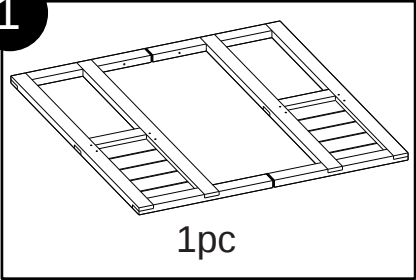


1pc
- 2

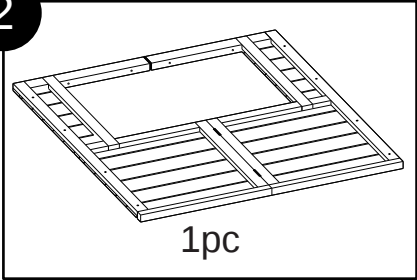 


1pc
- 3

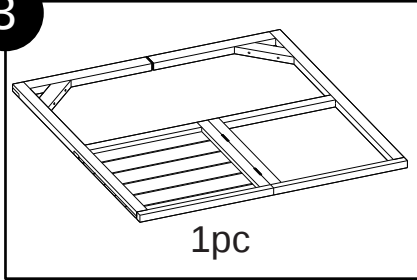 


1pc
- 4

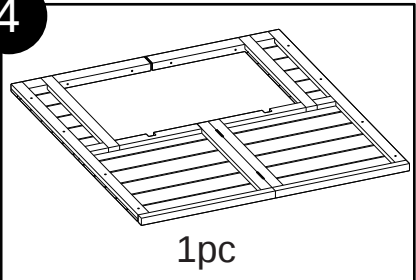 


1pc
- 5

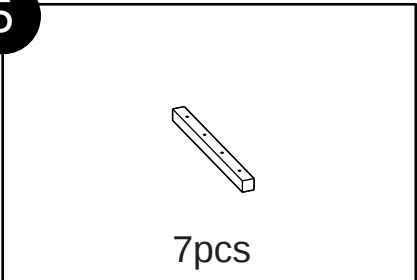 


7pcs
- 6

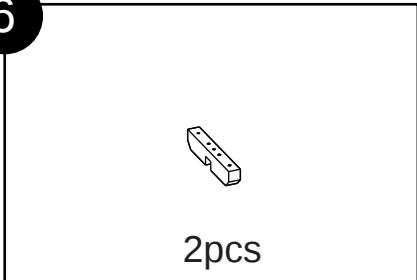 


2pcs
- 7

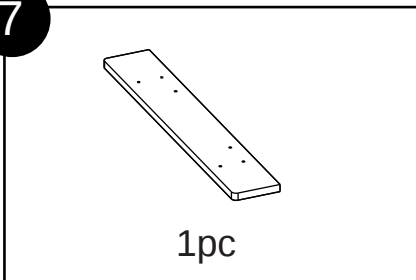 


1pc
- 8

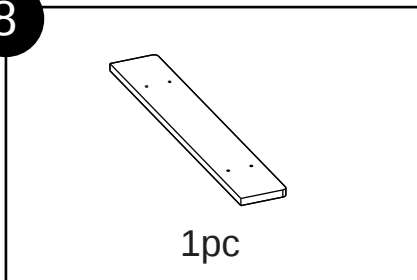 


1pc
- 9

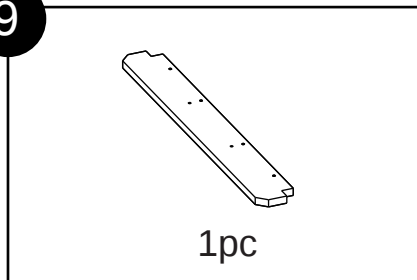 


1pc
- 10

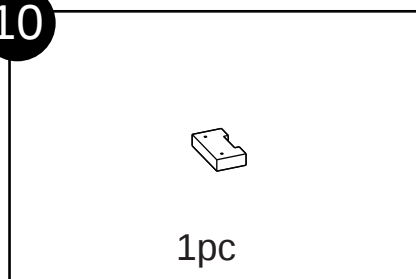 


1pc
- 11

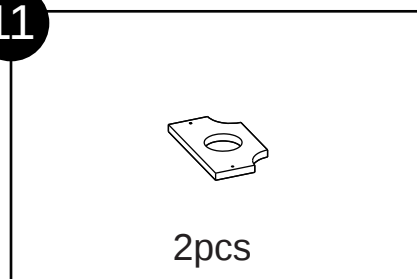 


2pcs
- 12

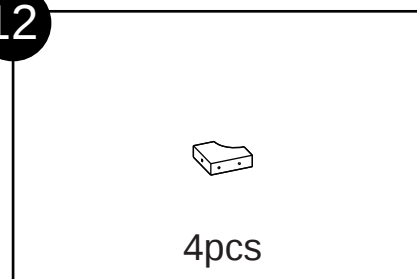 


4pcs
- 13

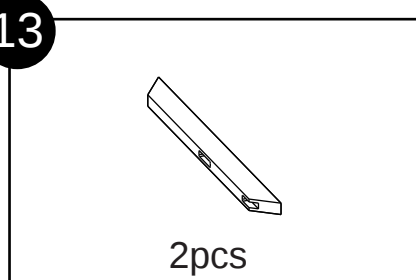 

2pcs
- 14

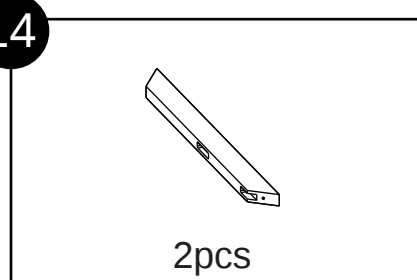 

2pcs
- 15

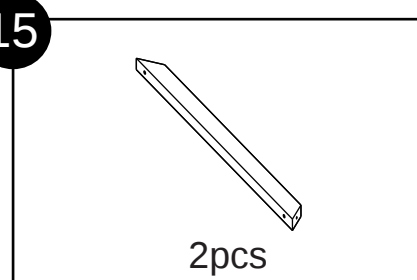 

2pcs

PARTS

 
- 16




2pcs
- 17




4pcs
- 18

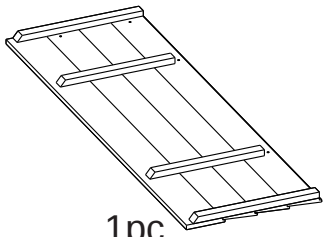


1pc
- 19

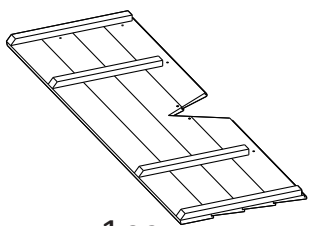 


1pc
- 20

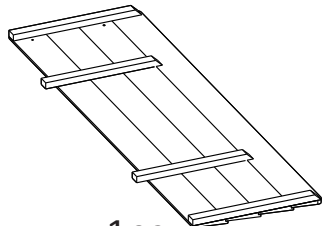 


1pc
- 21

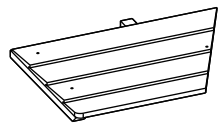 


1pc
- 22

 


1pc
- 23

 


1pc
- 24

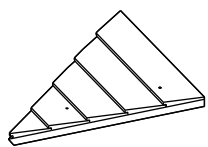 


1pc
- 25

 


1pc
- 26

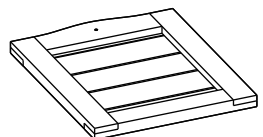 


1pc
- 27

 

1pc
- 28

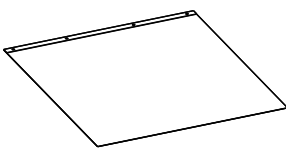 

1pc
- 29

 


1pc
- 30



1set


PARTS

 WJ0209




1set

 WJ0202




2pcs

 SJ0109

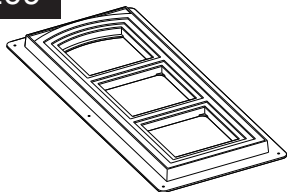


2pcs

 SJ0907

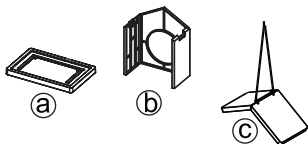


1set

 SJ1101

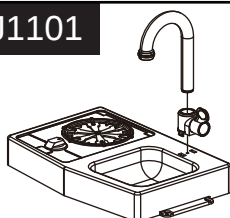

1pc

 SJ1913



1pc

SJ1605



1pc

SJ1609



1pc

SJ1612



1pc

SJ0957



2pcs

SJ0903



1pc

MZ0104



1pc

HARDWARE

TD13



(13mm)

5pcs

TX16



(16mm)

34pcs

TX22



(22mm)

2pcs

P23



(23mm)

4pcs

TXW40



(40mm)

1pc

P35



(35mm)

43pcs

 
P45



(45mm)

58pcs


P62



(62mm)

6pcs

 
P75



(75mm)

10pcs

 
B4




1pc


INSTALLATION STEPS

 
STEP 1


P45 X8

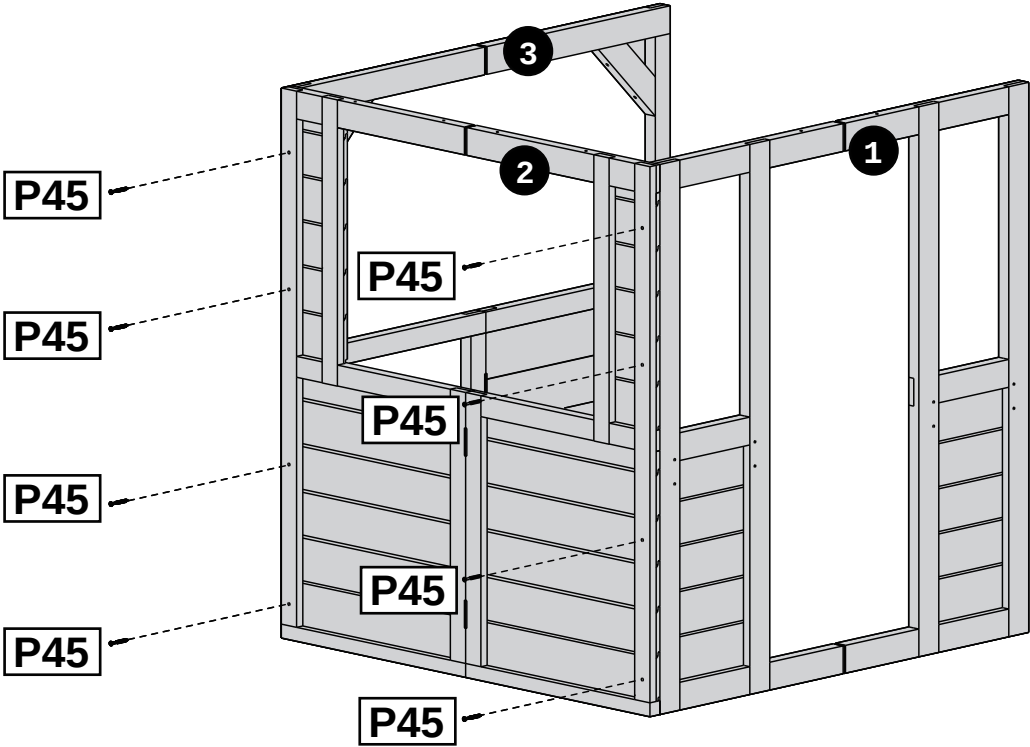 

 
STEP 2



P45 X8

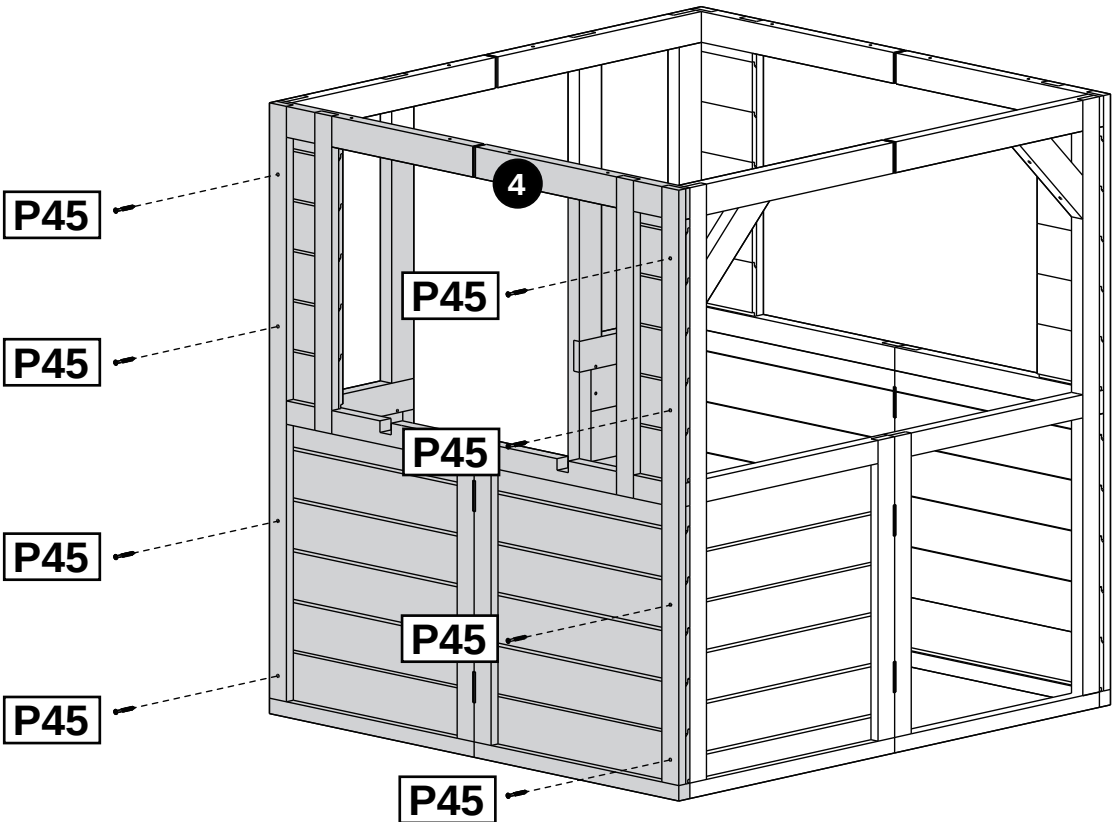 


INSTALLATION STEPS

 
STEP 3


P45 X8

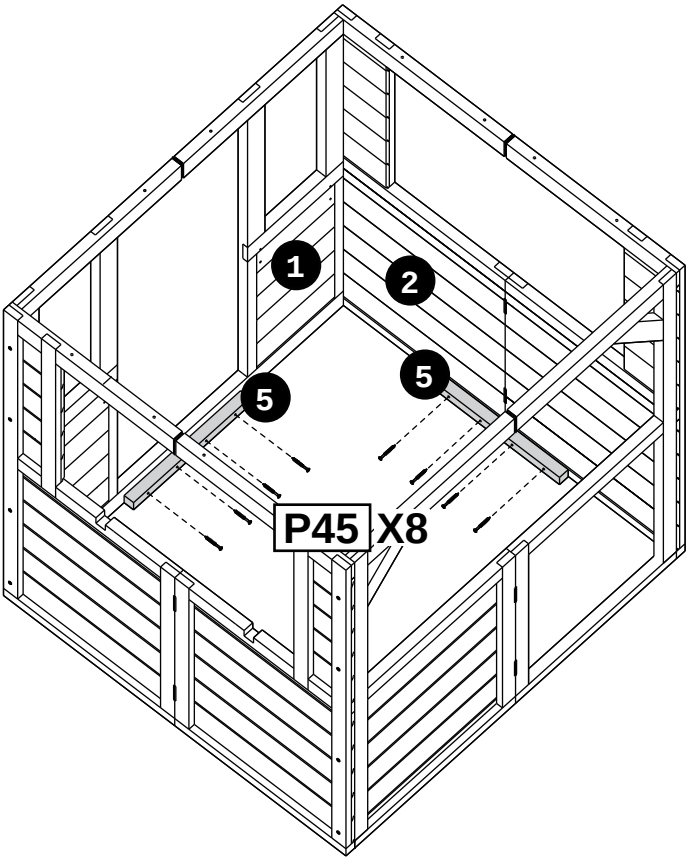 

 
STEP 4


P45 X12

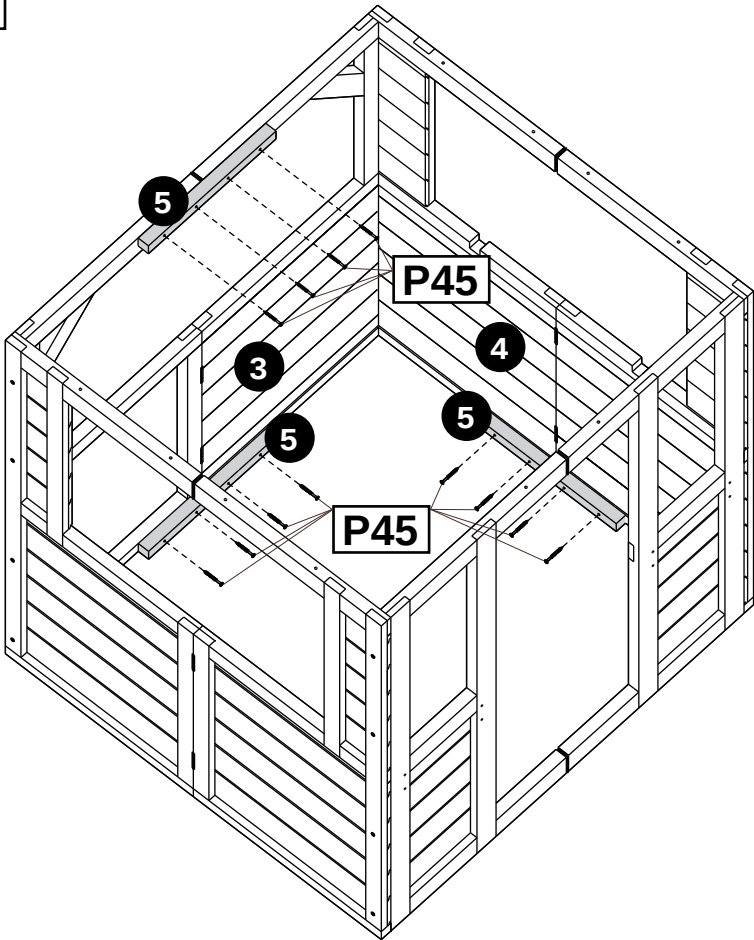 


INSTALLATION STEPS

 STEP 5


 **P45** X4

  **P35** X2

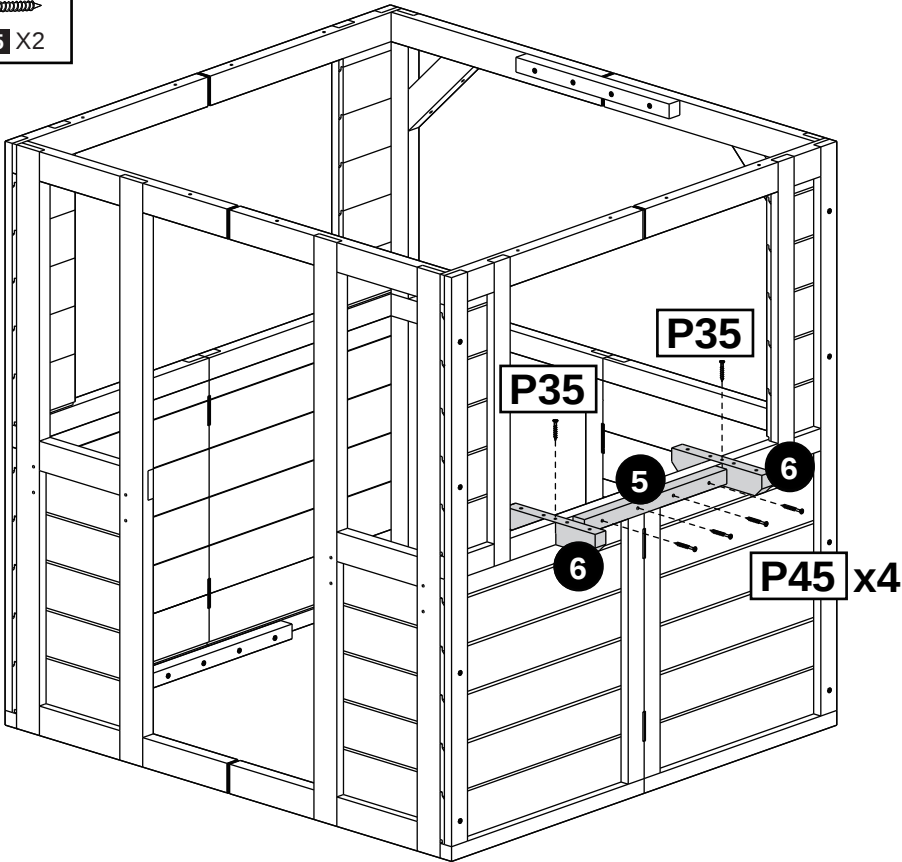




STEP 6

  **P35** X10

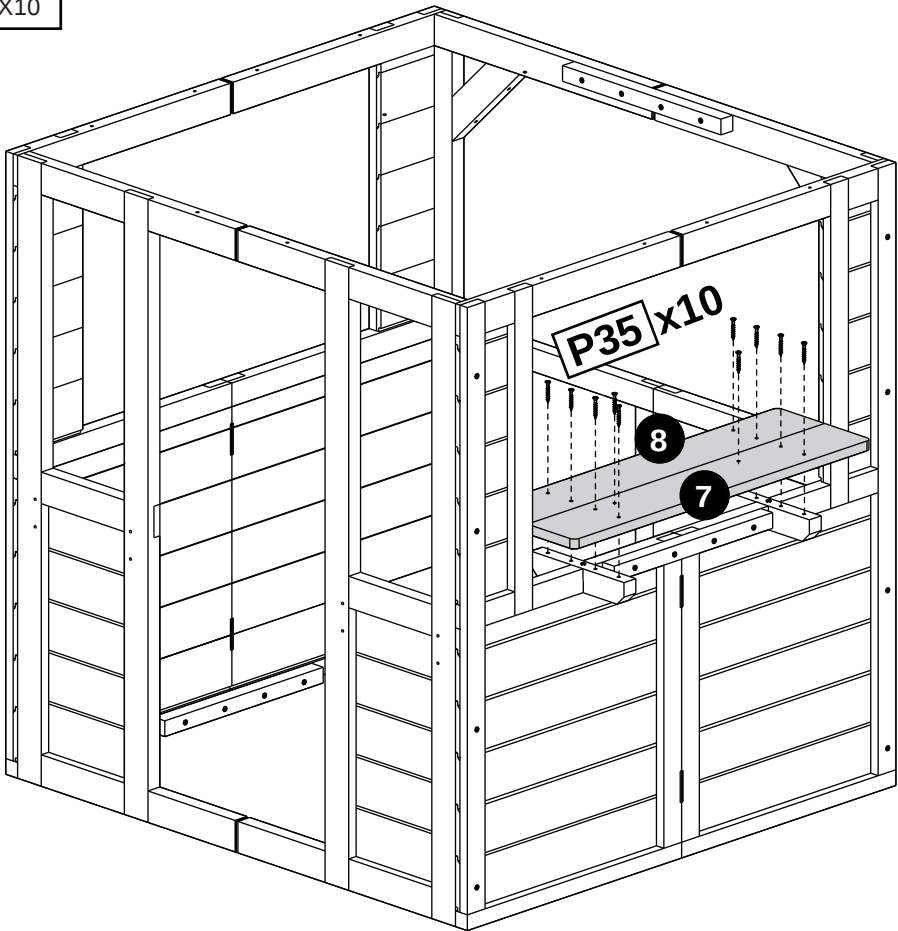


INSTALLATION STEPS

   
STEP 7

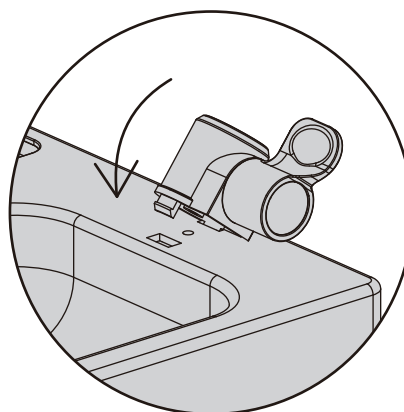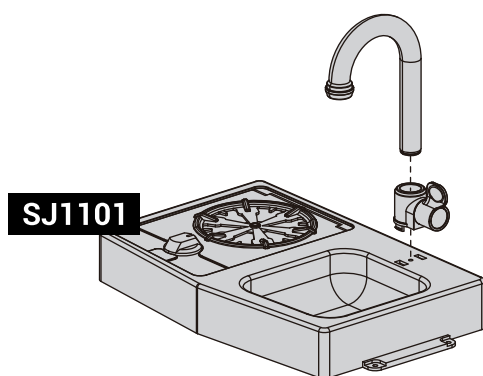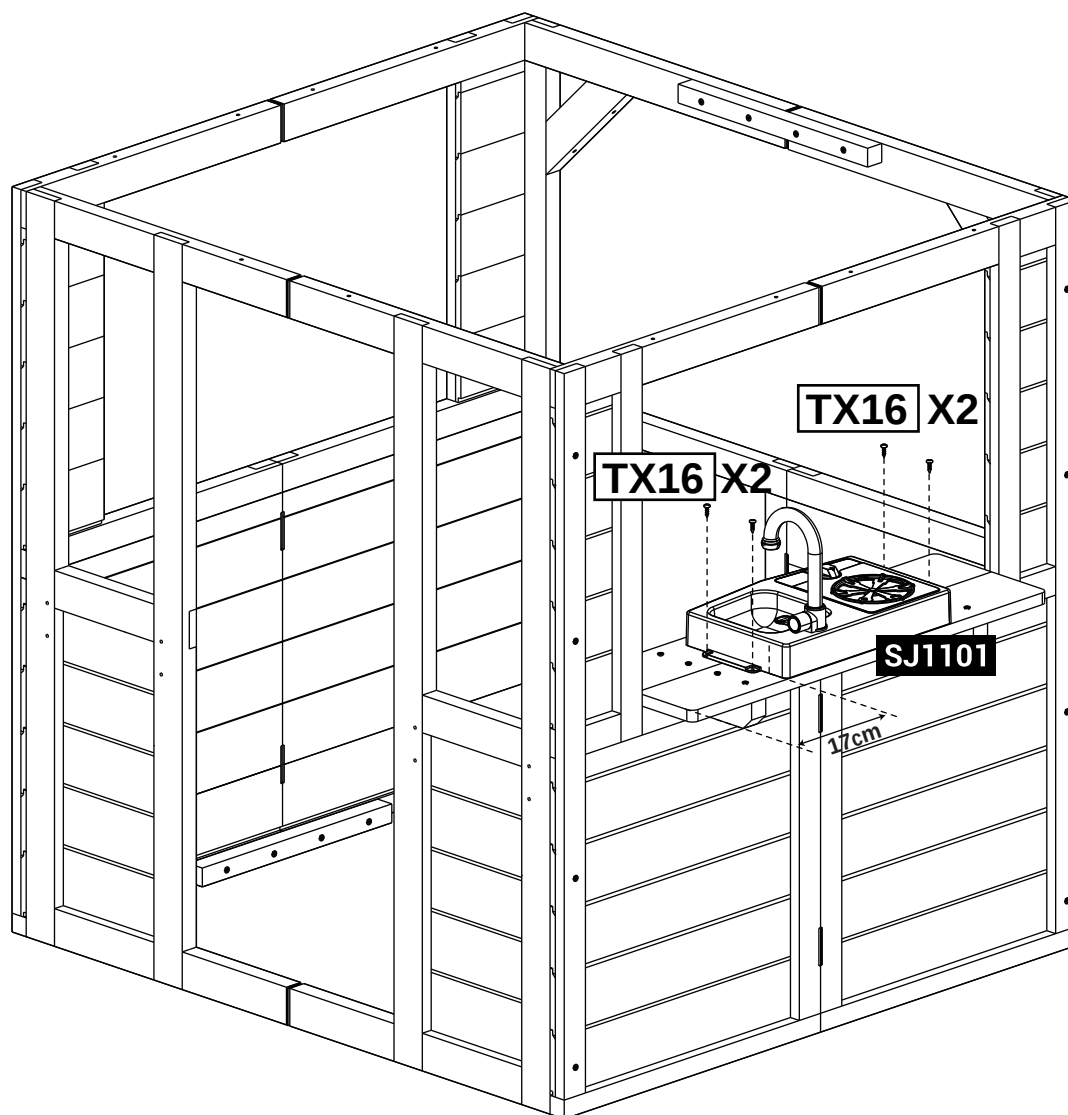

INSTALLATION STEPS

 
STEP 8


P45 X4

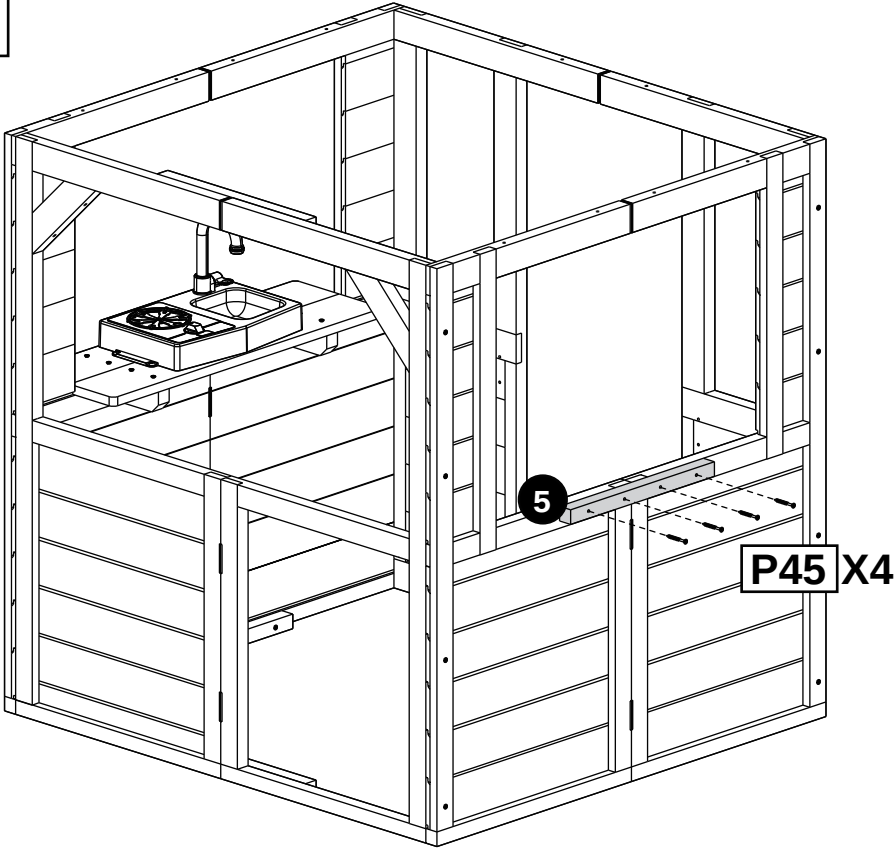 

STEP 9

 

P35 X6

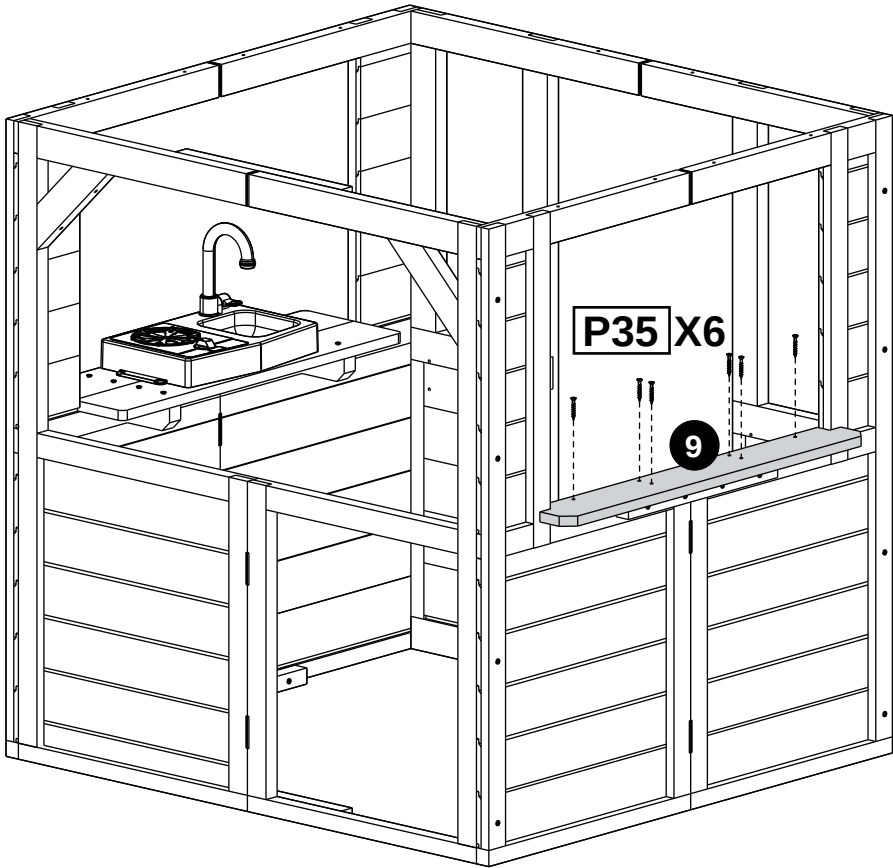

INSTALLATION STEPS


STEP 10

 
TX16 X12

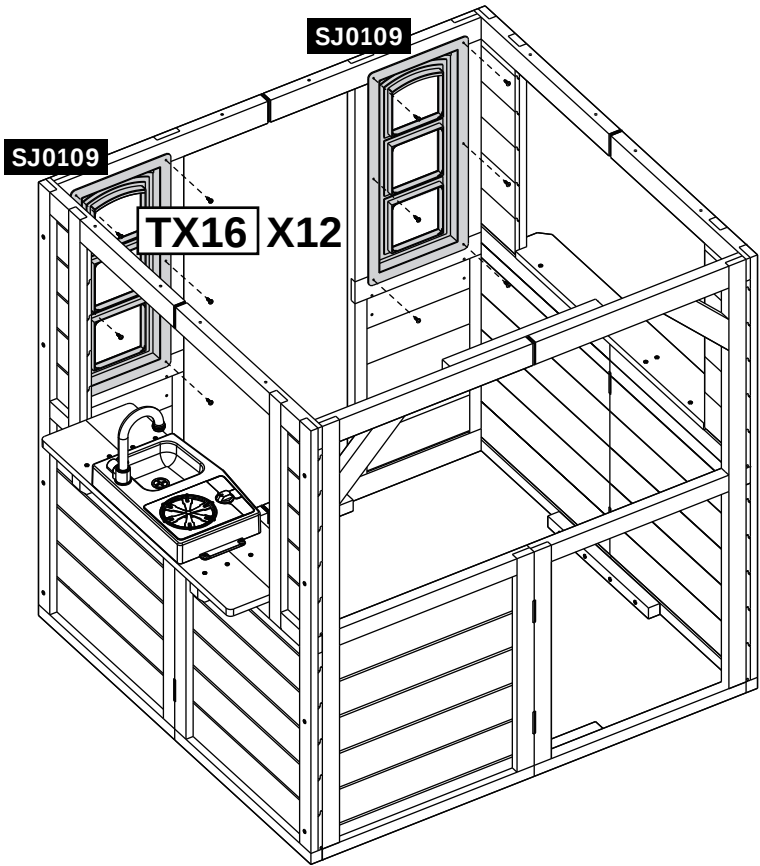

STEP 11

 

TD13 X4

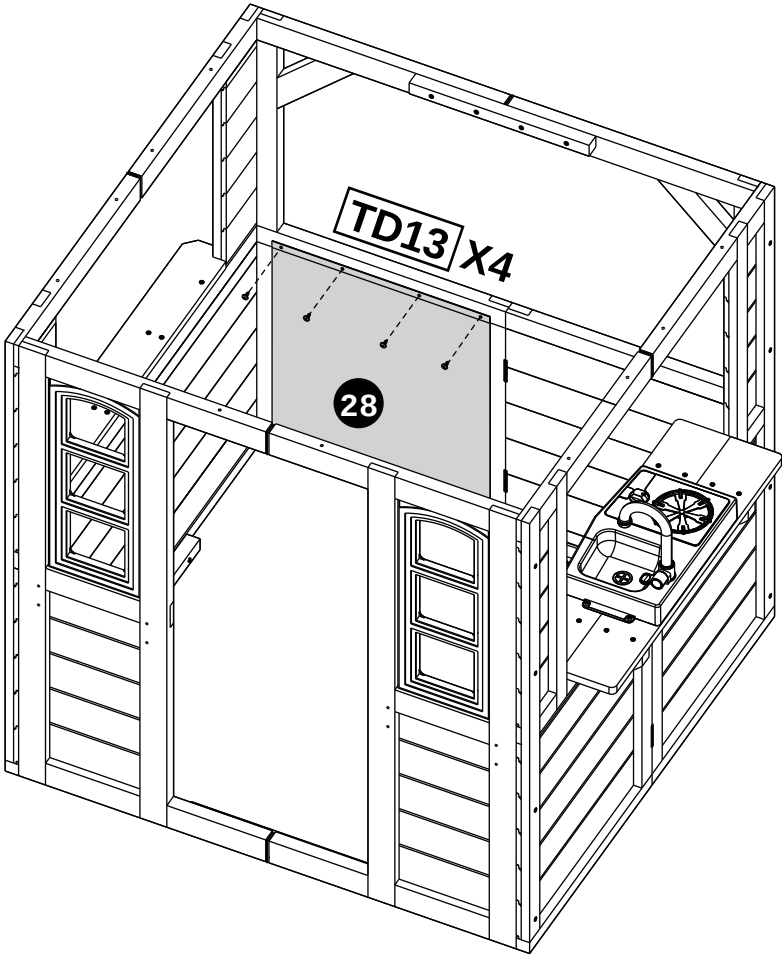

INSTALLATION STEPS


STEP 12

 

P35 X4

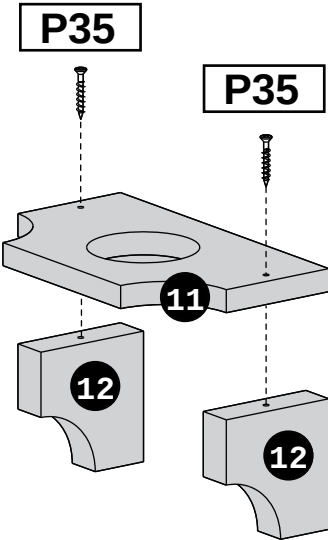

NOTE: Complete this step twice.


 
STEP 13


P45 X8

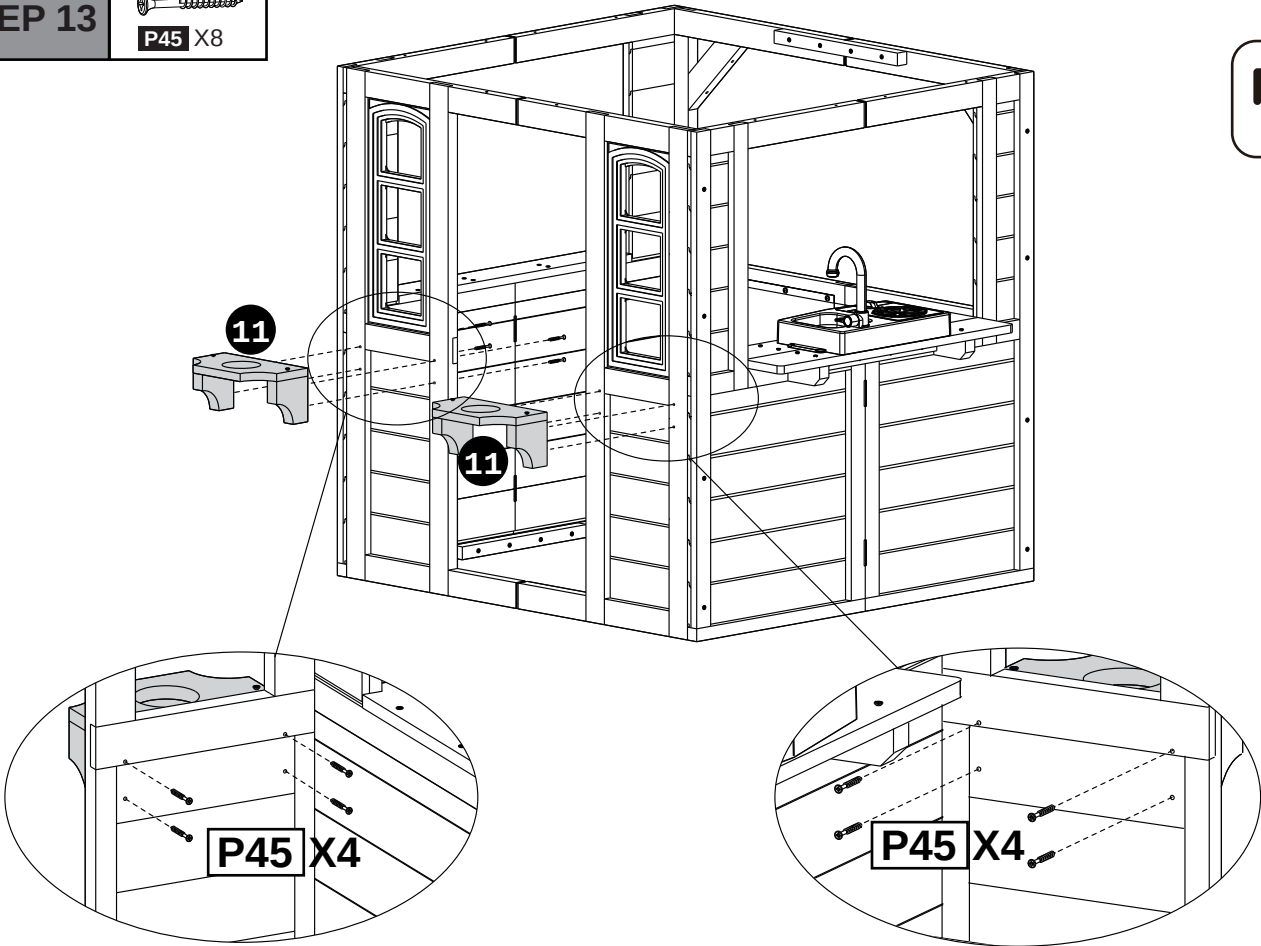 


INSTALLATION STEPS

  STEP 14

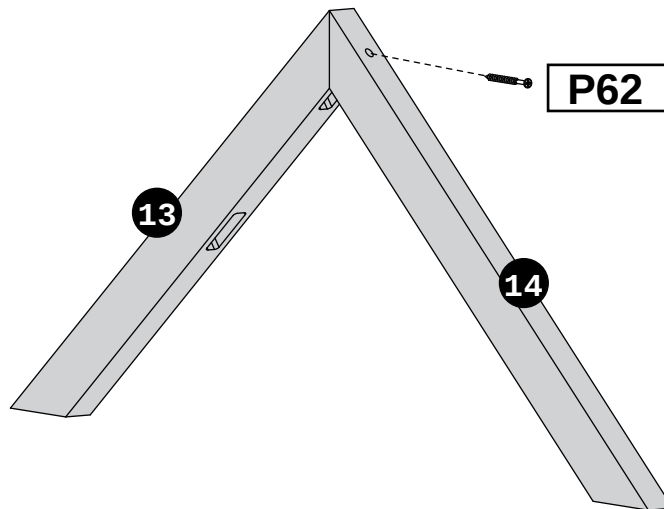

NOTE: Complete this step twice.

 
STEP 15

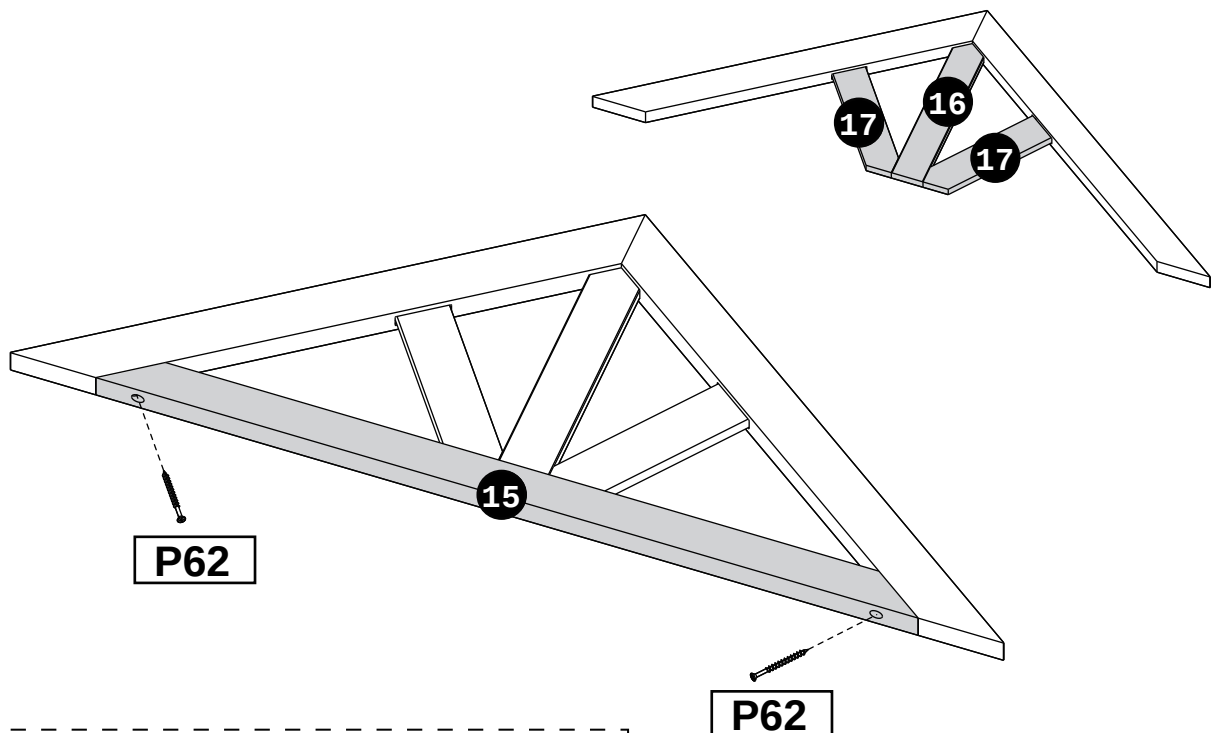


NOTE: Complete this step twice.


INSTALLATION STEPS

 
STEP 16


P75 X4

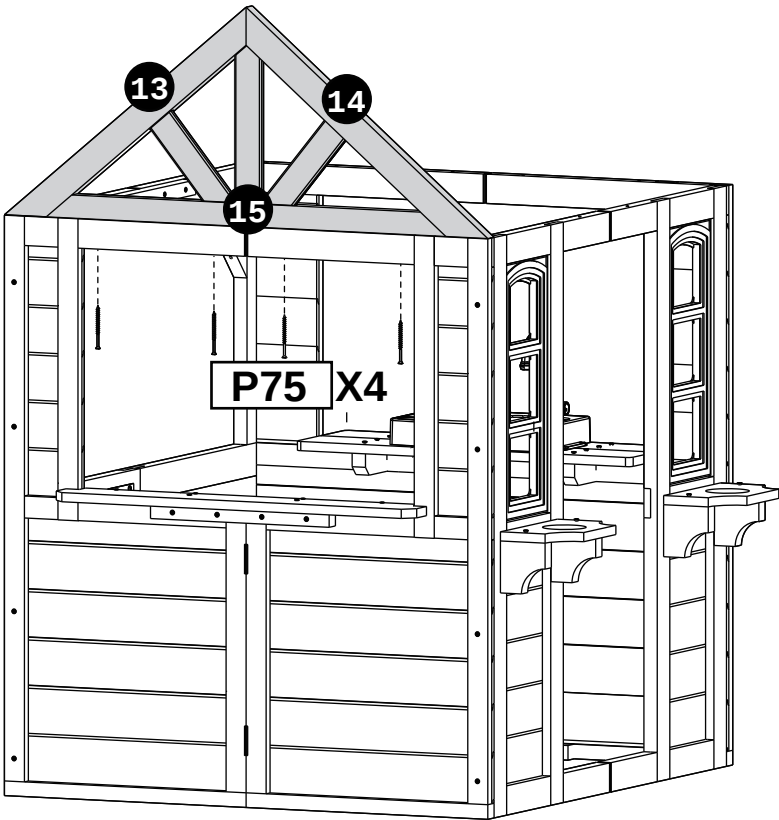 

 STEP 17


P75 X4

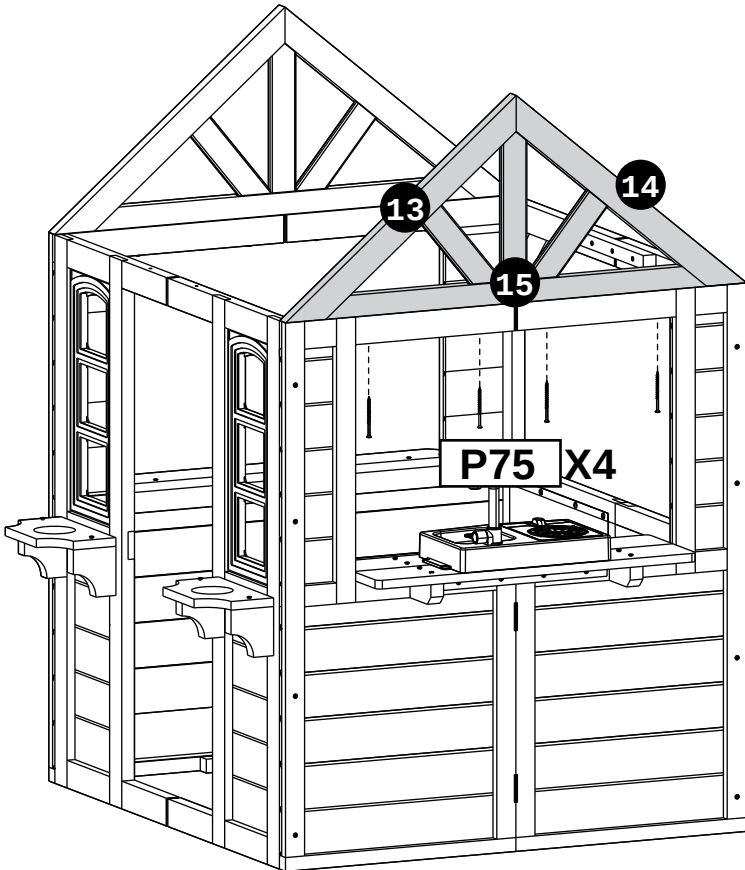 


INSTALLATION STEPS

STEP 18



 P35 X4

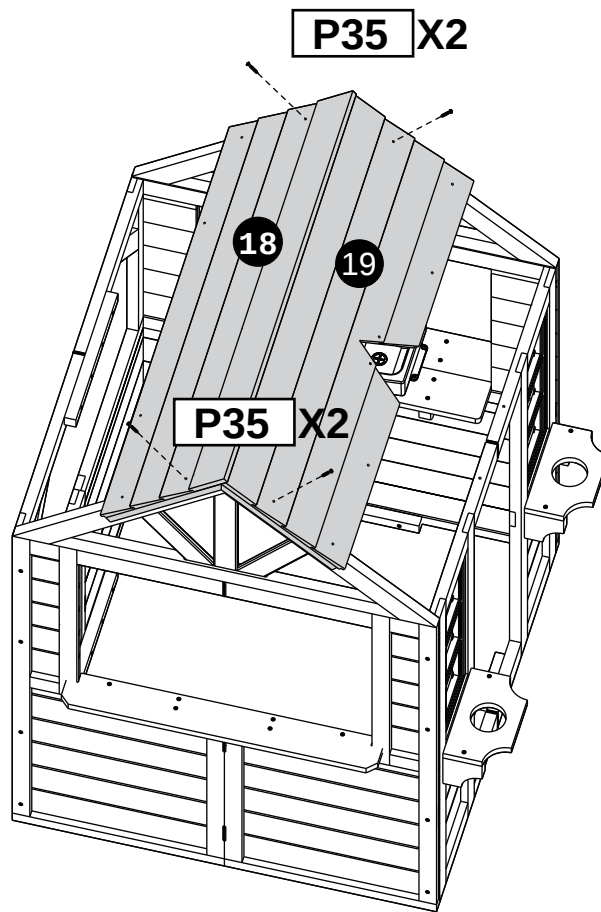


STEP 19



P35 X12




 
P23 X4

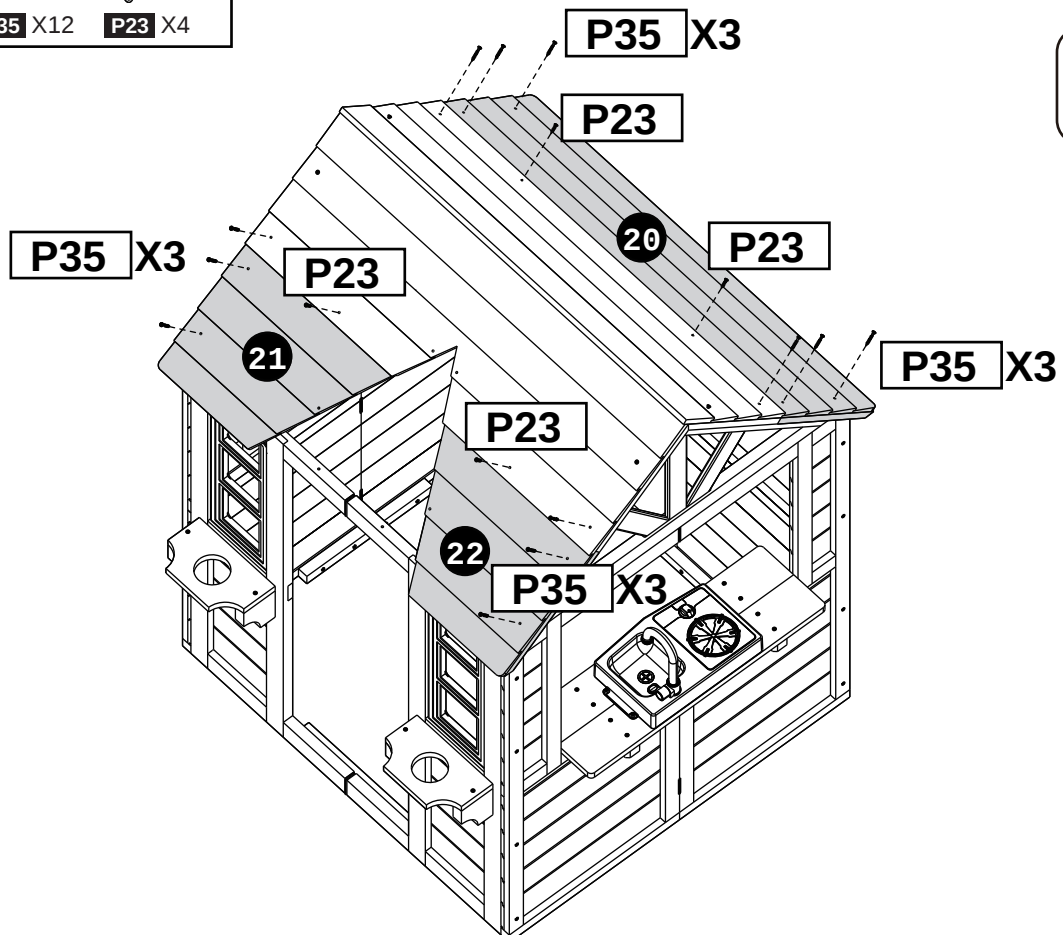


INSTALLATION STEPS

 STEP 20



P75 X2

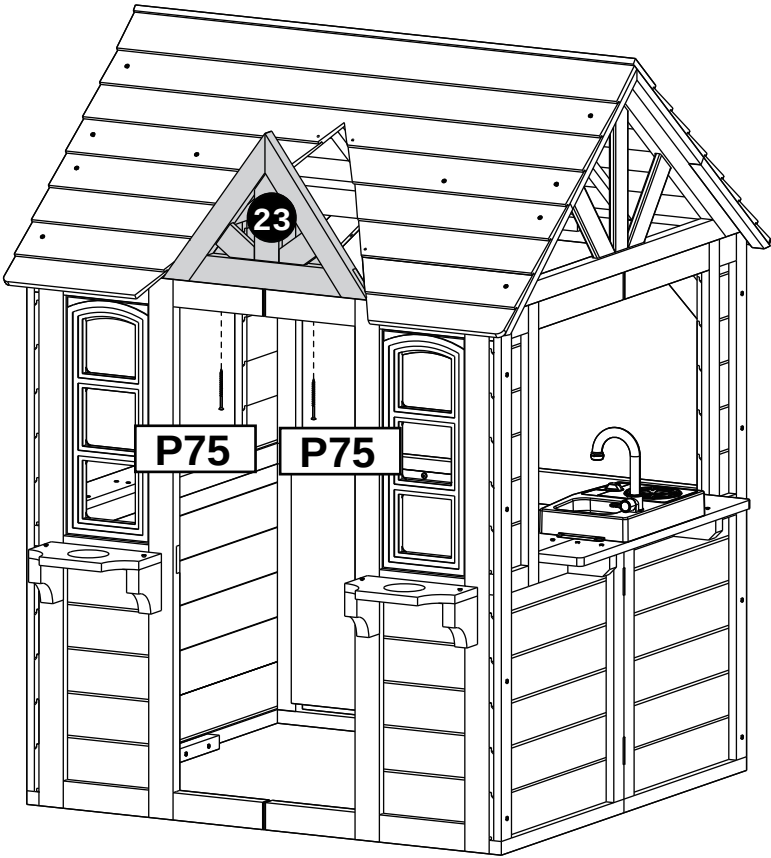 

 STEP 21


P45 X4

 

P35 X1

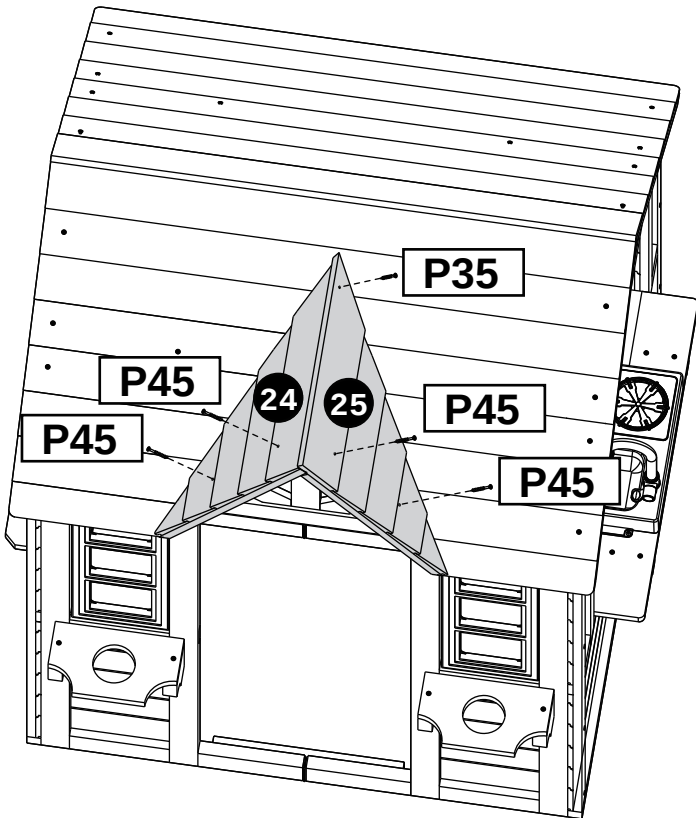

INSTALLATION STEPS

STEP 22

 

P35 X4

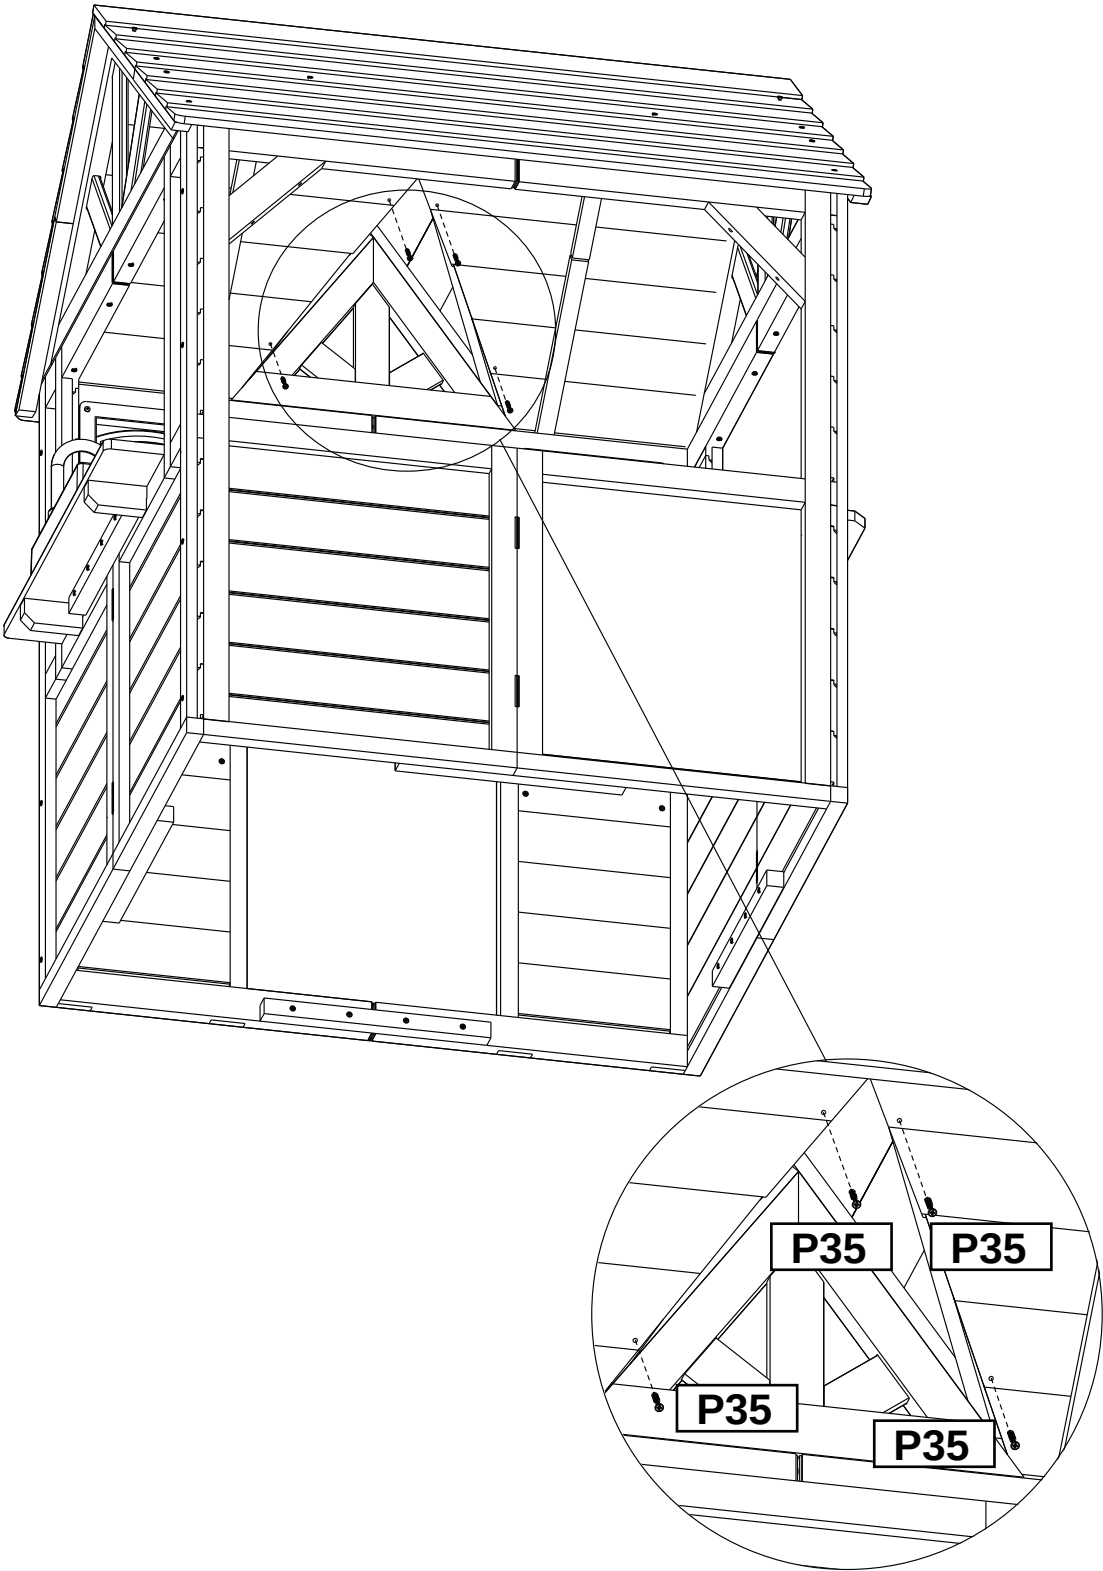


INSTALLATION STEPS


STEP 23

 
TX16 X8

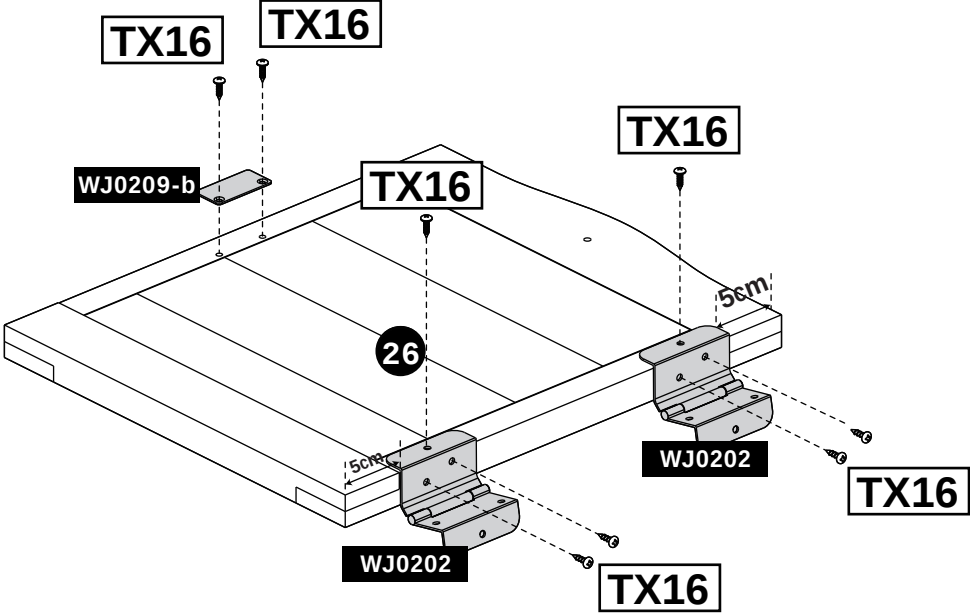

 STEP 24





TXW40 X1

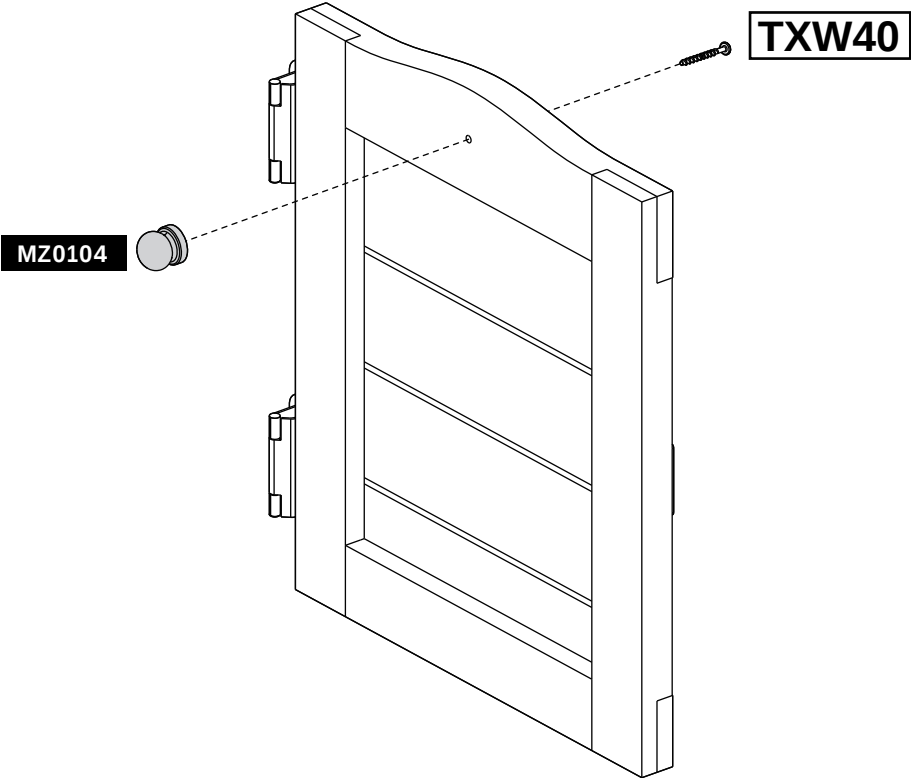 

INSTALLATION STEPS


STEP 25

   
TX16 X6

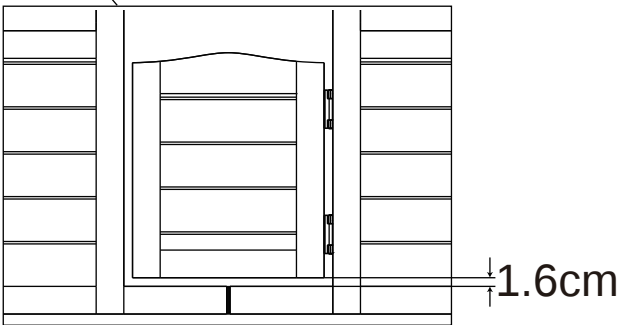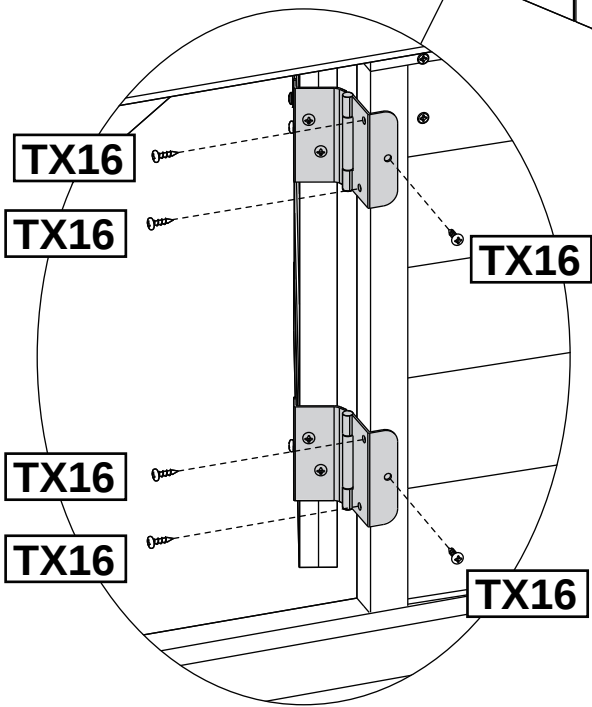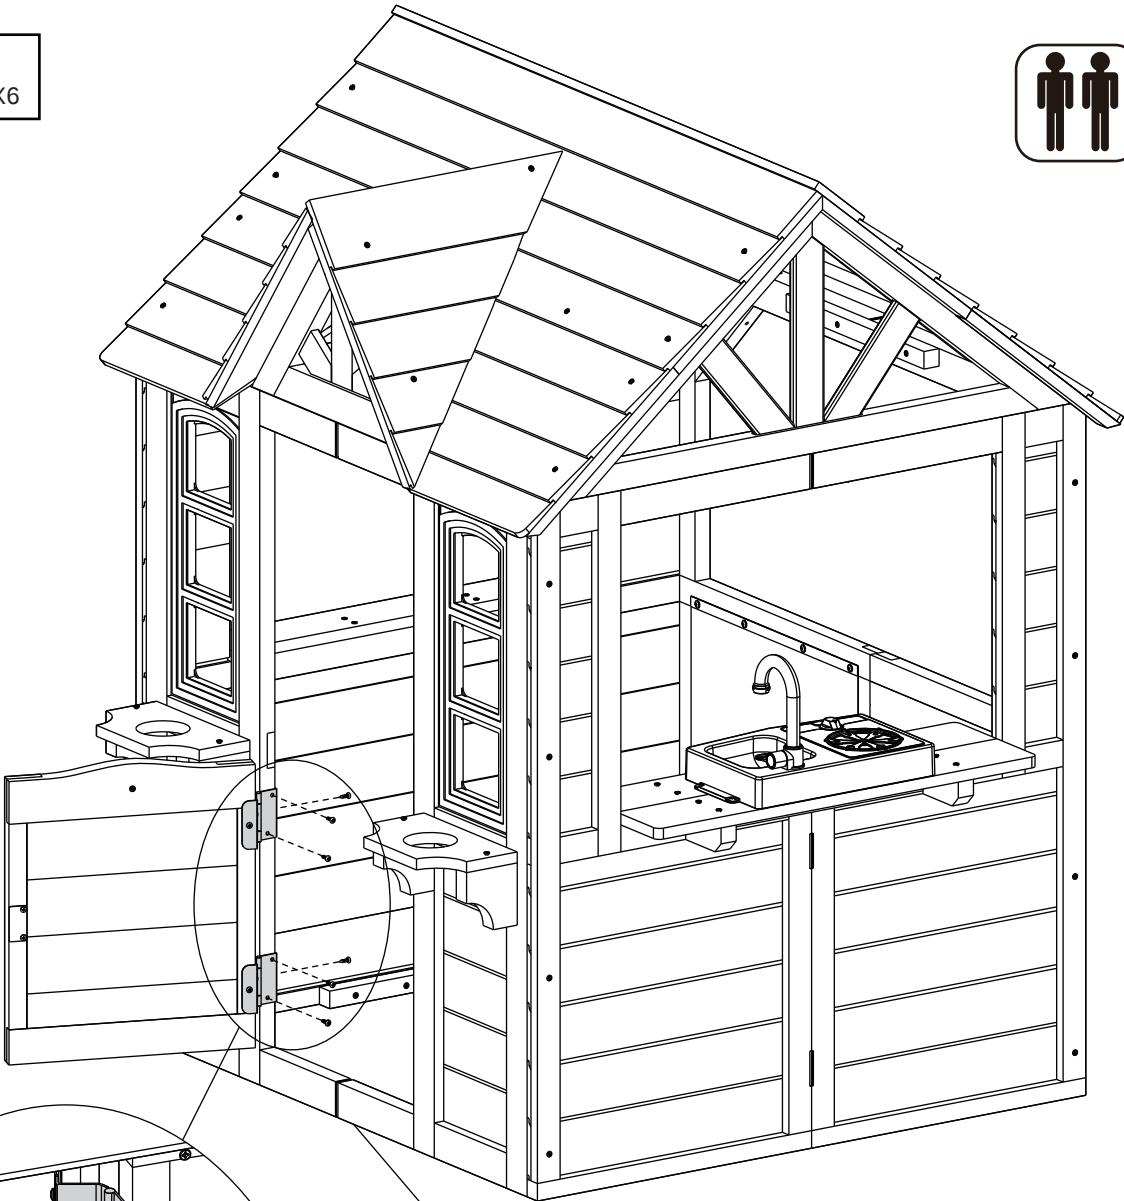




INSTALLATION STEPS

 STEP 26



TX22 X2

   
P45 X2

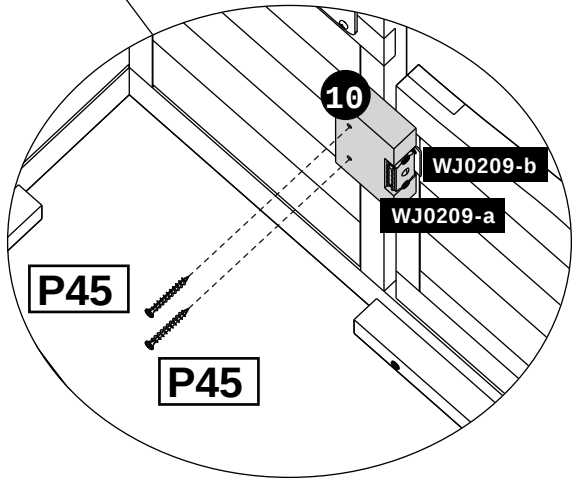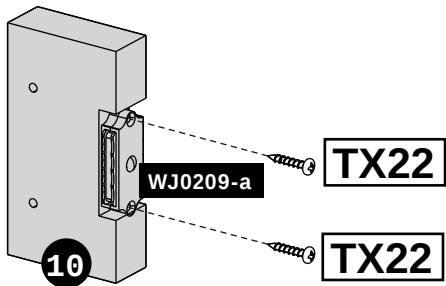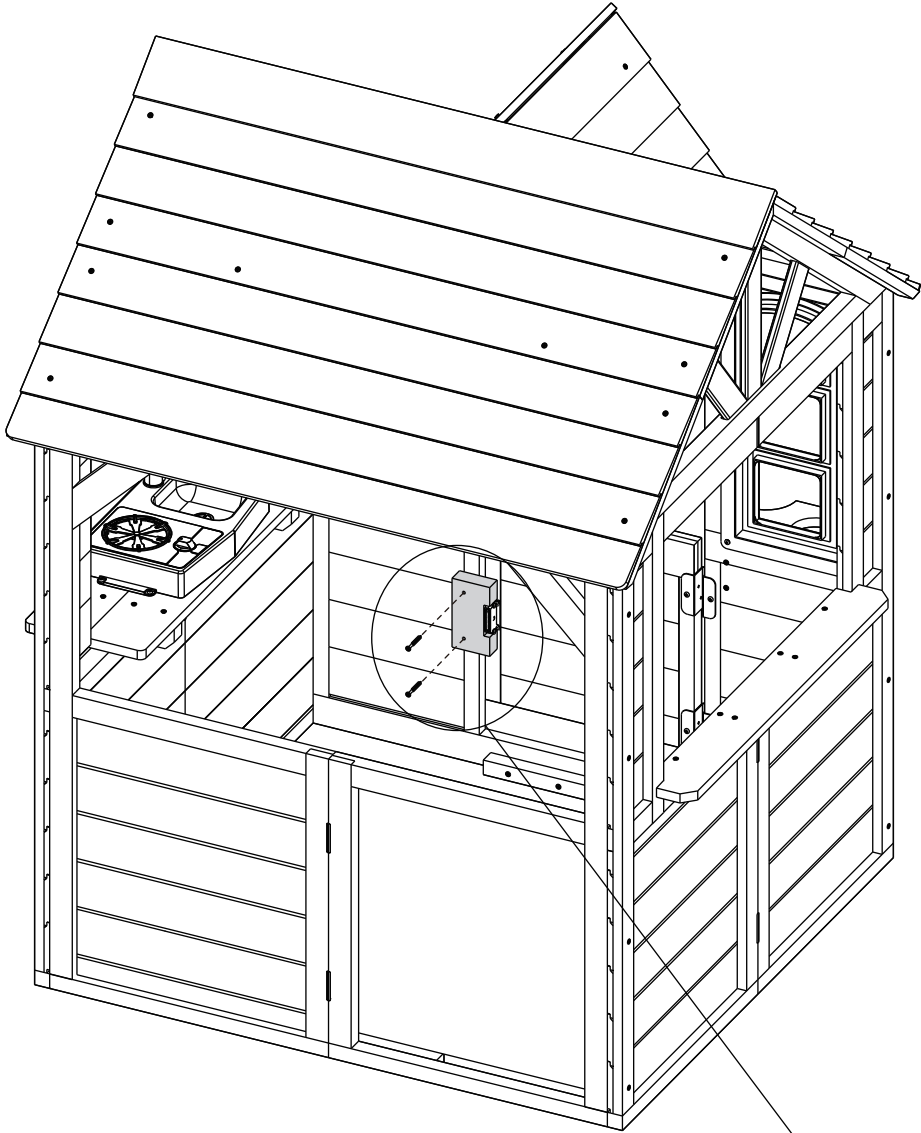



INSTALLATION STEPS

STEP 27

 
TX16 X2

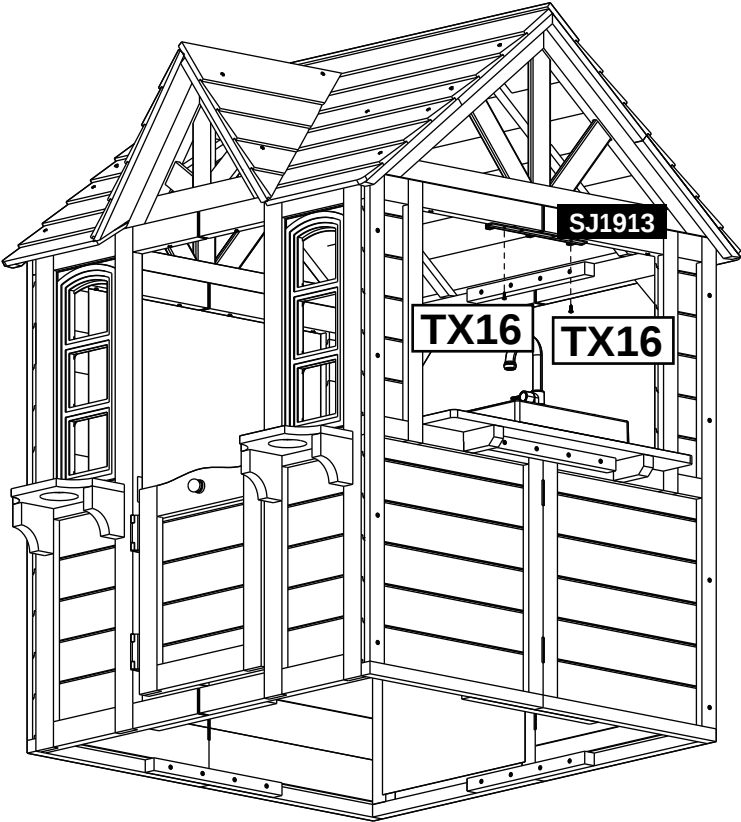


  STEP 28

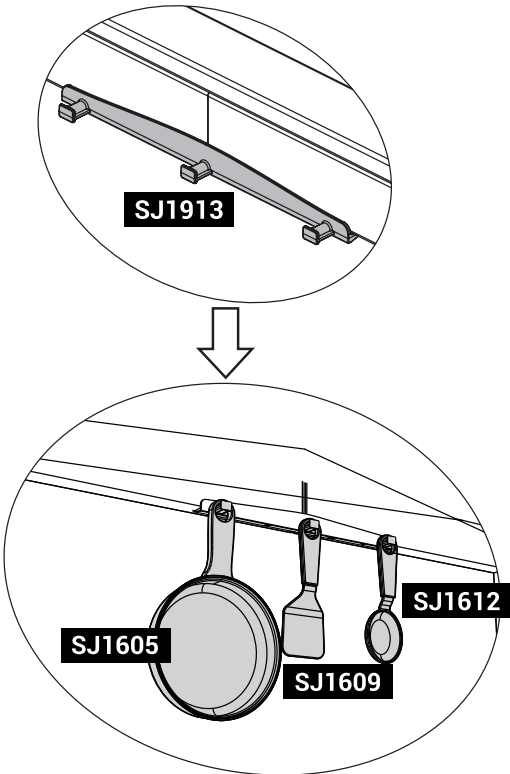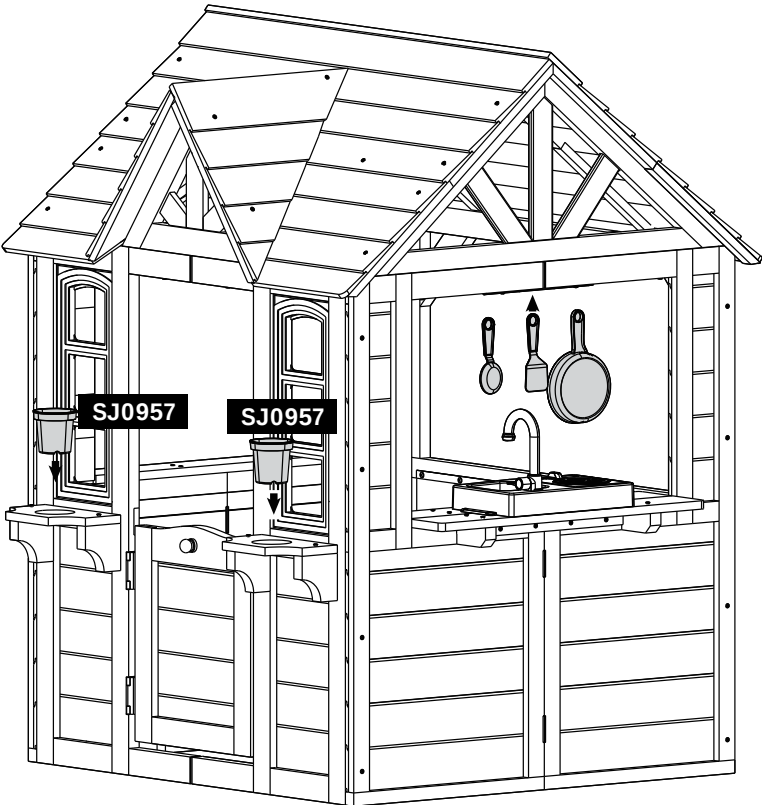


INSTALLATION STEPS

 STEP 29

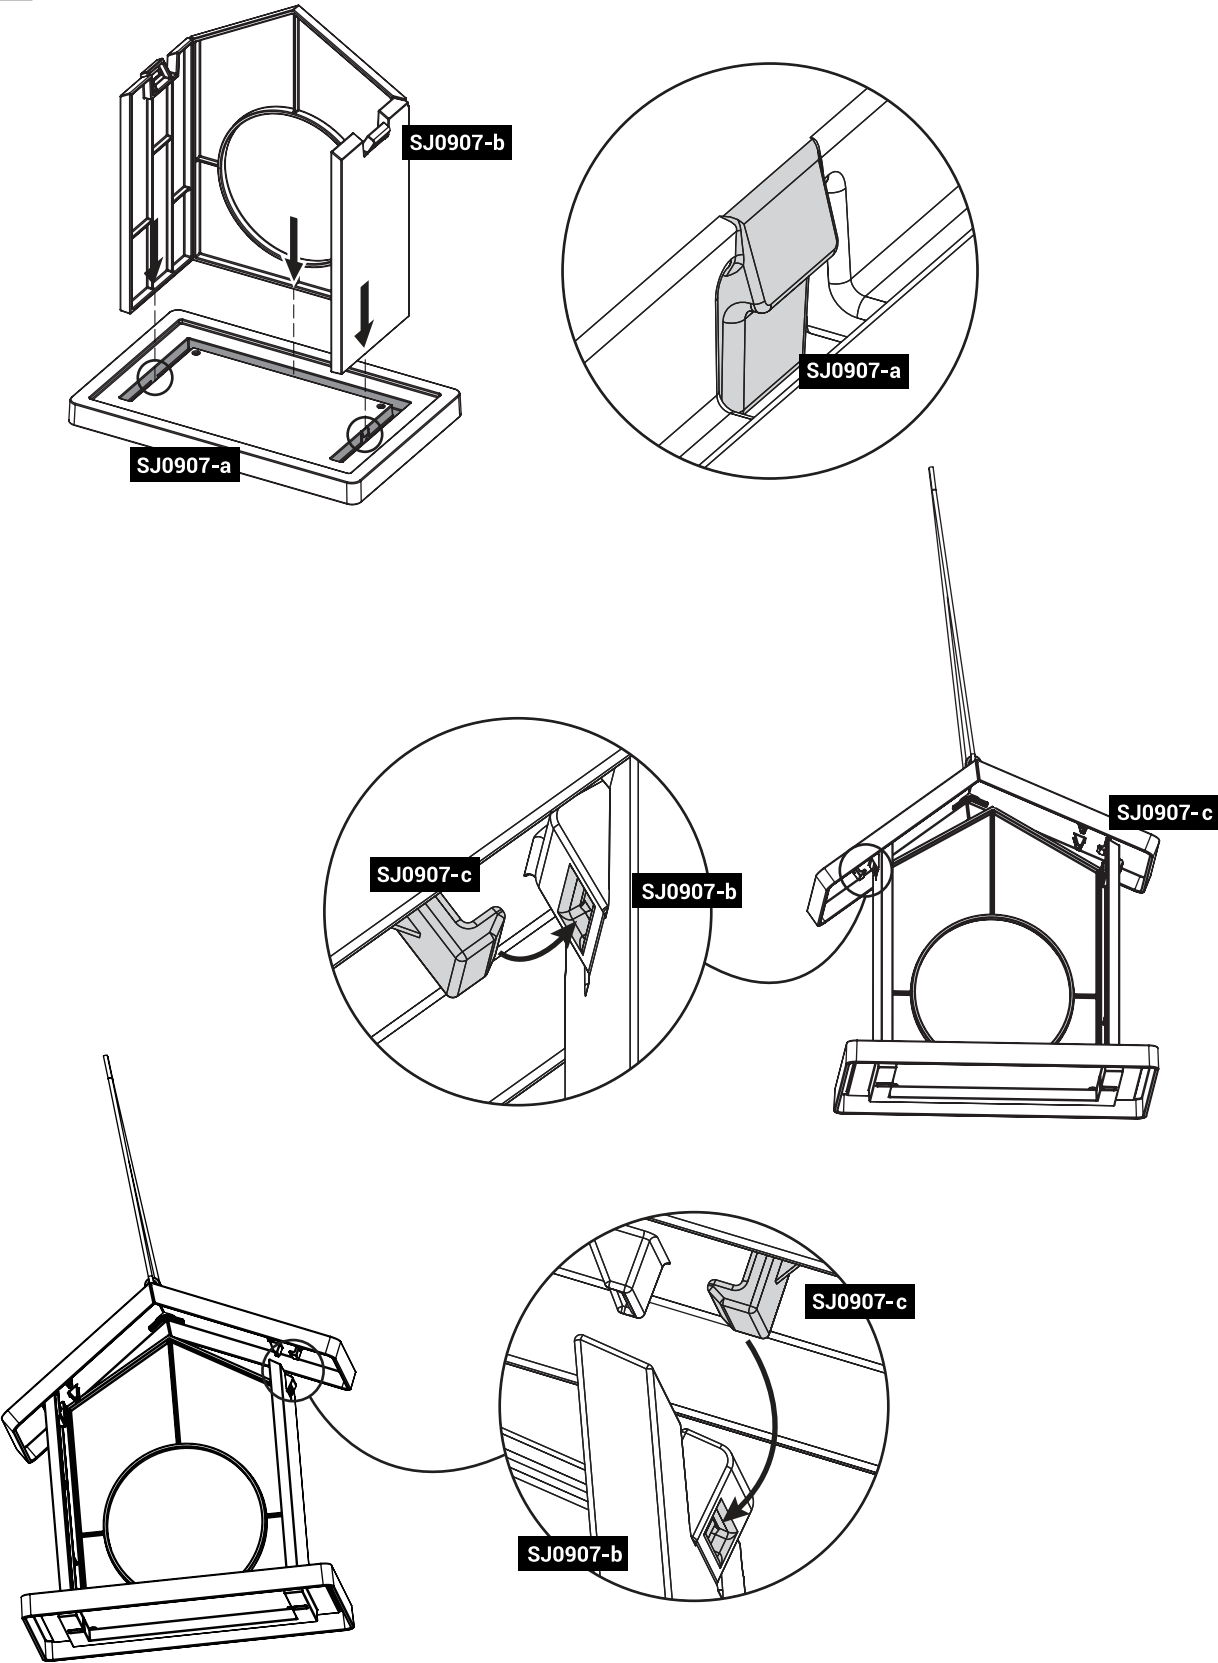

INSTALLATION STEPS

 
STEP 30 (Batteries are not included in the package)

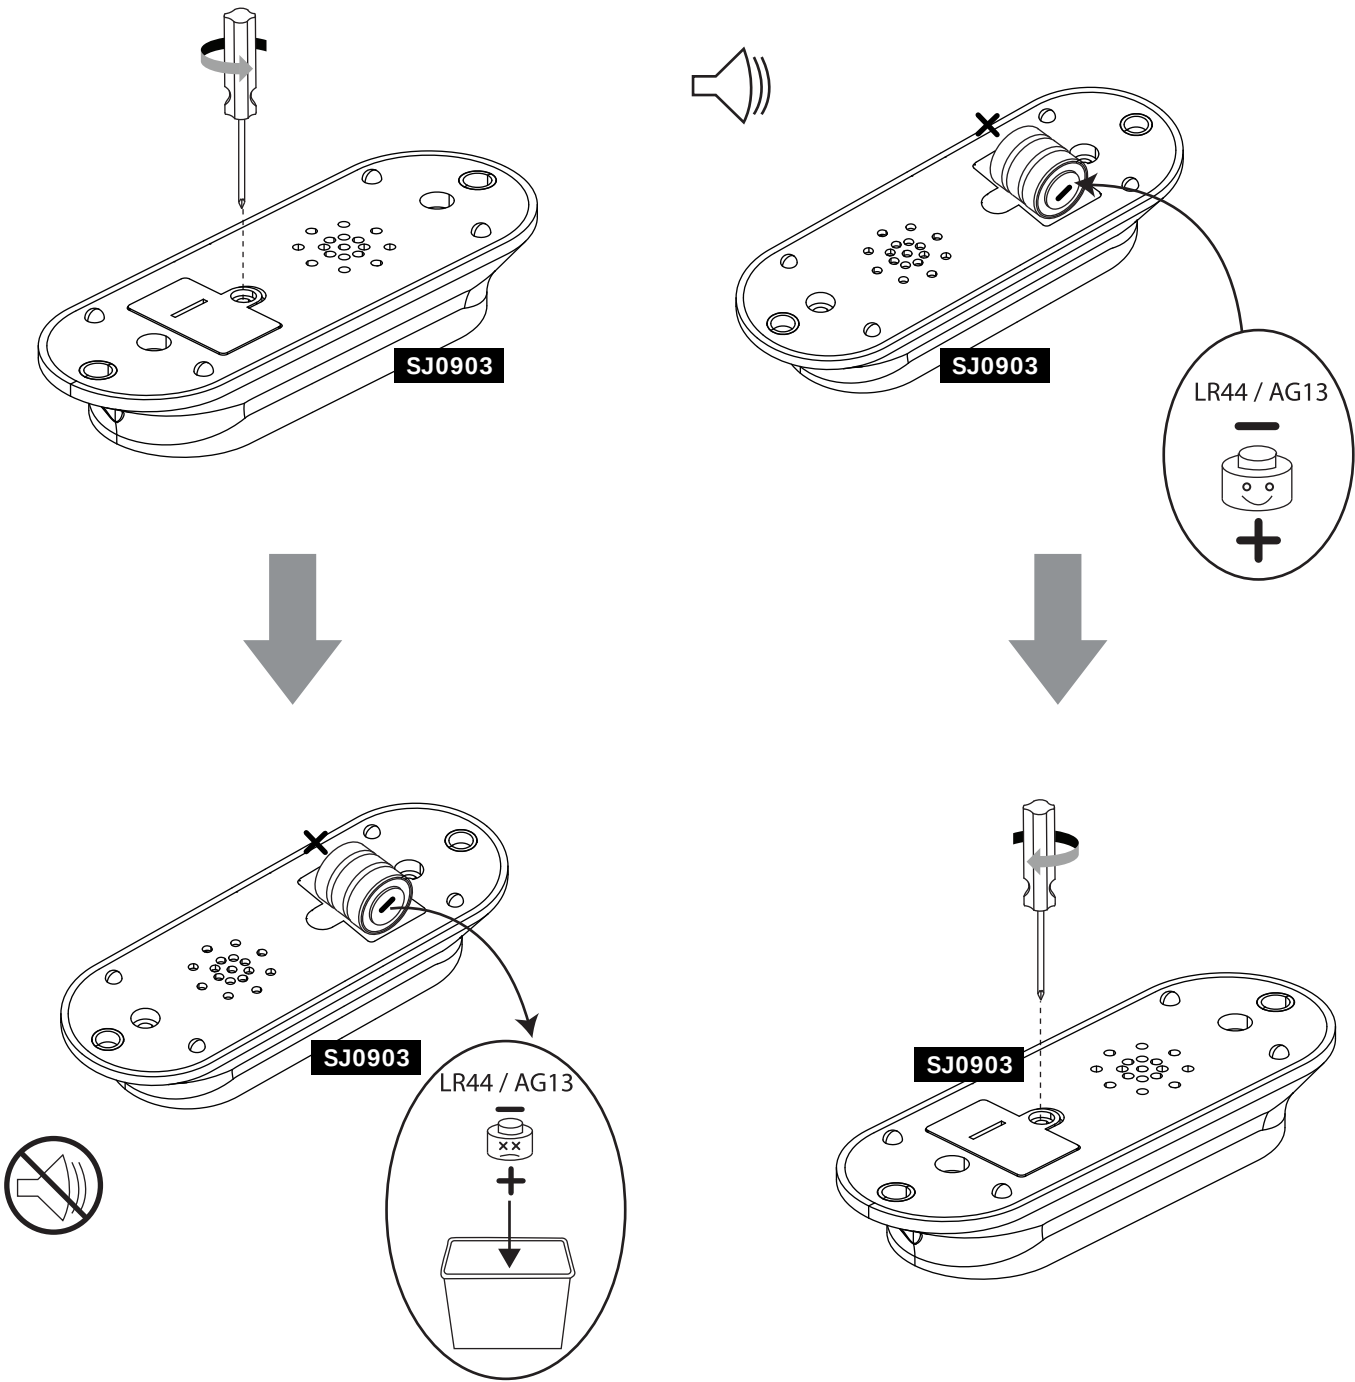

INSTALLATION STEPS


STEP 31

  **TX16** X2  **TD13** X1

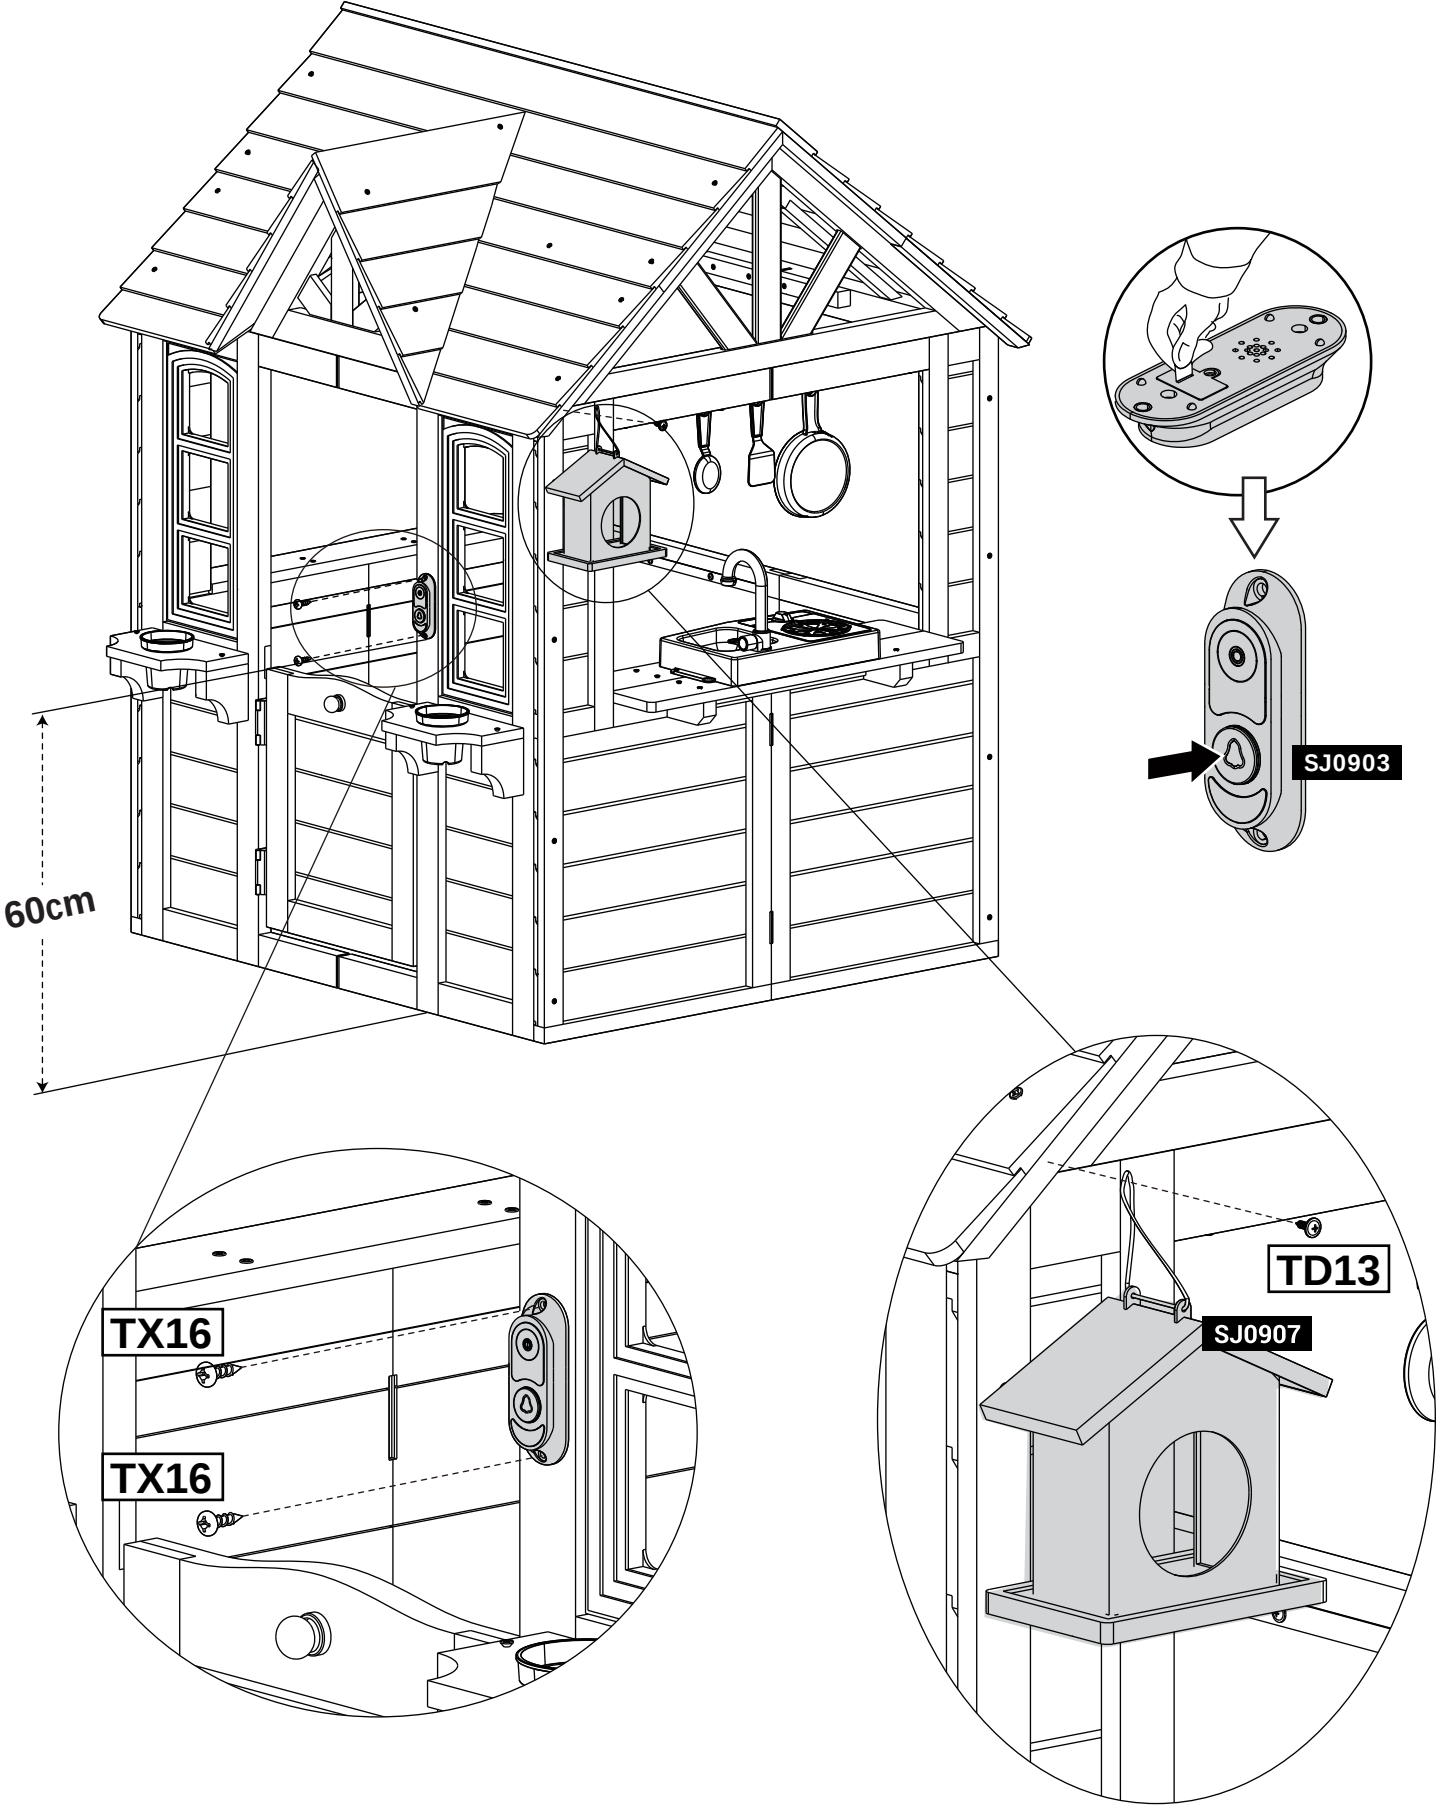

INSTALLATION STEPS

 STEP 32

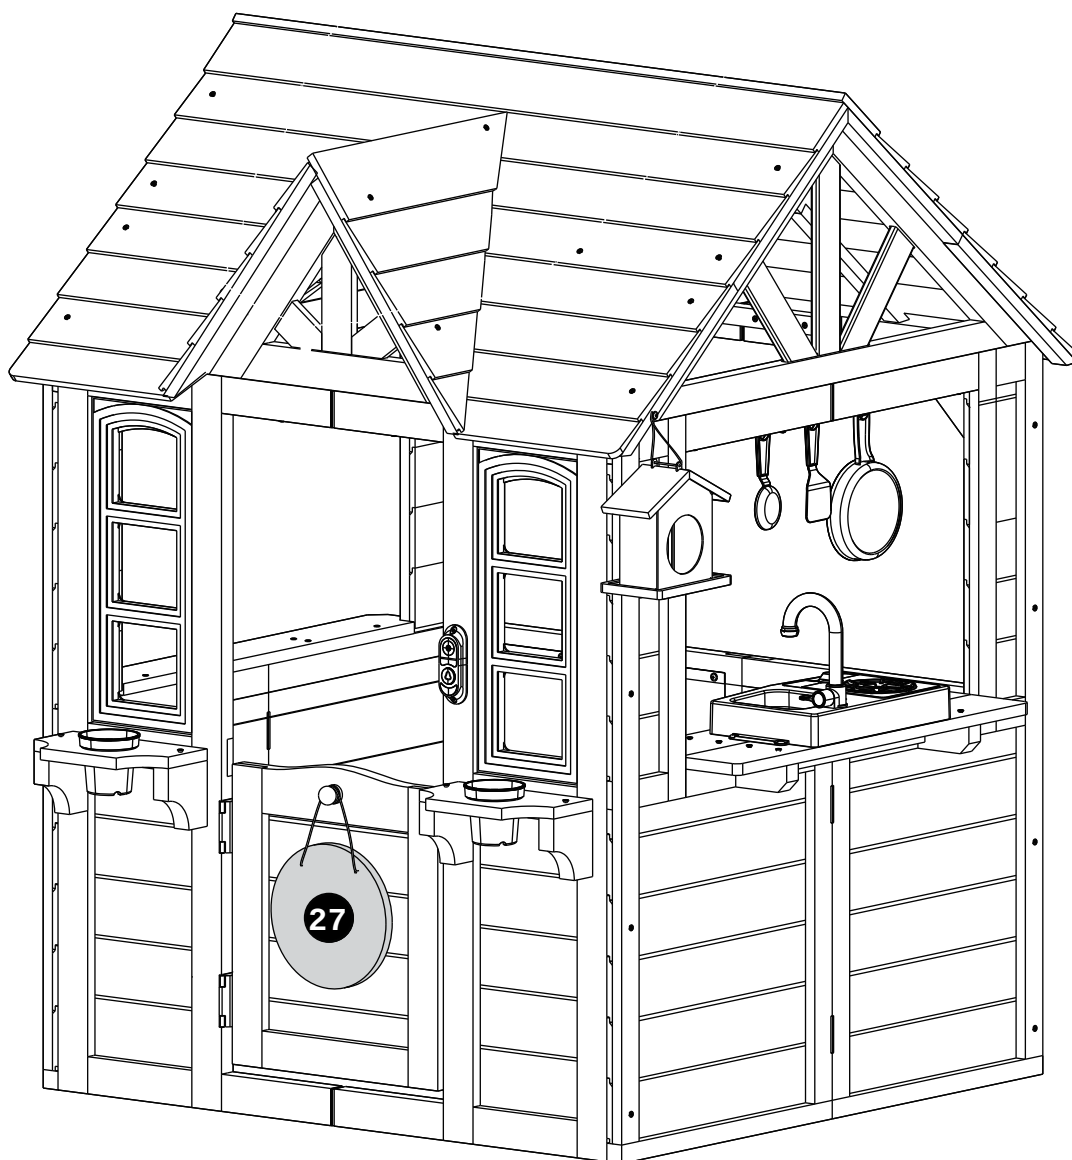

**Please scan the QR code below to view
the installation guide!**

Question about your product? We're here to help.

Contact Us Via: bierumbaby@hotmail.com

We offer 24/7 customer service. If you experience any problems with missing parts, please feel free to contact us. We will arrange for new parts as soon as possible. Your satisfaction is our top priority.

Thank you for choosing us!