


LEXINGTON® HOME BRANDS

ASSEMBLY INSTRUCTIONS 536-912C Entertainment Center

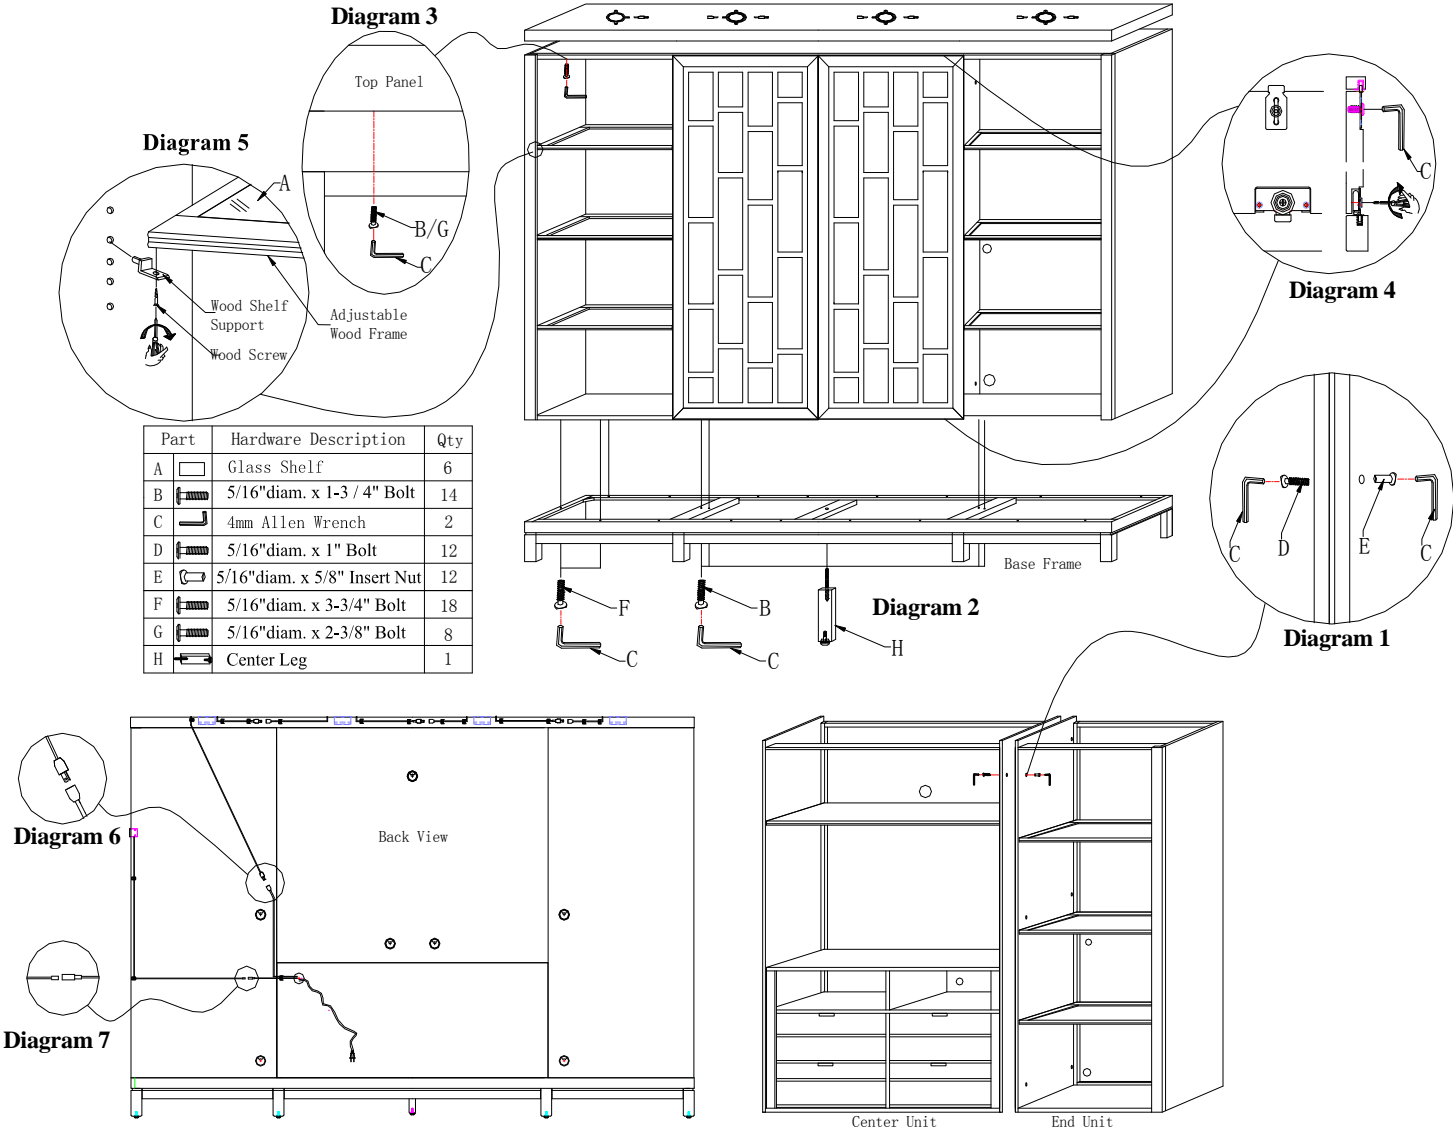

(536-912 assembly instructions continued on next page...)

For additional consumer assistance please contact your Lexington dealer or call our Consumer Services Department at 1-336-474-5300, Monday-Friday, 8-5 Eastern

LEXINGTON®

H O M E B R A N D S

536-912C instructions continued...

1. Place one End Unit flush beside Center Unit so that holes on side of Center Unit align with holes on side of End Unit.
2. Position insert nut (E) in hole on side of End Unit (Diagram 1). Use one Allen wrench (C) to hold insert nut stationary. At the same time, use other Allen wrench (C) to tighten 1" bolt (D) into insert nut. Do not fully tighten bolt at this time. Repeat this step for other (5) insert nuts/bolts to assemble End Unit to Center Unit.
3. Repeat steps 1 and 2 for other End Unit on other side of Center Unit. Now securely tighten all bolts on both sides of Center Unit.
4. Carefully lay assembled Center/End Units on its back on a non-marring surface. Place Base Frame on bottom of assembled Center/End Units so that holes in Base Frame align with holes in bottom of Center/End Units. (Diagram 2)
5. Use Allen wrench (C) to assemble Base Frame to Center Unit with (4) 1-3/4" bolts (B). Do not fully tighten bolts at this time.
6. Use Allen wrench (C) to assemble Base Frame to End Units with (18) 3-3/4" bolts (F). Securely tighten all bolts including bolts from step 5.
7. Insert bolted end of Center Leg (H) into hole in middle of bottom side of Base Frame. Twist center leg clockwise until tight. Return assembled entertainment center to an upright position.
8. Place Top Panel on top of assembled Center/End Units so that holes in Top Panel align with holes in Top Frame.
9. Use Allen wrench (C) to assemble Top Panel to Top Frame with (10) 1-3/4" bolts (B) across front and ends and (8) 2-3/8" bolts (G) across back (Diagram 3). Securely tighten all bolts.
10. Position door panels on guide and track so that doors slide smoothly. Use Allen wrench (C) and Phillips screwdriver to adjust sliding doors (Diagram 4).
11. Adjustable shelves are secured with screws through shelf supports on each end to stabilize them during shipping (Diagram 5). To adjust shelves, remove screws from shelf supports (underneath shelf) with a small Phillips head screwdriver. Shelf can then be lifted out, support moved to appropriate position, and shelf replaced. Use screwdriver to replace screws through shelf supports and into bottom of shelf.
12. Connect male power plug to female power plug (Diagram 6) on back side of assembled entertainment center.
13. Connect female harness to male harness (Diagram 7) on back side of assembled entertainment center.
14. Plug in male power cord at bottom of entertainment center to power source.
15. Place case in desired location. Use separate leveling instructions to level case.

For additional consumer assistance please contact your Lexington dealer or call our Consumer Services Department at 1-336-474-5300, Monday-Friday, 8-5 Eastern