 
 


 





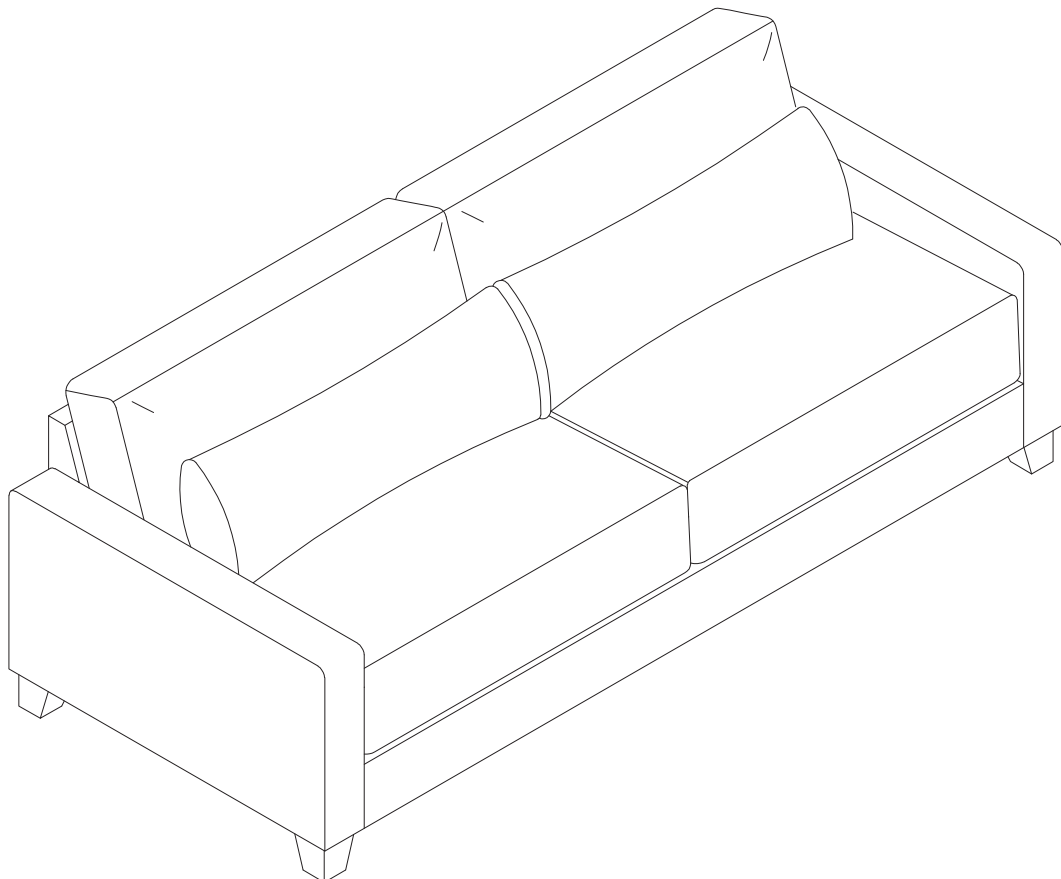
ASSEMBLY INSTRUCTION

SOFA

LEGS AND HARDWARE ARE STORED IN THE BOTTOM OF THE SEAT, PLEASE TAKE OUT FOR ASSEMBLY.

NO.	PARTS LIST	QTY	DESCRIPTION
A		1	SOFA
B	 39-1/2"*17-1/4"	2	BACK CUSHION
C	 35-3/4"*11-3/4"	2	PILLOW


NO.	PARTS LIST	QTY	DESCRIPTION
D	 3-3/4"*3-3/4"*3-3/4"	4	WOODEN LEG
E	 1-1/2"*1-1/2"*3-1/2"	1	WOODEN SUPPORT LEG
F	 M8*75MM	4	ALLEN BOLT
G	 8.5*16*1.5MM	4	FLAT WASHER
H	 M5*100*38MM	1	ALLEN KEY




ASSEMBLY INSTRUCTION

SOFA

STEP # 1

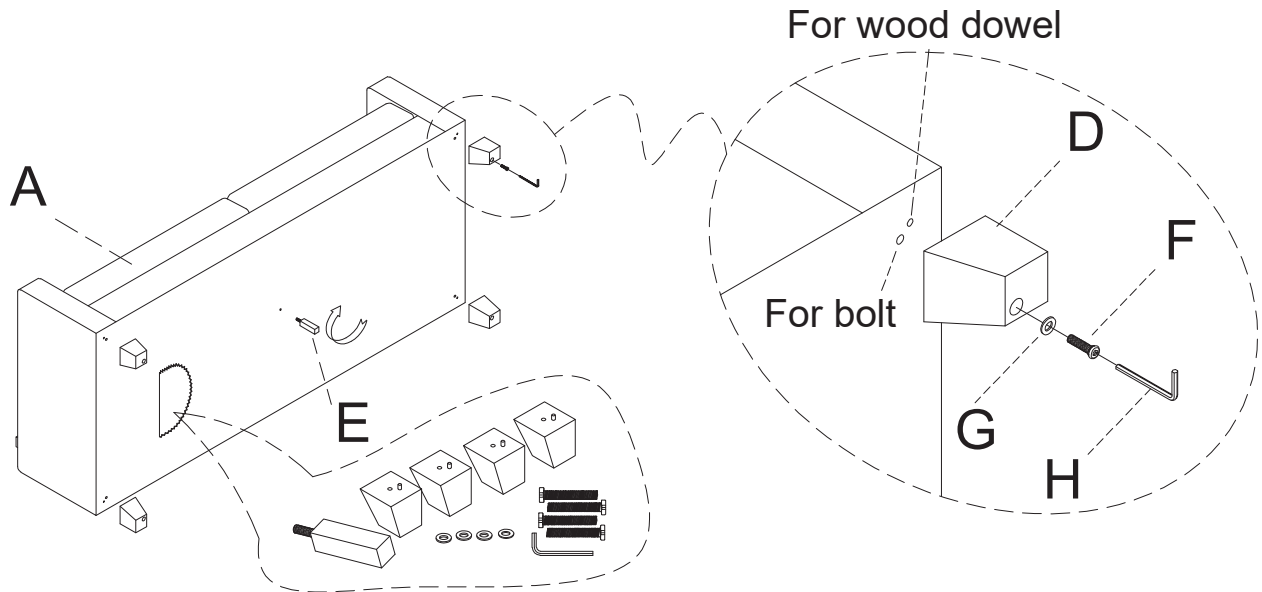

STEP 2 (Completed) :

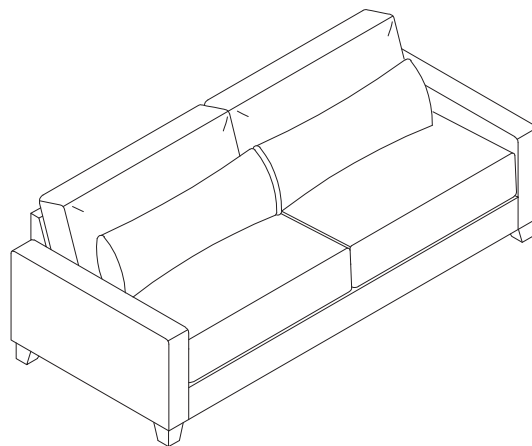

CARE INSTRUCTION FOR FABRIC FURNITURE

In order to maintain the original appearance of your fabric furniture, please follow below simple care procedures.

 
° Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage fabric.

° Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.


ASSEMBLY INSTRUCTION

OTTOMAN

LEGS AND HARDWARE ARE STORED IN THE BOTTOM OF THE SEAT, PLEASE TAKE OUT FOR ASSEMBLY.

NO.	PARTS LIST	QTY	DESCRIPTION
A		1	OTTOMAN


NO.	PARTS LIST	QTY	DESCRIPTION
B	 3-3/4"*3-3/4"*3-3/4"	4	WOODEN LEG
C	 M8*75MM	4	ALLEN BOLT
D	 Φ8.5*16*1.5MM	4	FLAT WASHER
E	 M5*100*38MM	1	ALLEN KEY

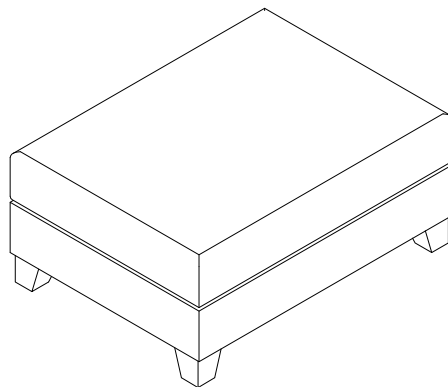


ASSEMBLY INSTRUCTION

OTTOMAN

STEP # 1

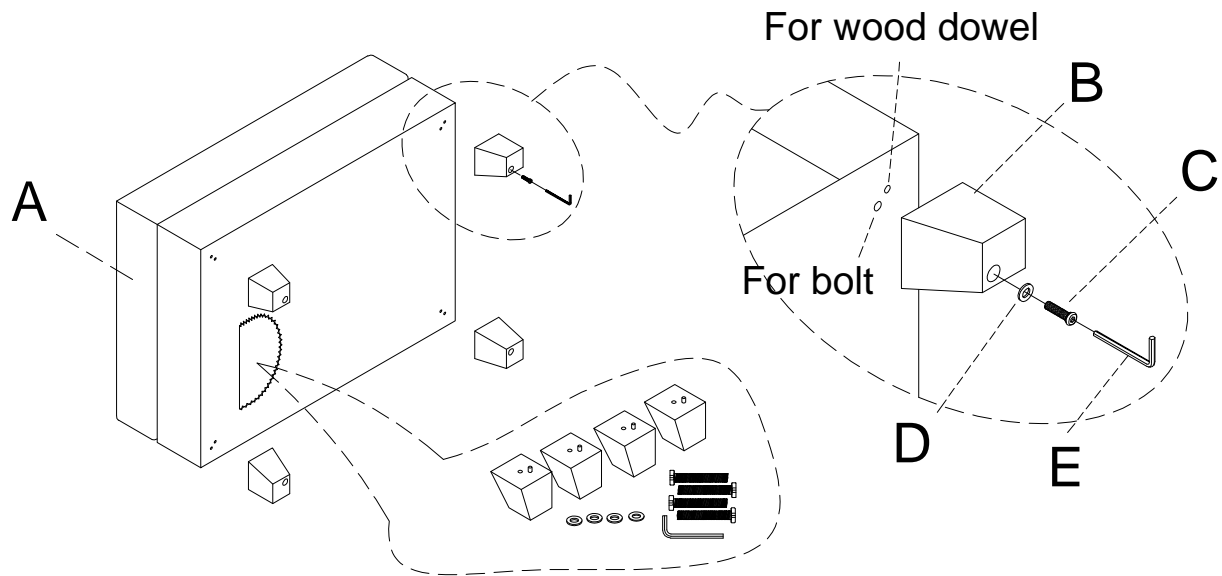

STEP 2 (Completed) :

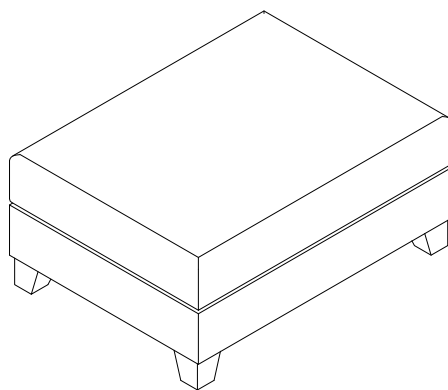

CARE INSTRUCTION FOR FABRIC FURNITURE

In order to maintain the original appearance of your fabric furniture, please follow below simple care procedures.

° Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage fabric.

° Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.