 
 
 


Product Installation Instructions

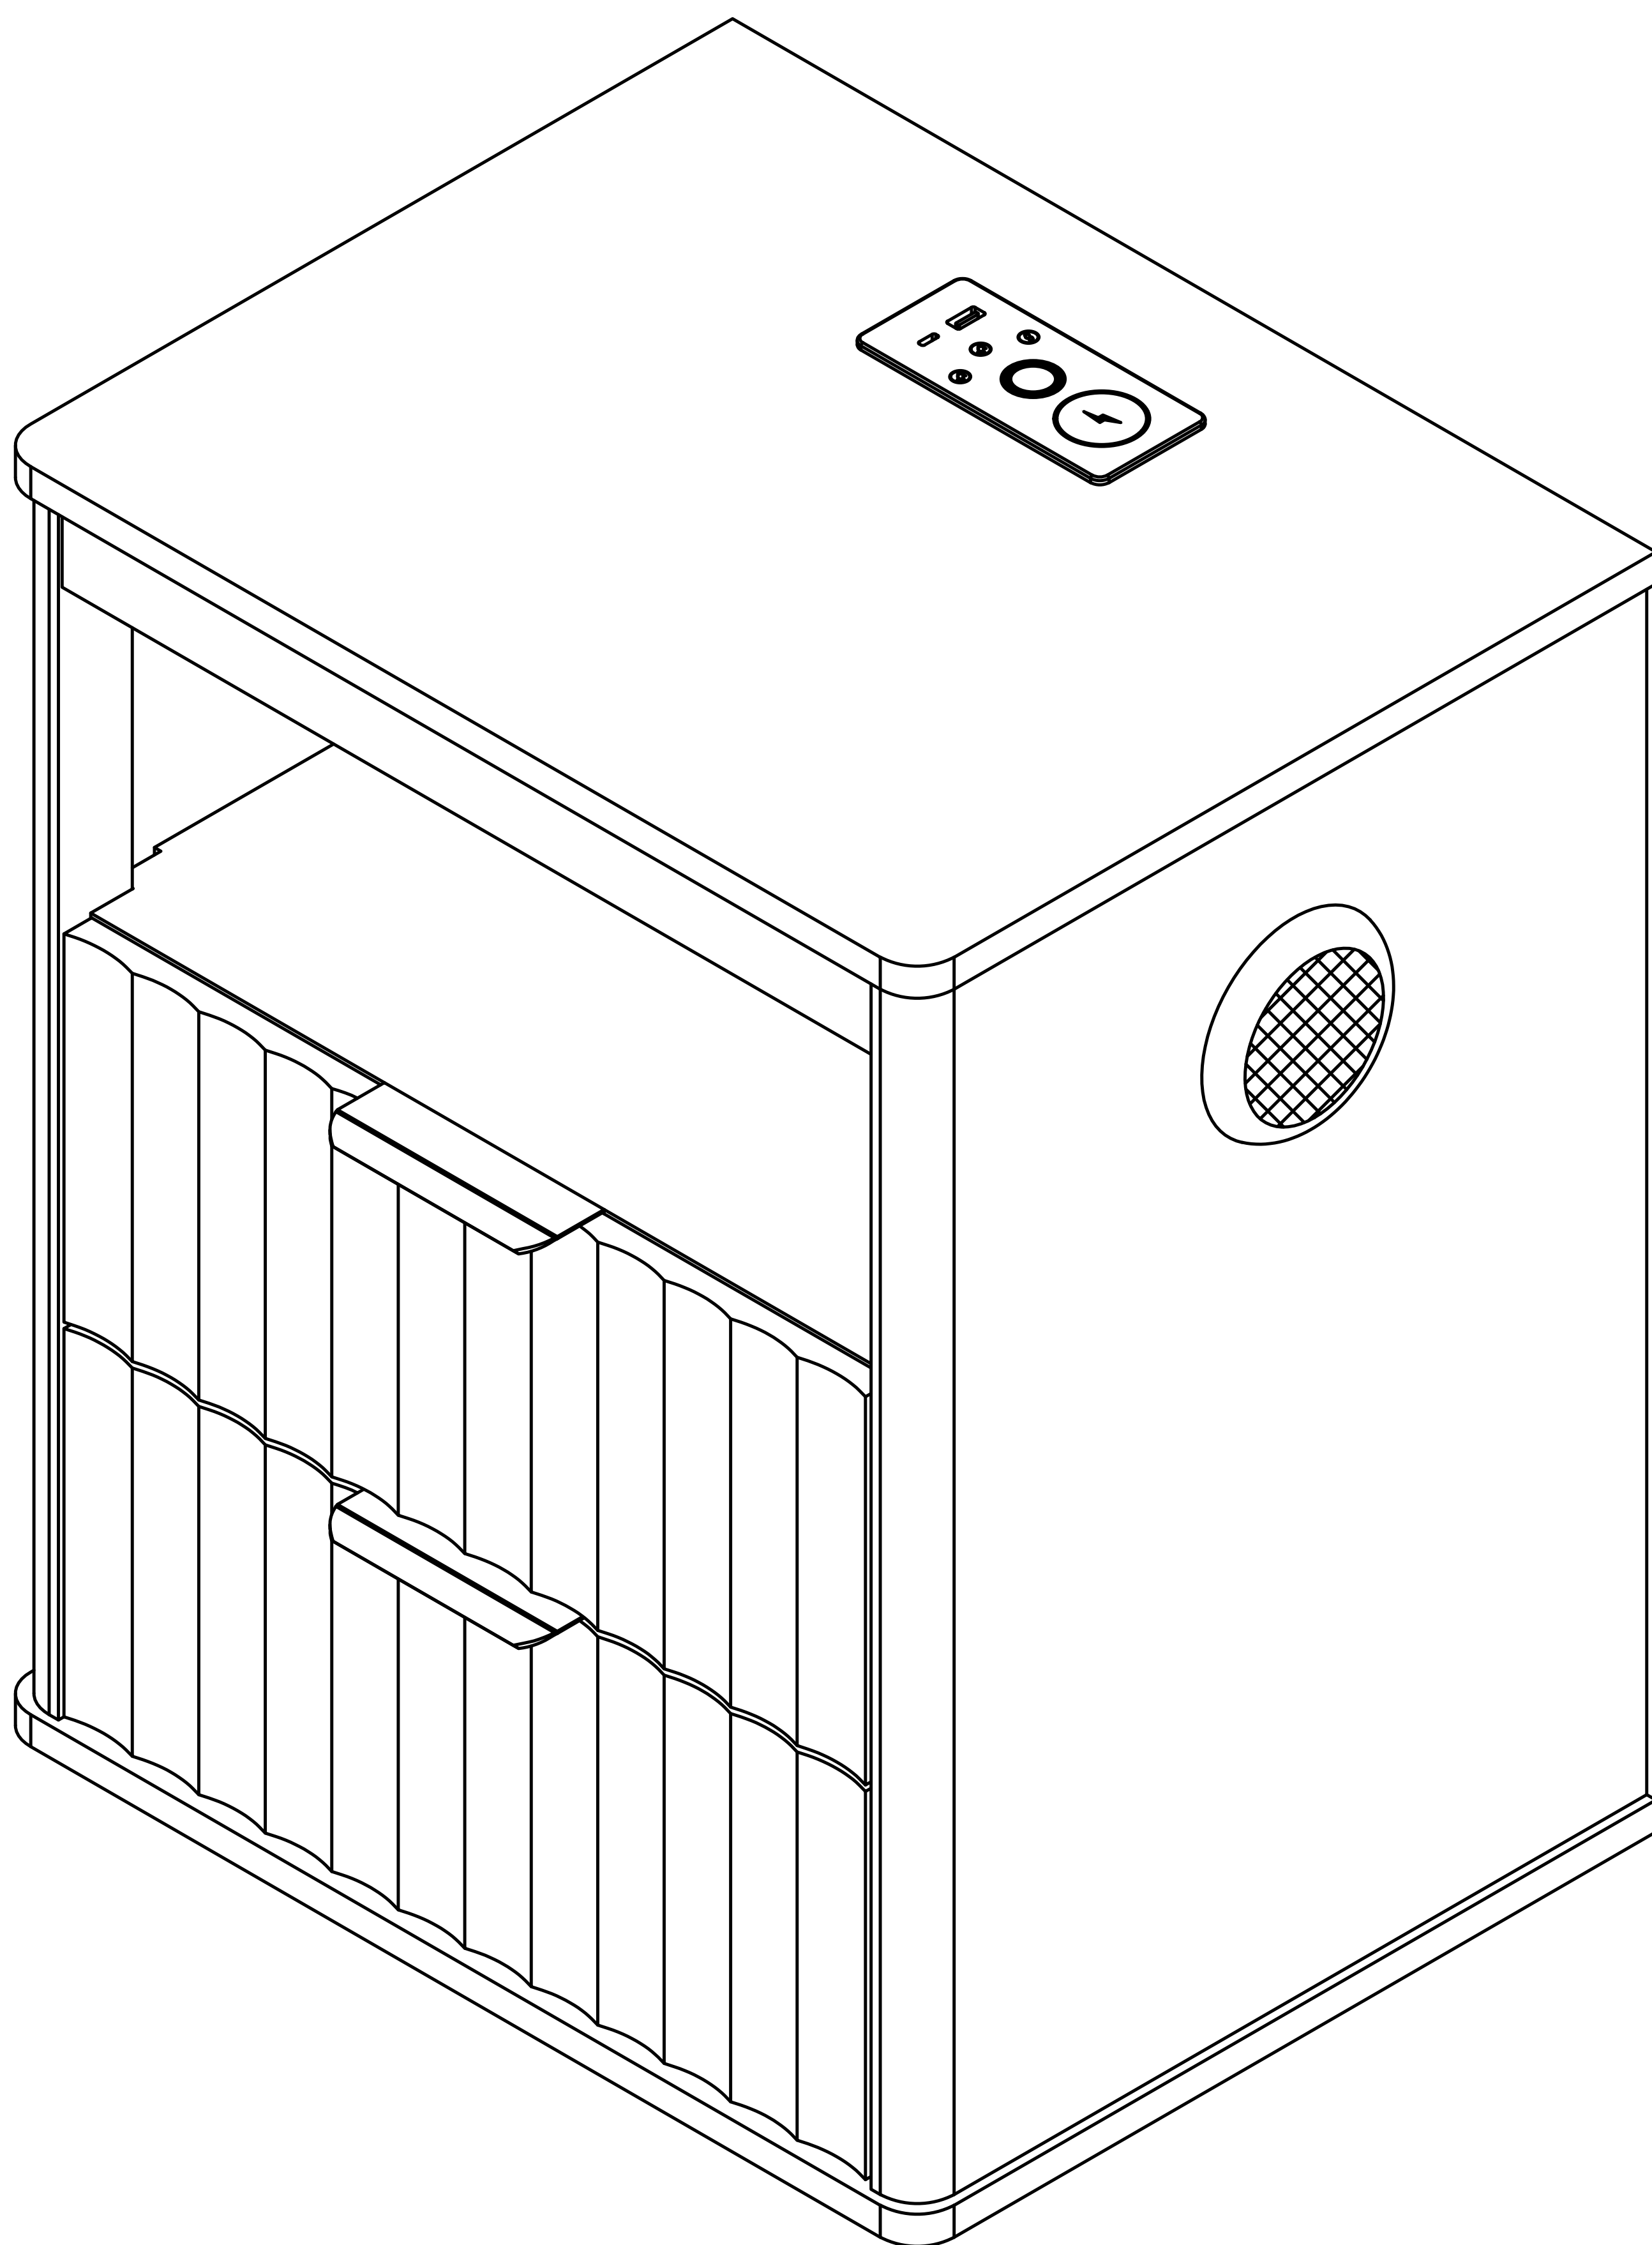


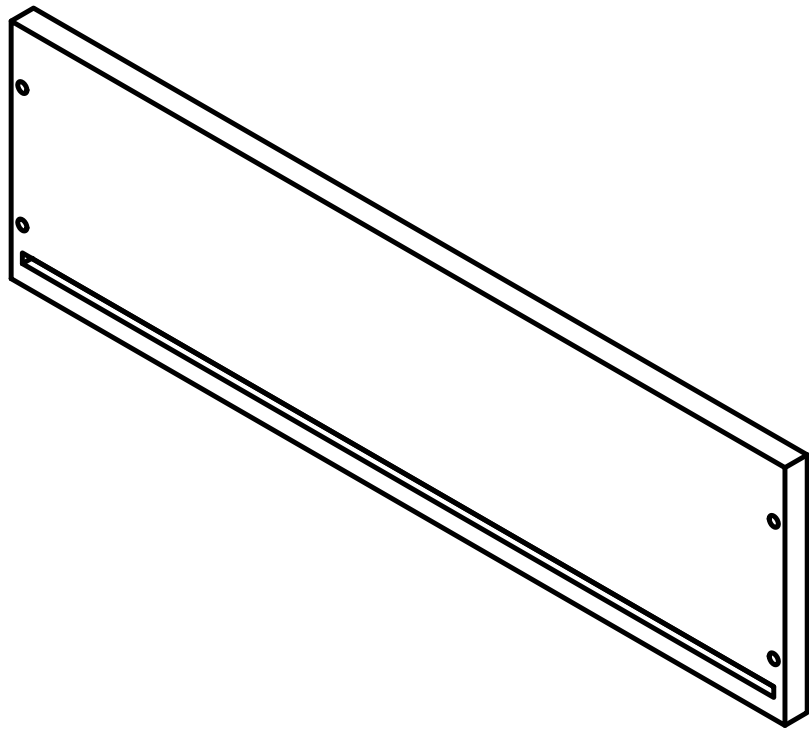


Ax2

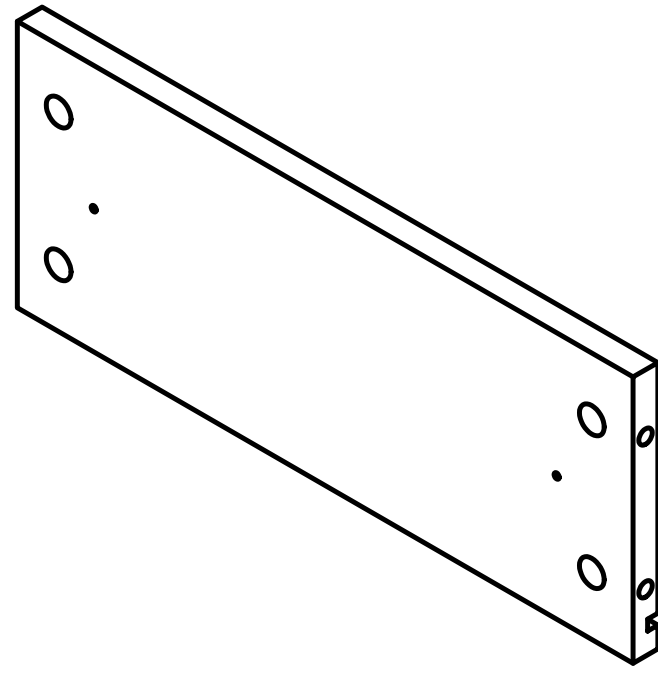

 
Bx4

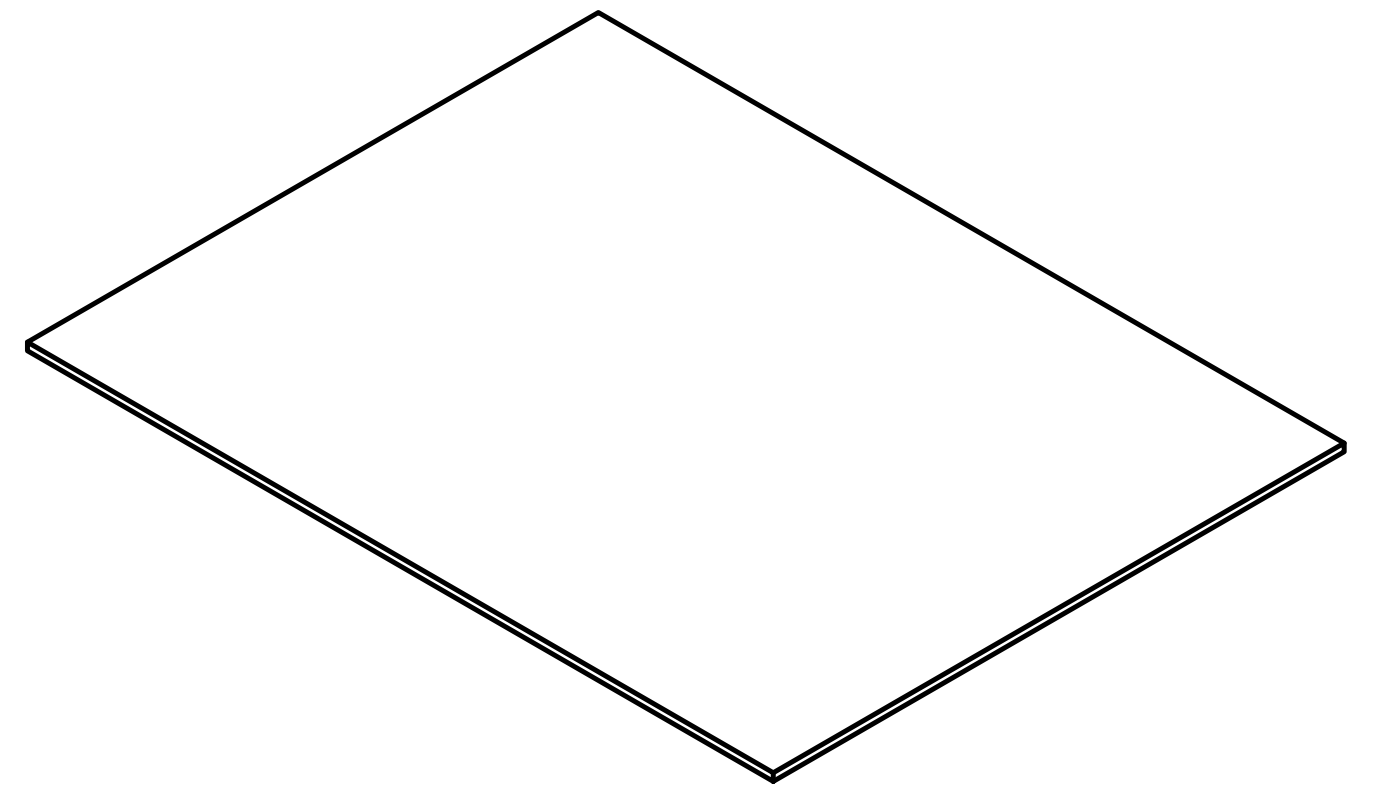


Cx2

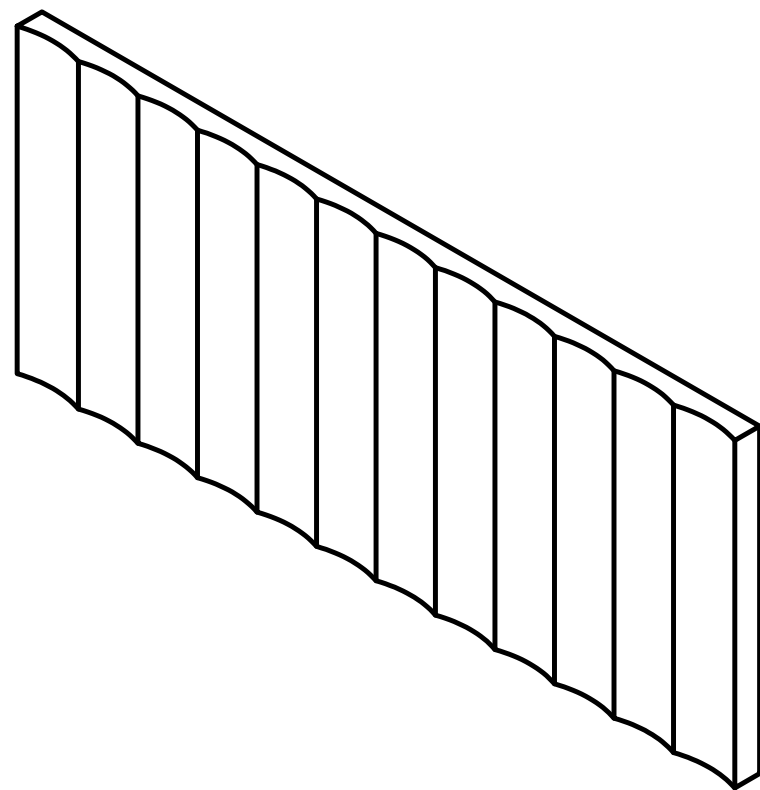 


Dx2

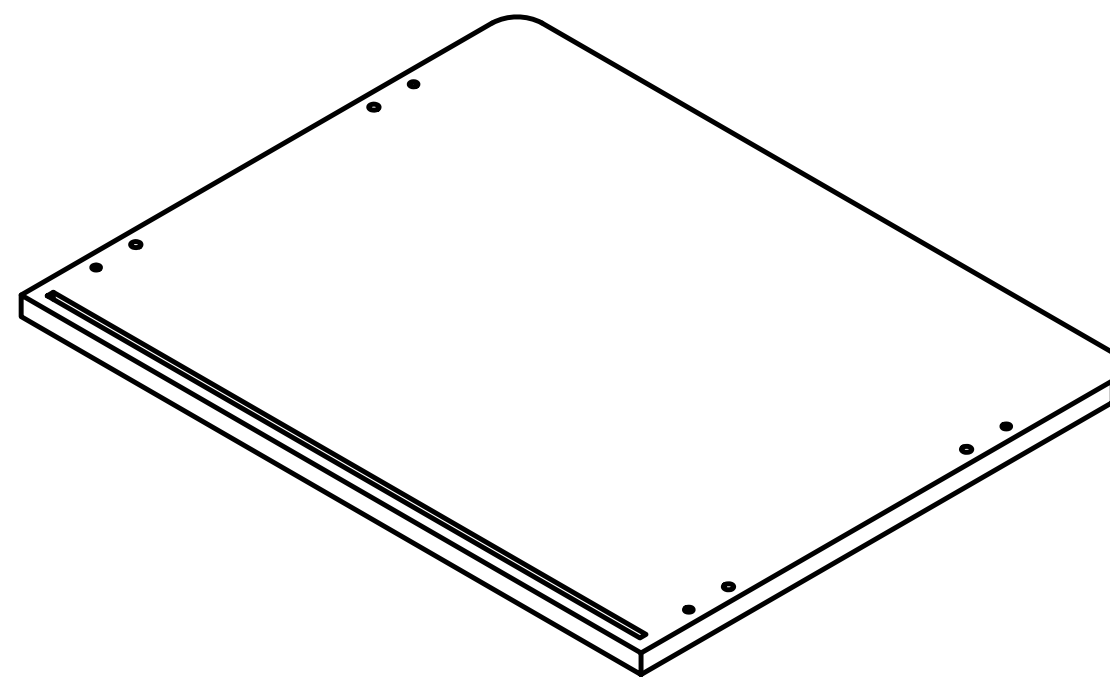 


Ex1

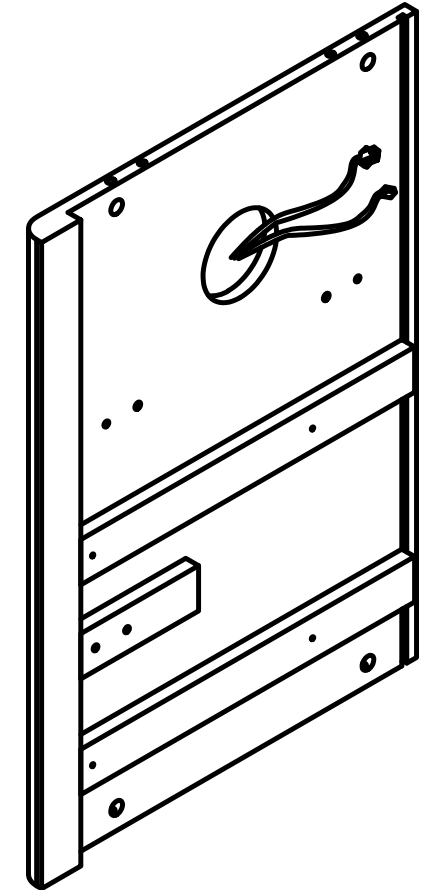 


Fx1

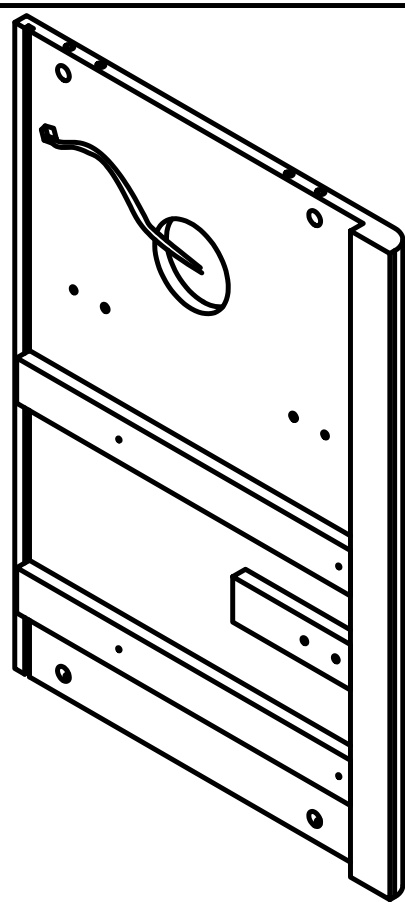 


Gx1

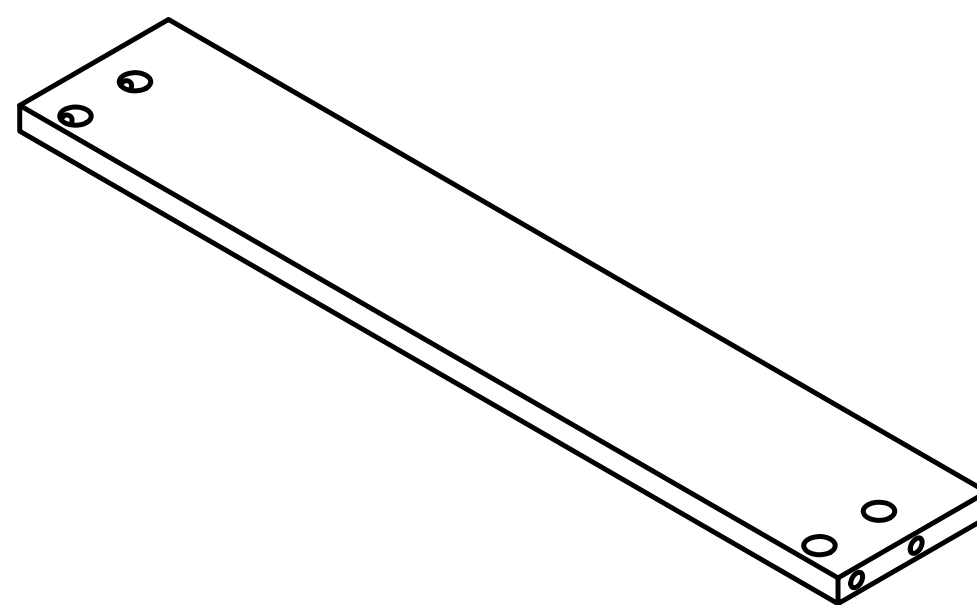 


Hx1

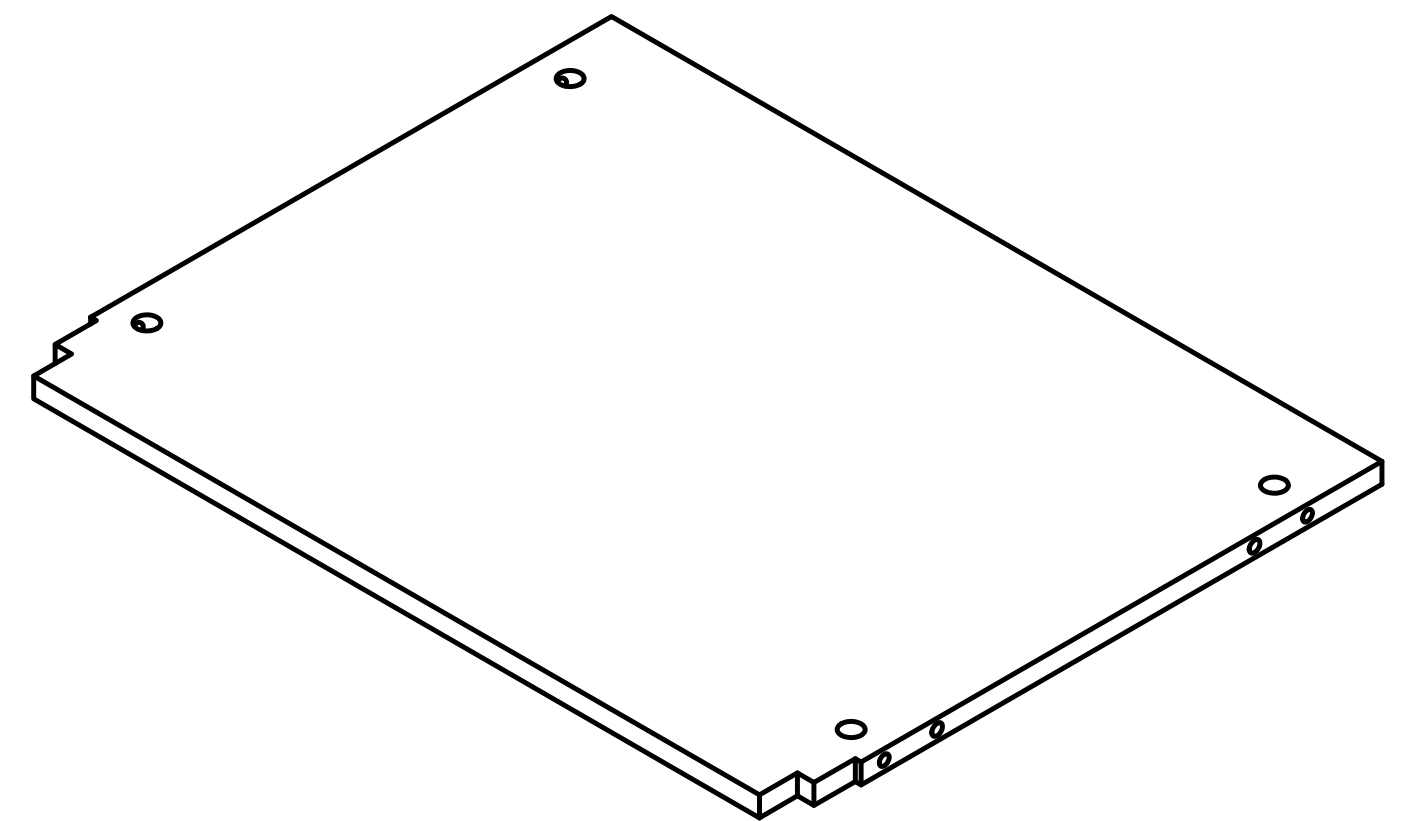 


Ix1

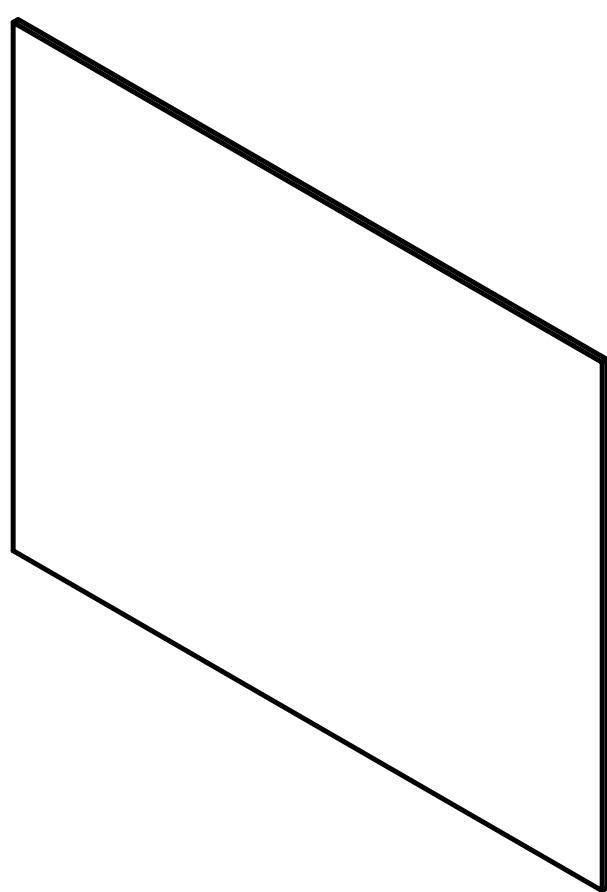 


Jx1

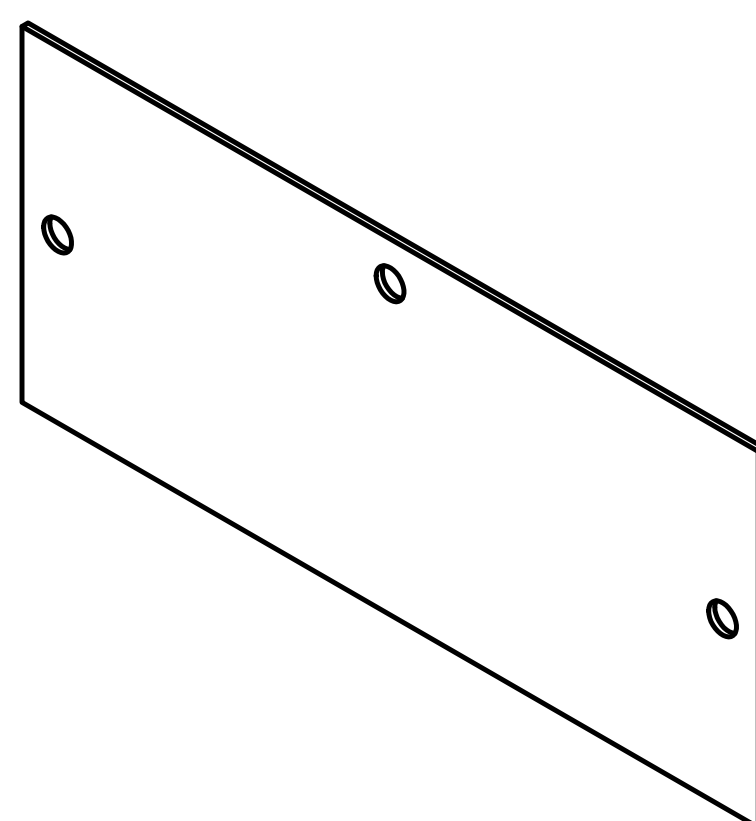 

Kx1










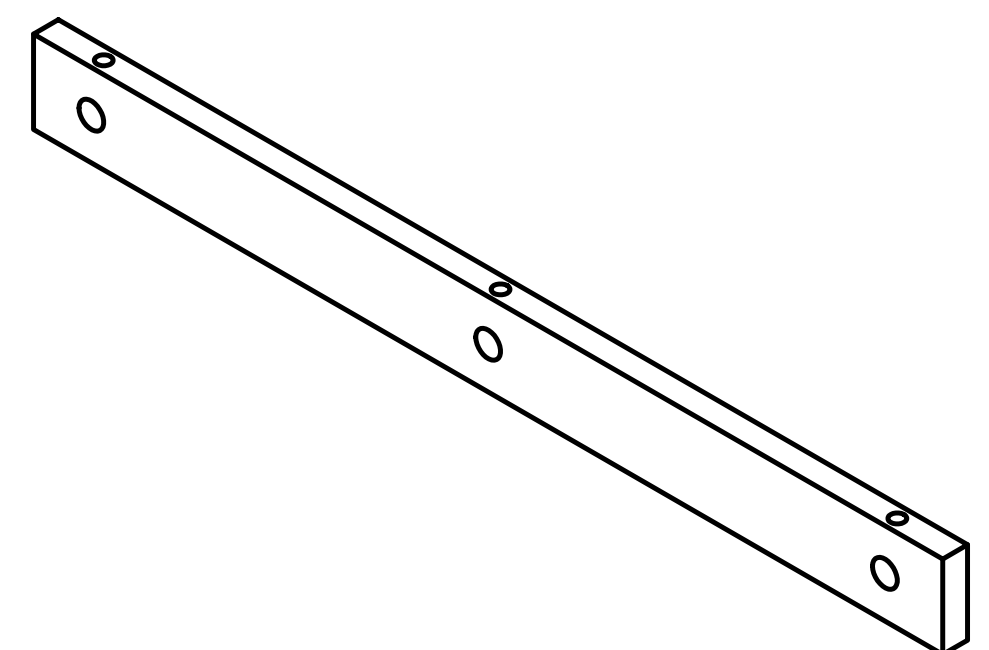 


Lx1

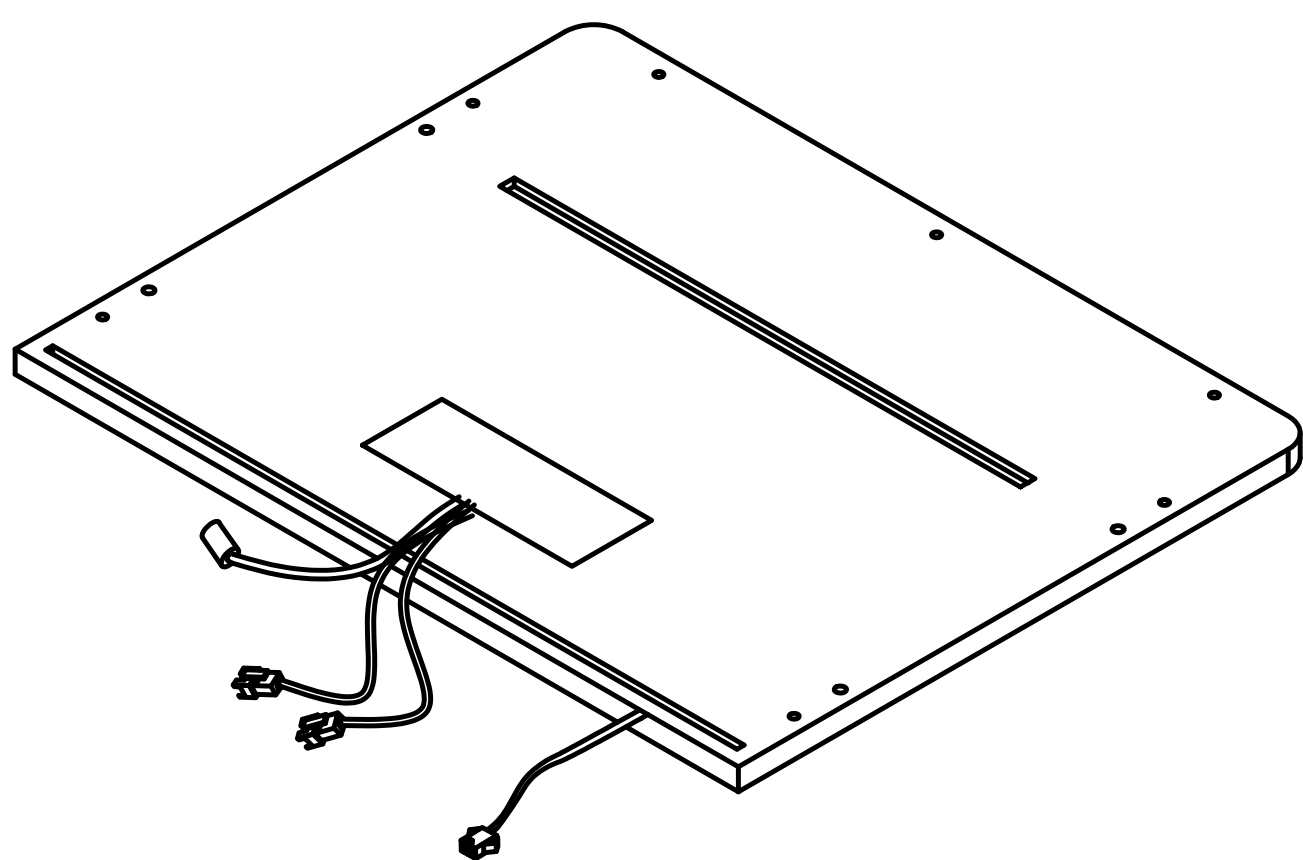 






Mx1

          
Accessories list

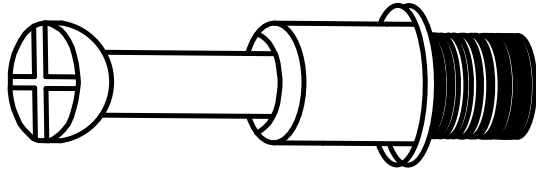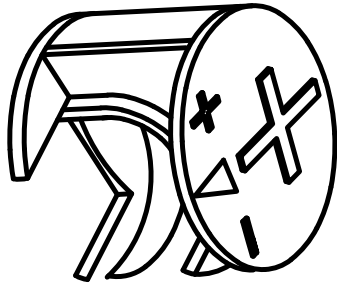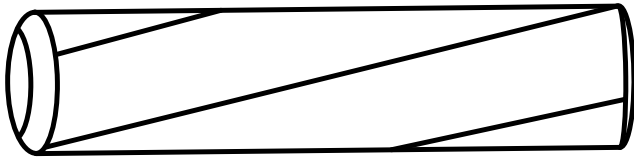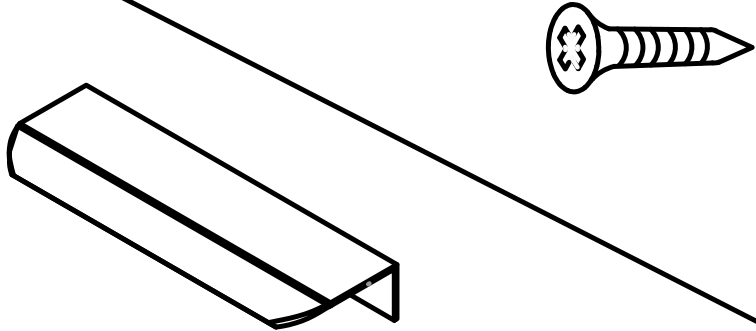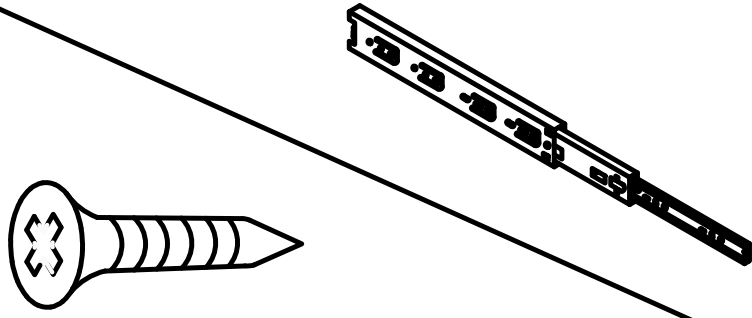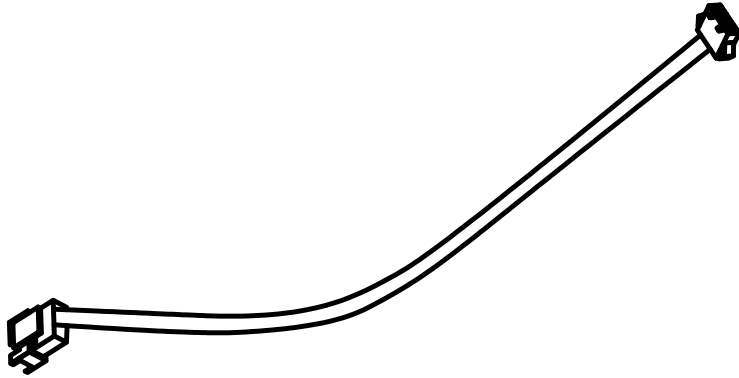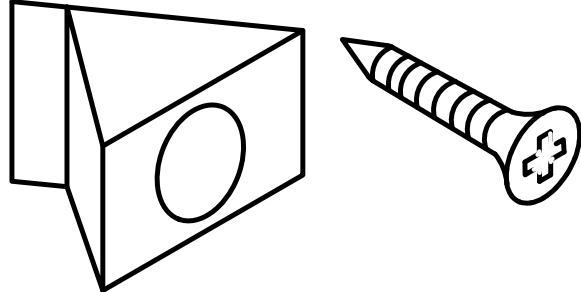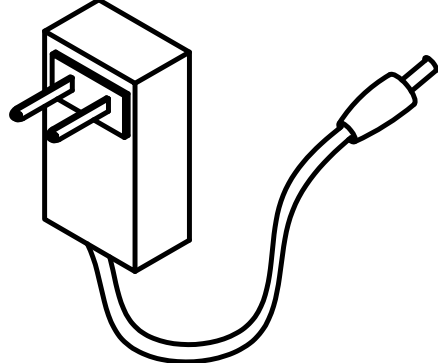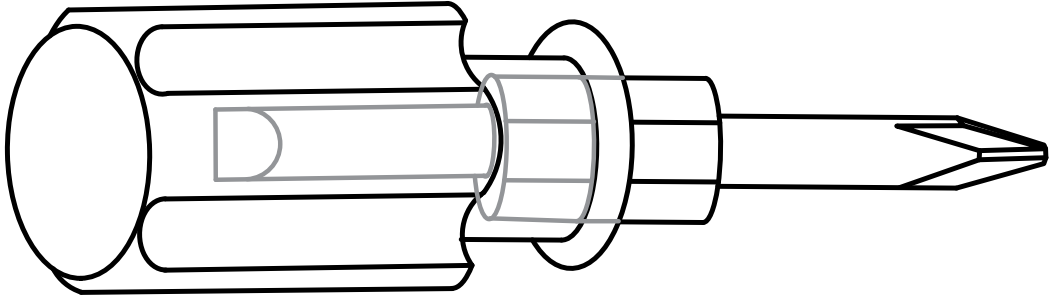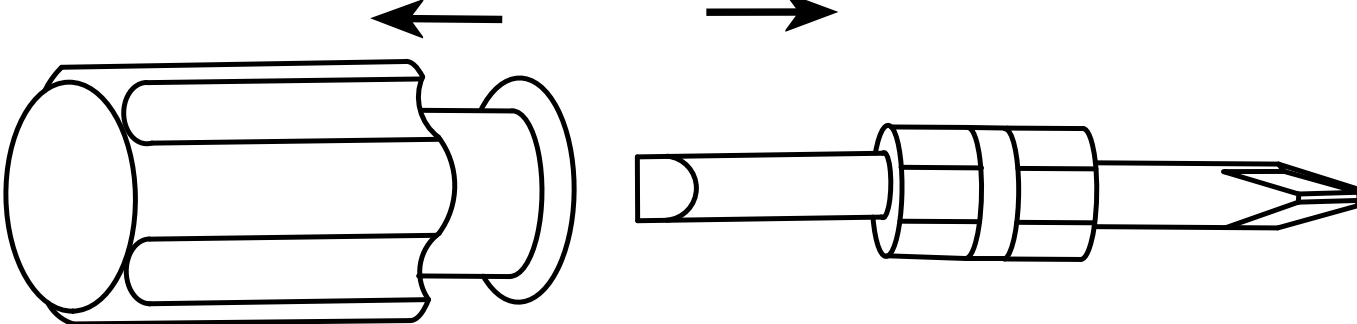①		Two In One Screw (6x28mm)	35pcs +3pcs
②		Two In One Nut (10x12mm)	35pcs +3pcs
③		Wood Chipping (6x30mm)	12pcs +2pcs
④		Handle & Screw (3x12mm)	4pcs +1pcs 2pcs
⑤		Screw & Guide (29cm) (3x12mm)	4pcs 20pcs +2pcs
⑥		Non-slip pads (36x36x2mm)	4pcs +2pcs
⑦		Speaker connection line	1pcs
⑧		Fixing Clip & Screw (3x16mm)	6pcs +1pcs
		AC/DC Adapter (12V= 2. 0A)	1pcs
 1pcs  Double-head screwdriver, use as required 			

     Product structure decomposition

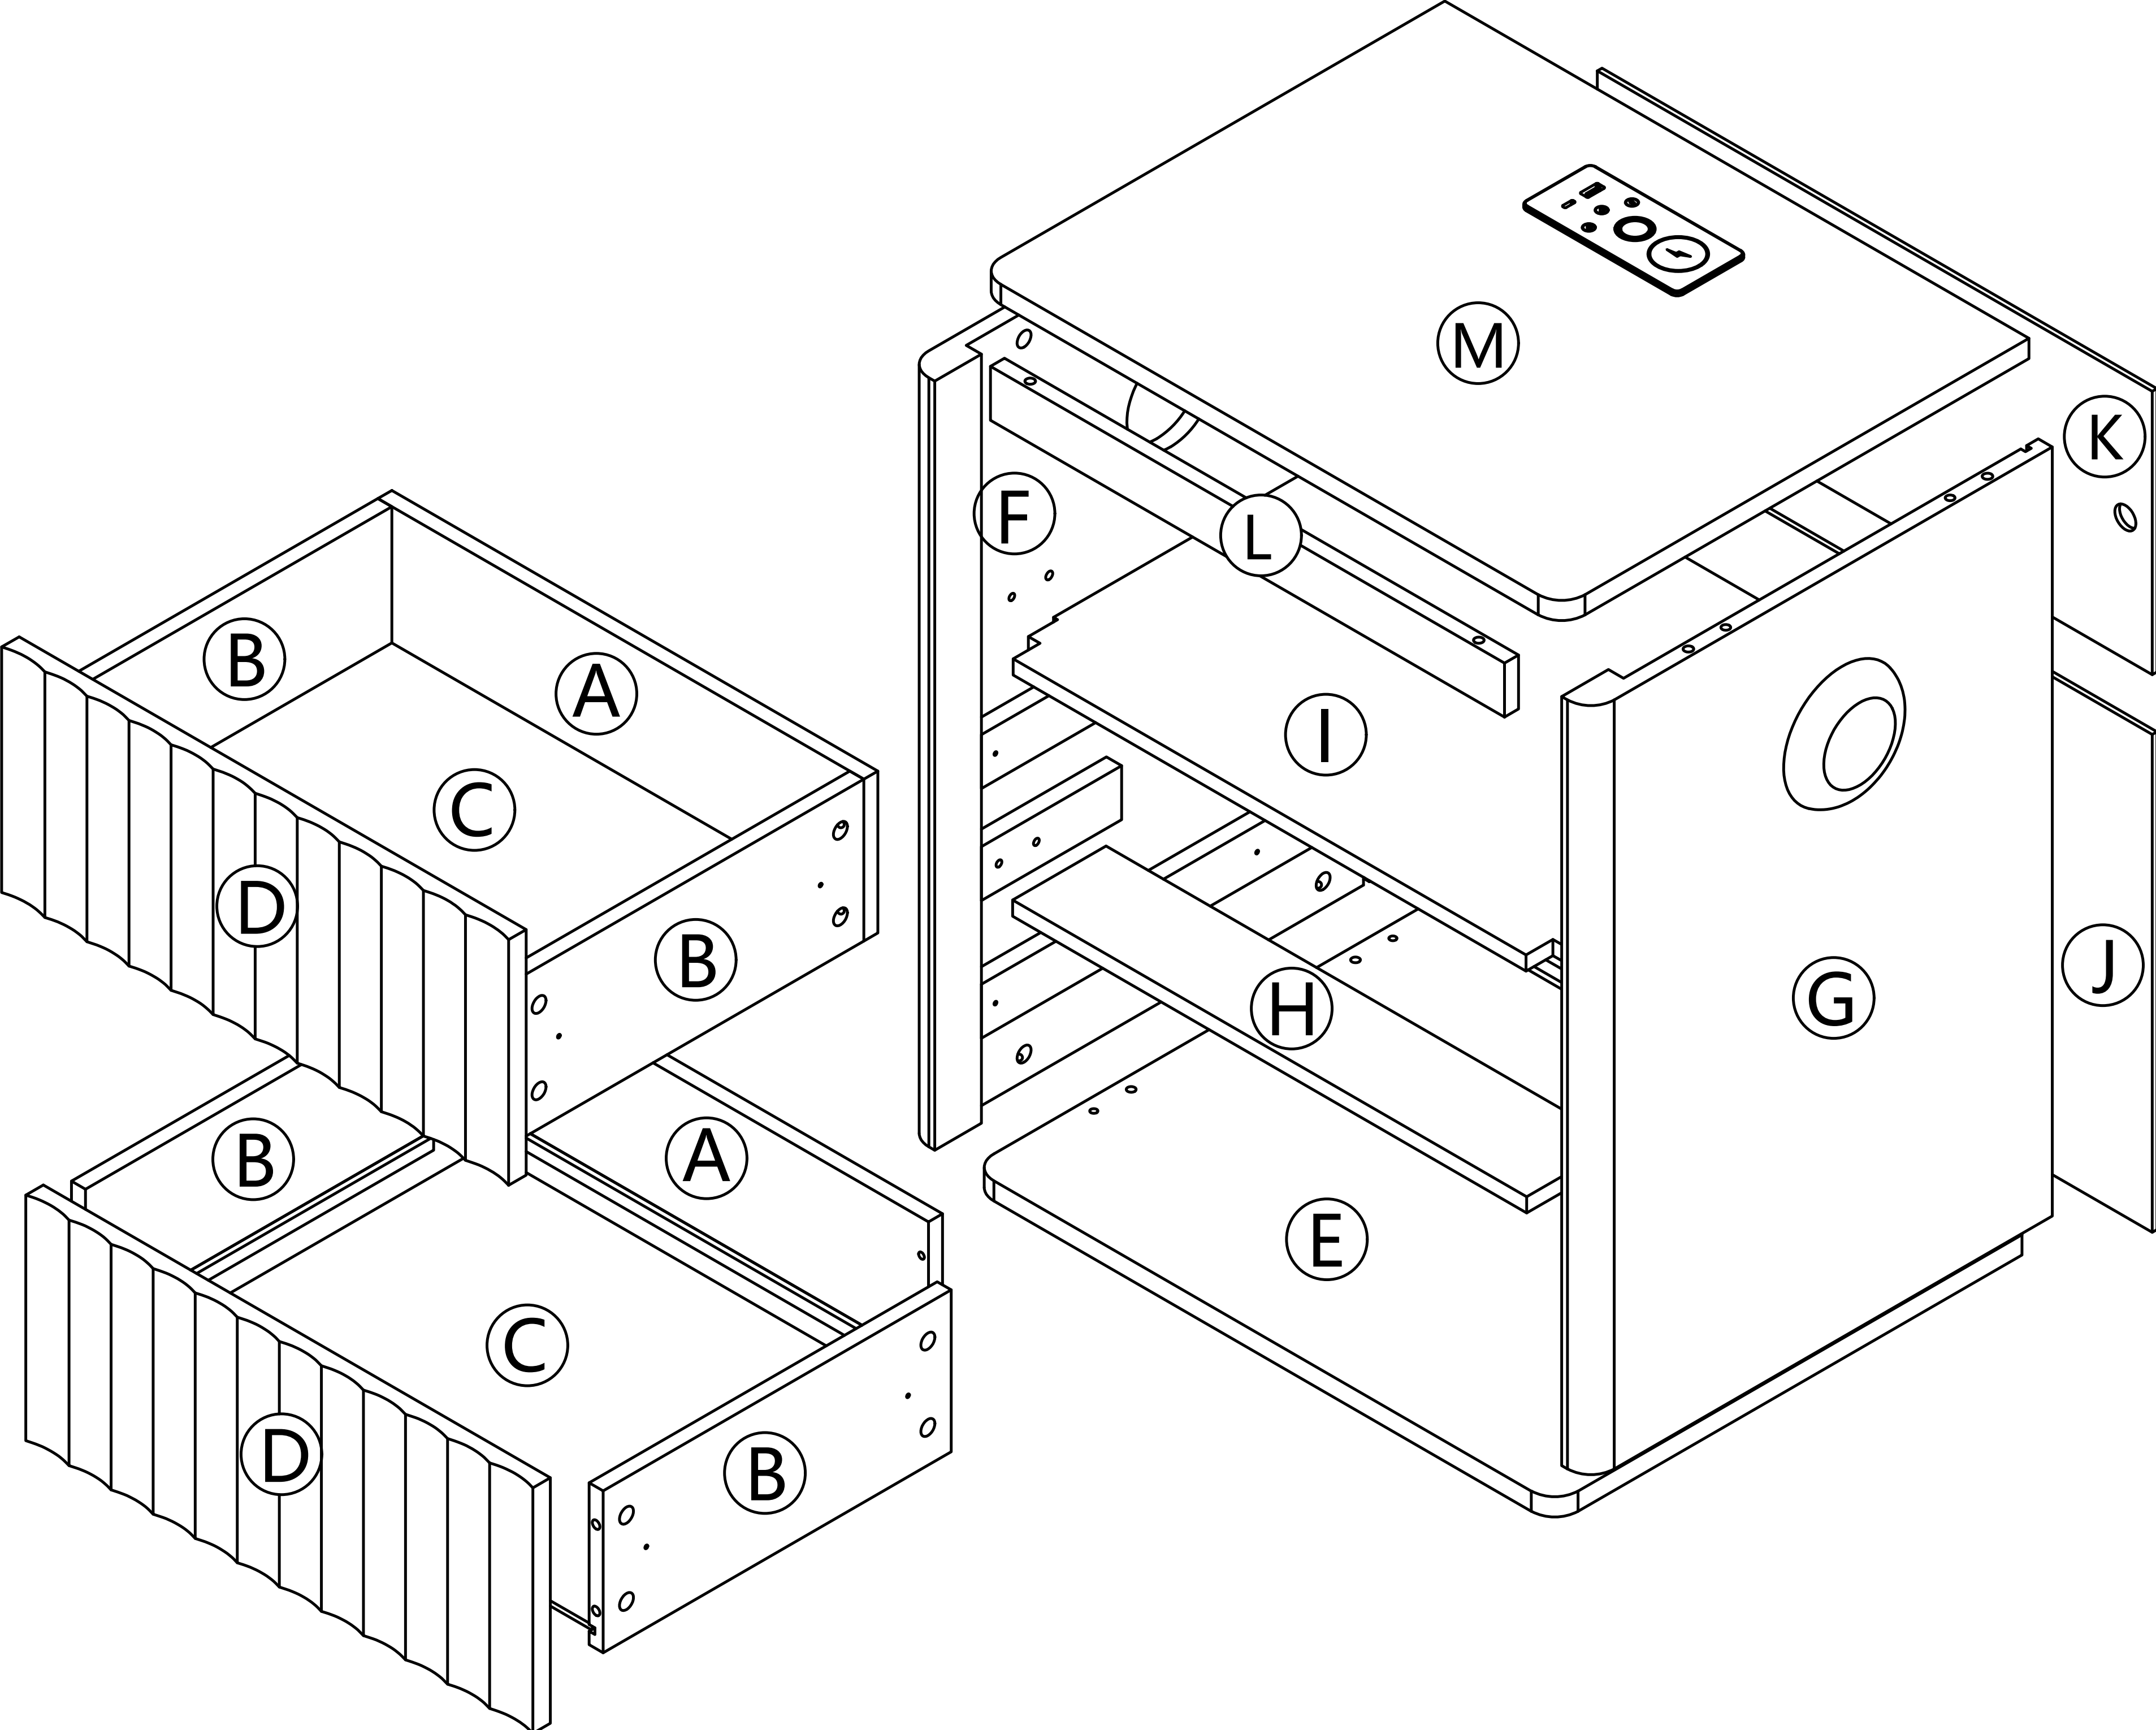


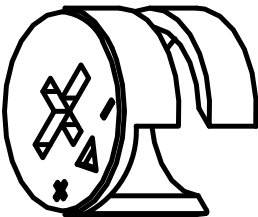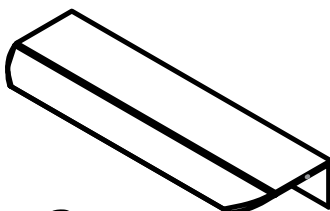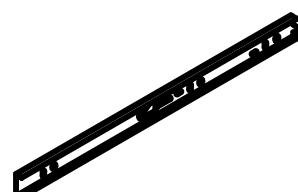1		16pcs	2		16pcs	4		2pcs		4pcs	
5		4pcs									8pcs

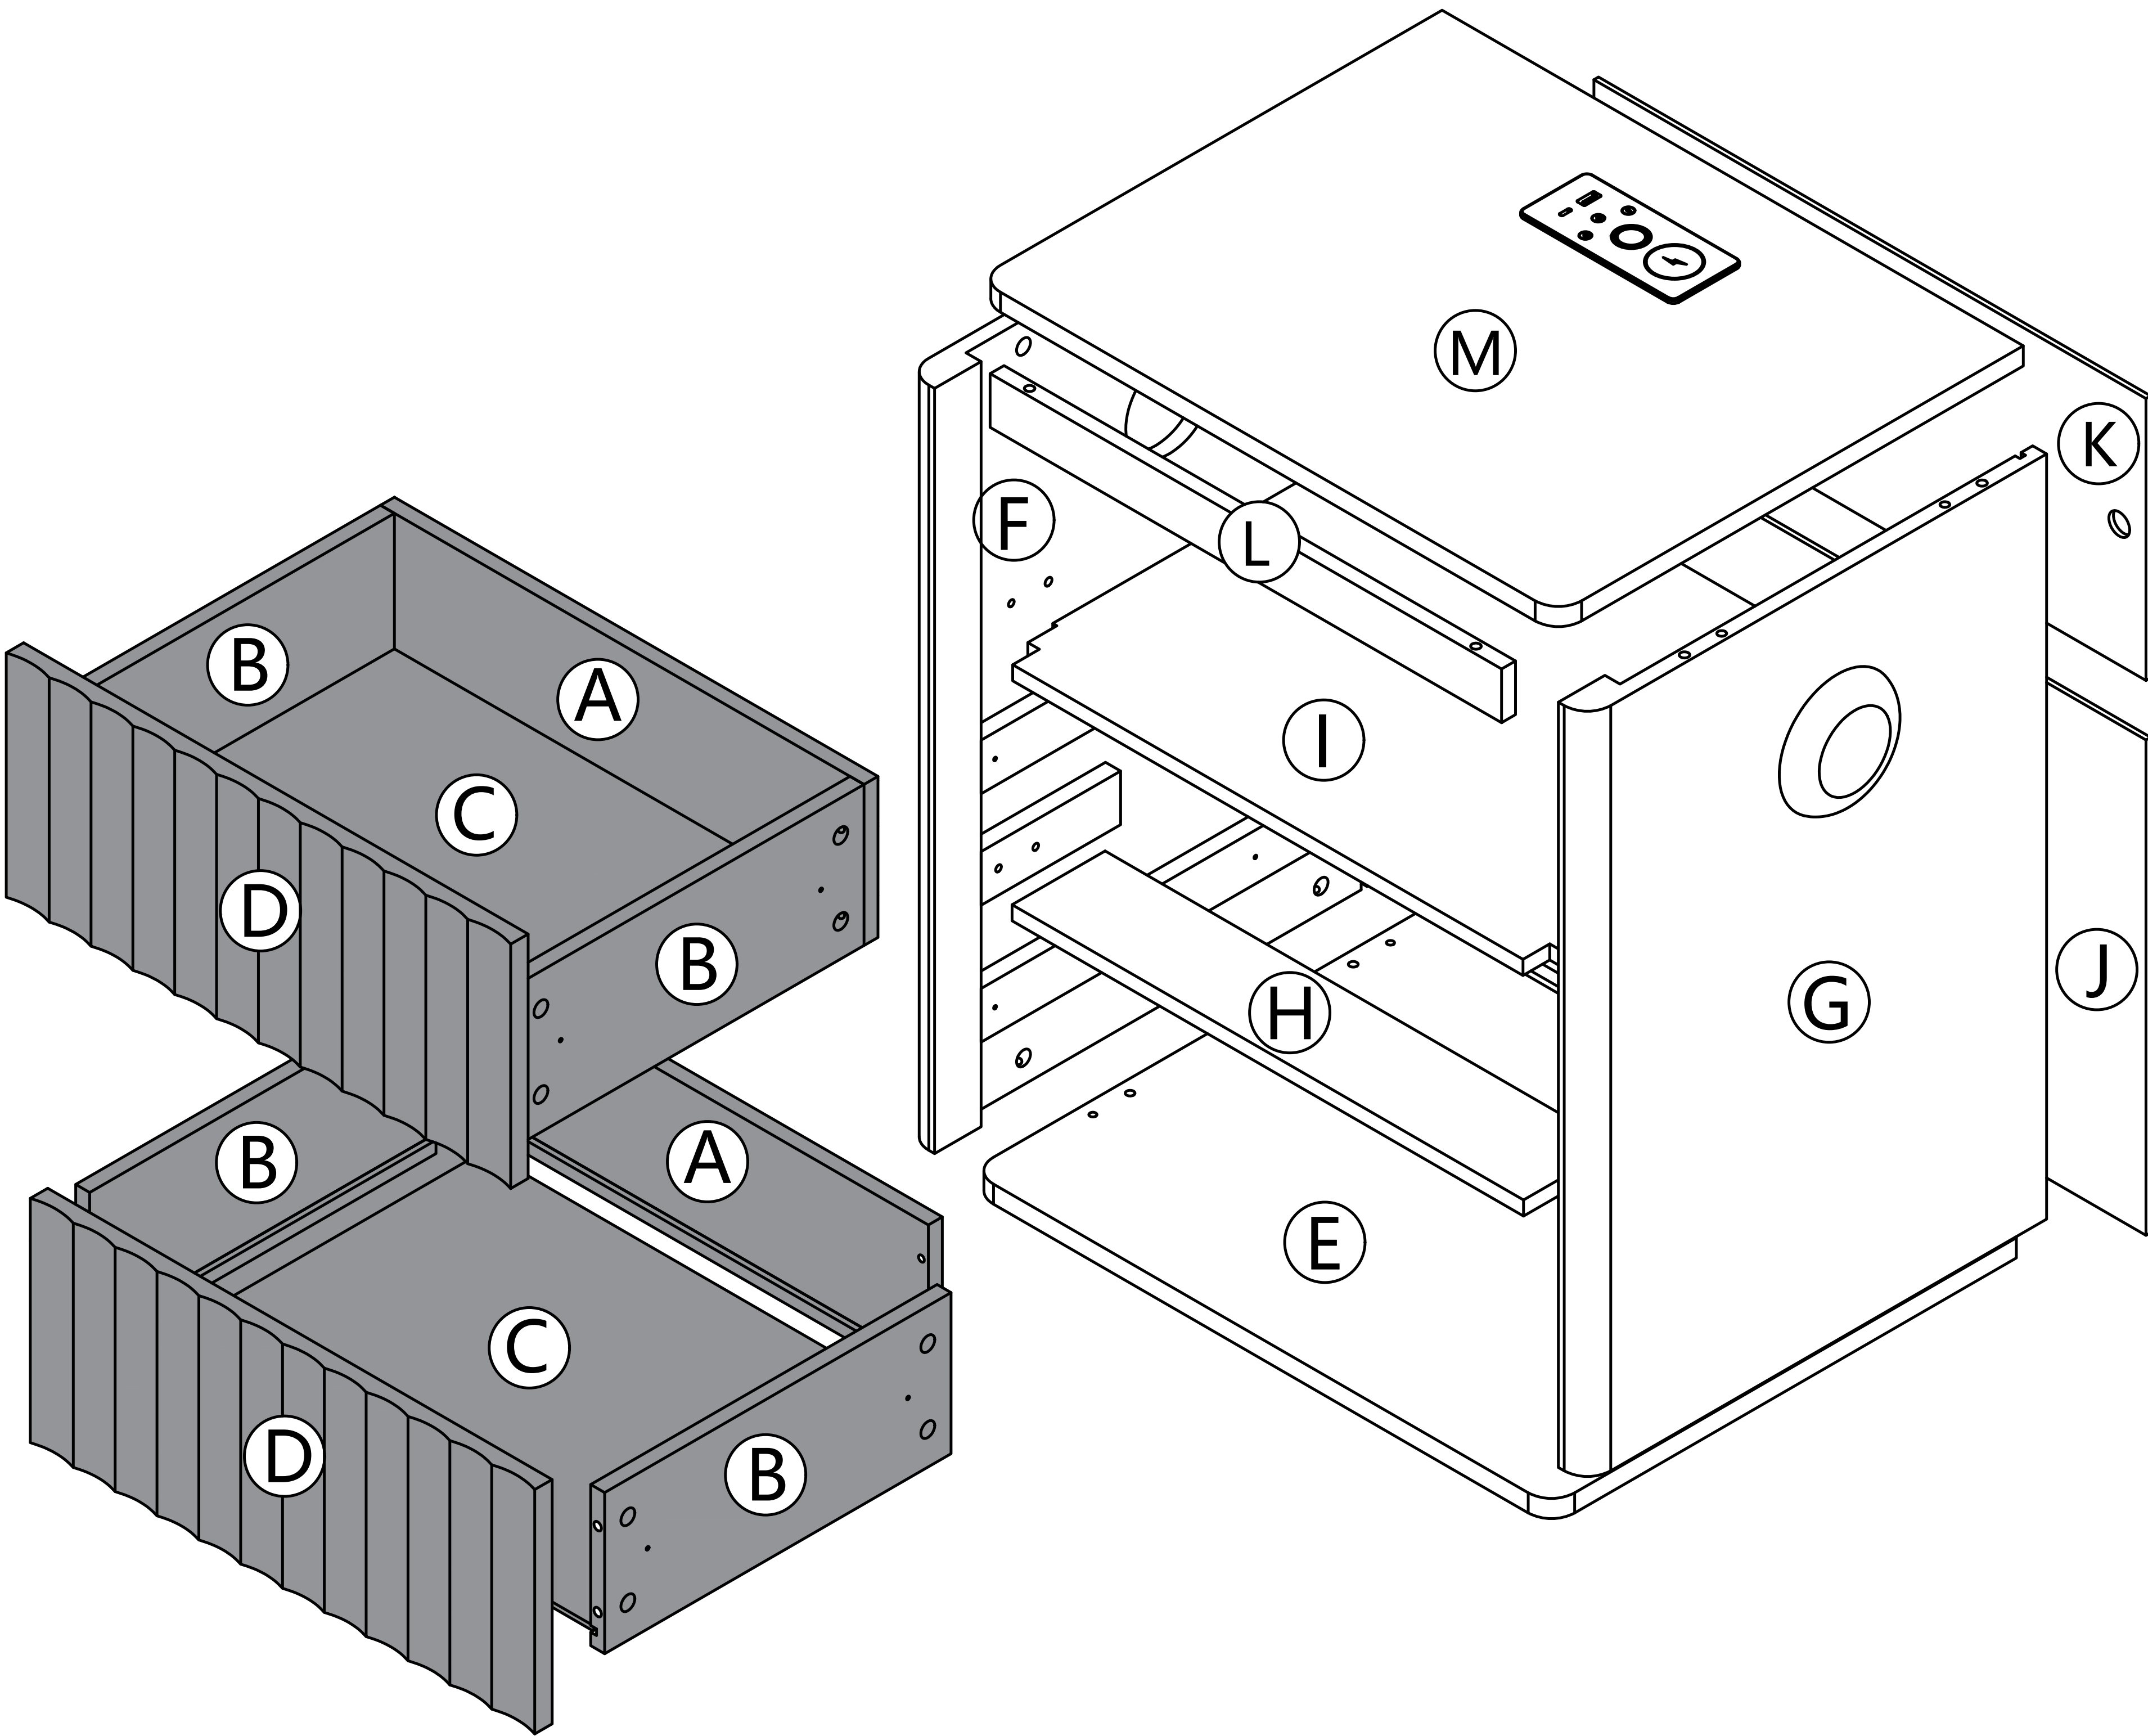 


Use parts ① and ②



 
Step1

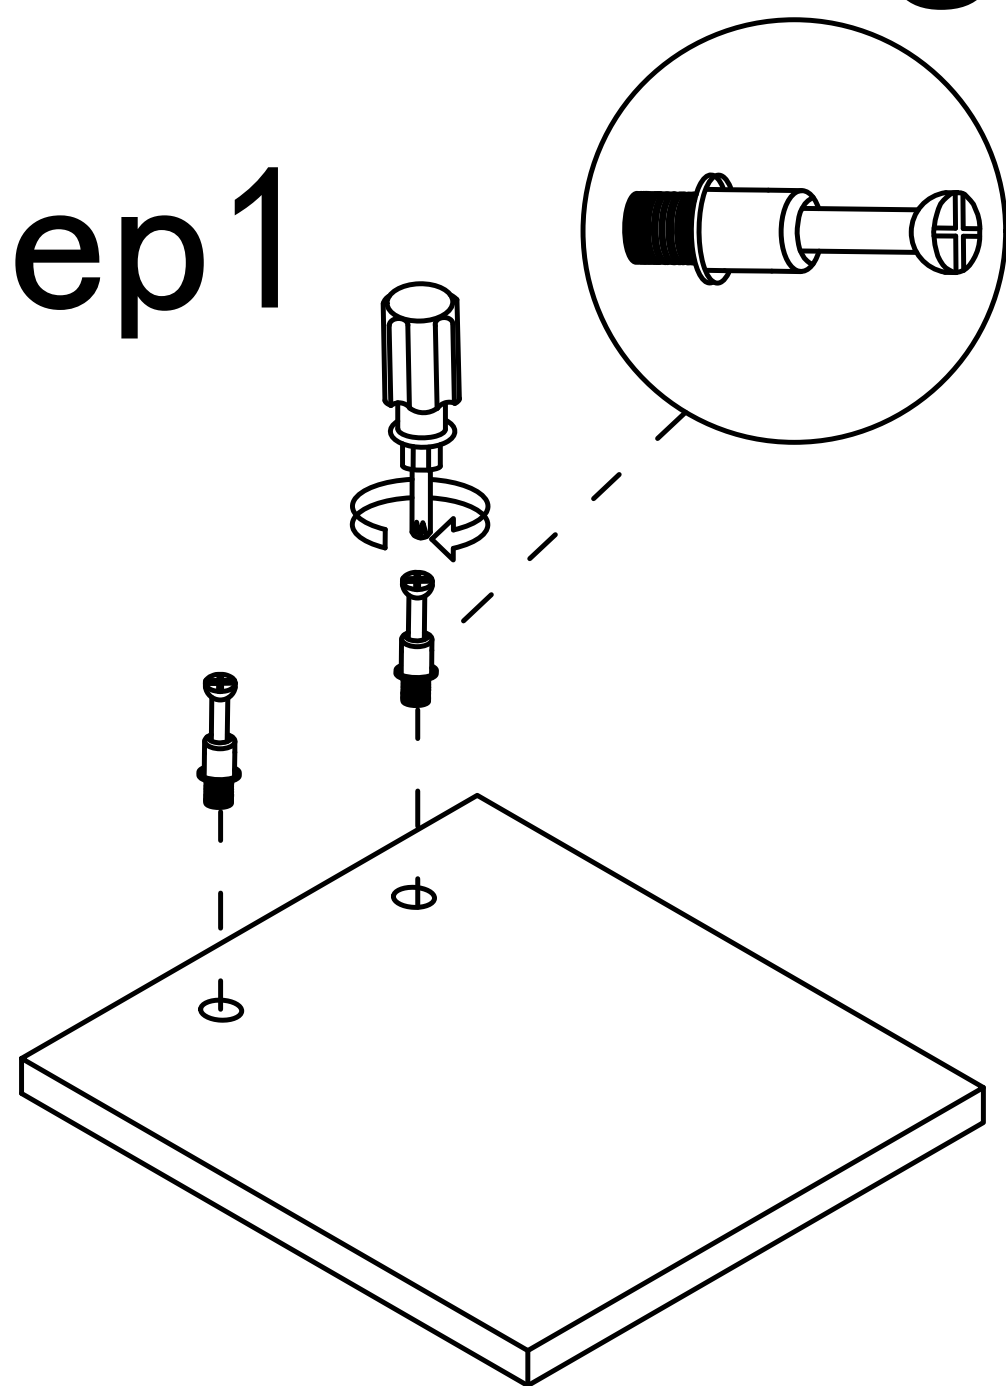

 Step2

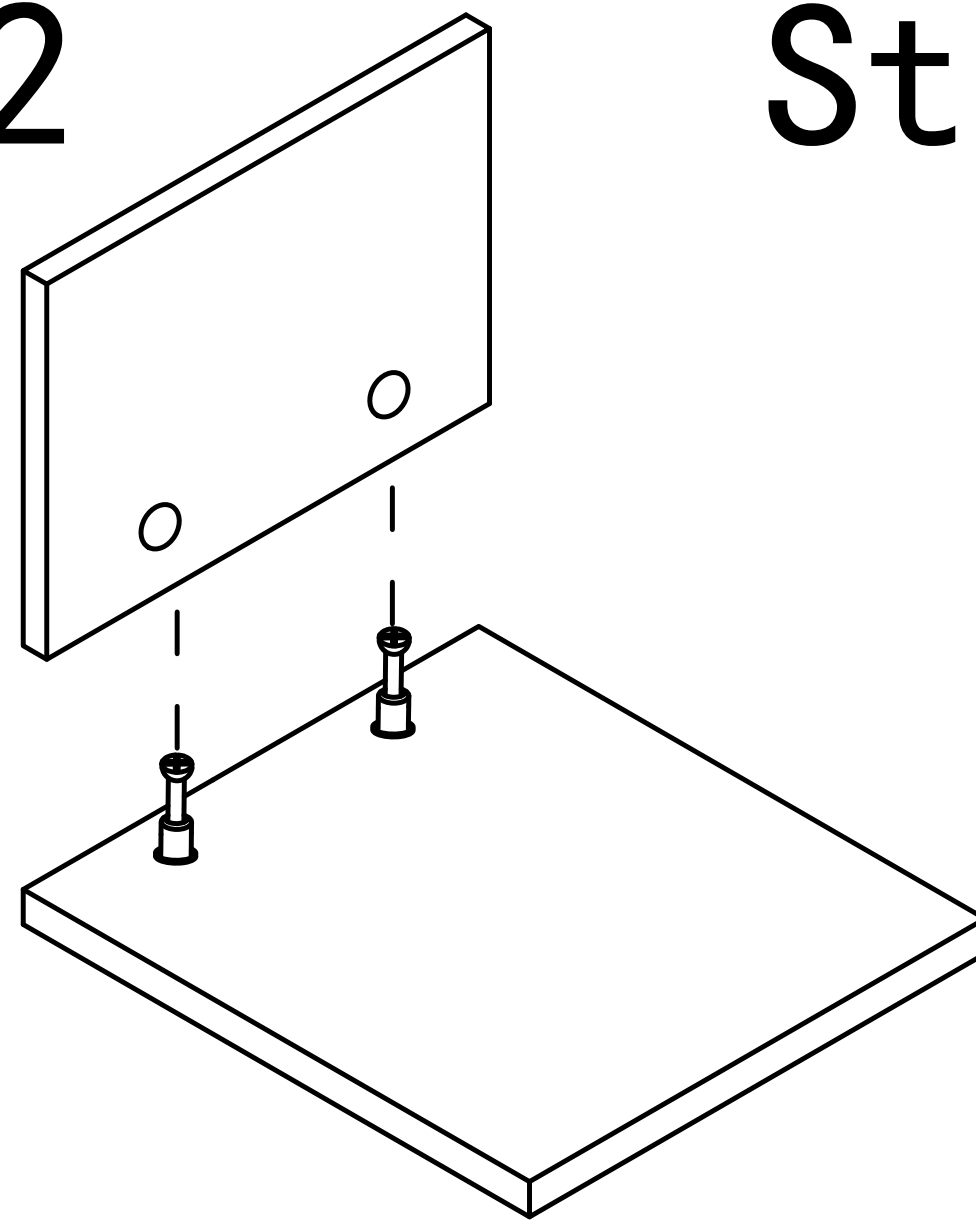

   Step3

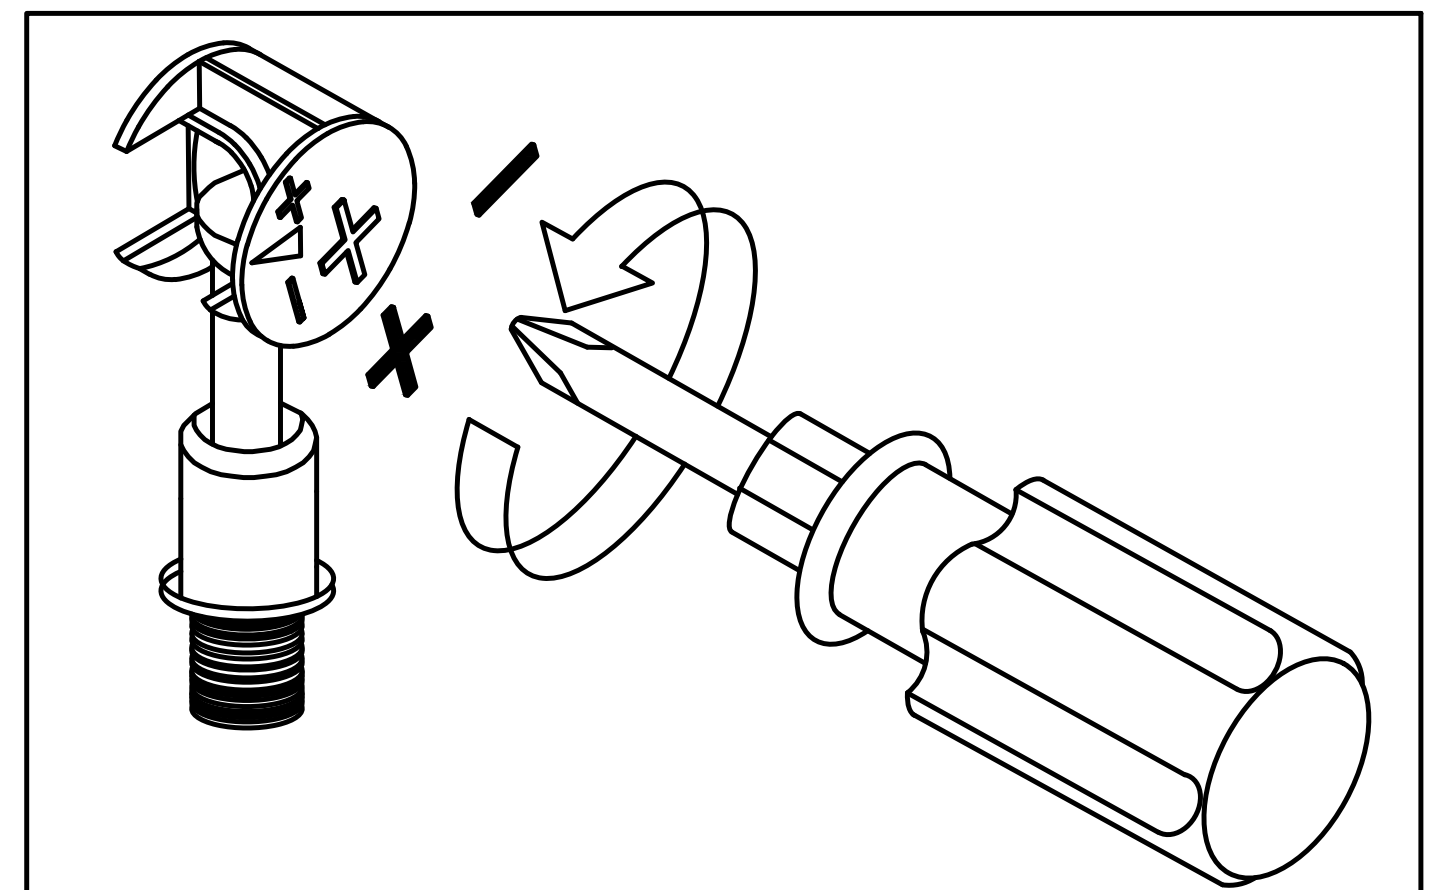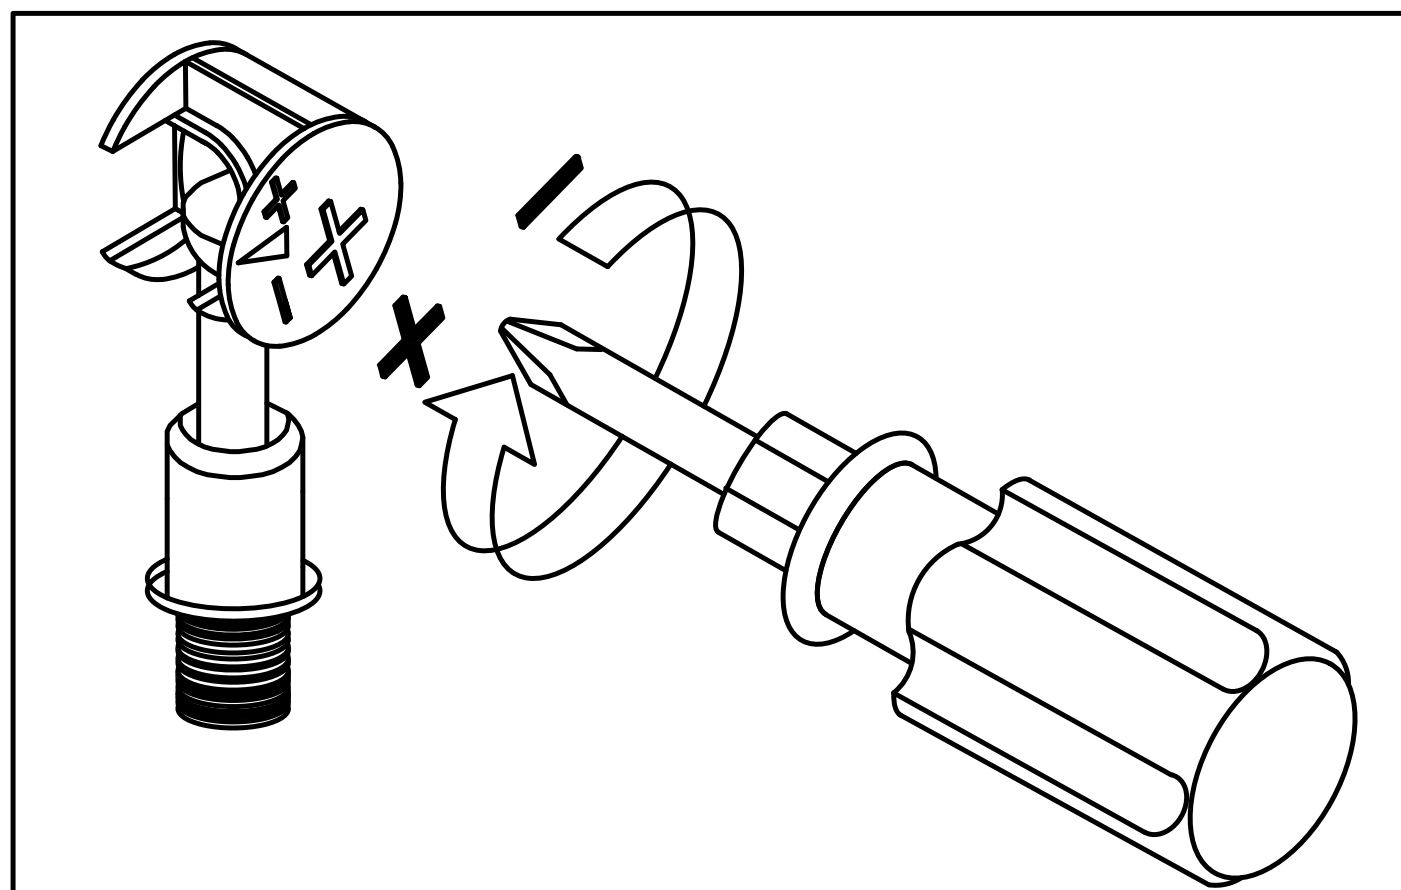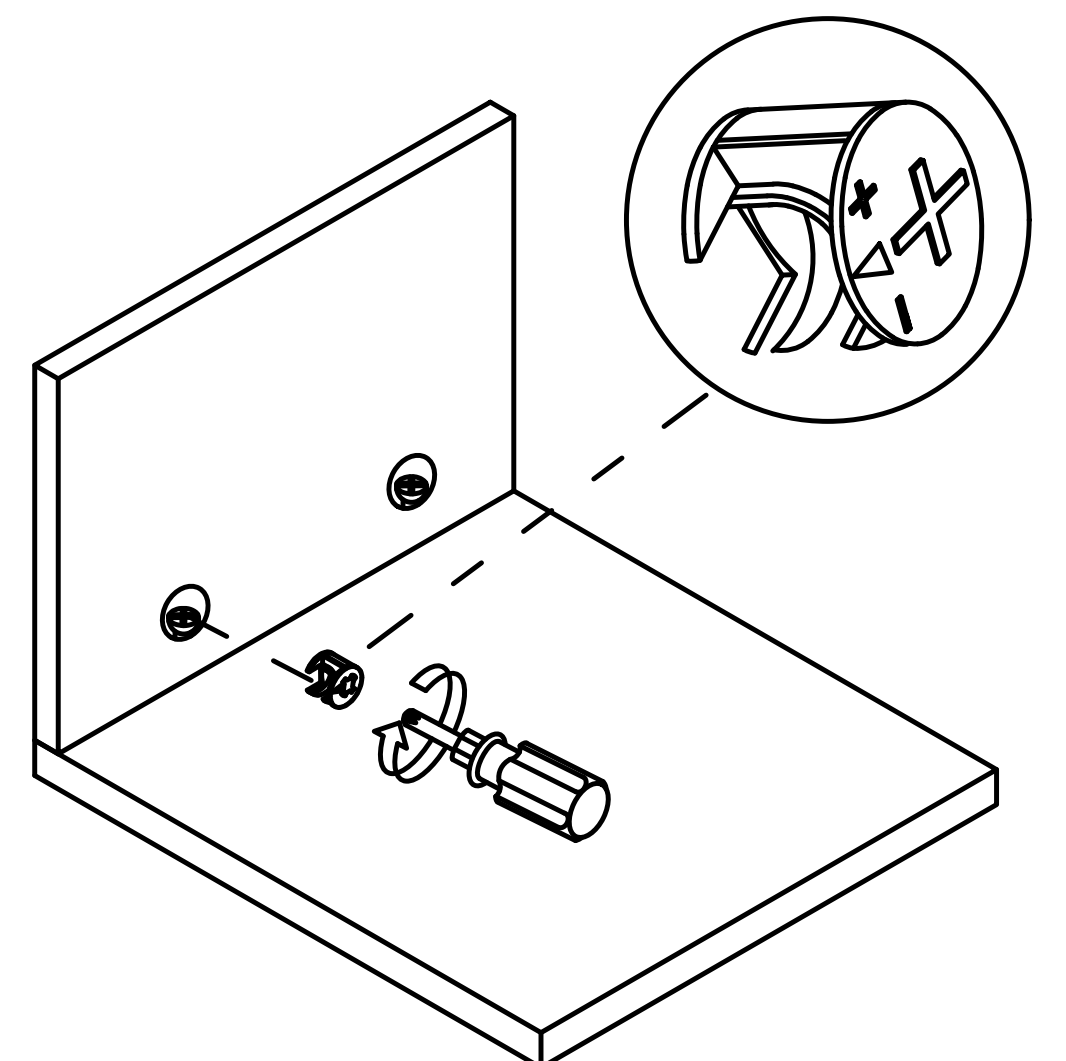


Use a screwdriver to lock in the direction of the "+" sign


Disassemble along the direction of "-" sign

Step 1

 ①



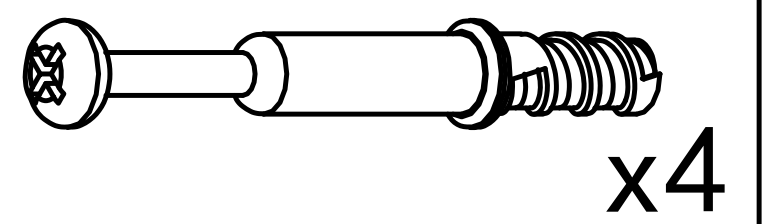


x4




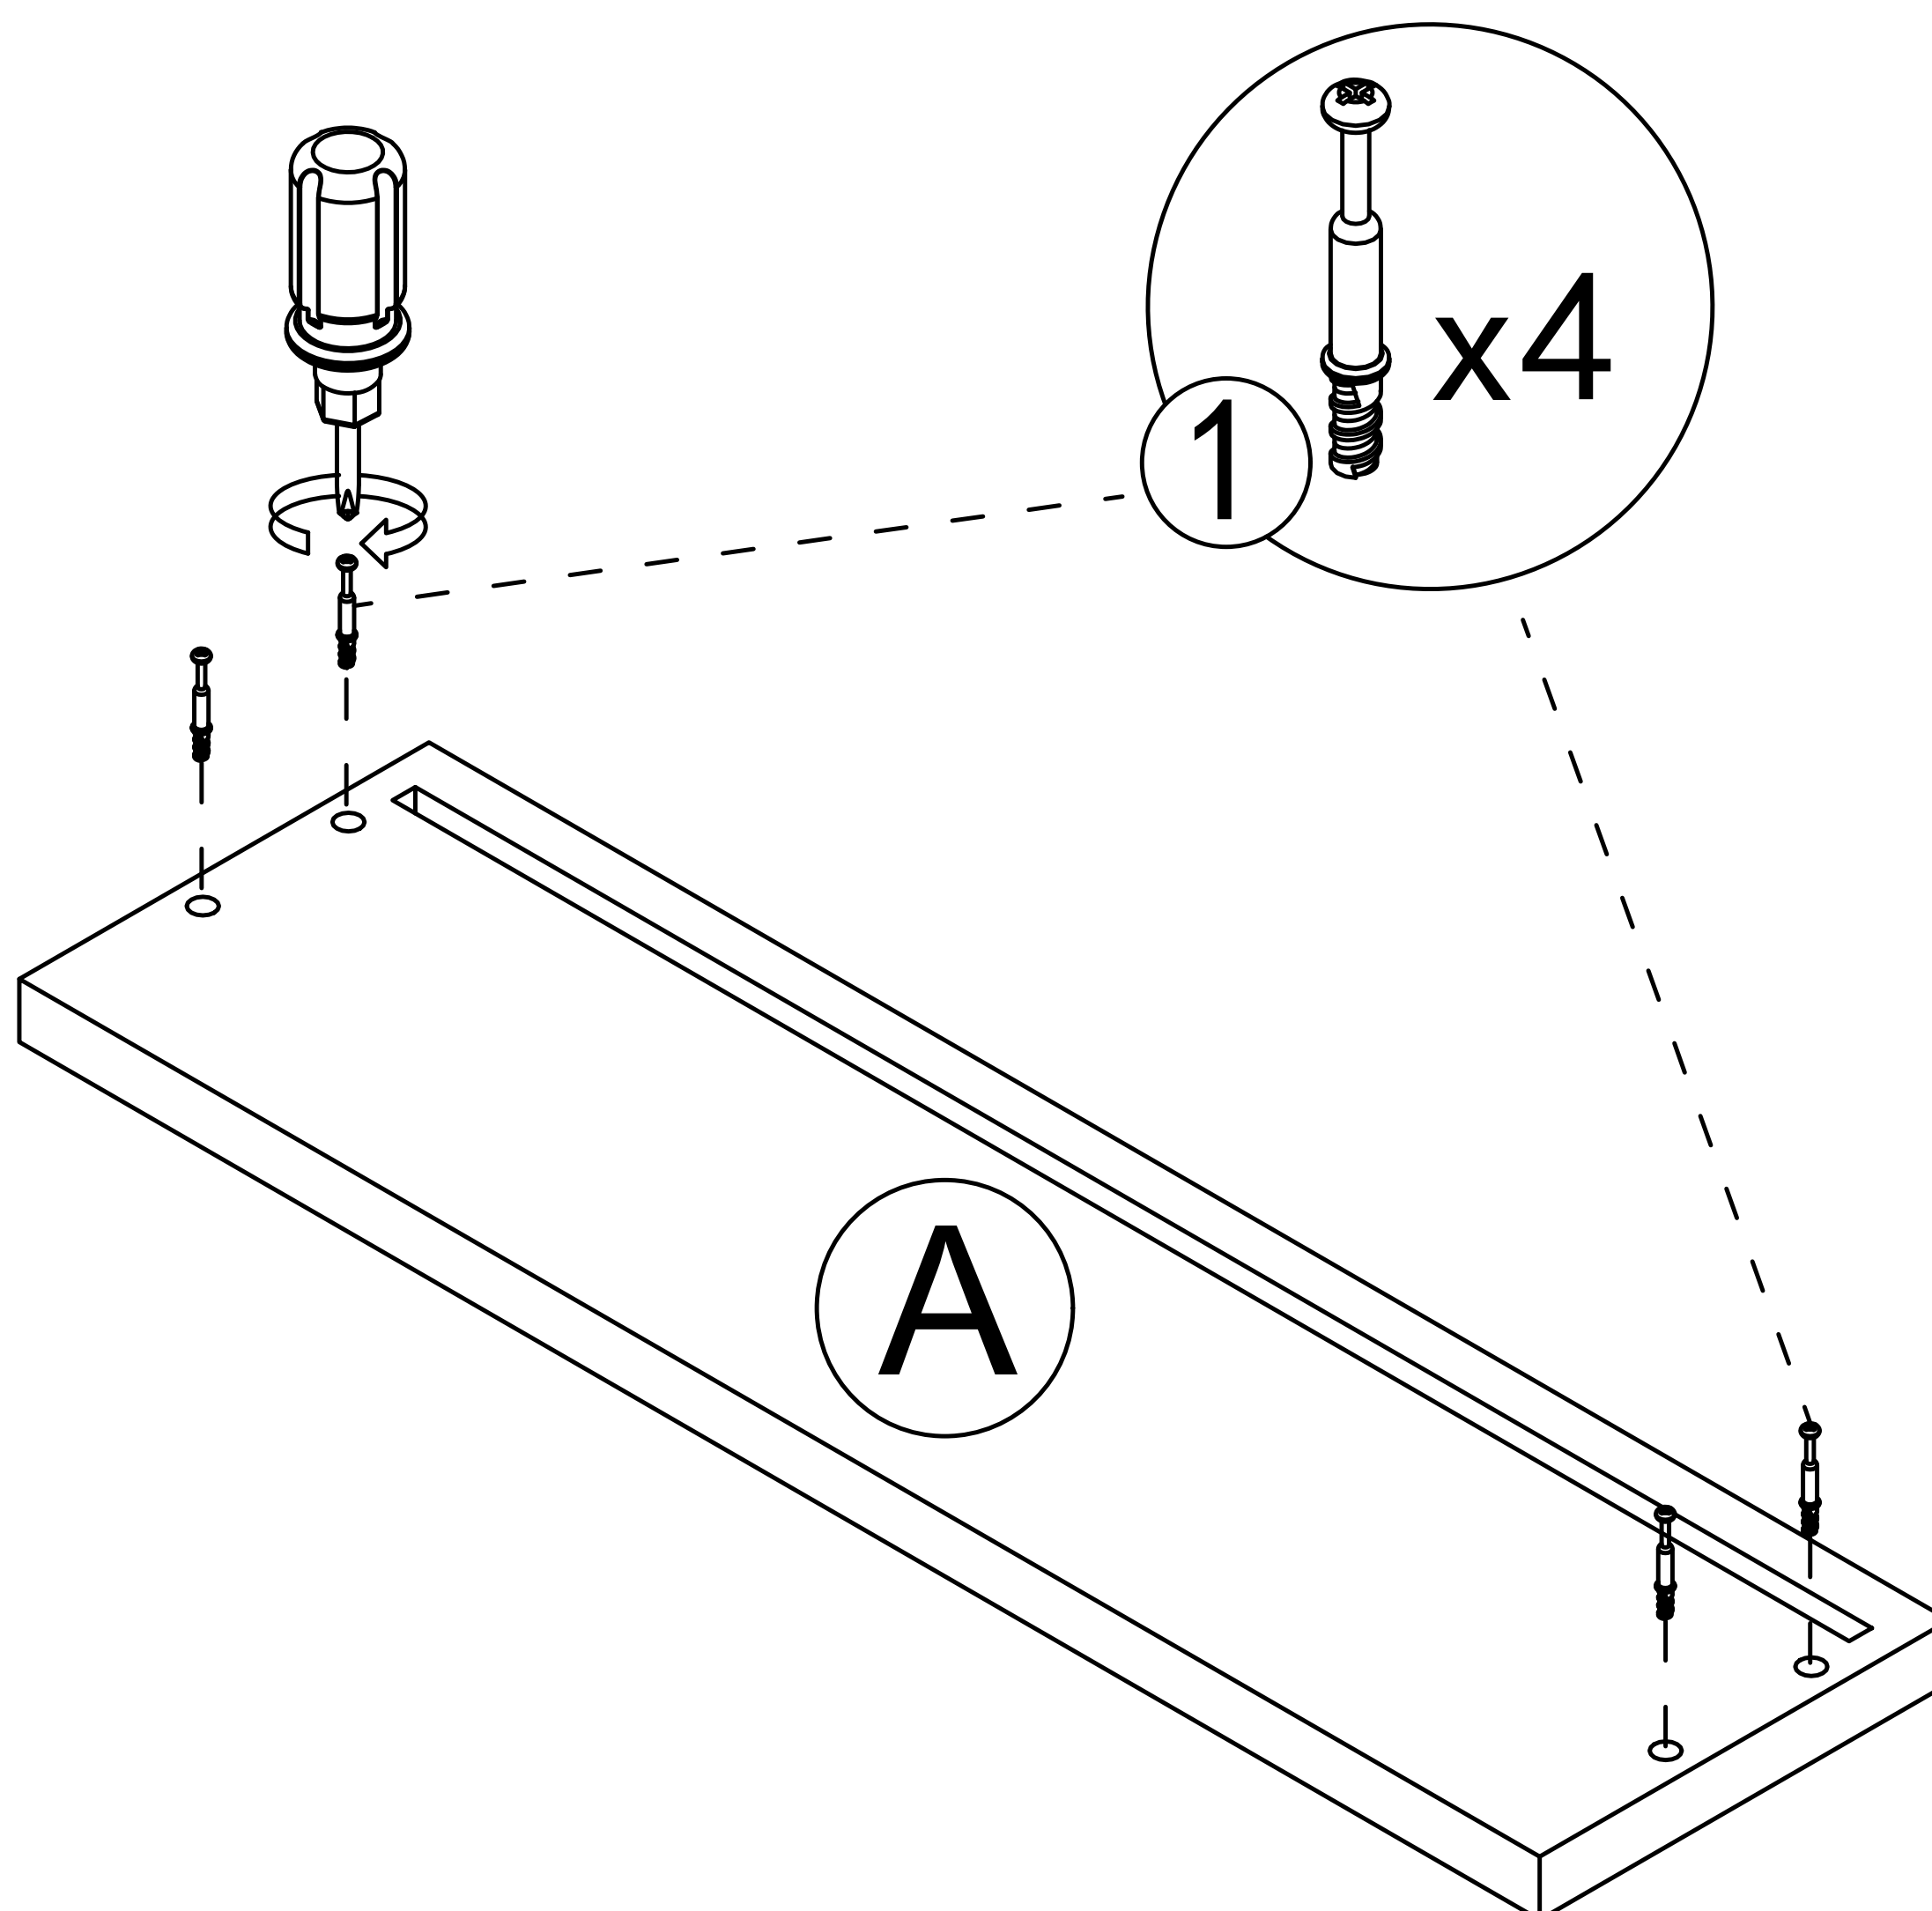 


5

  
 
Step 2

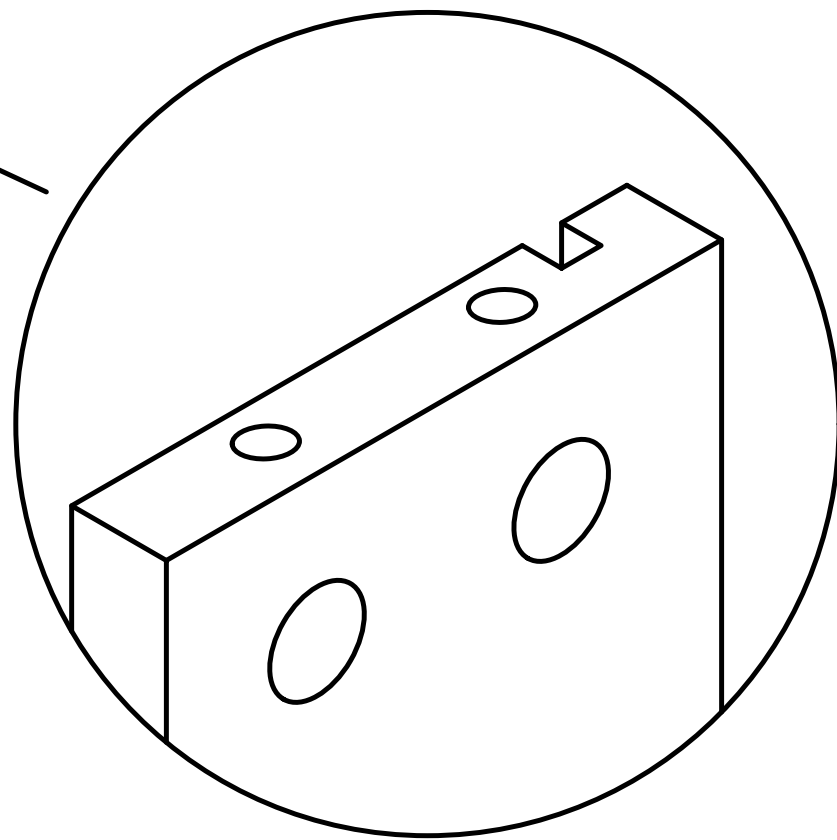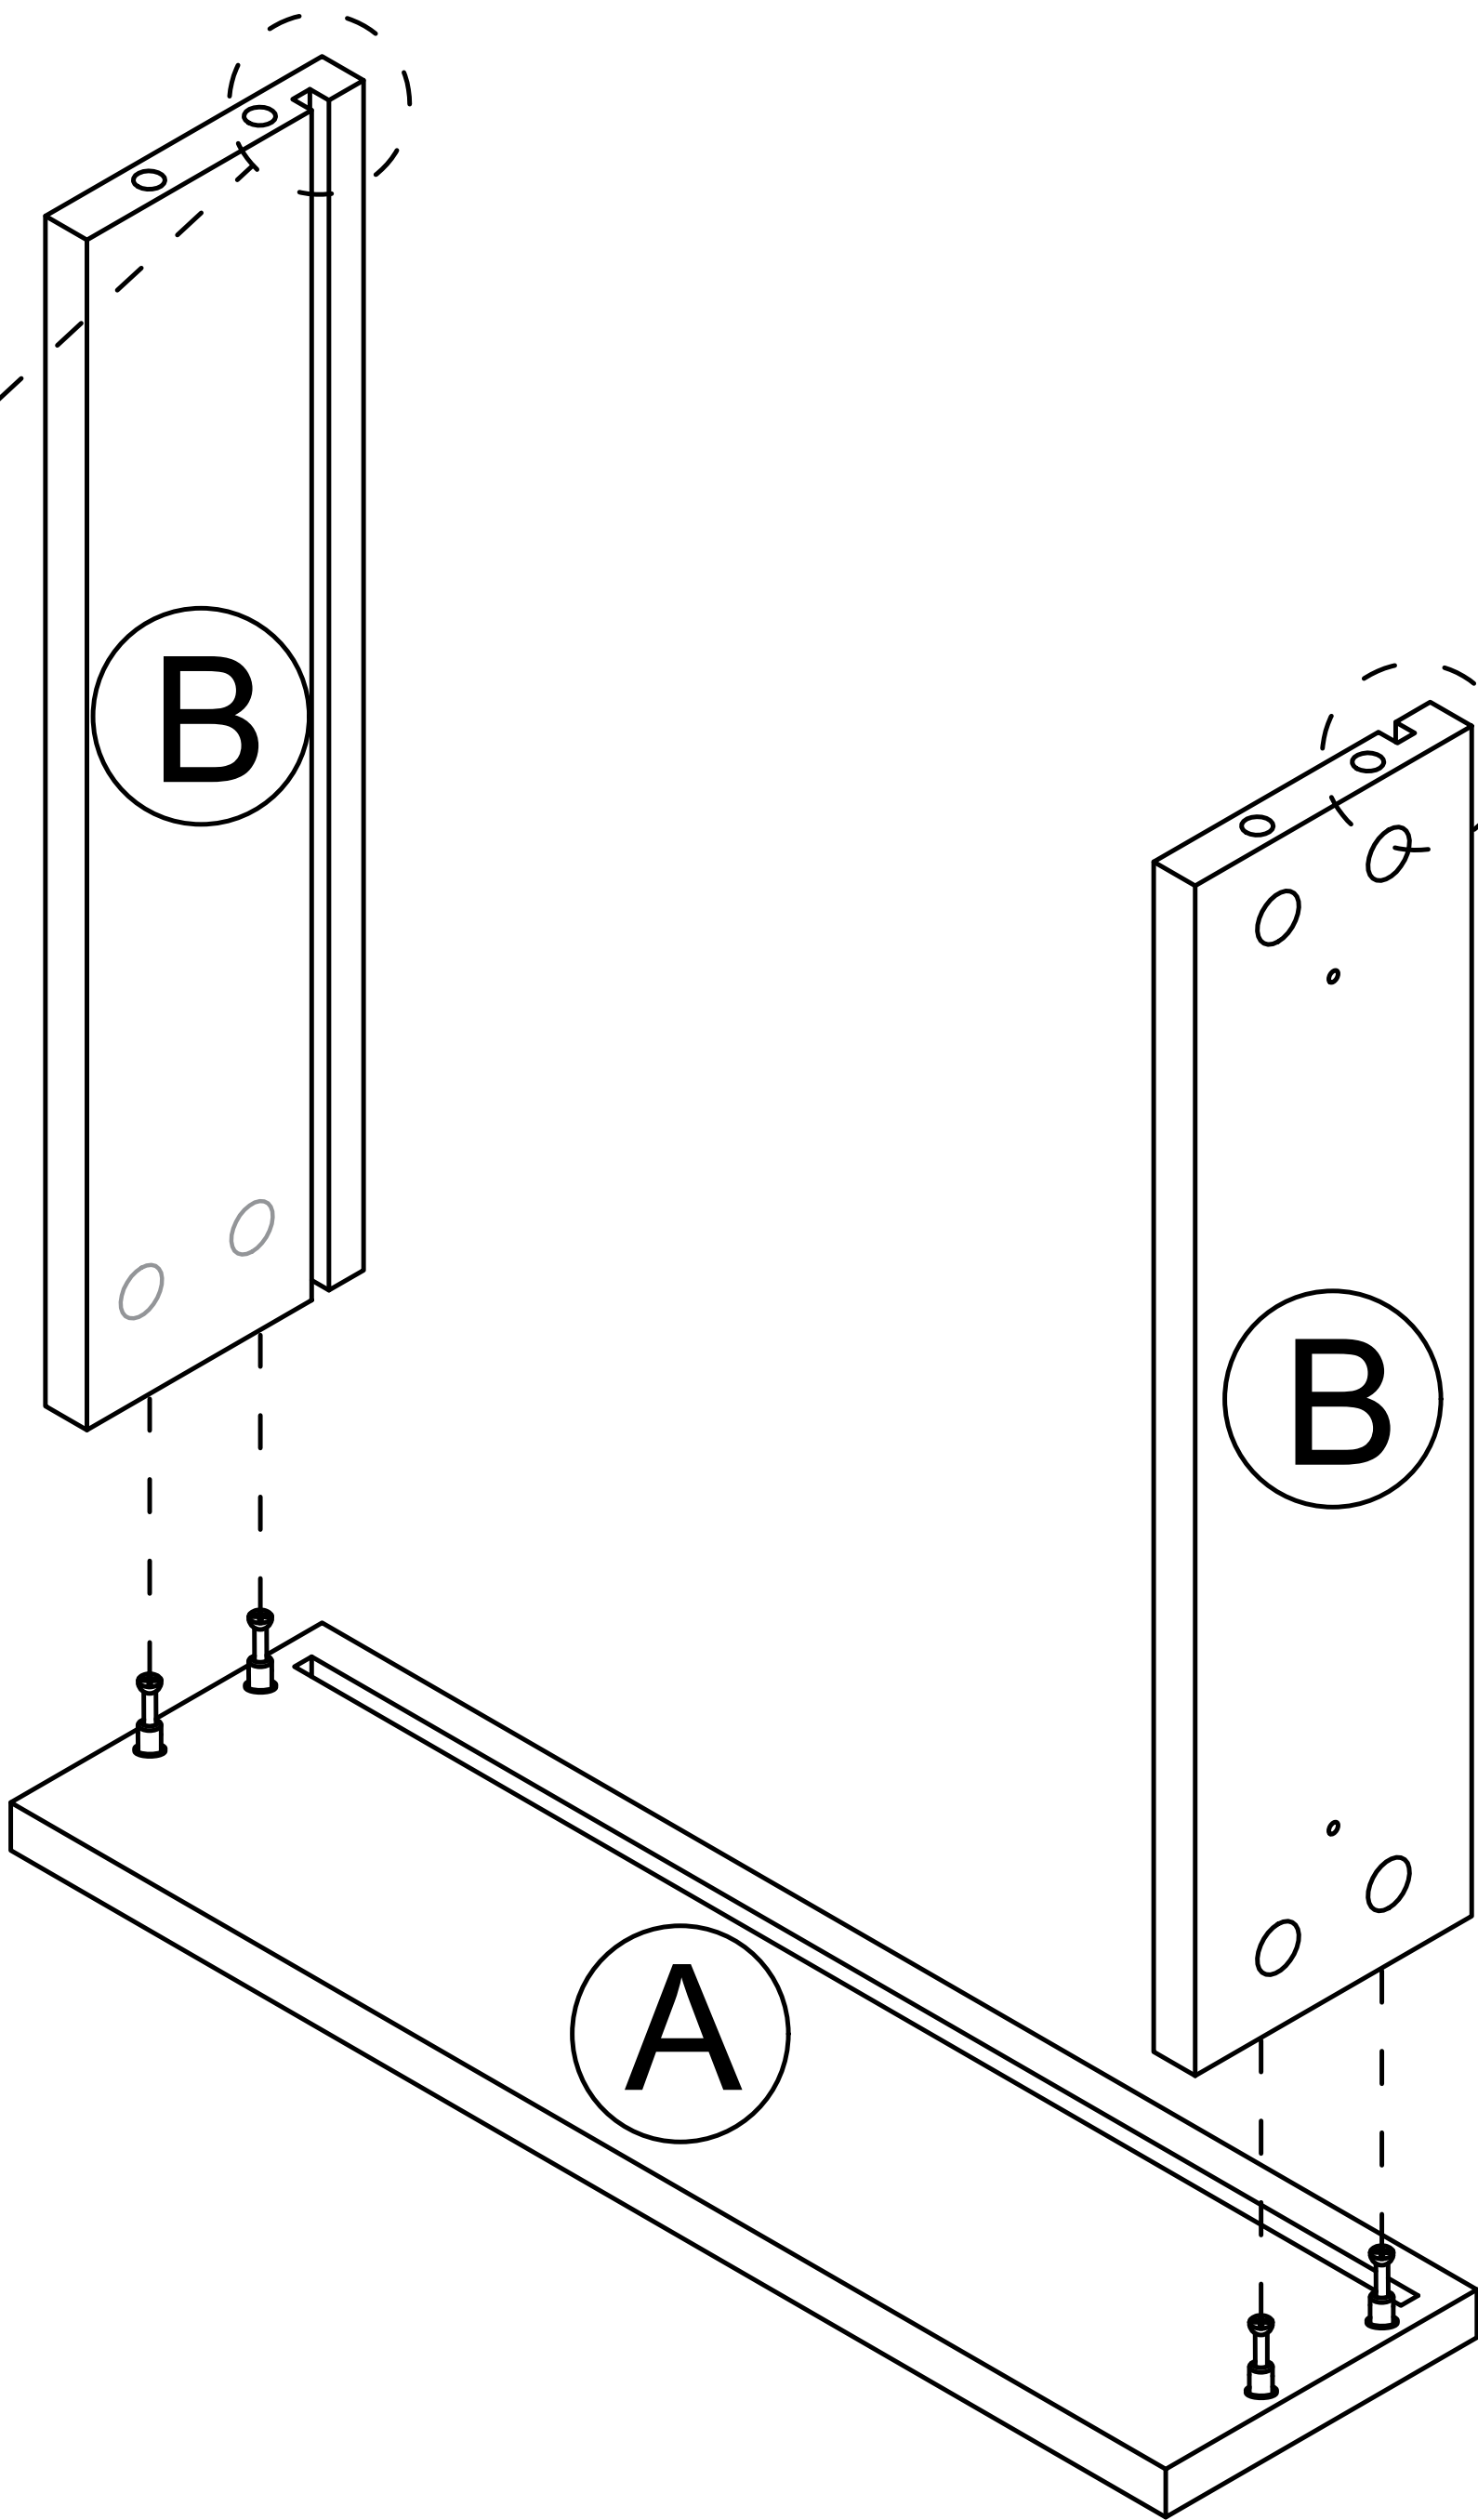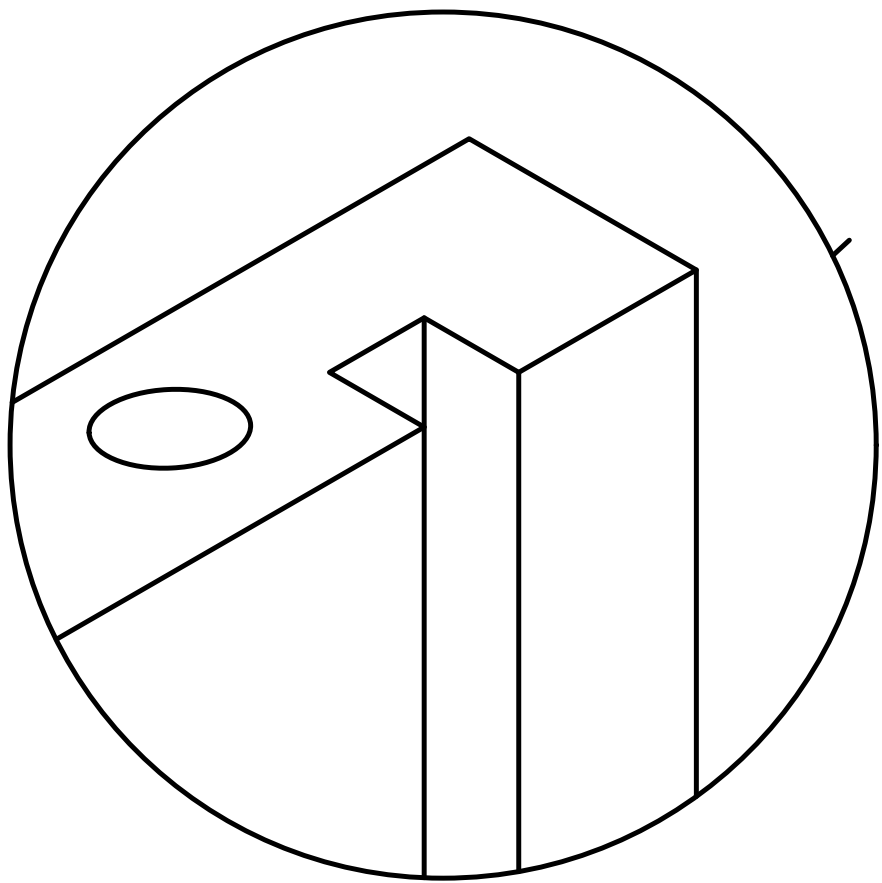

  
 
 
Step 3

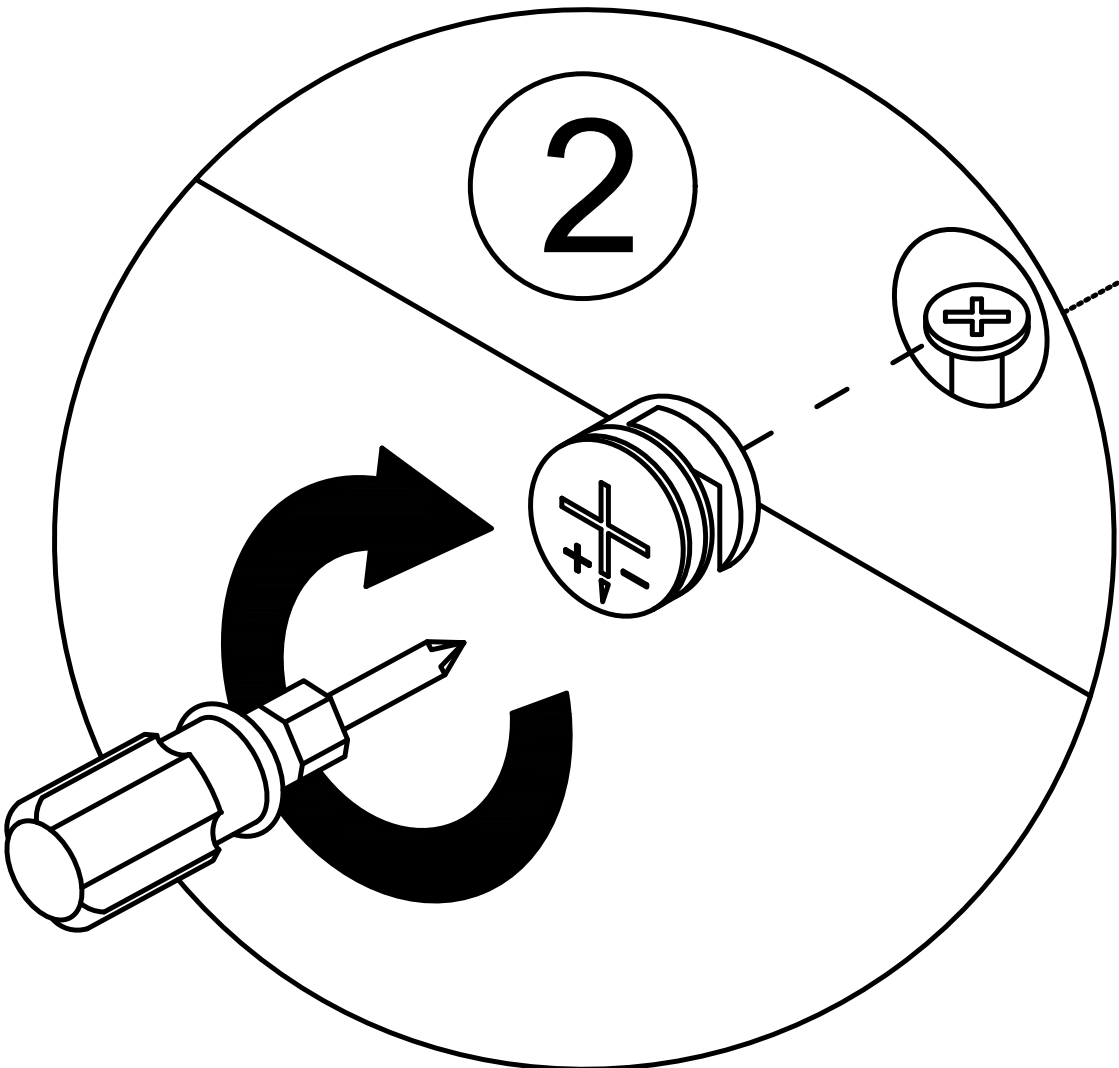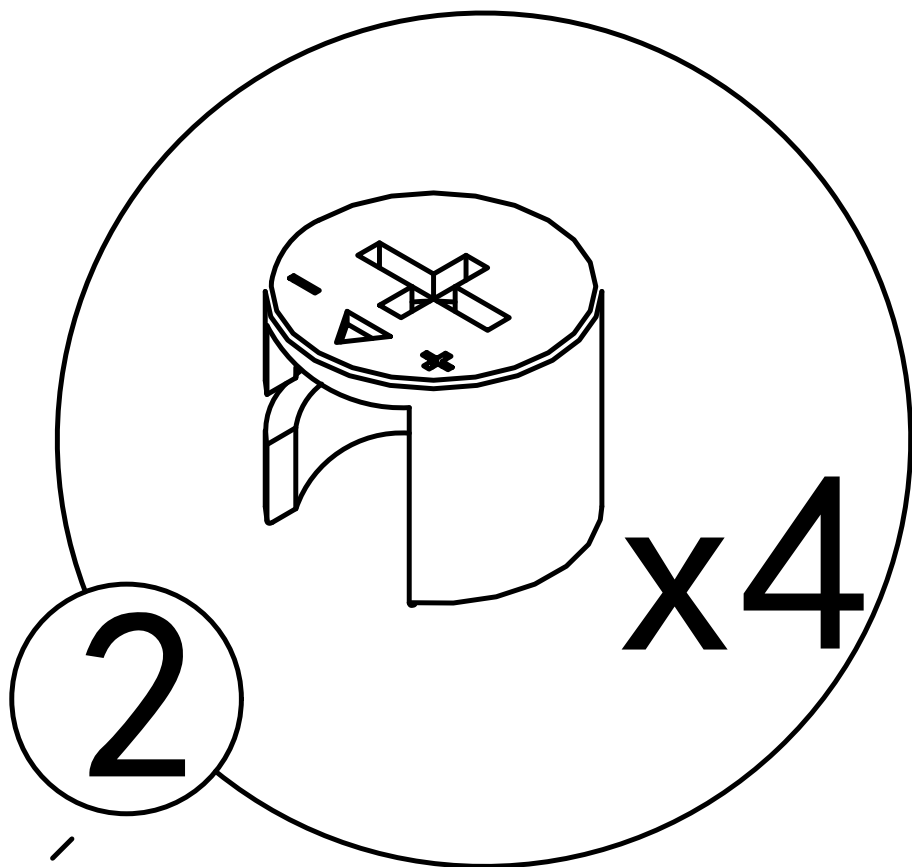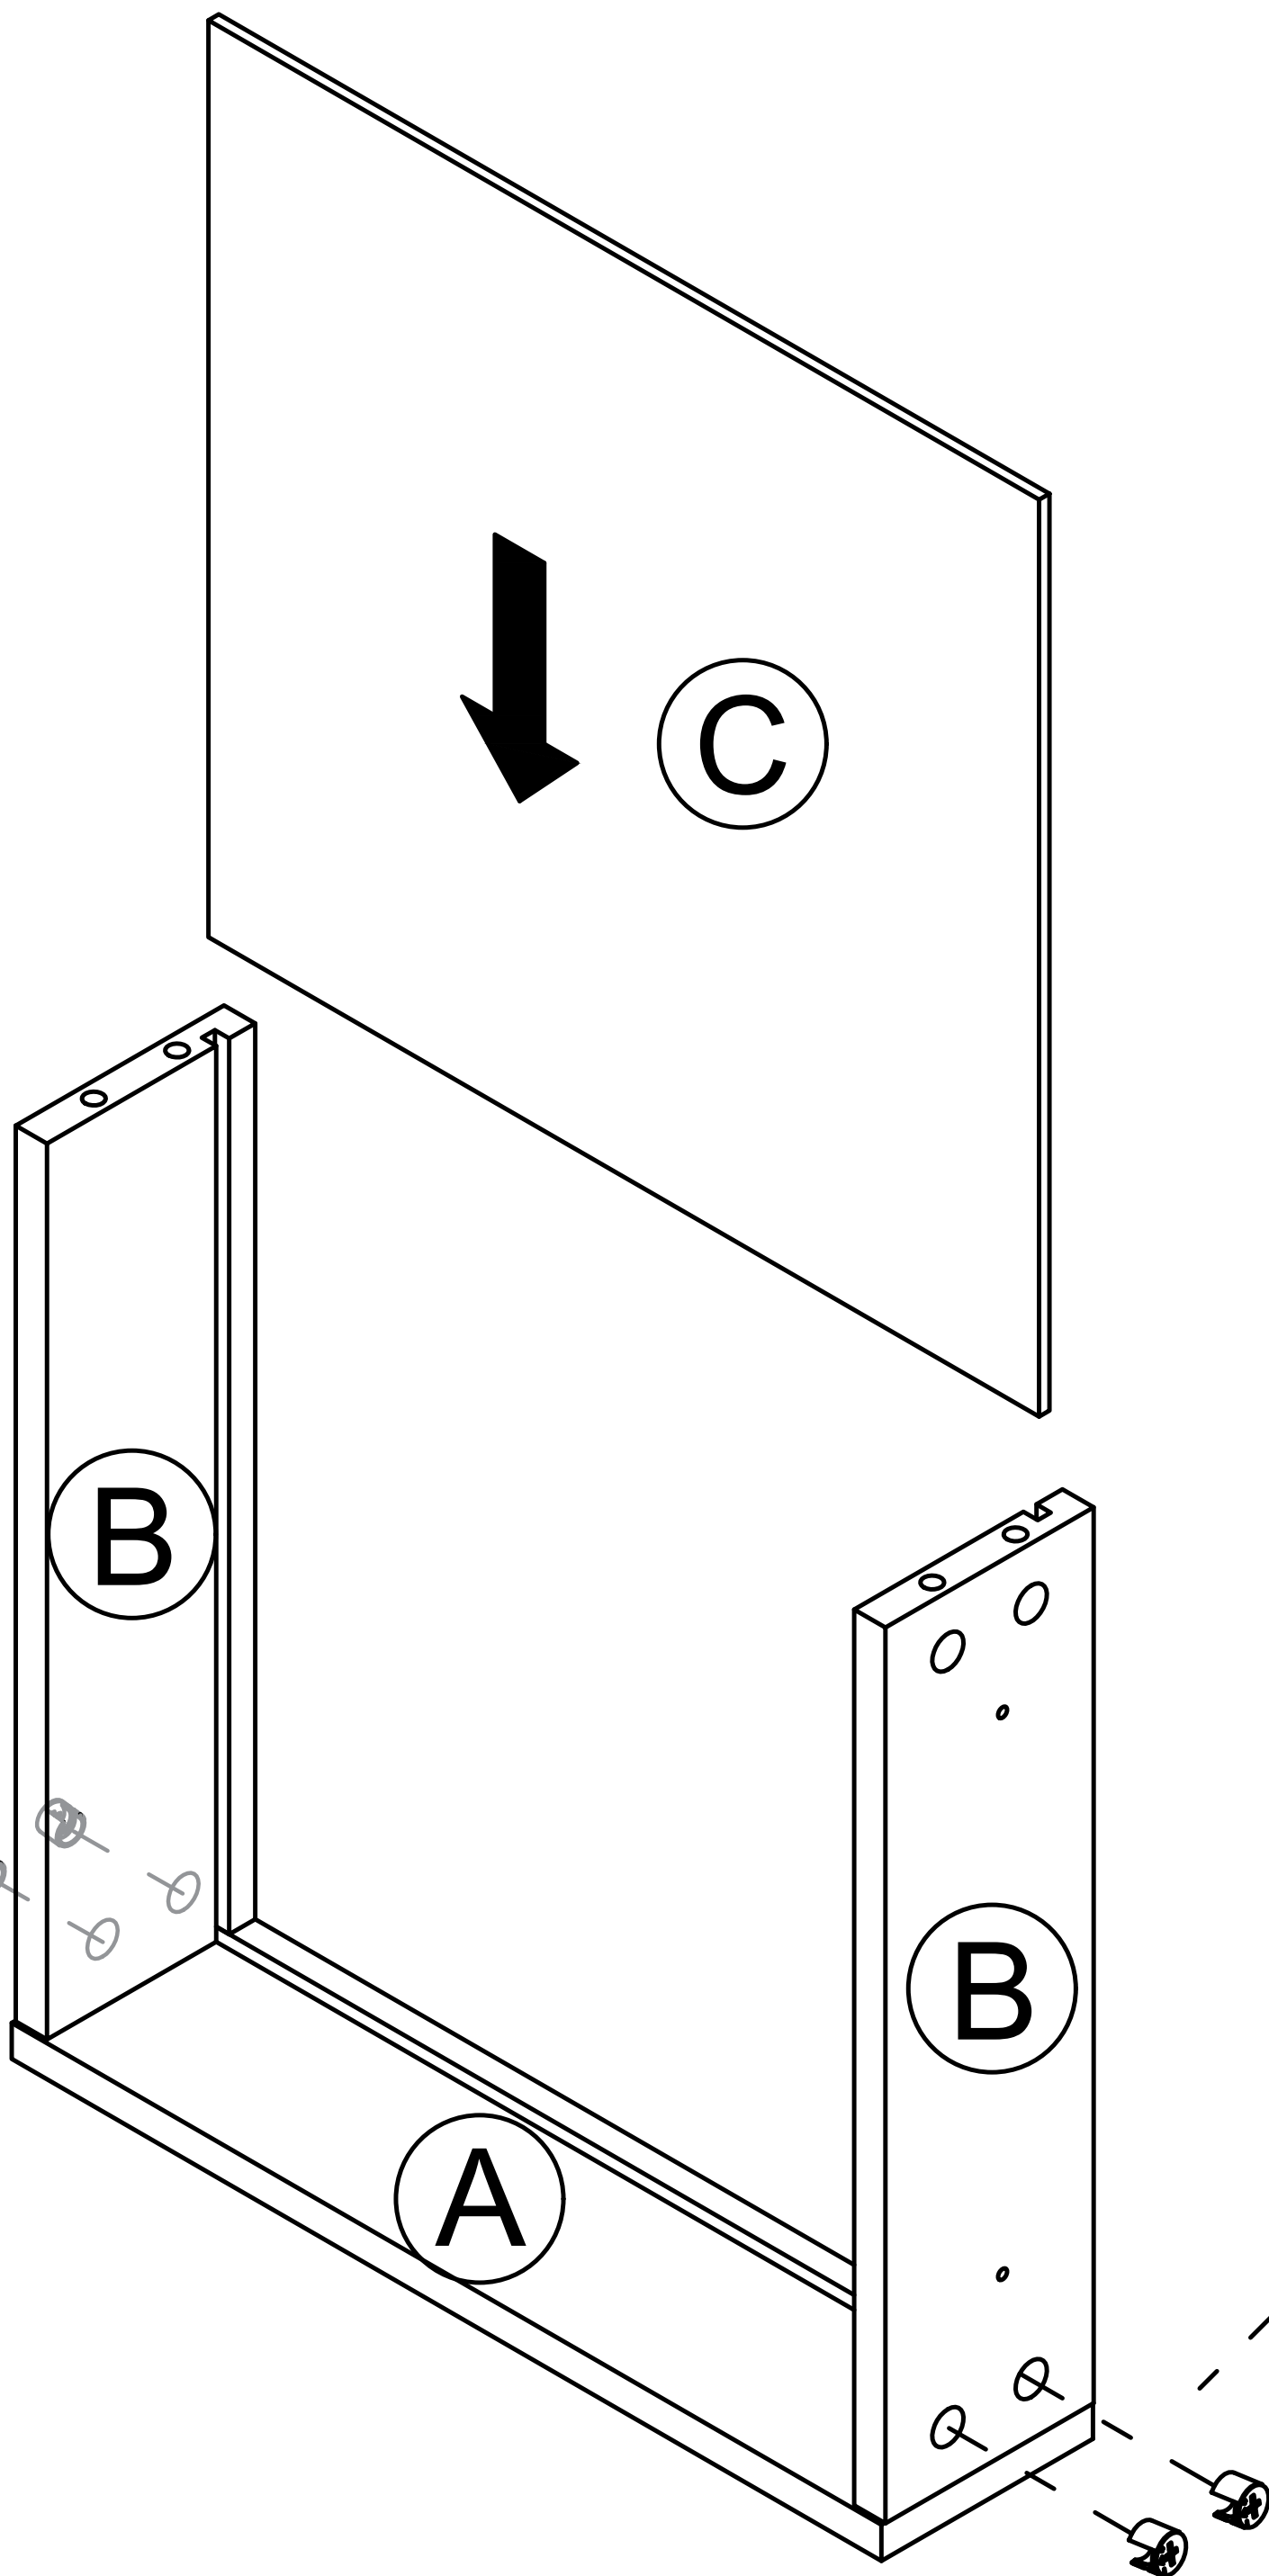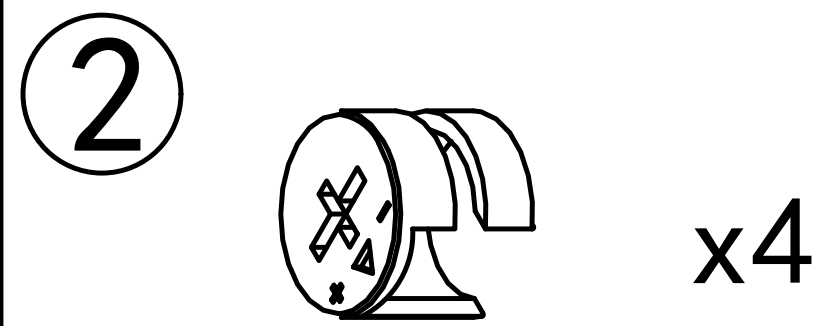

  
Step 4

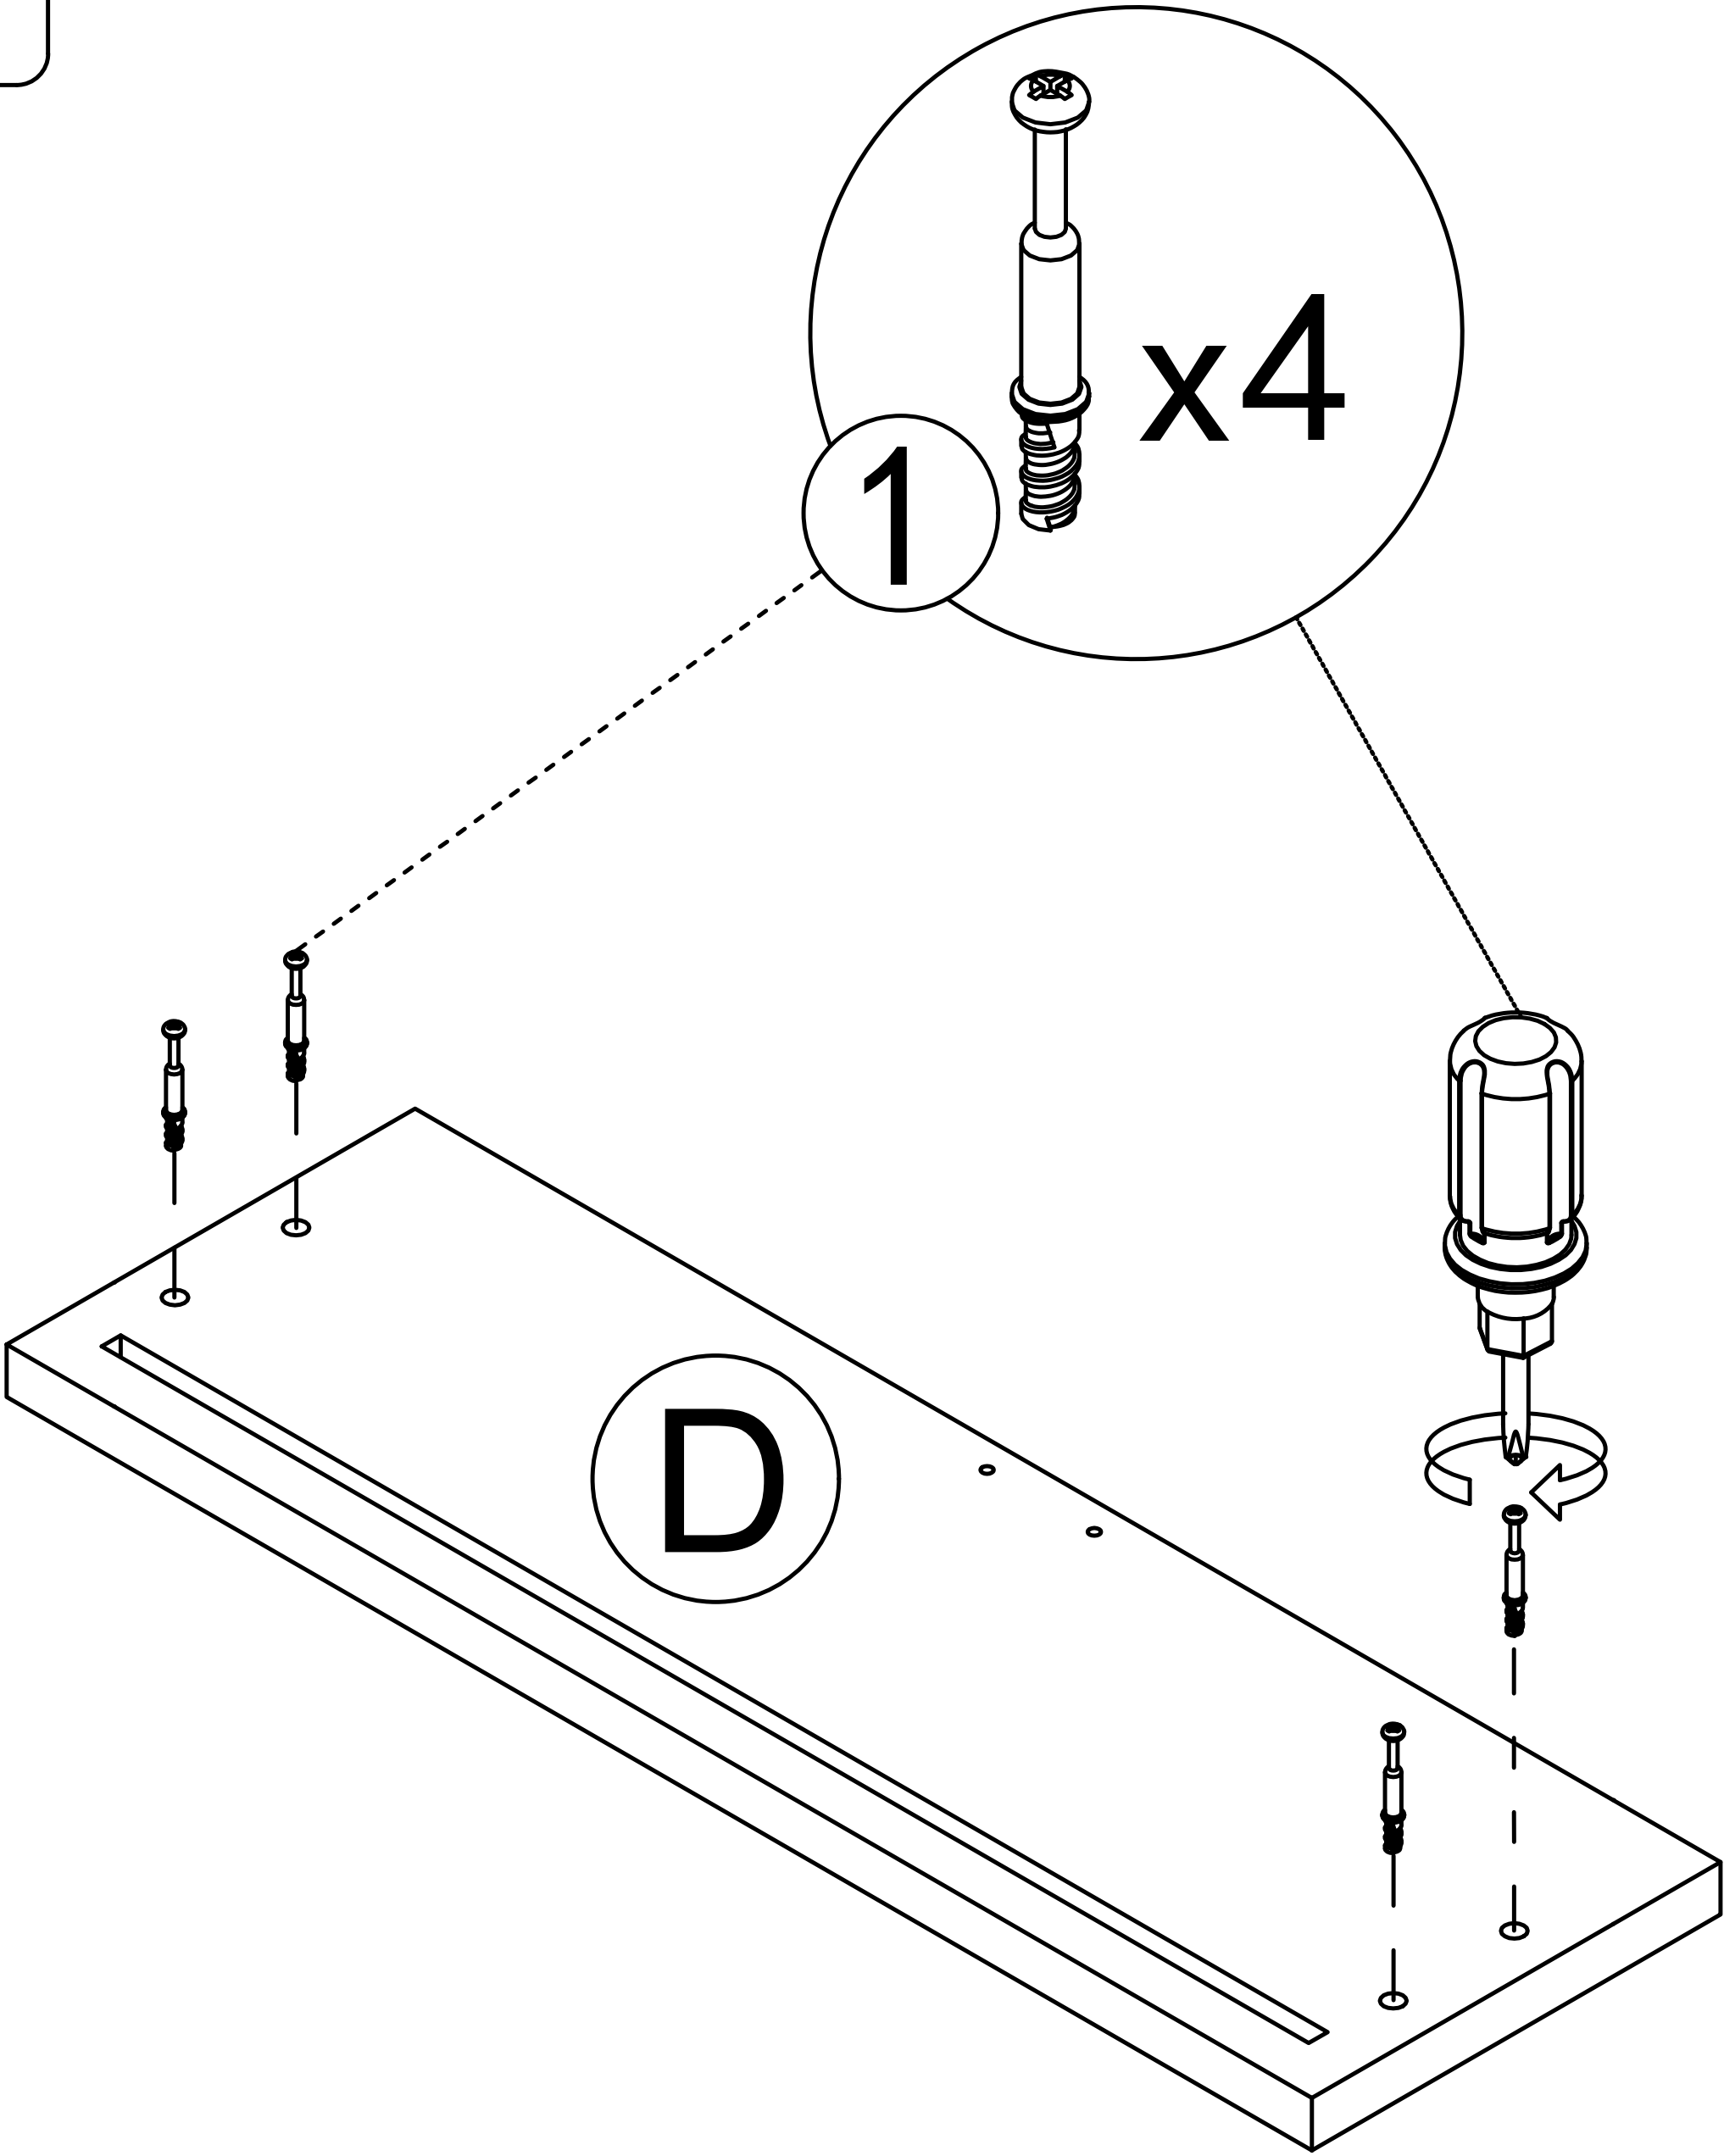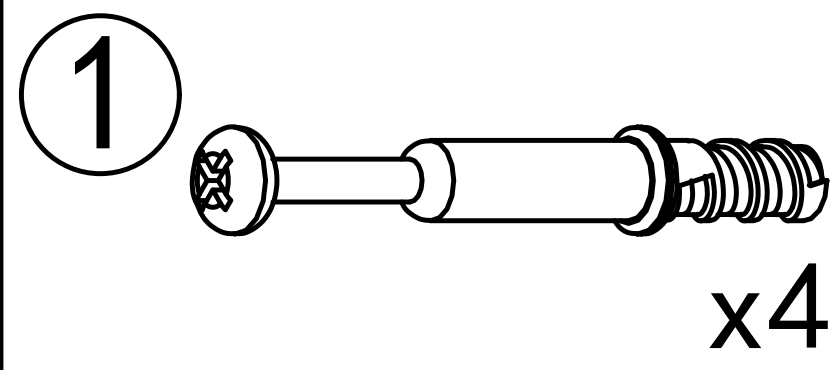

   Step 5

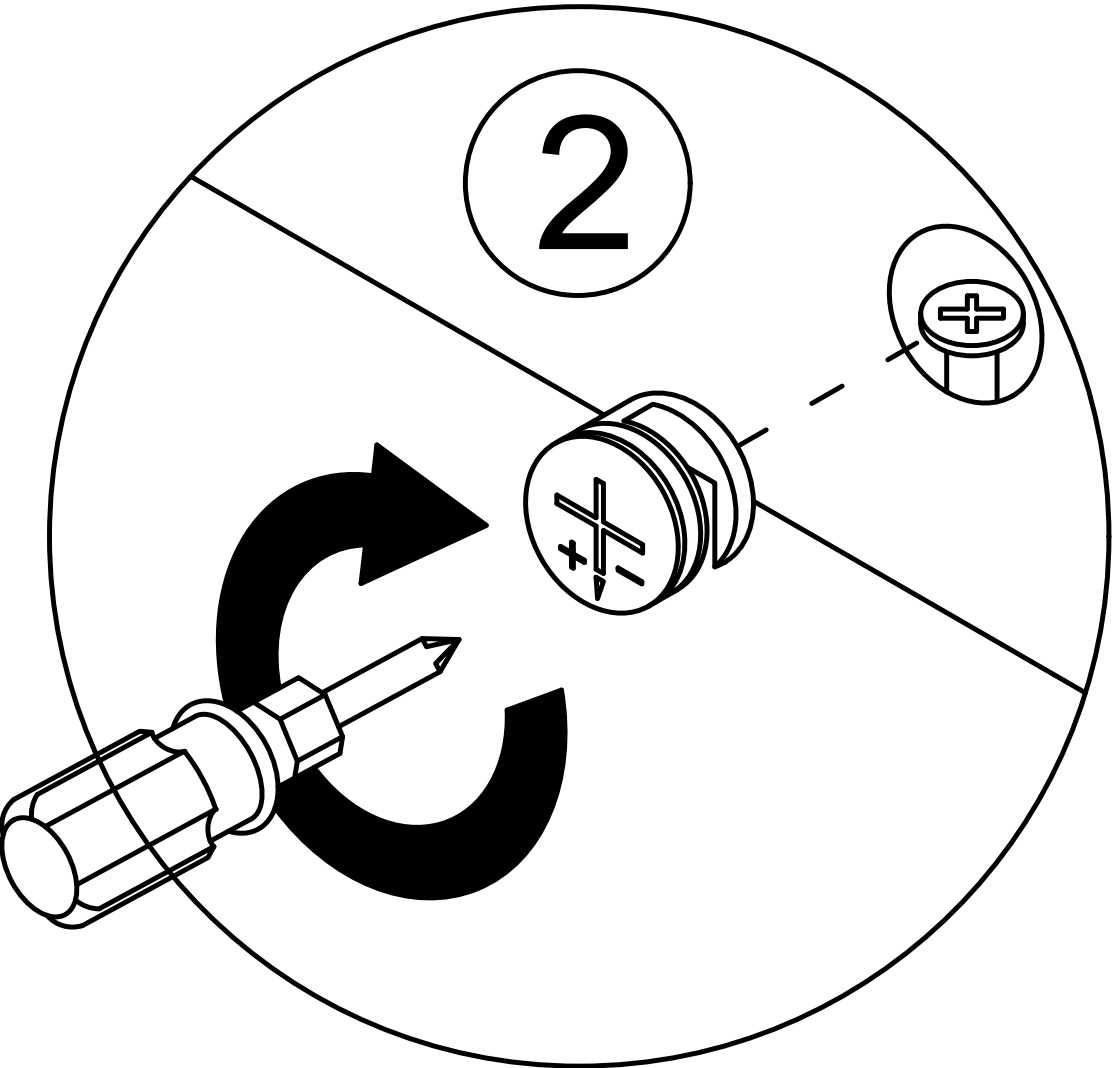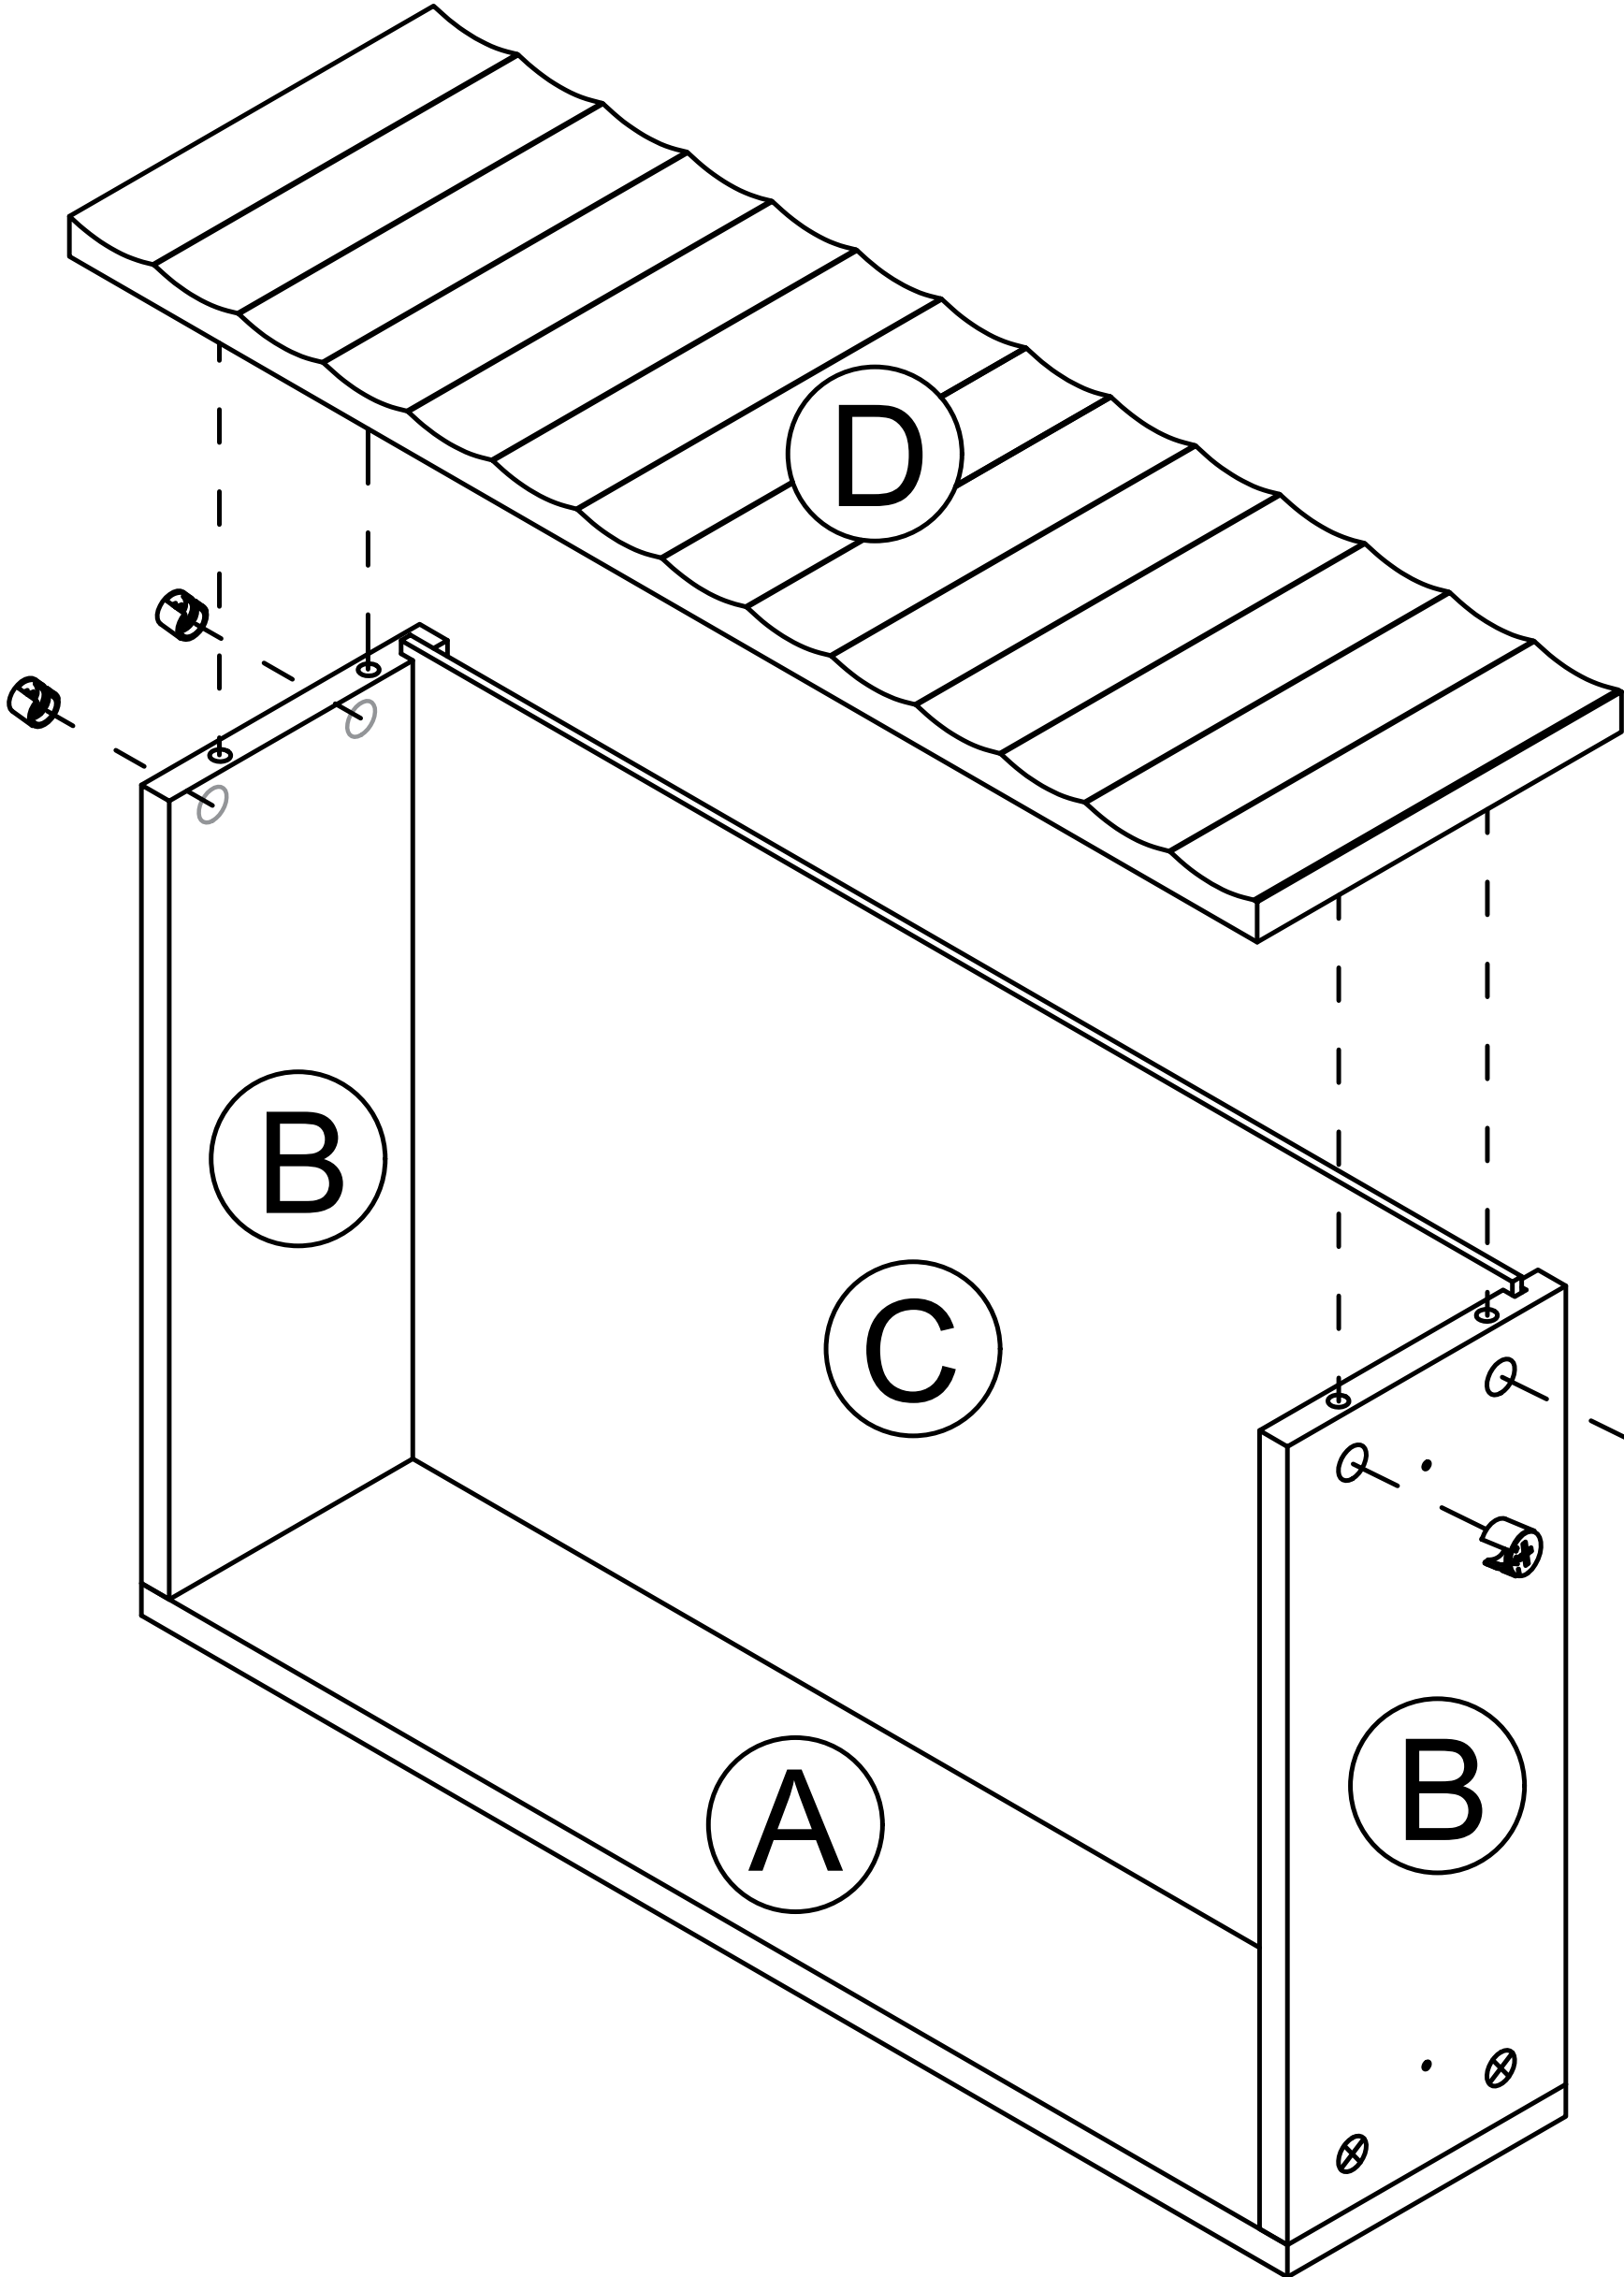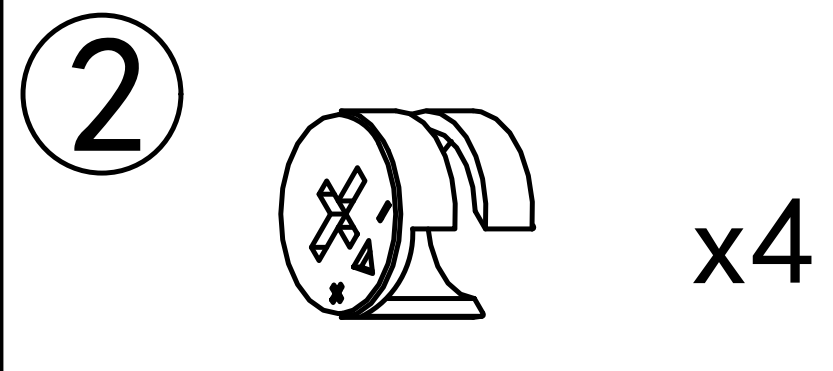


Drawer rail breakdown diagram

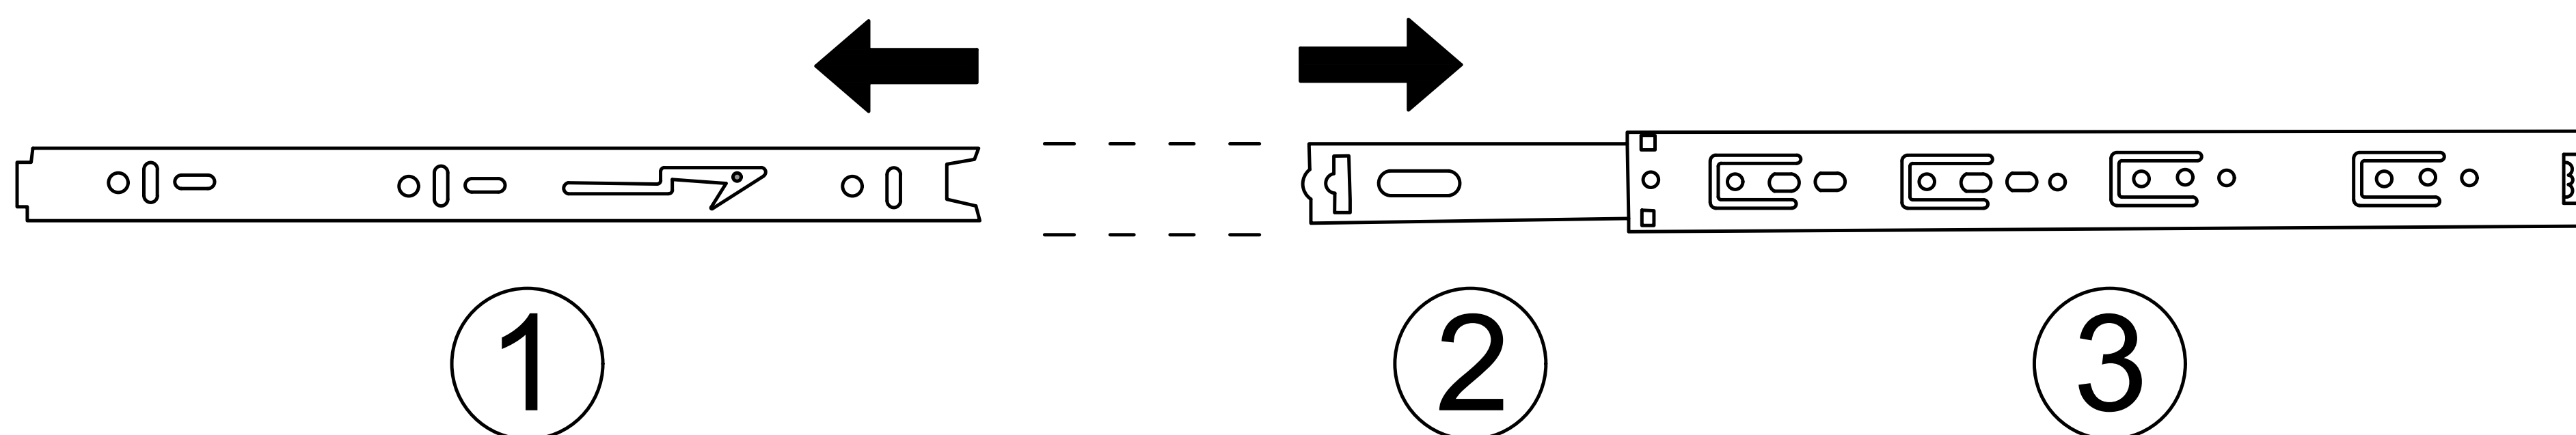 


① Dismantle the schematic diagram

 Step 1 : Pull the rails apart



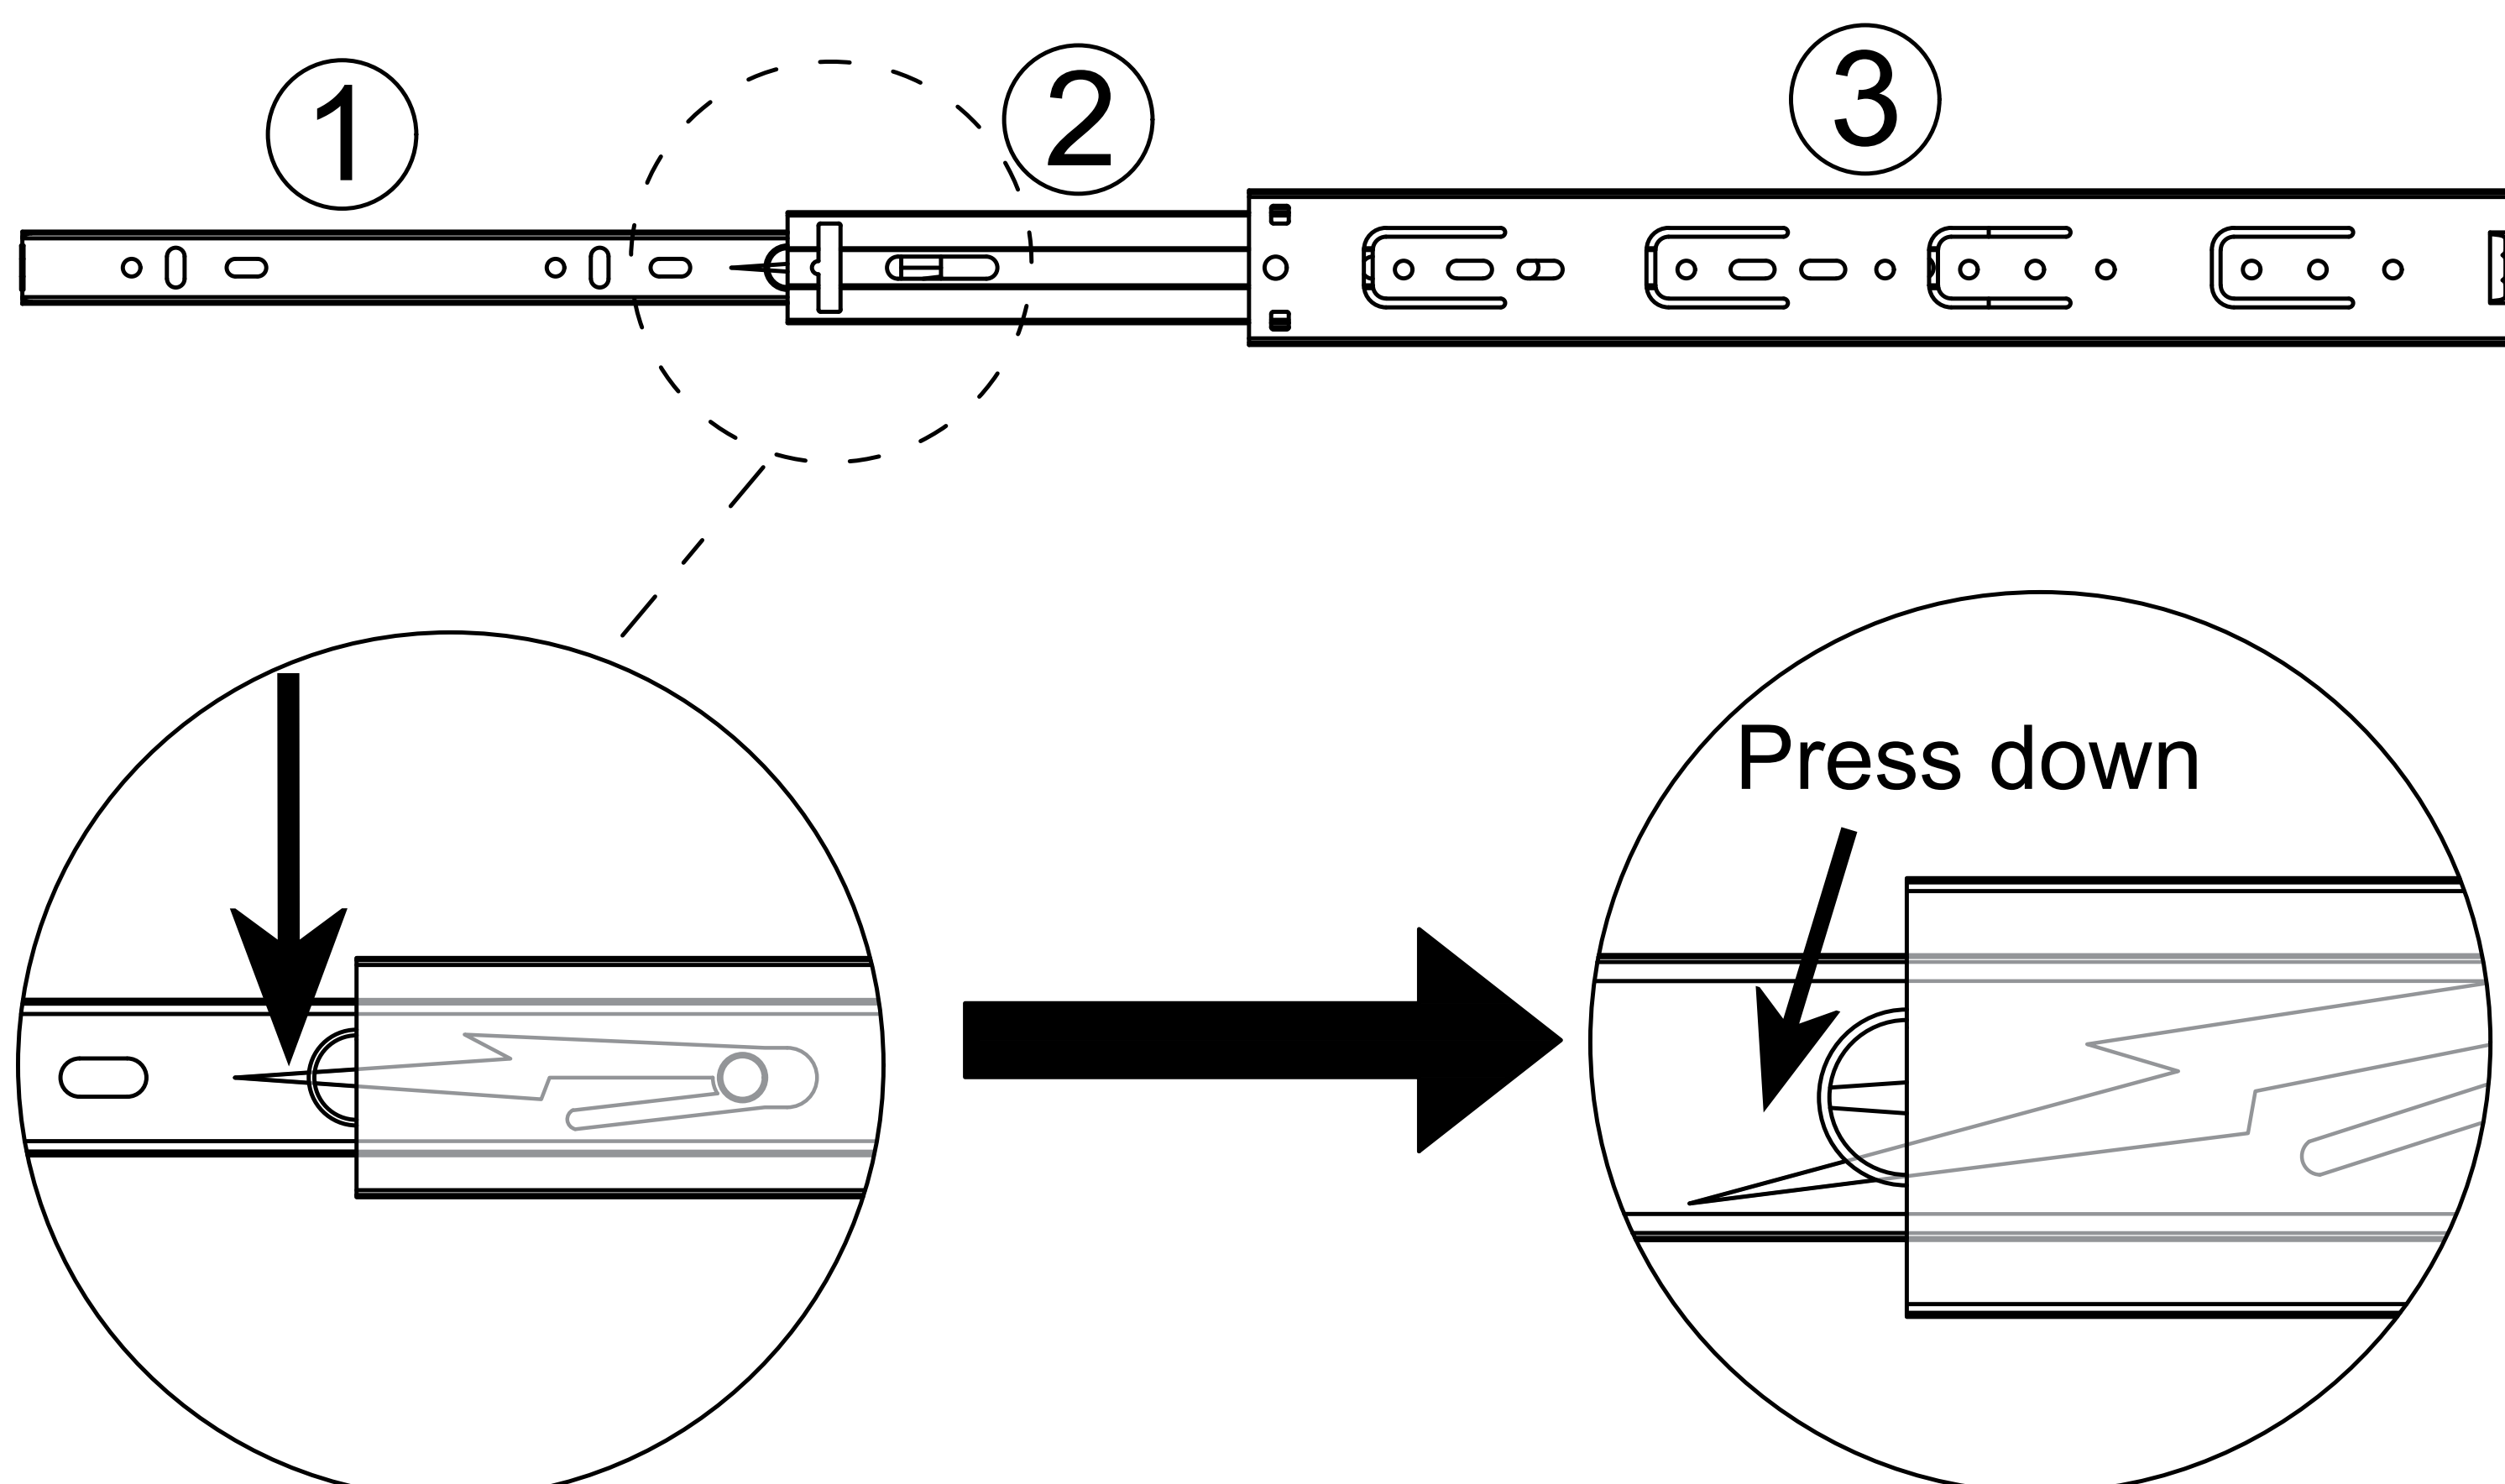


Step 2 : Press the nylon button and pull out ①.




 
Drawer rail decomposition completed schematic diagram

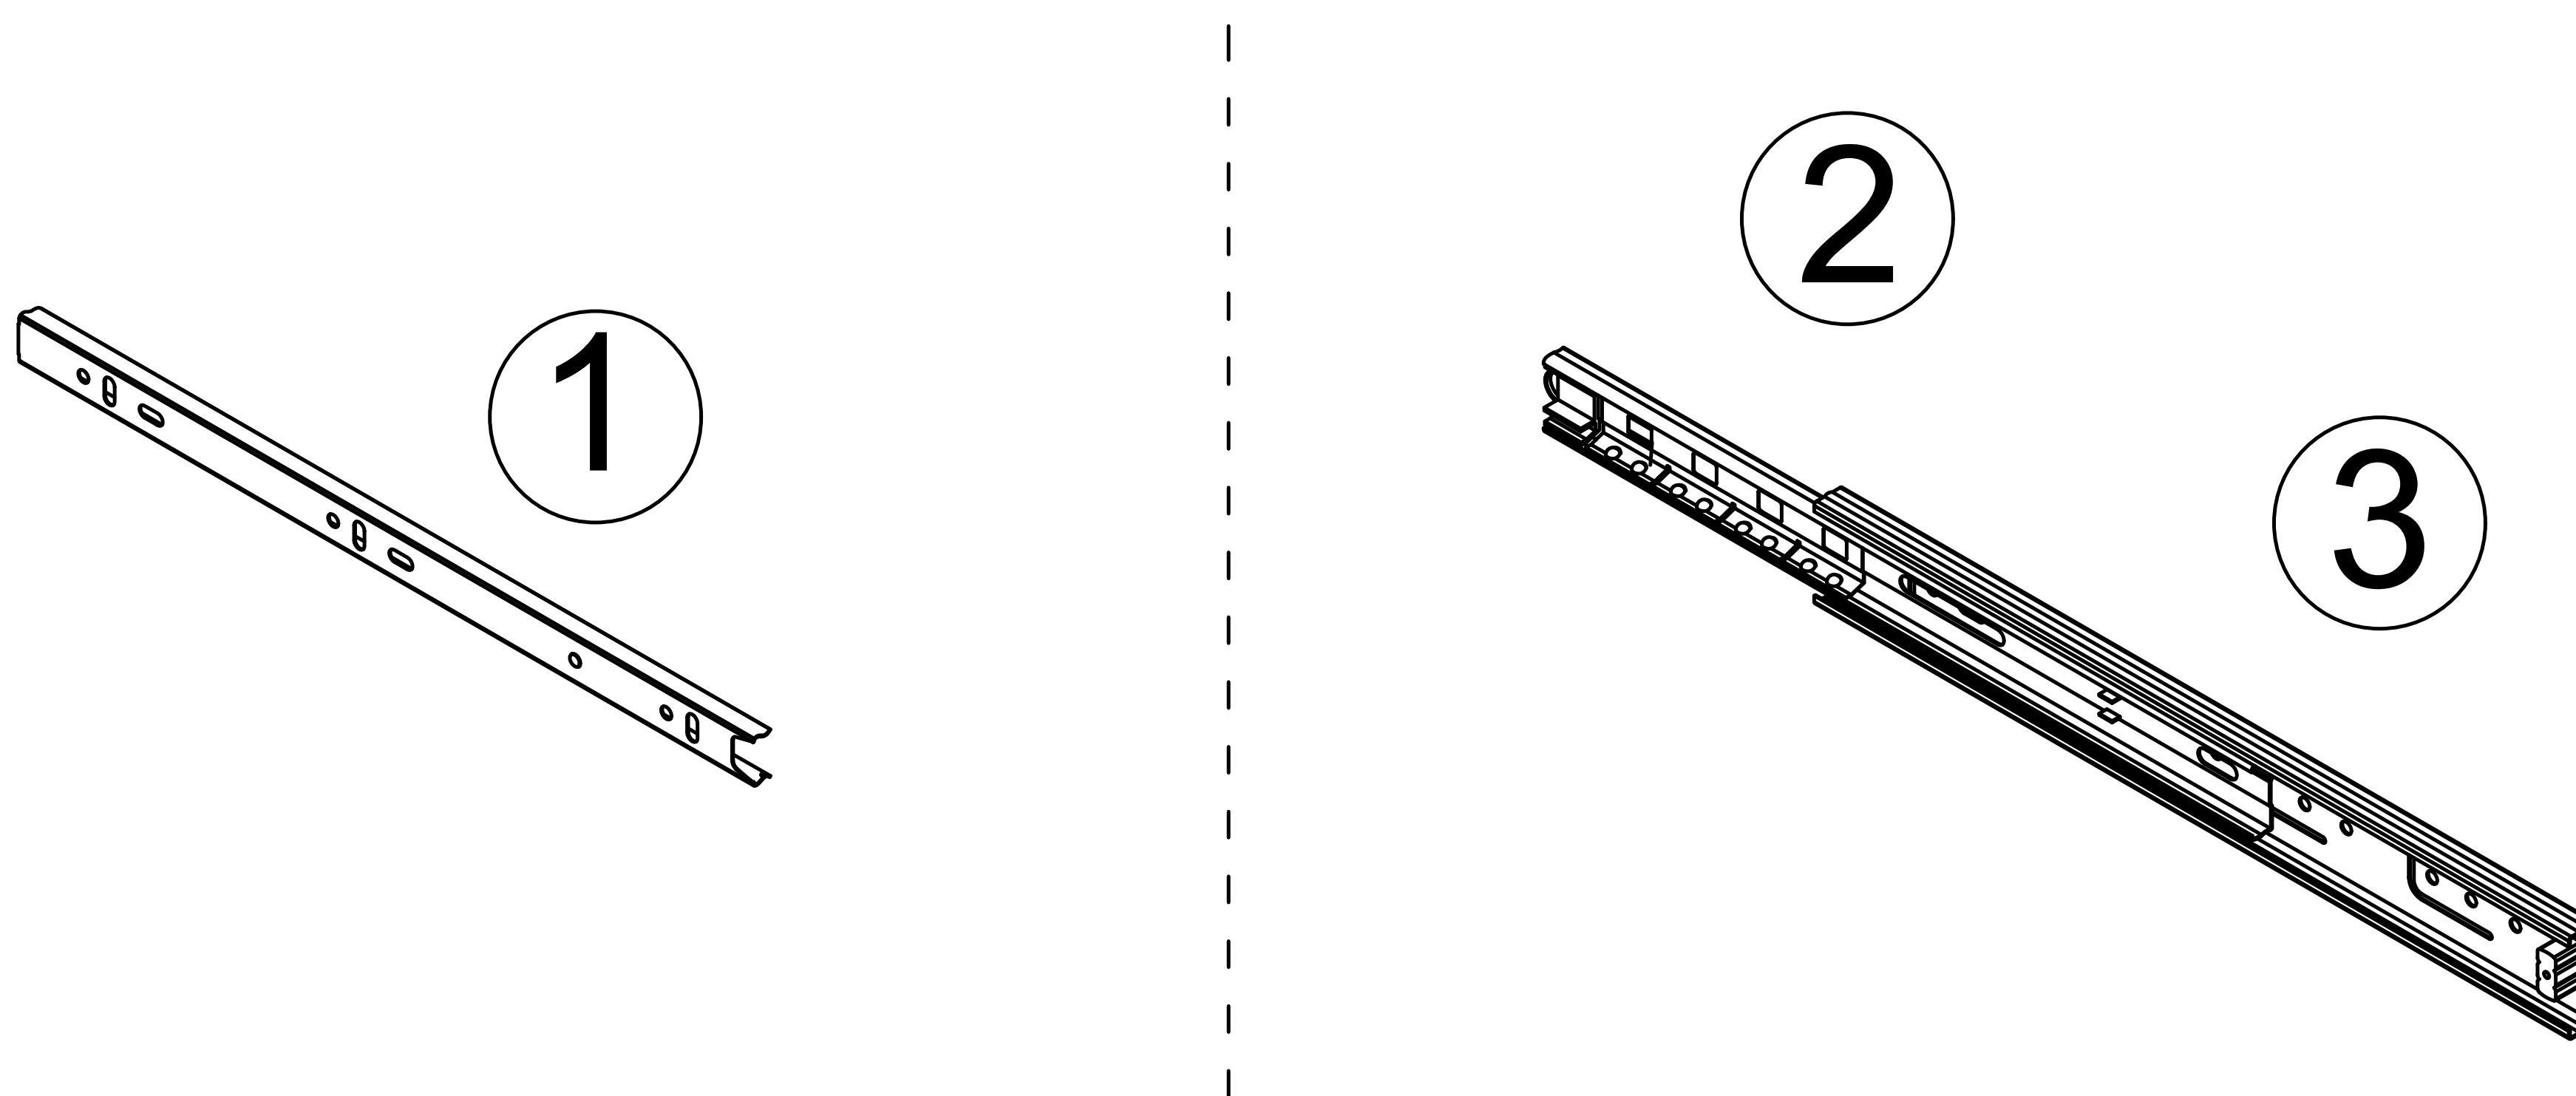

   
Step 6

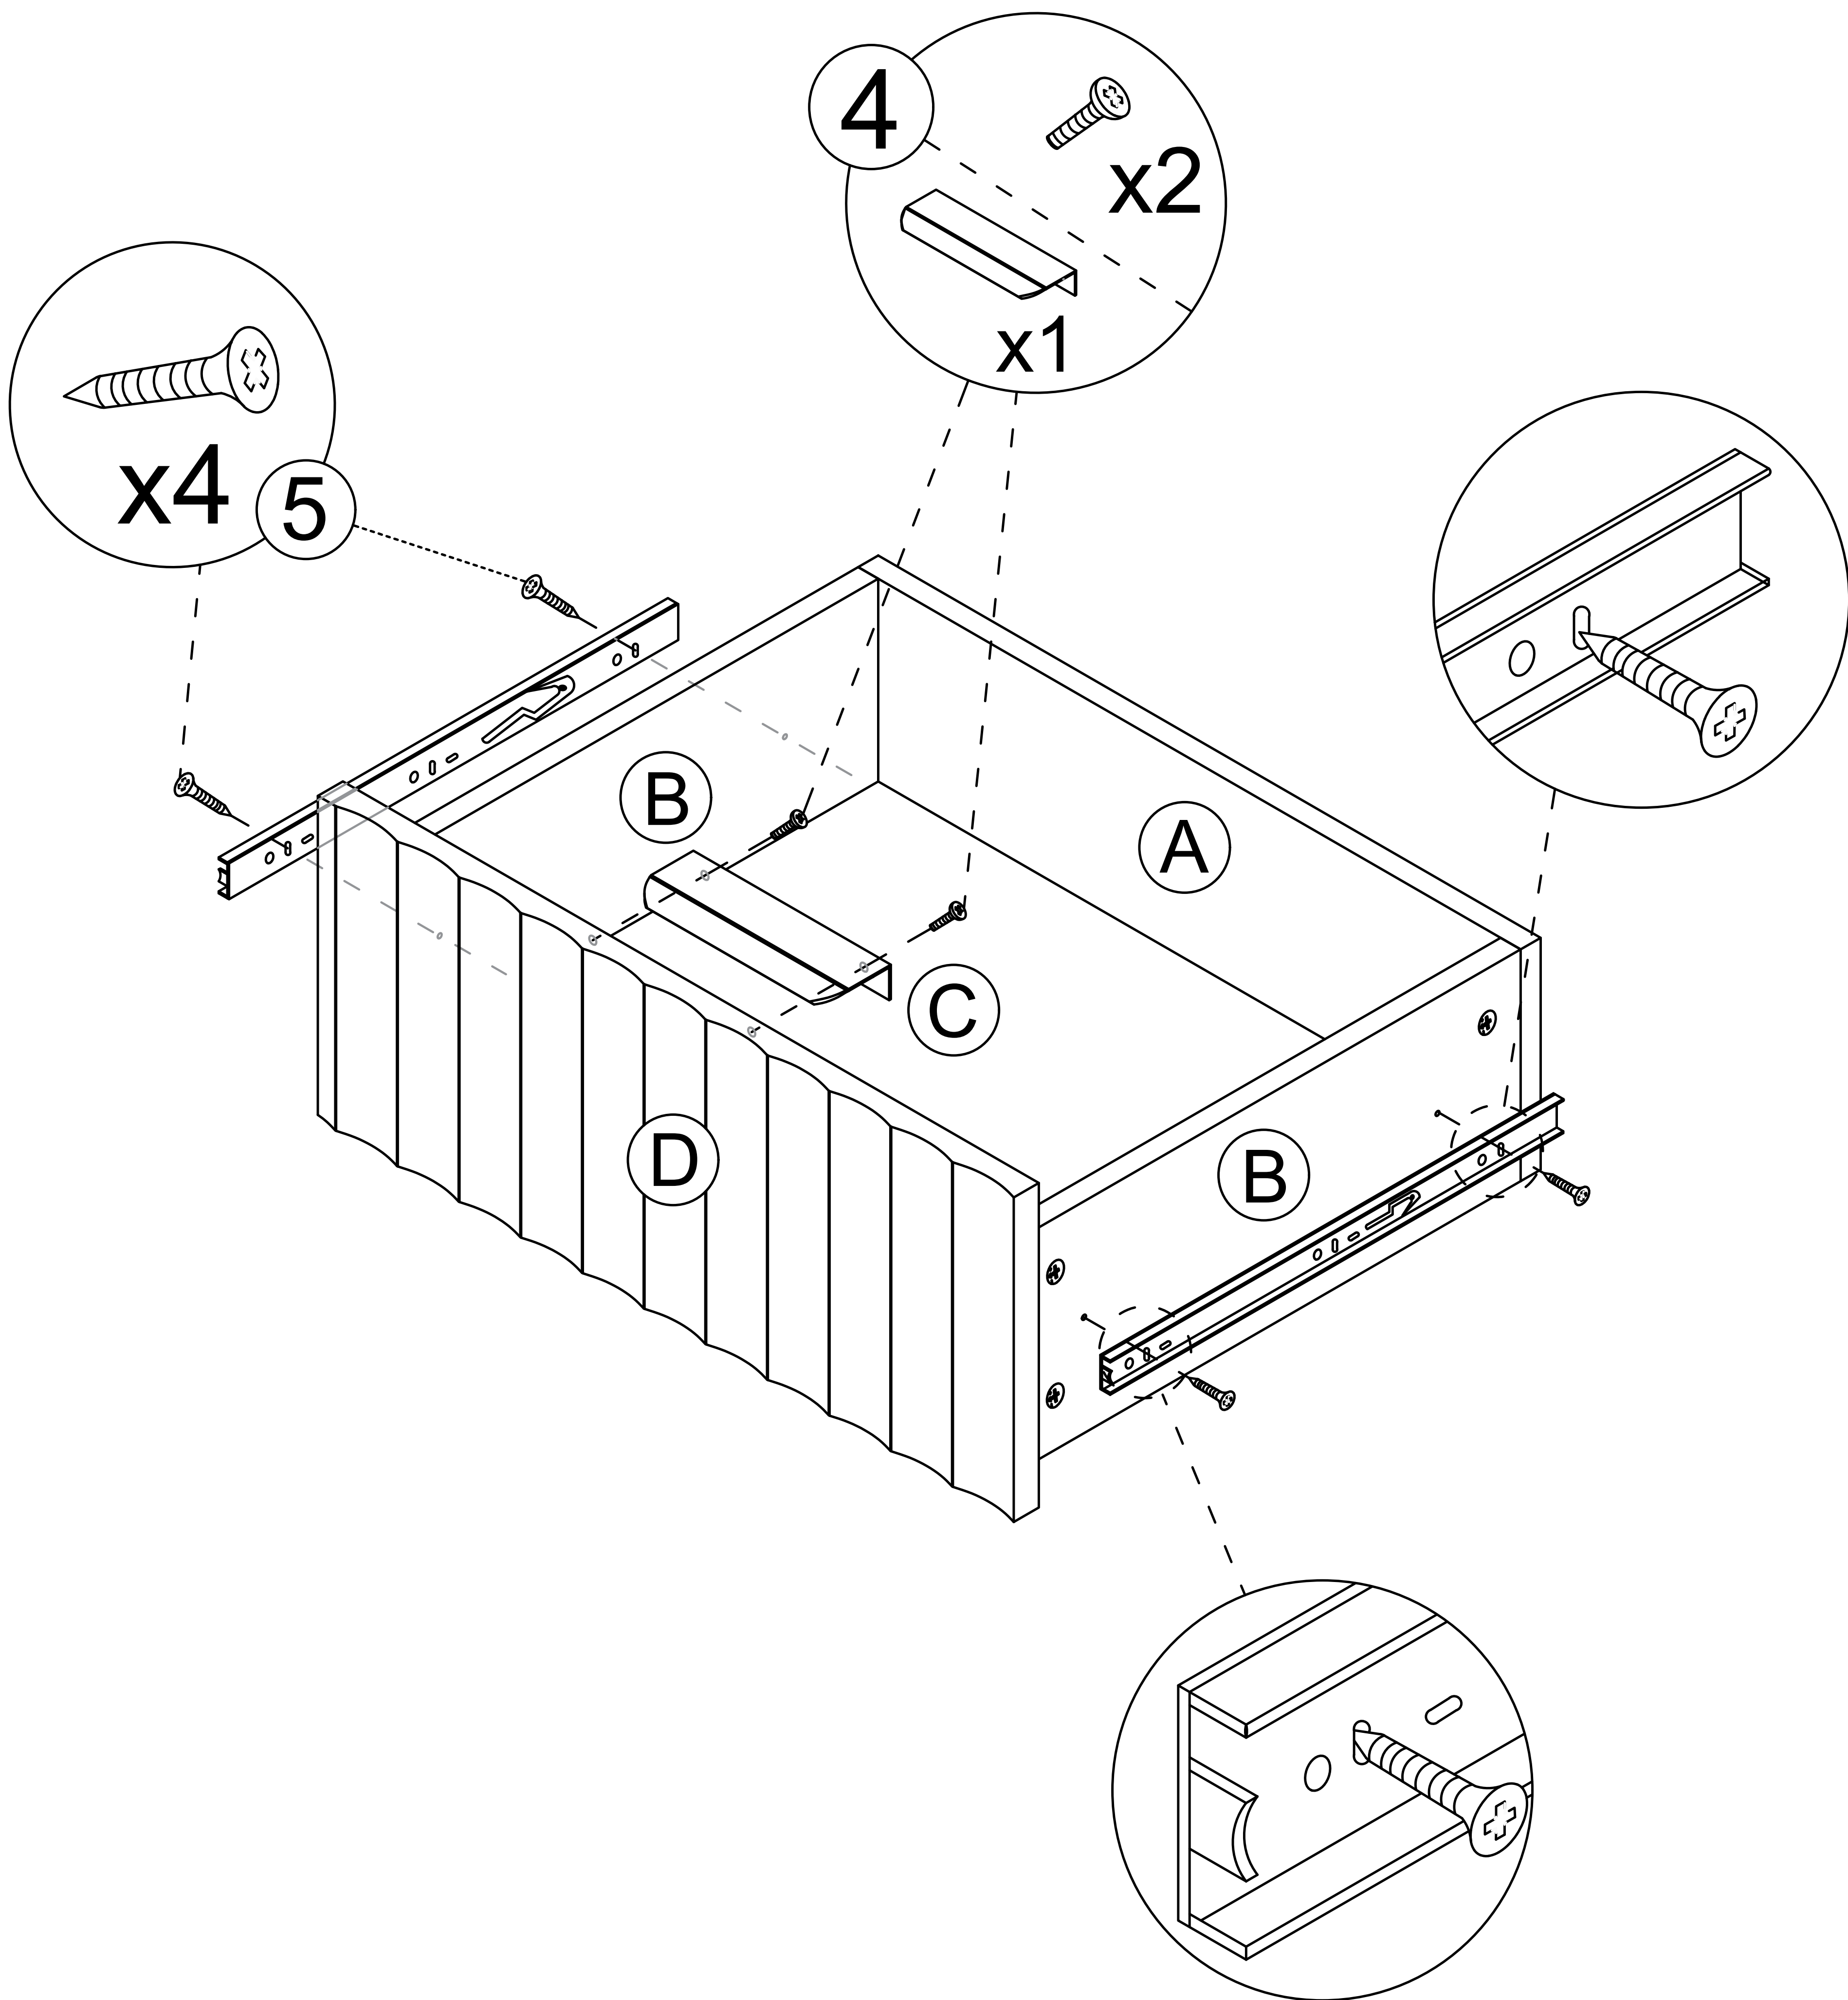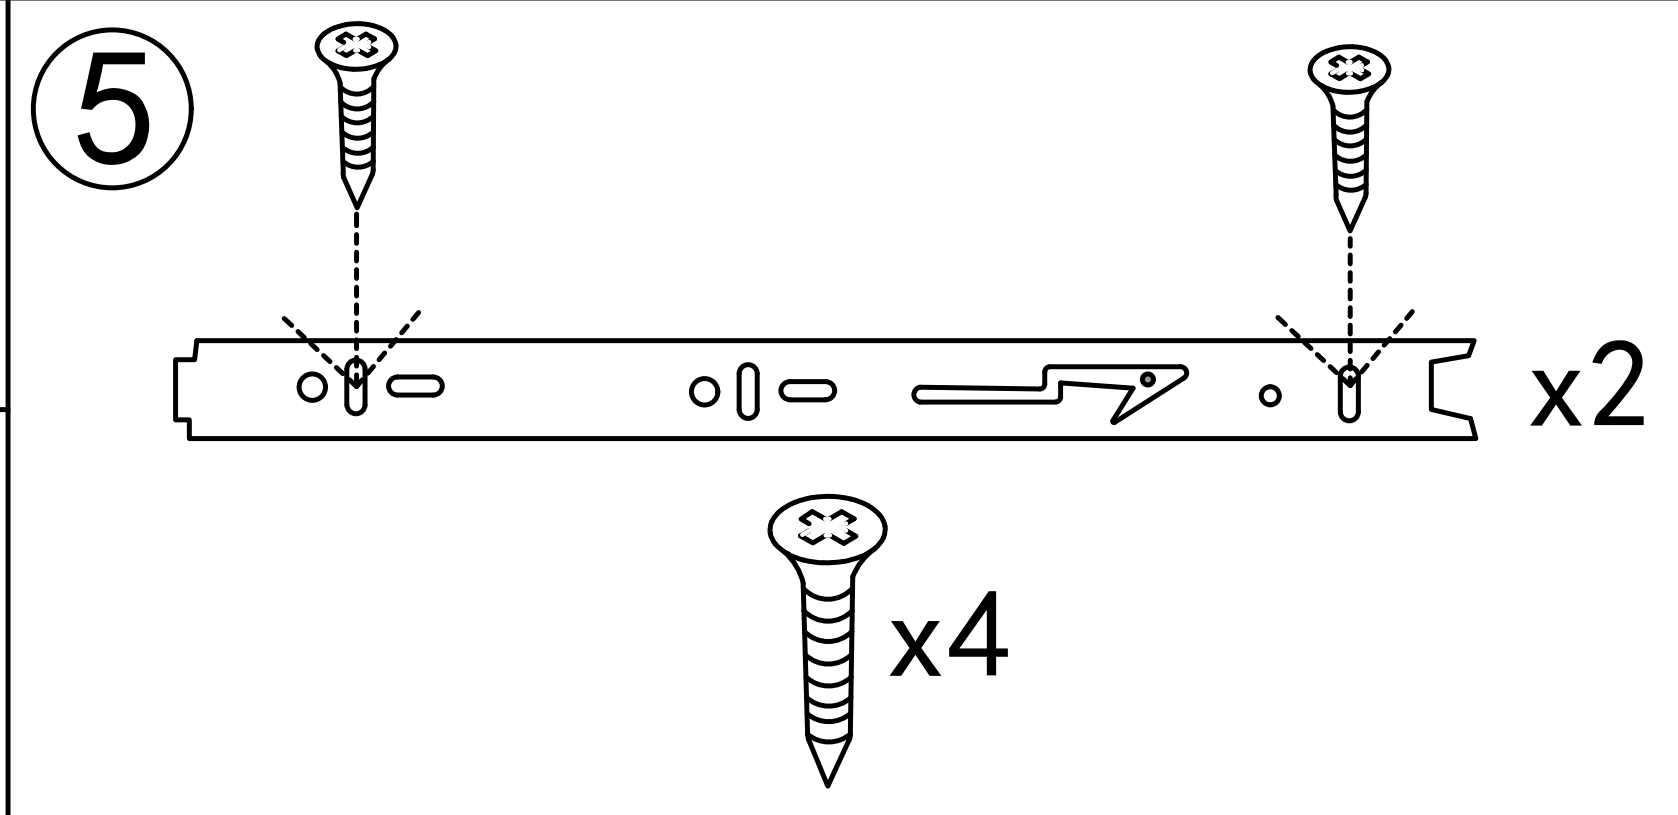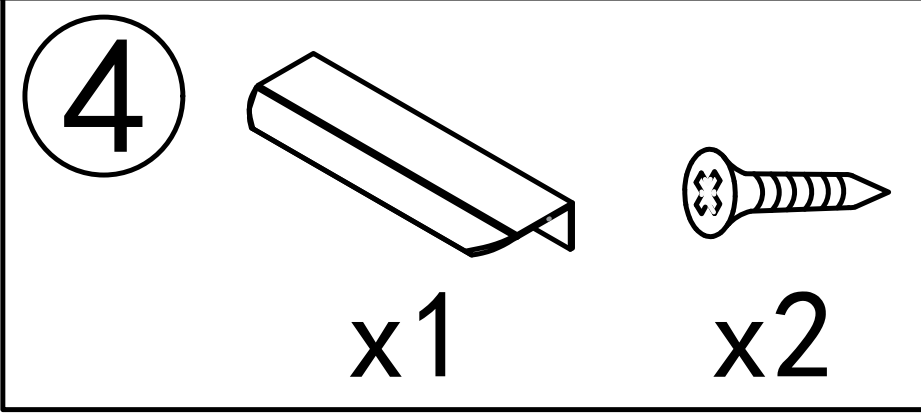





 
 
 
 
Step 7

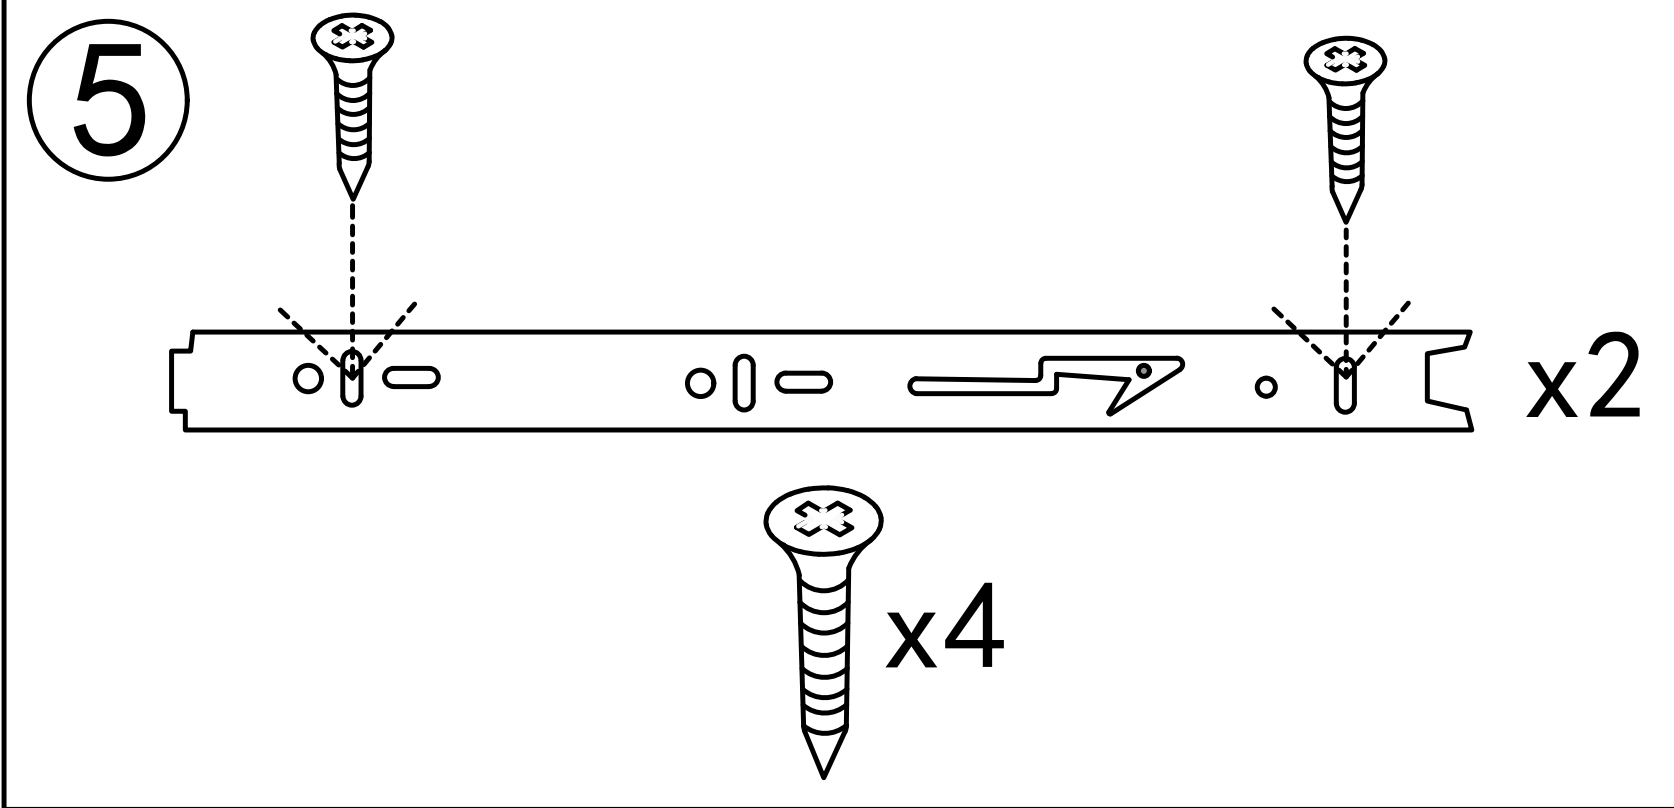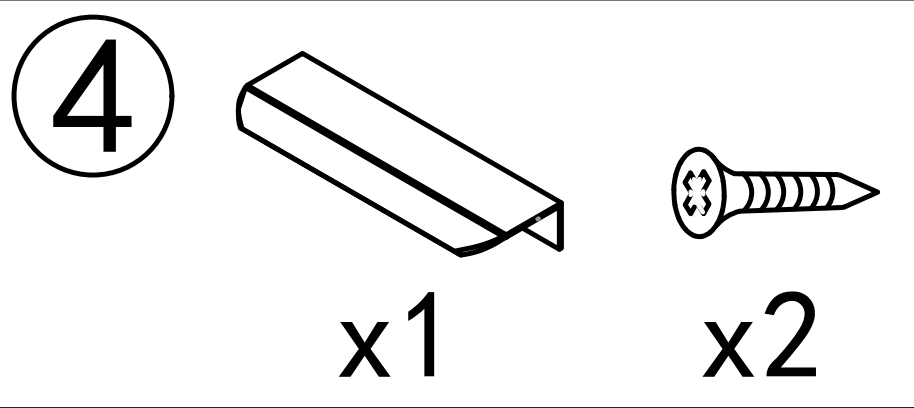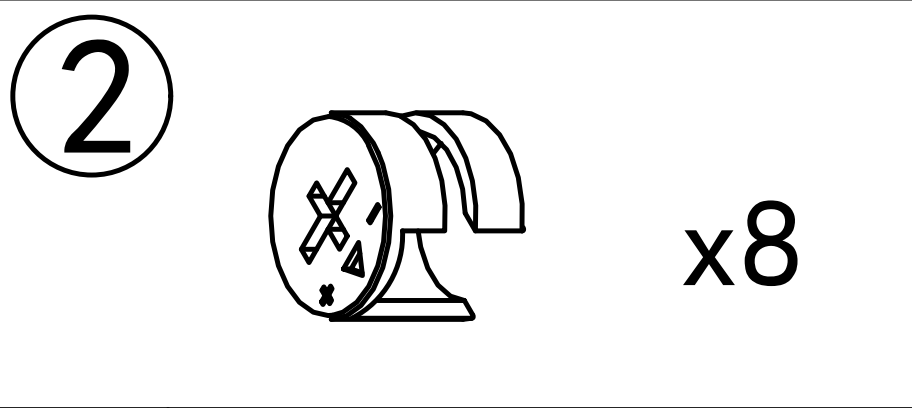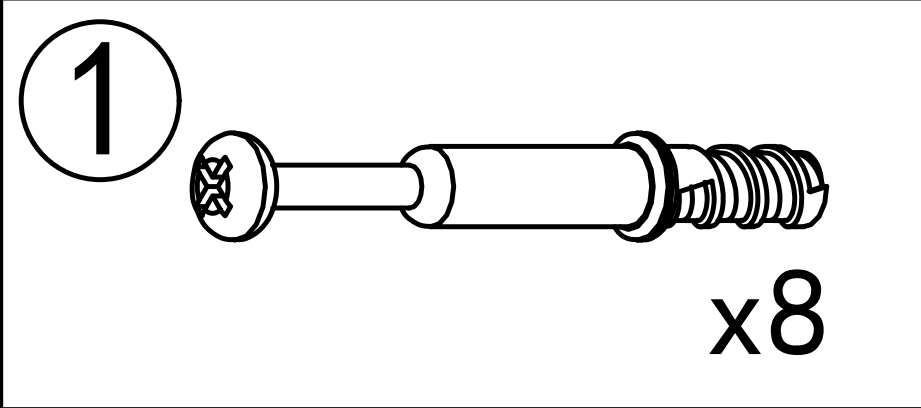


x2

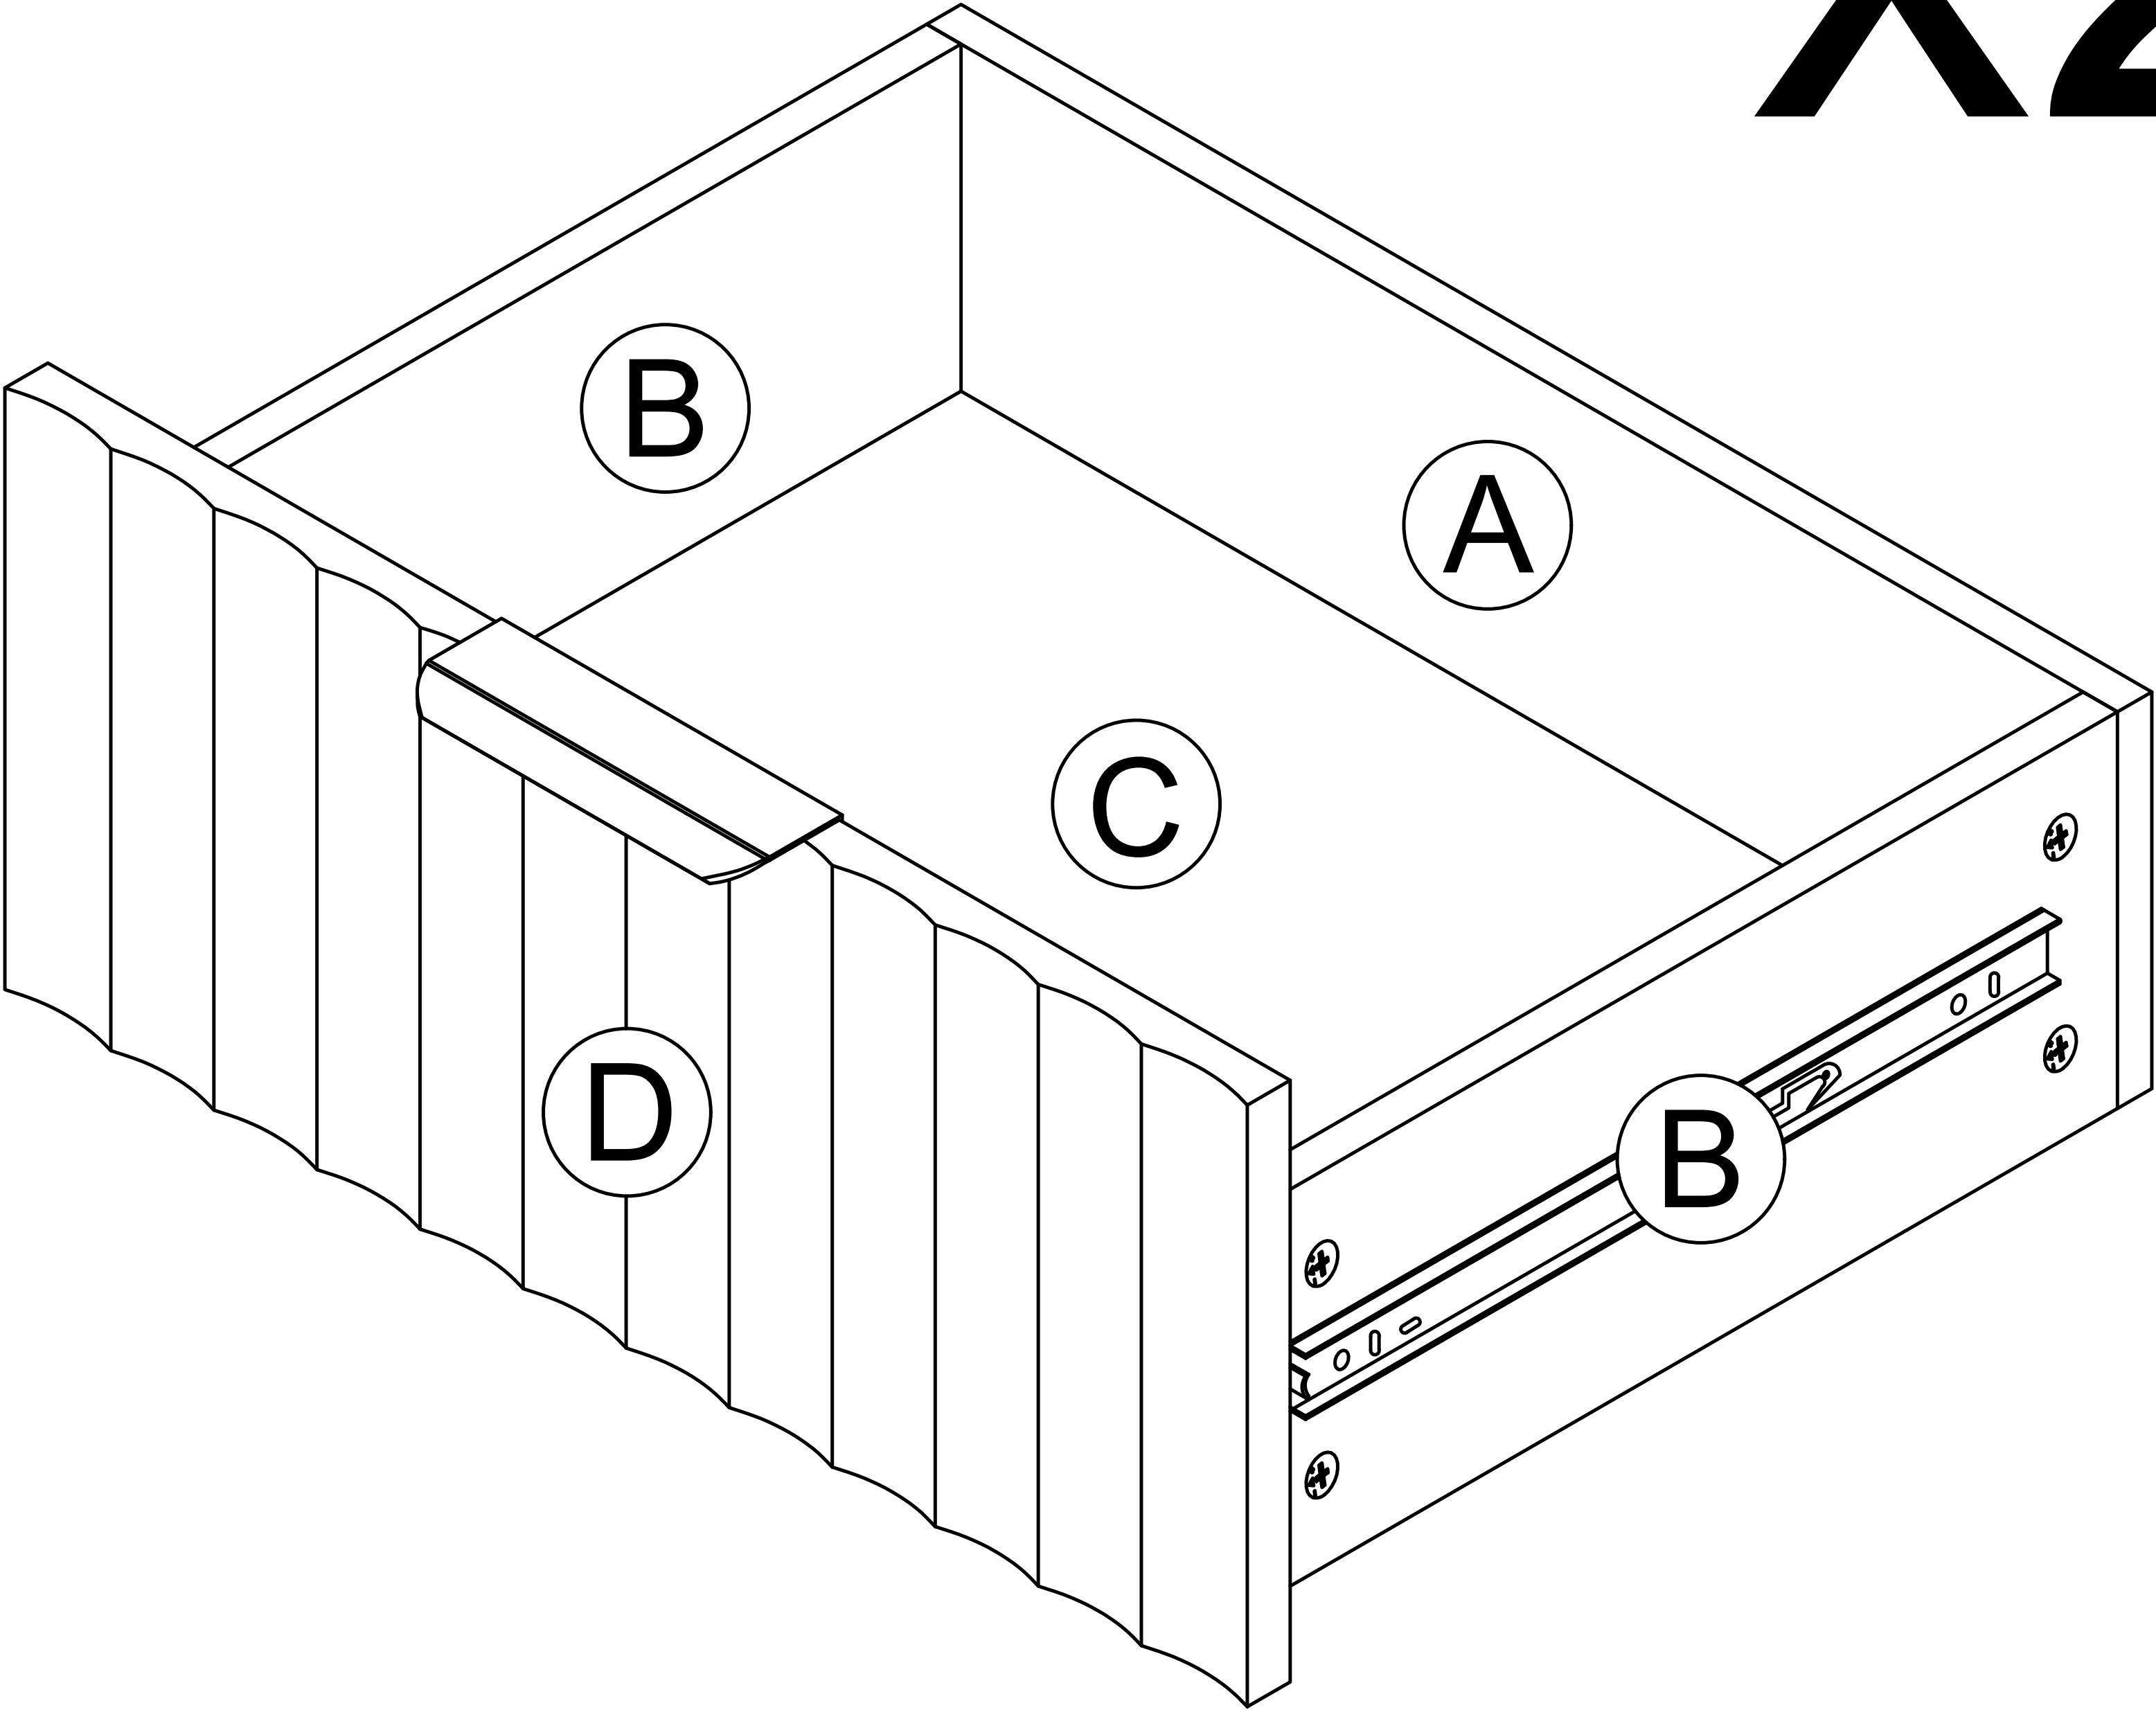 


Repeat the drawer installation steps

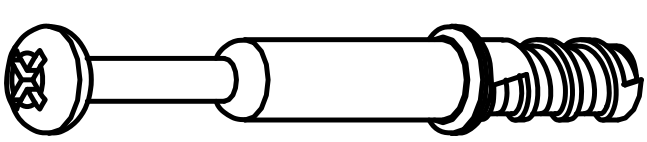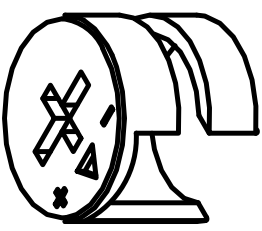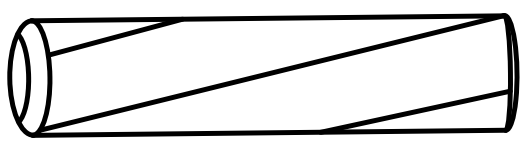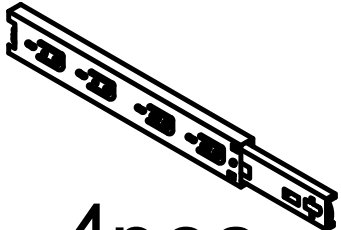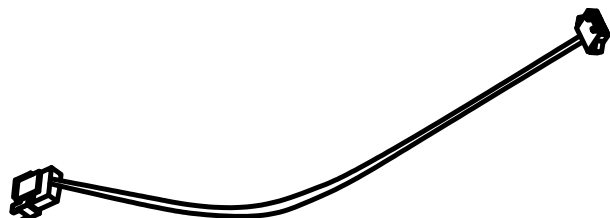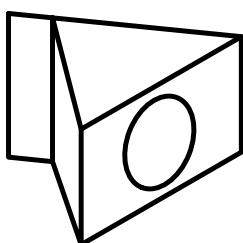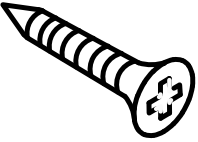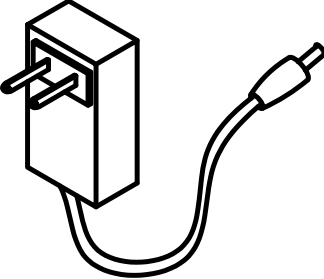        
①		19pcs	②		19pcs	③		12pcs
⑤	 4pcs	 12pcs	⑥		4pcs	⑦		1pcs
⑧	 	6pcs			1pcs			

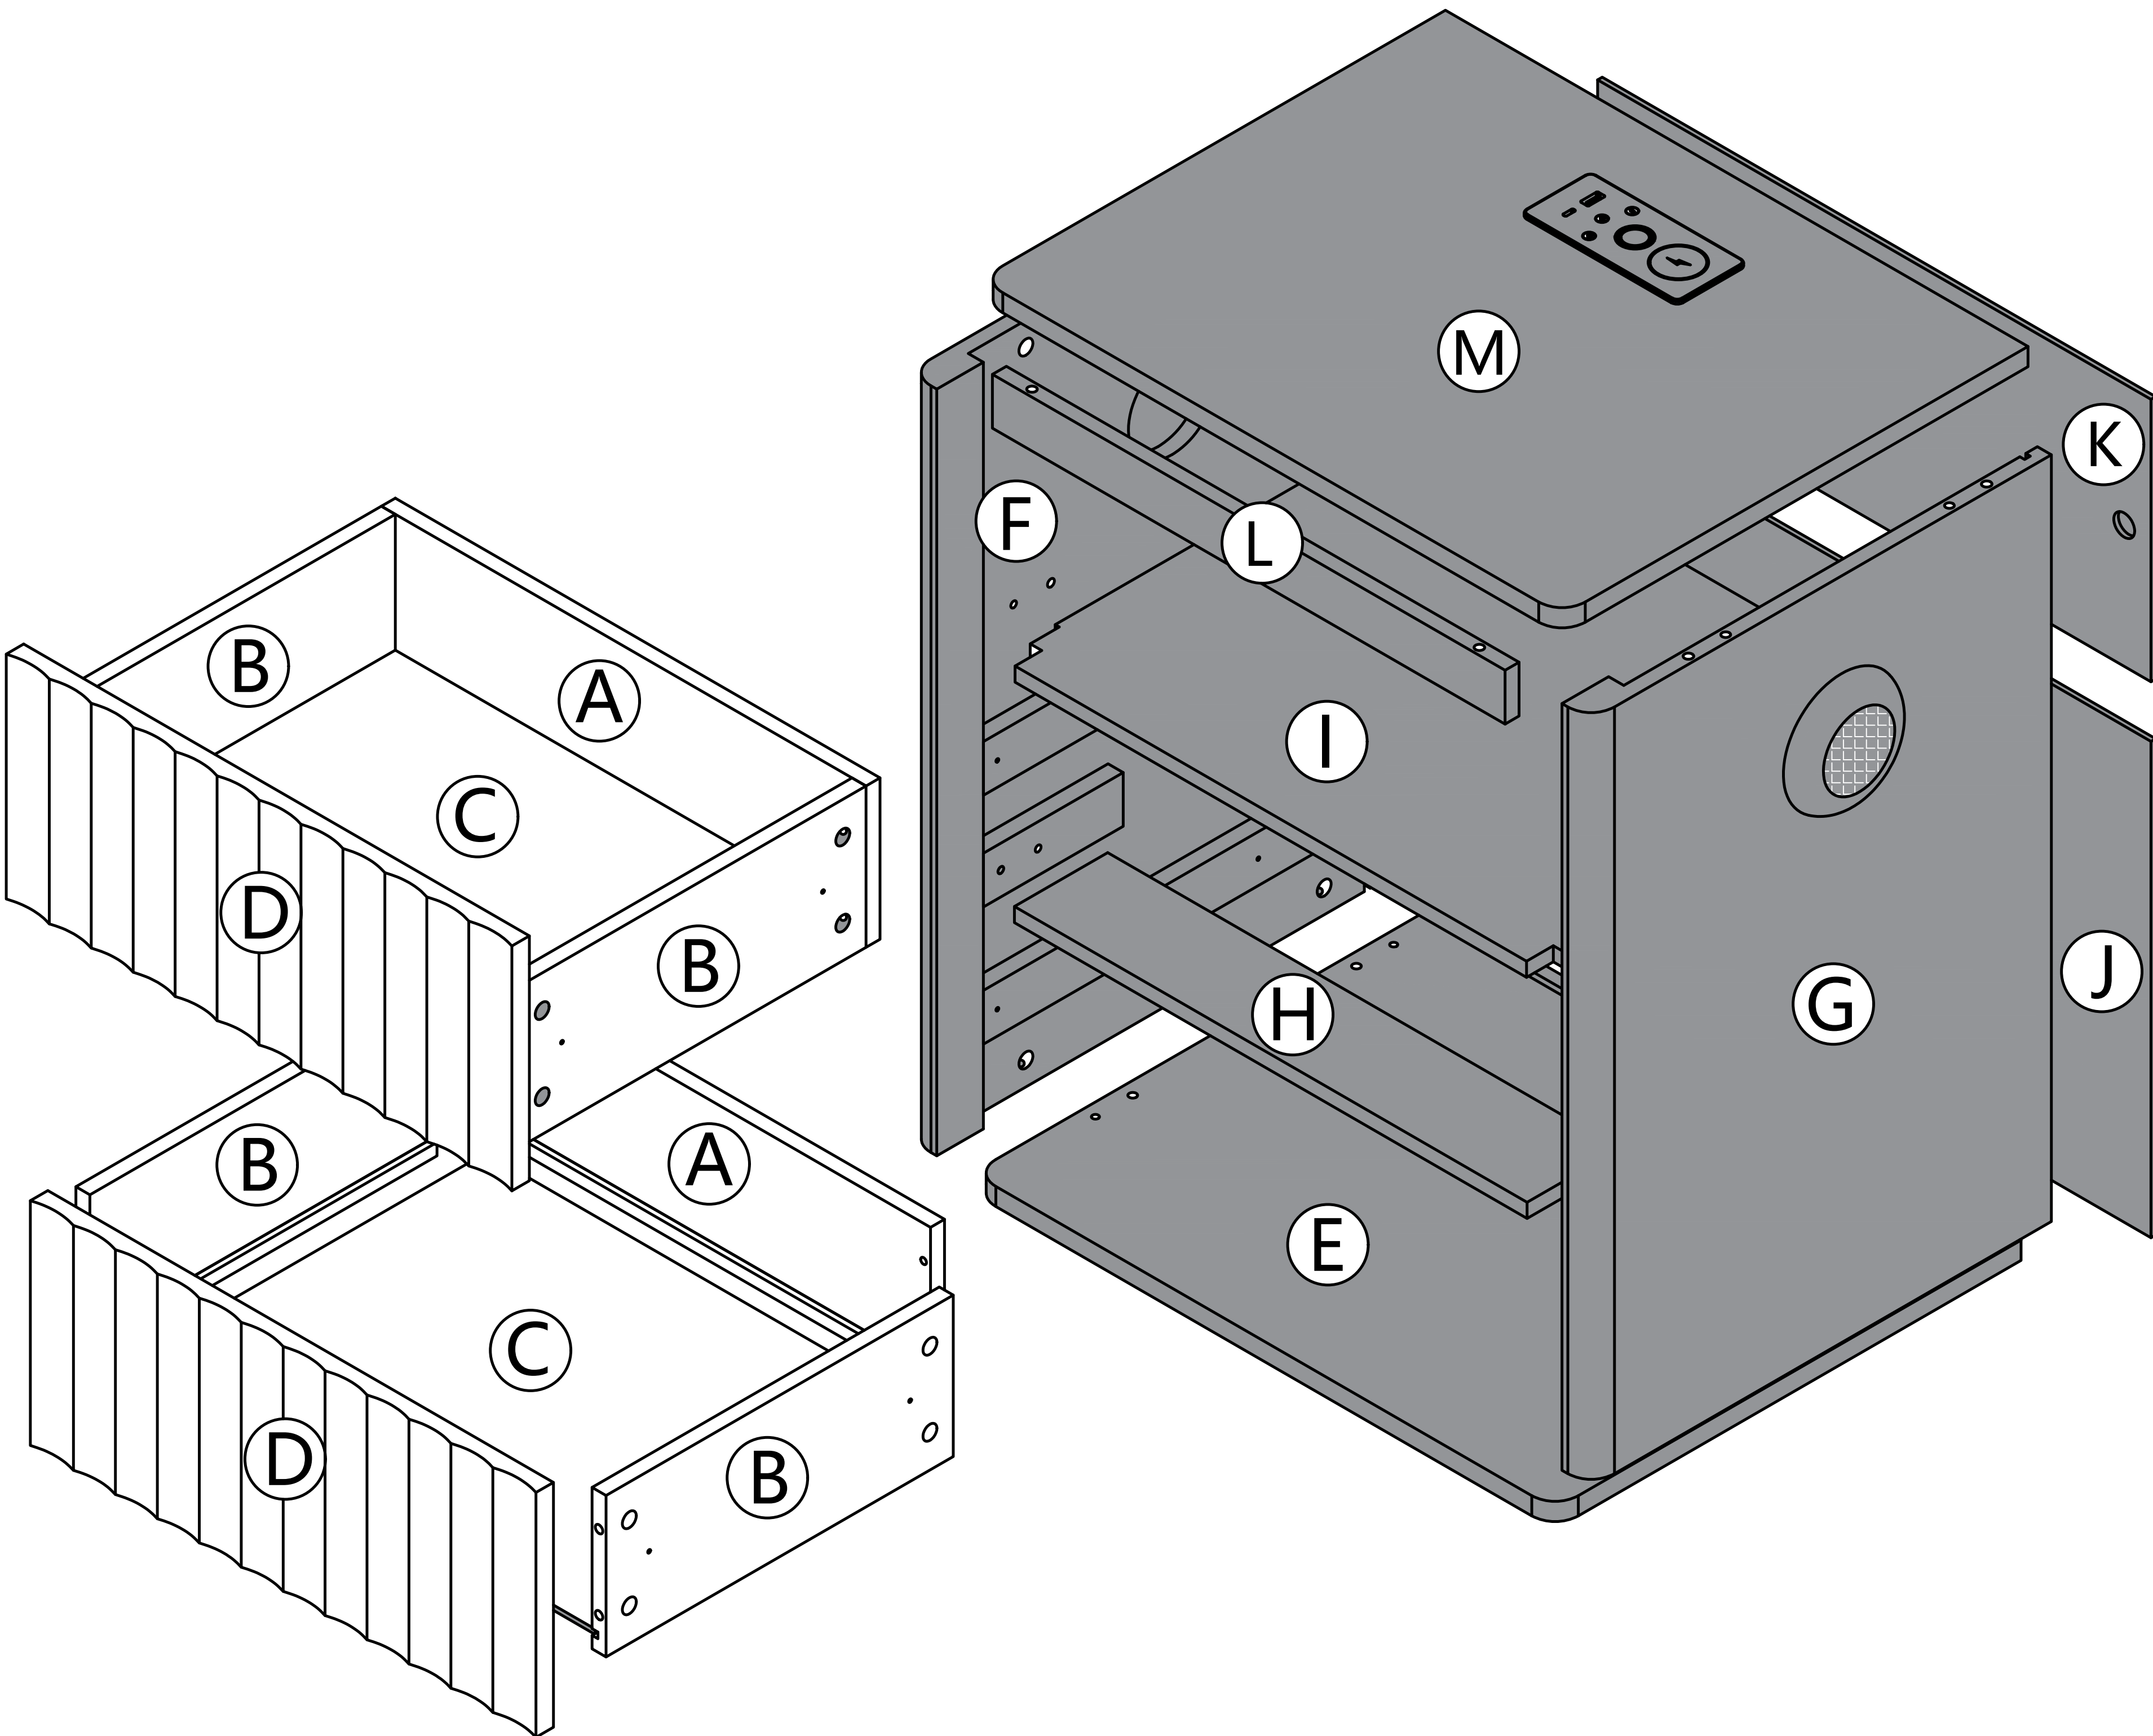 

 Step 8

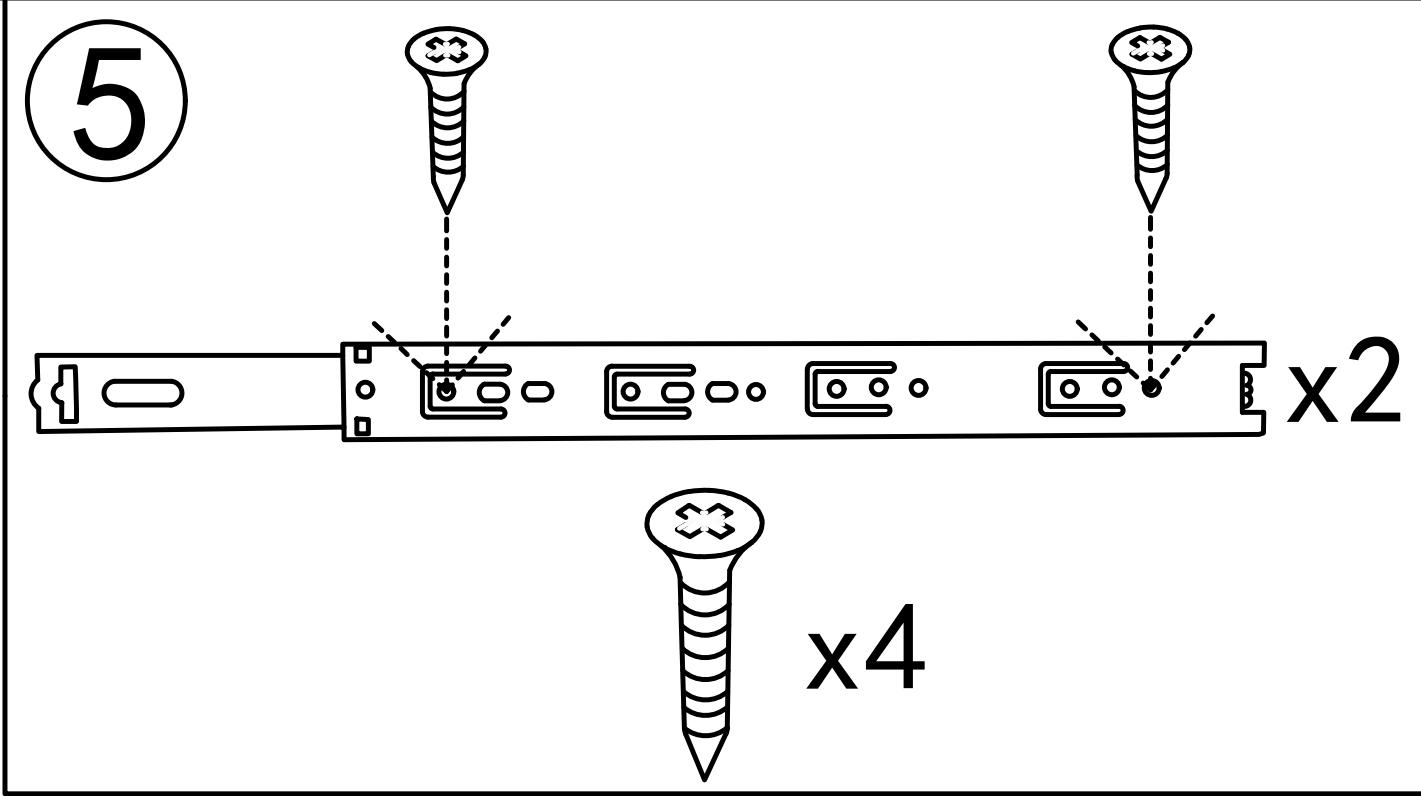


 Step 9

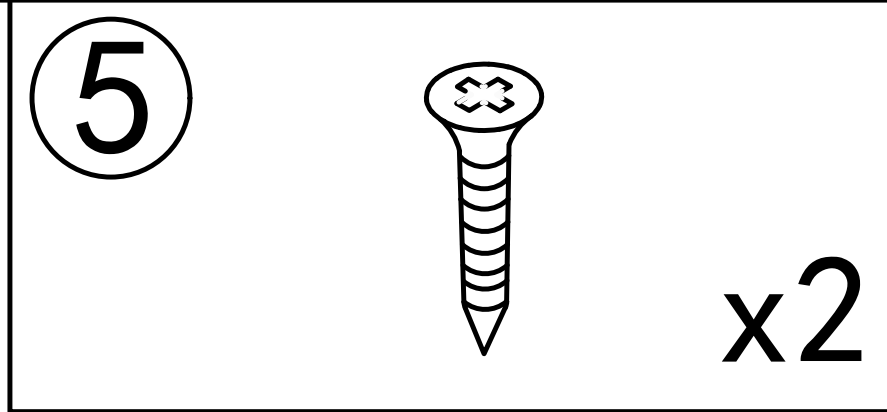


This hole is for strengthening fixed hole customers can choose to install according to their needs.

 
Step 10

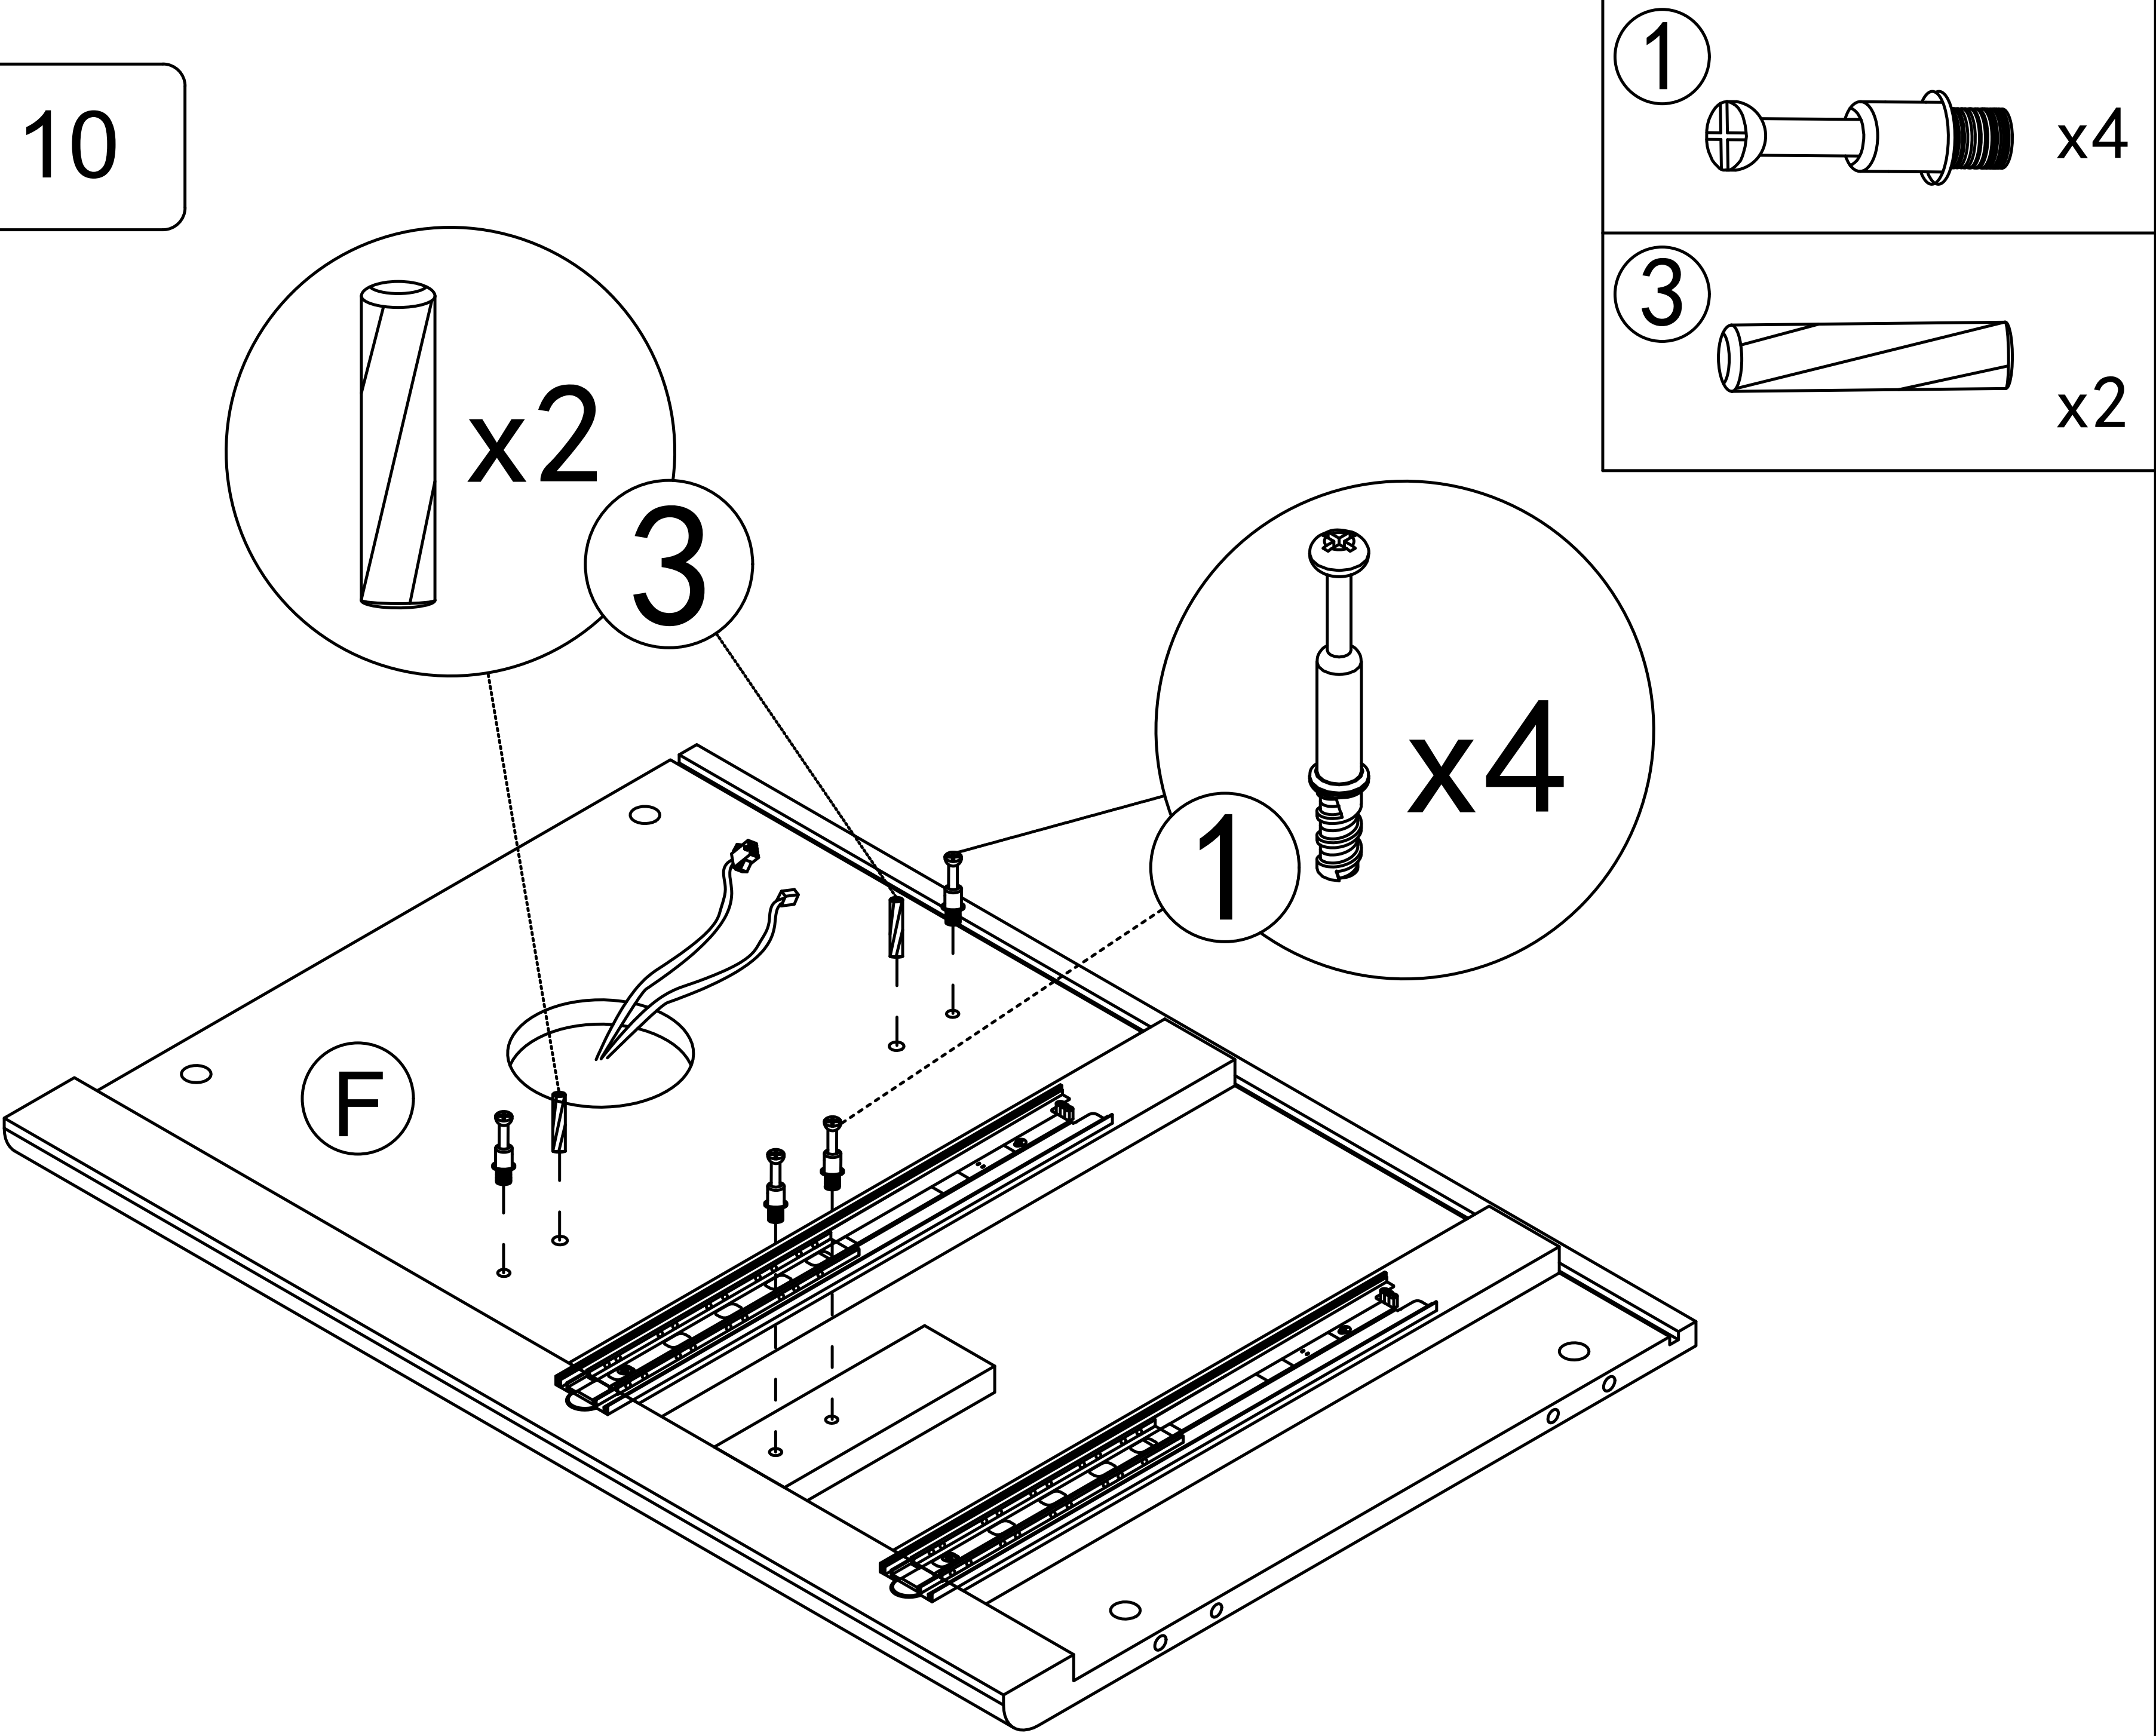

 
Step 11

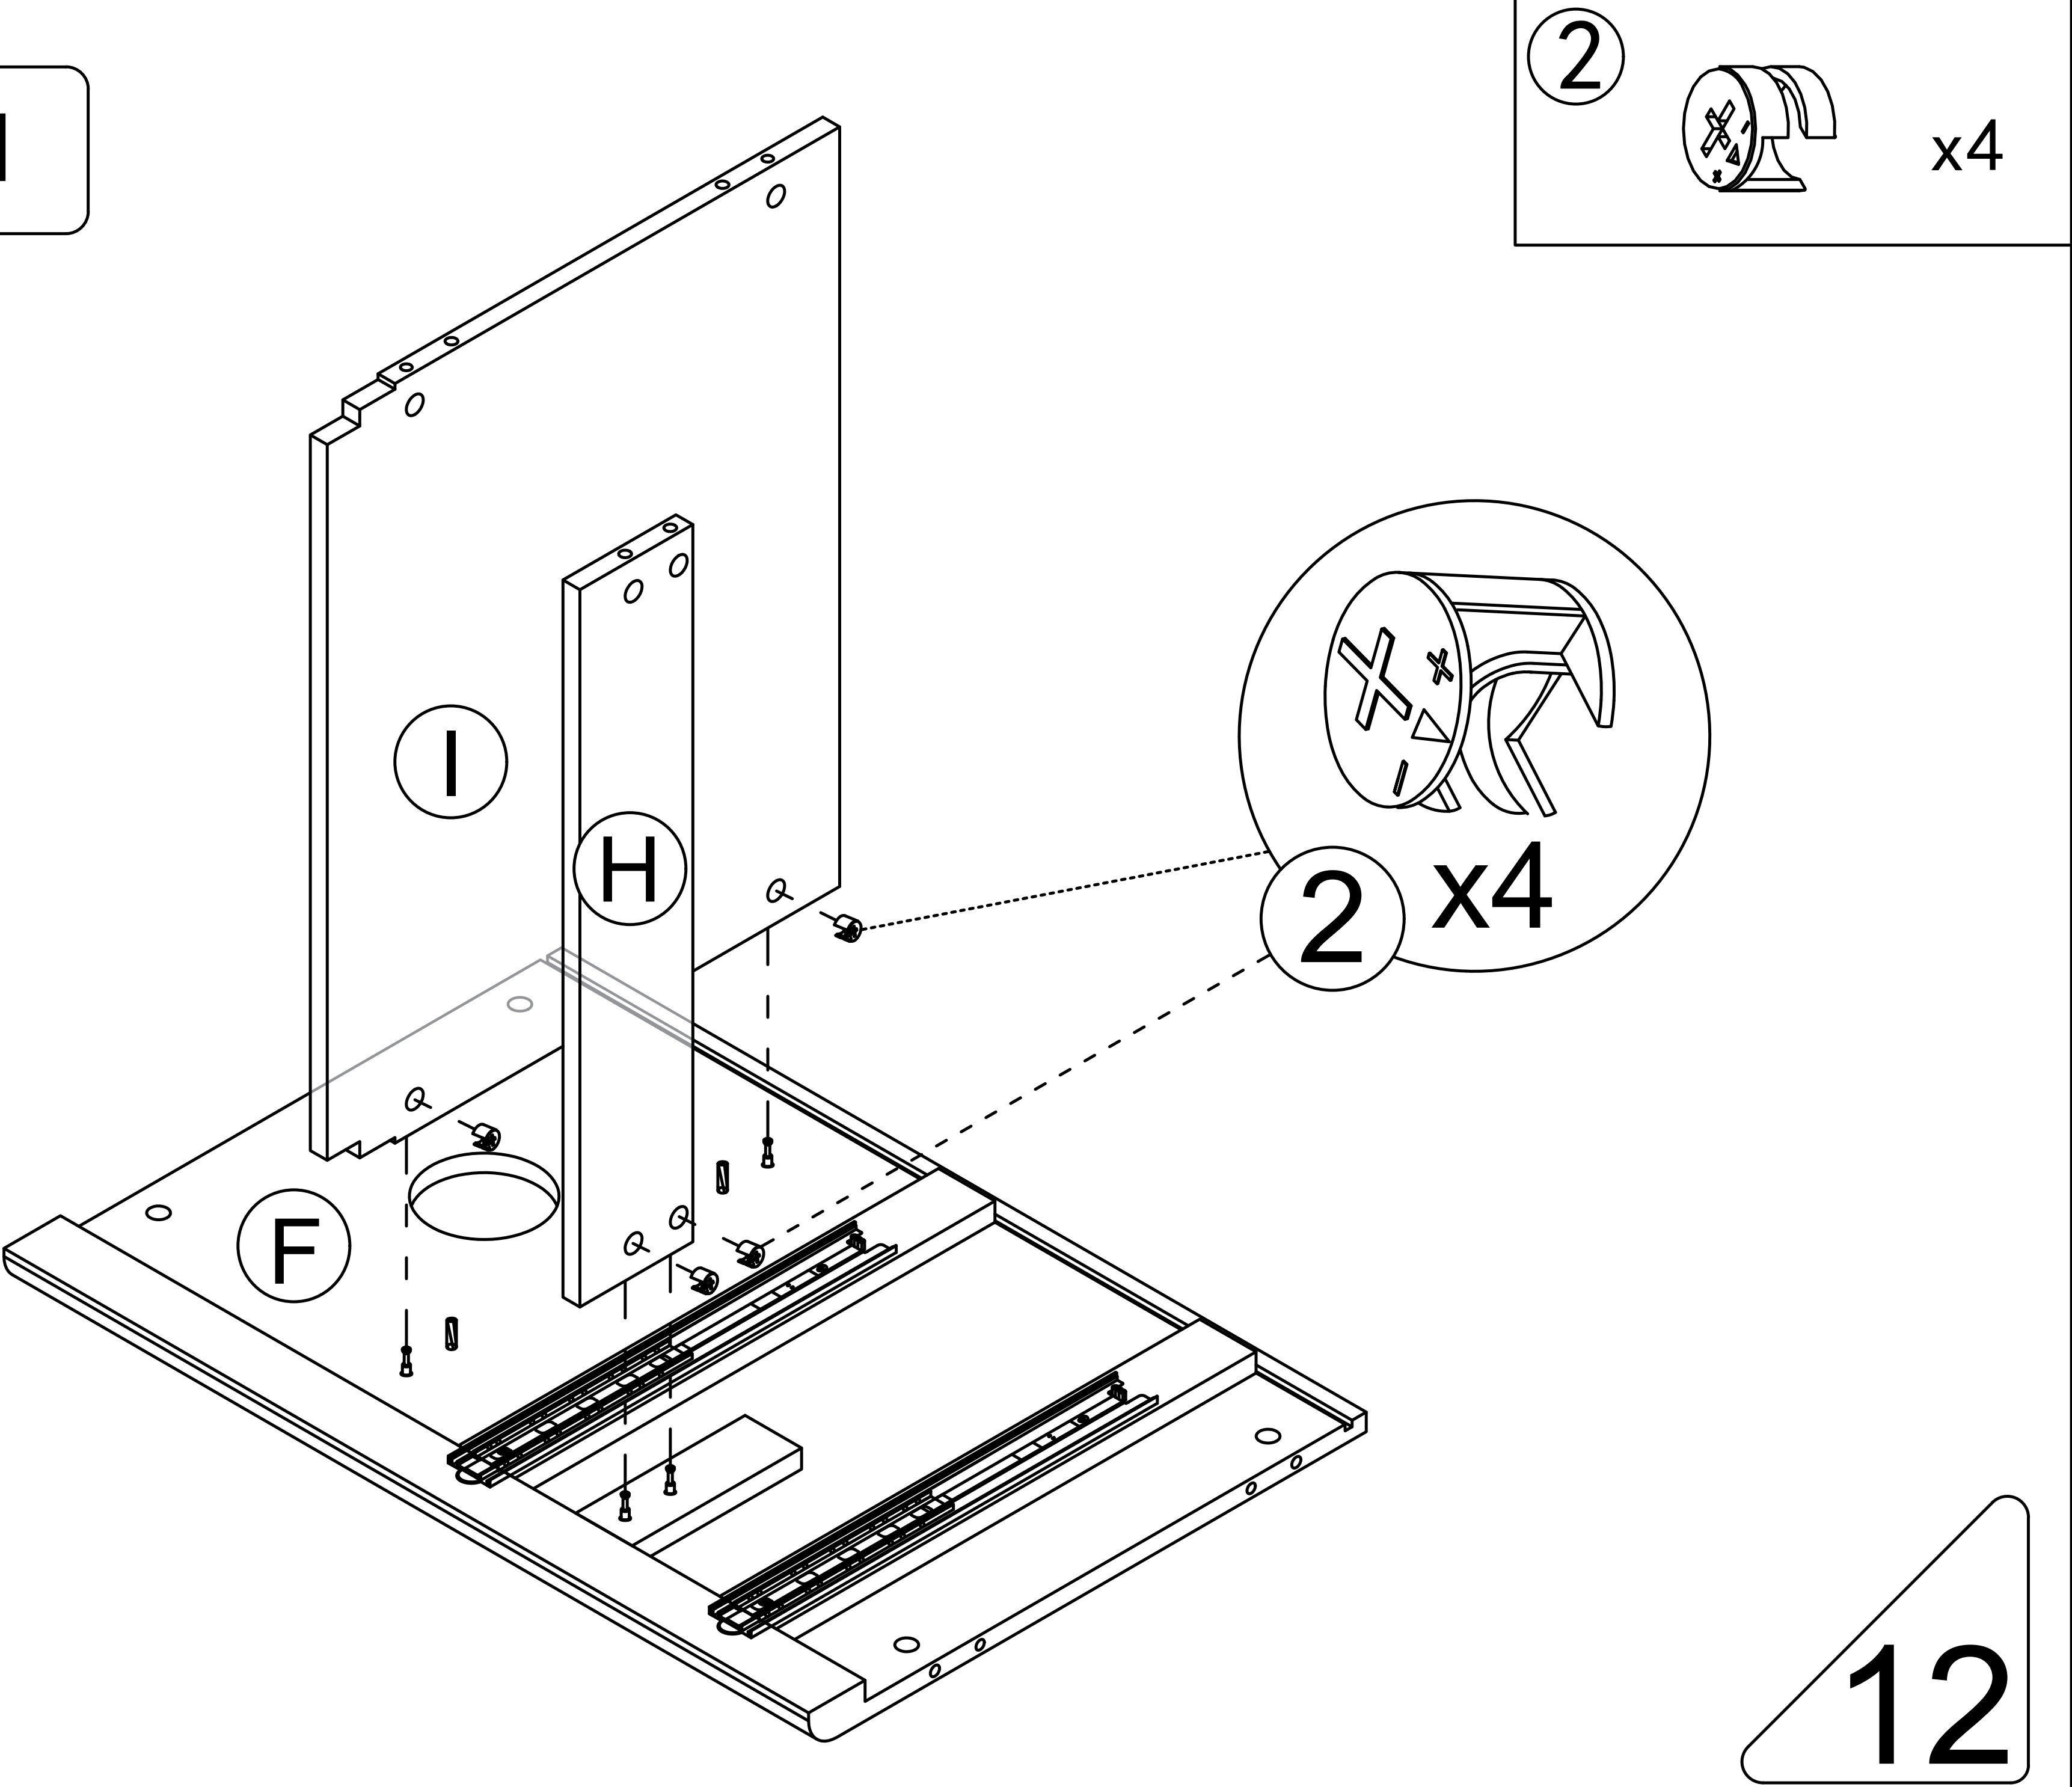

 Step 12


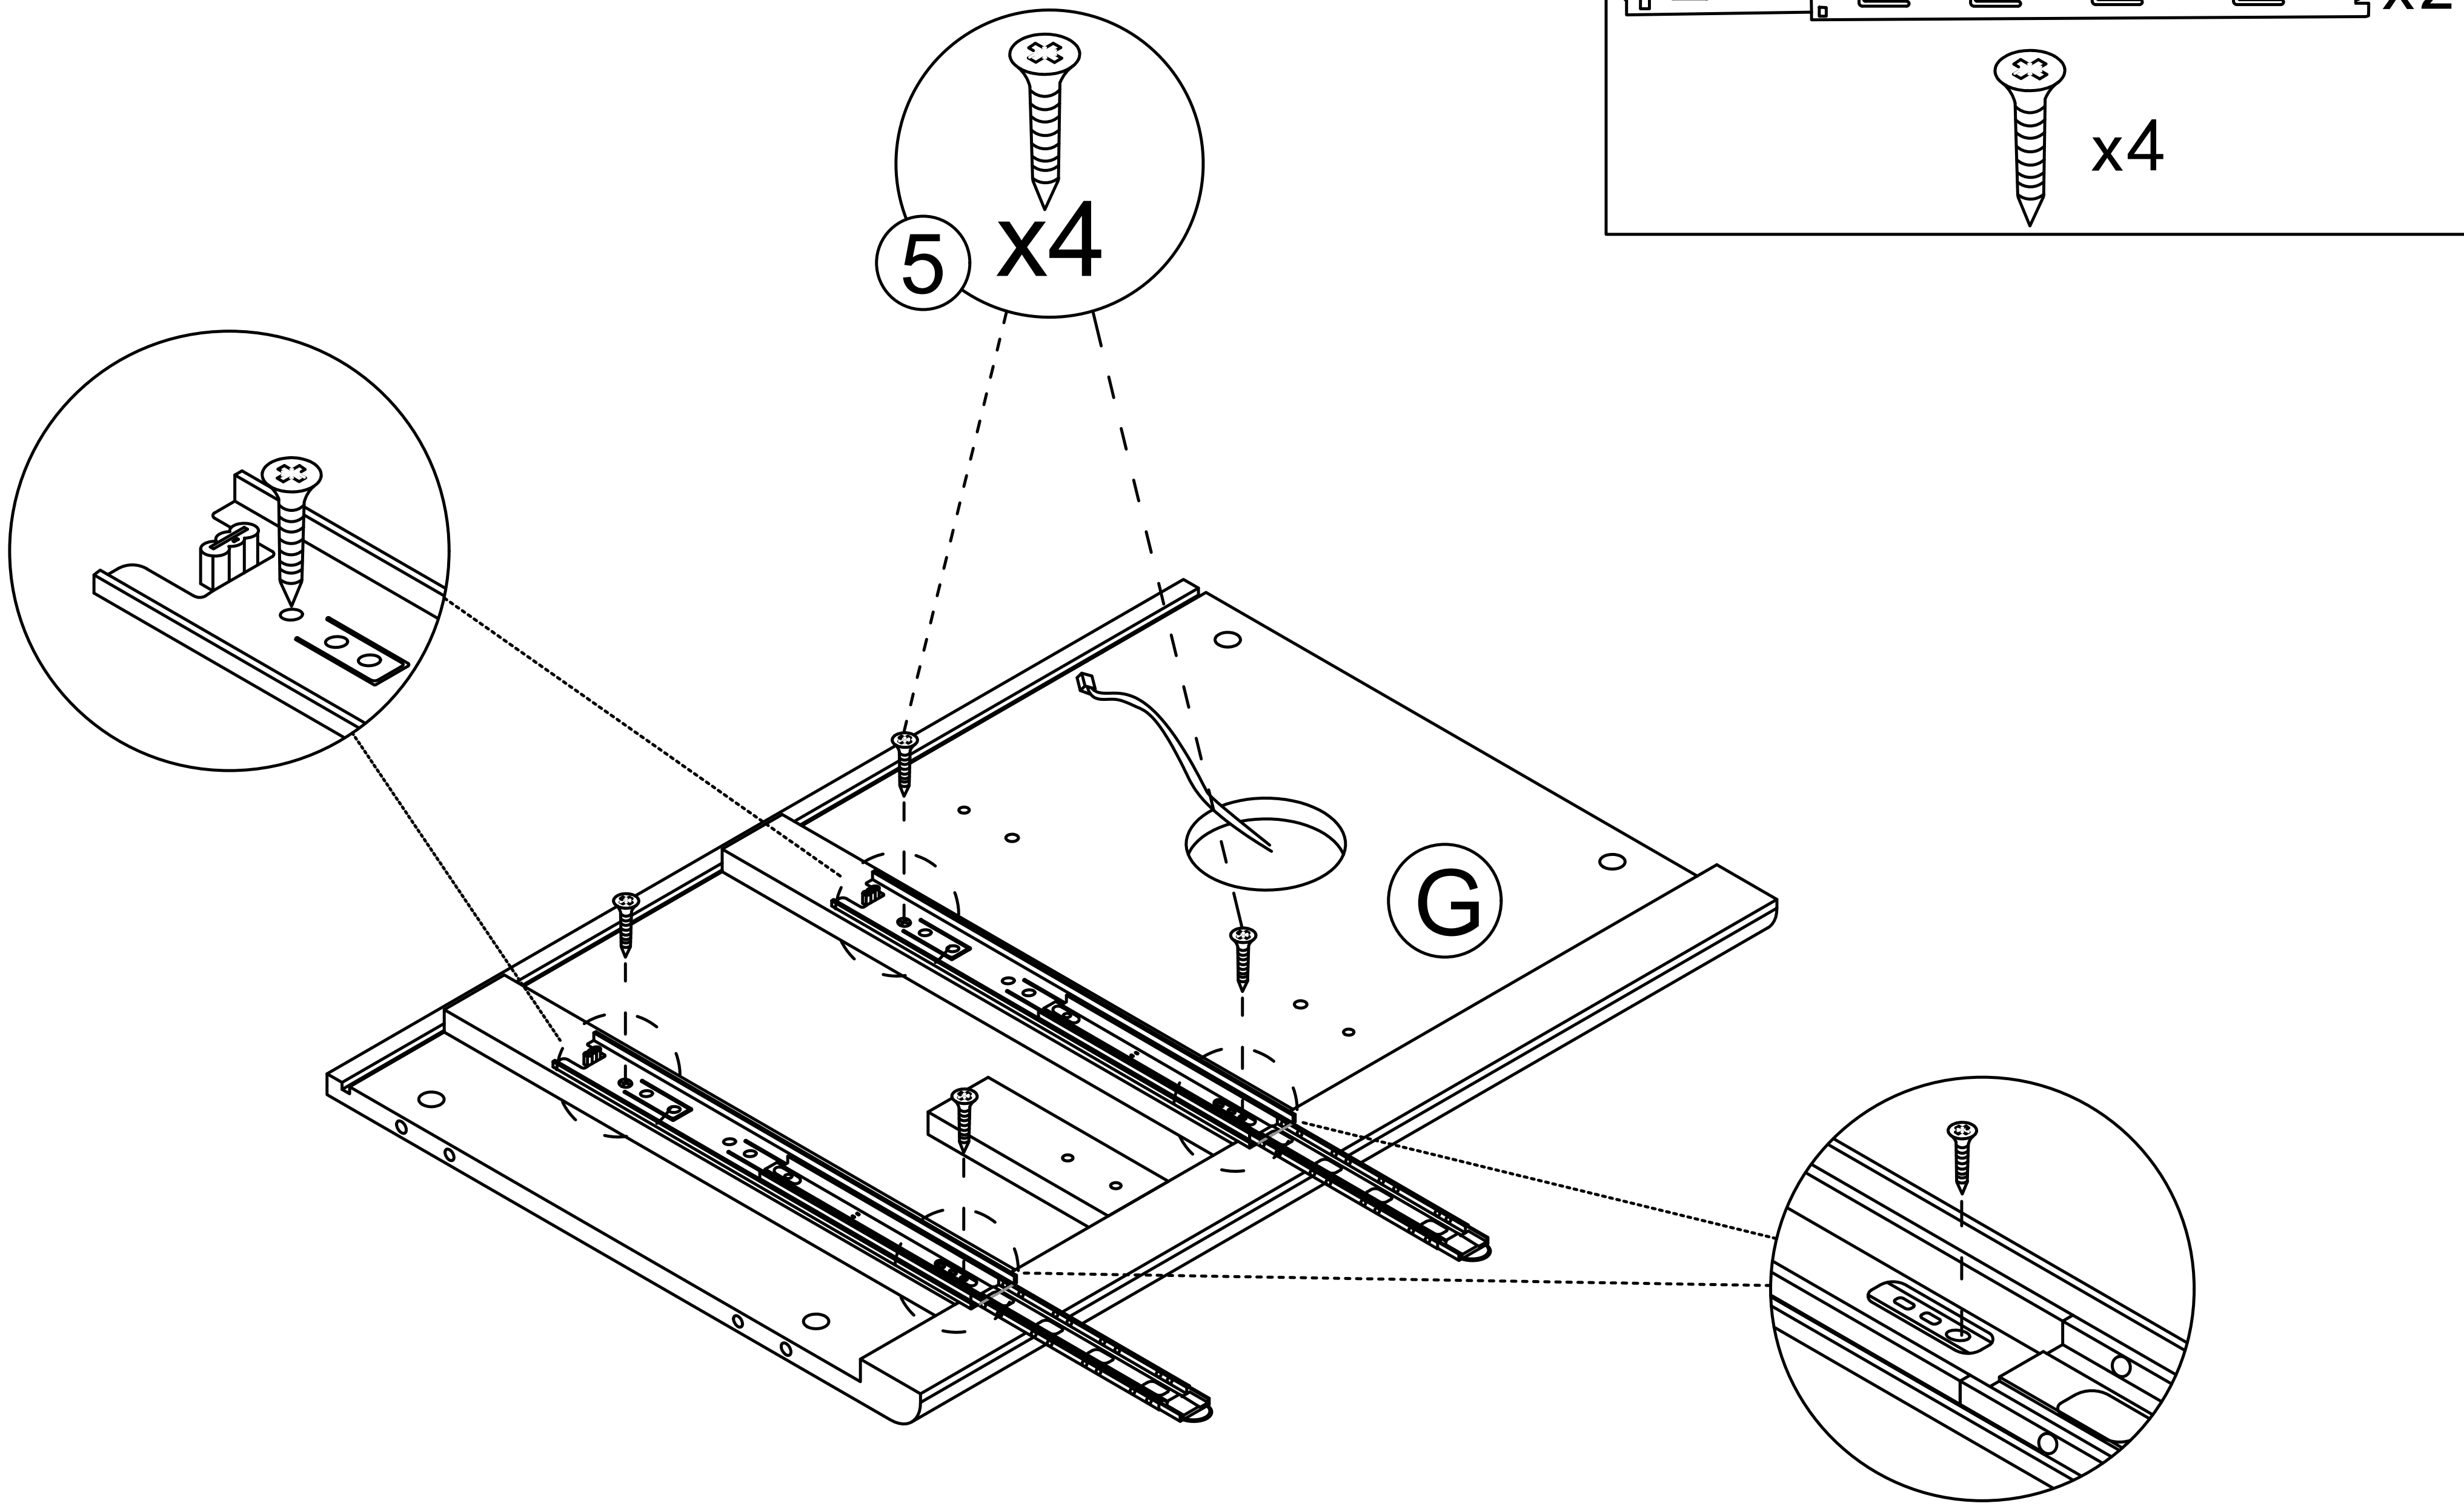


 Step 13


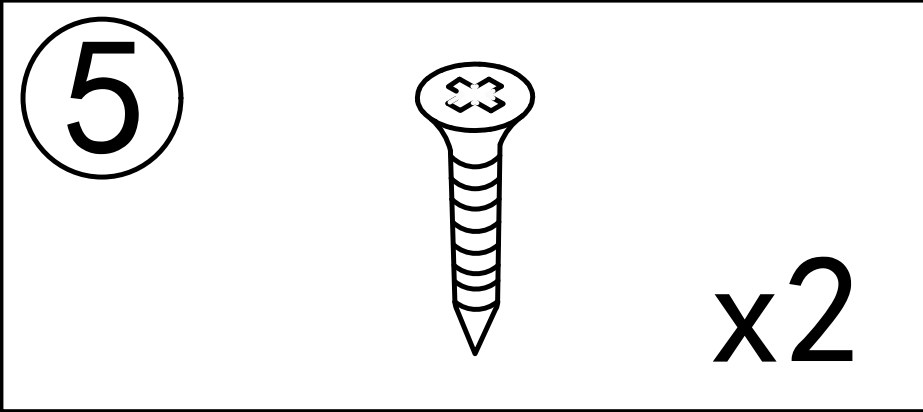


This hole is for strengthening fixed hole customers can choose to install according to their needs.

  
Step 14

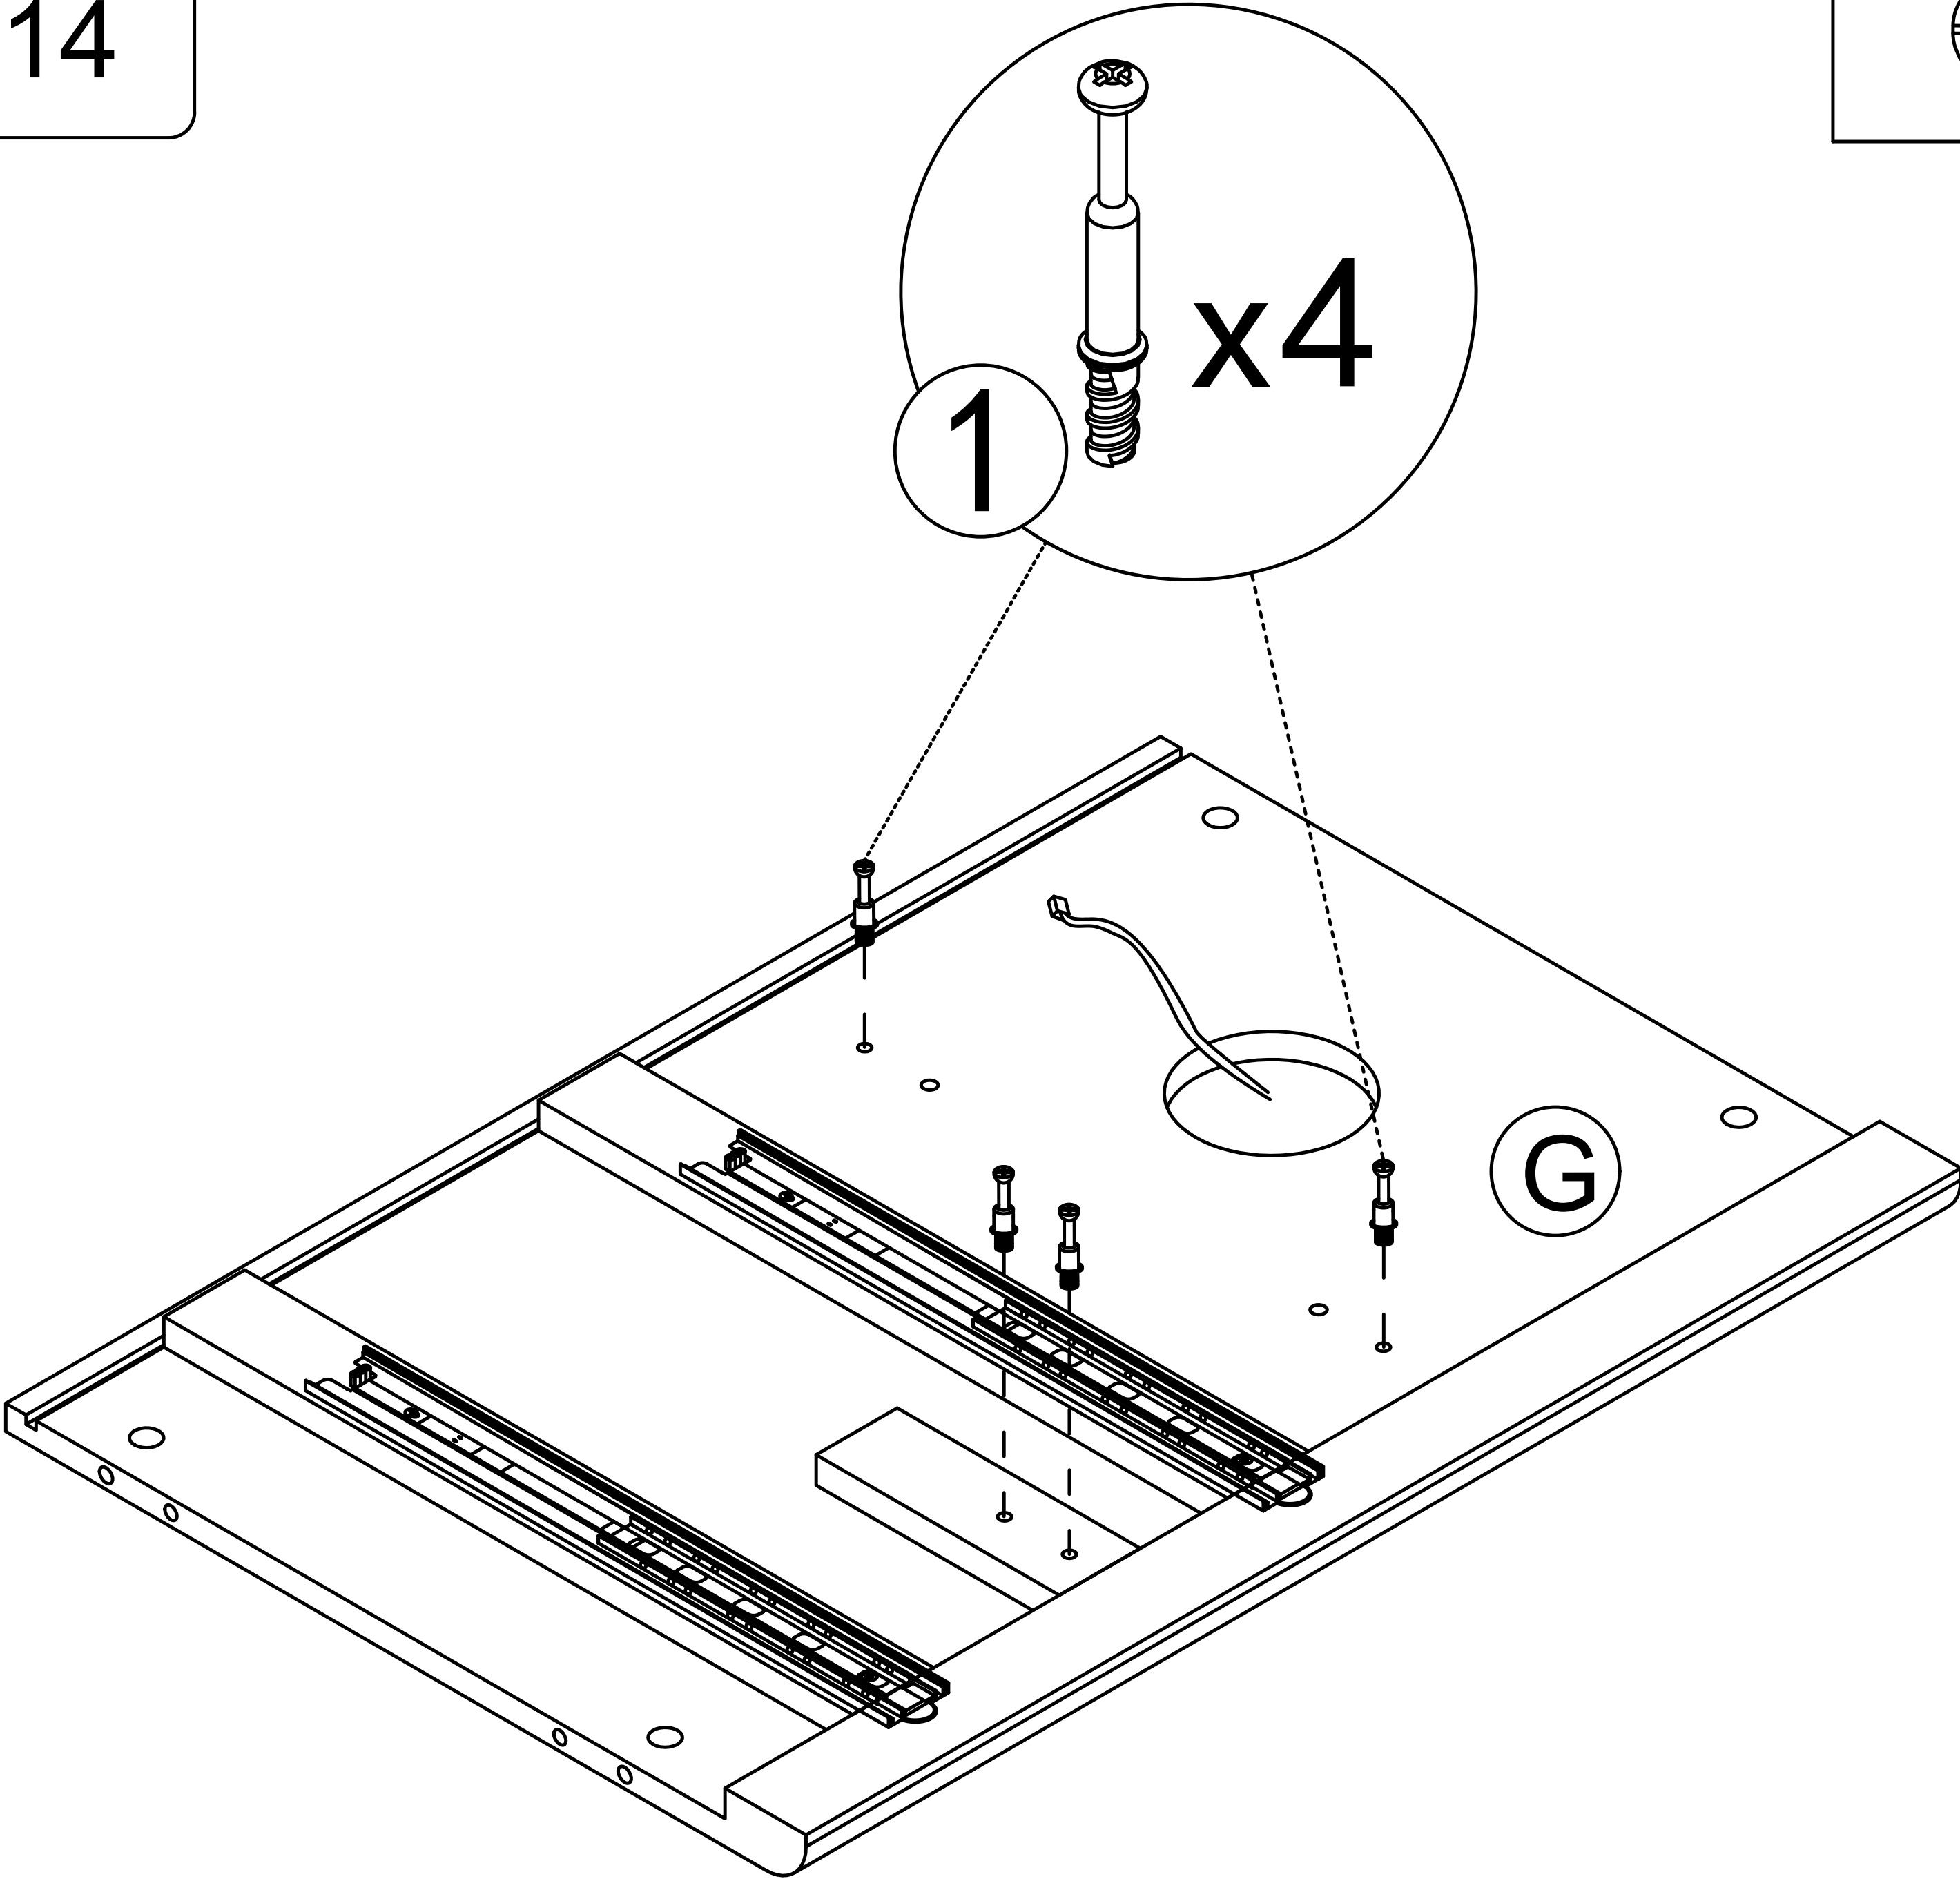
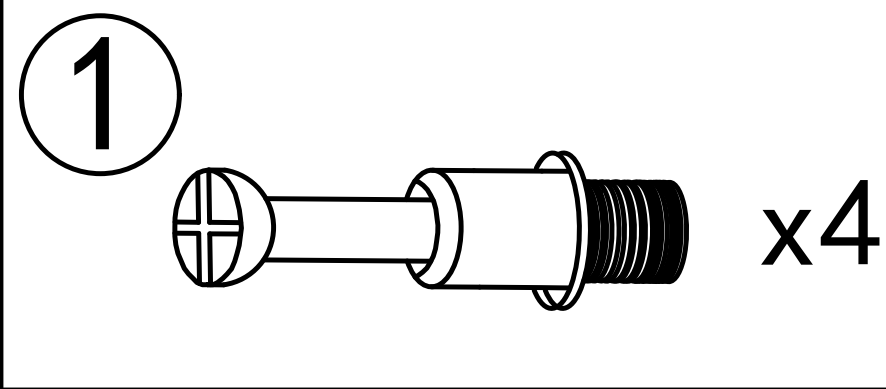


  Step 15

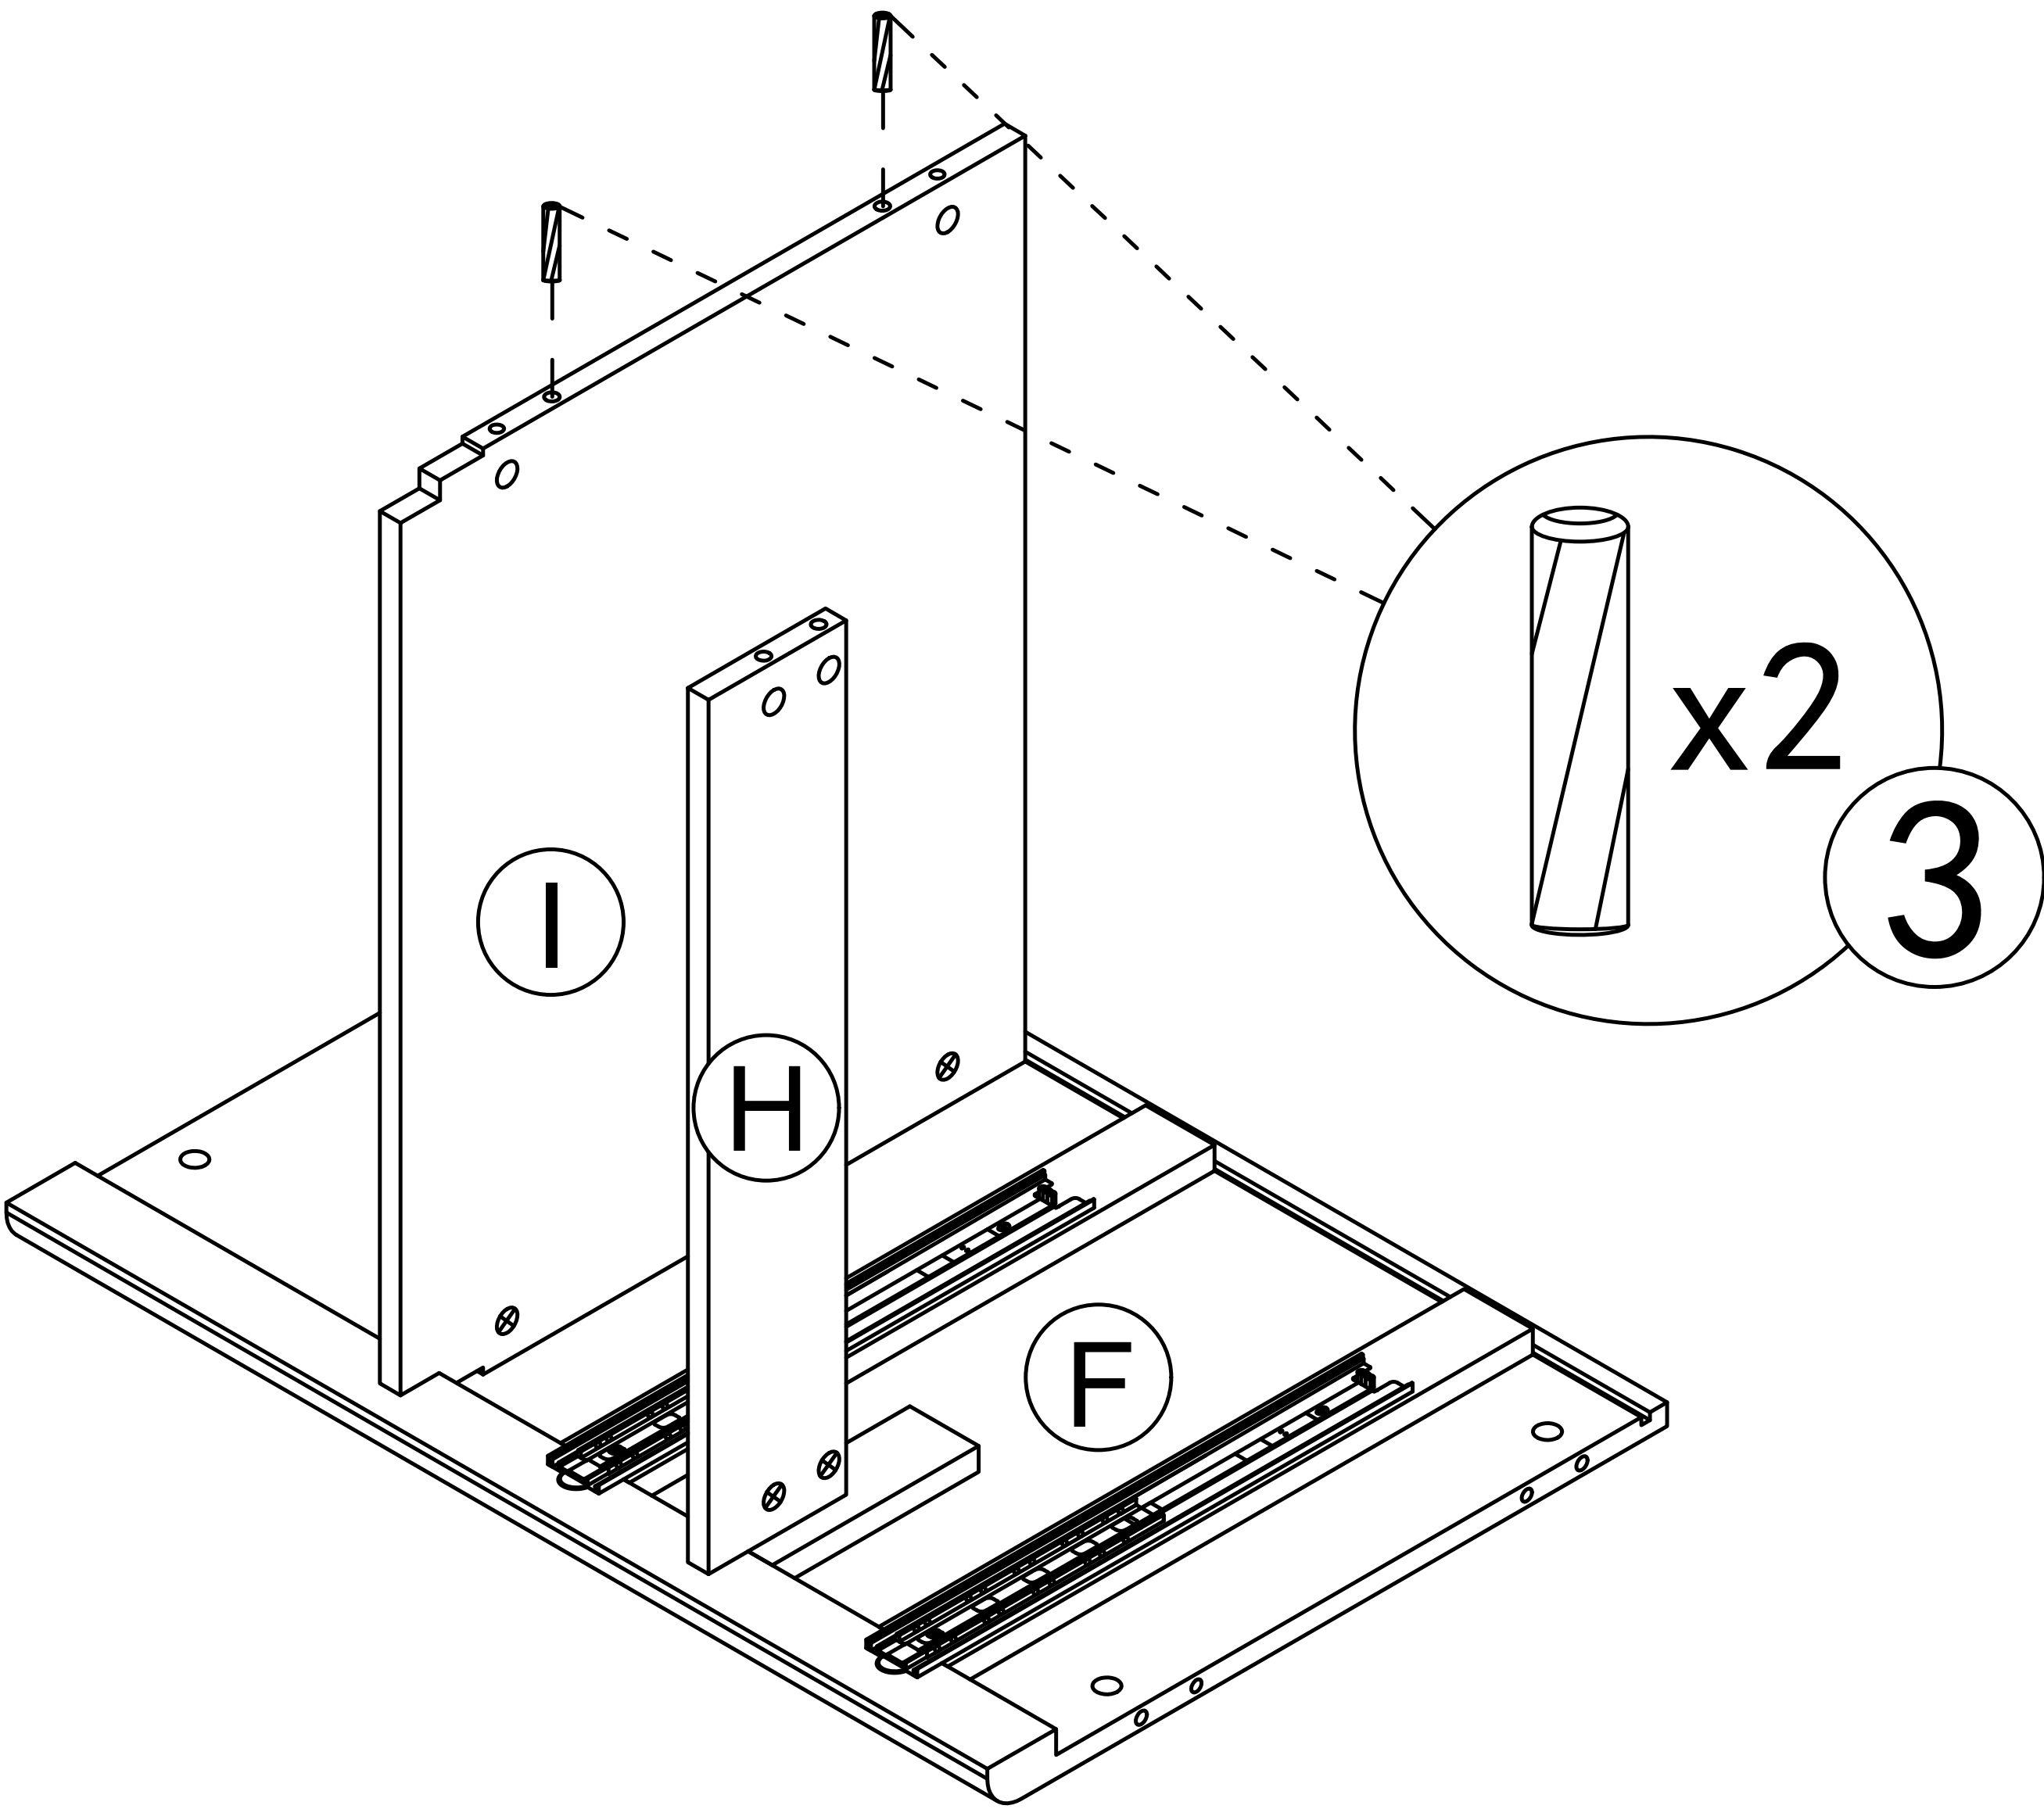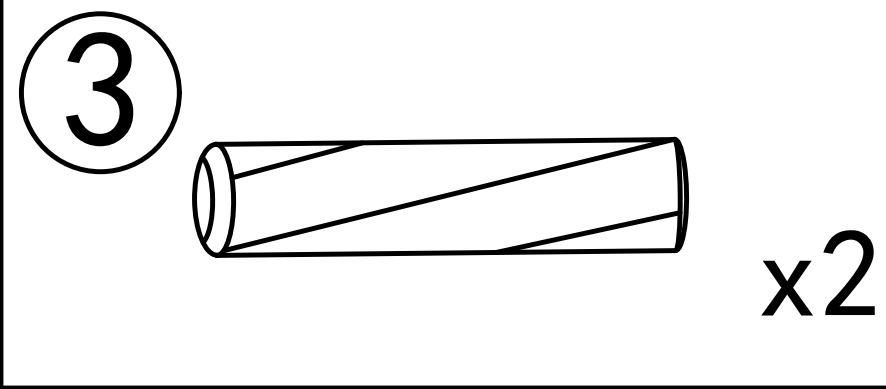

 
Step 16

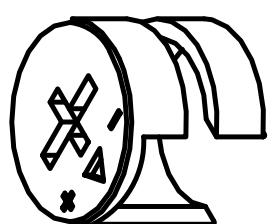2  x4

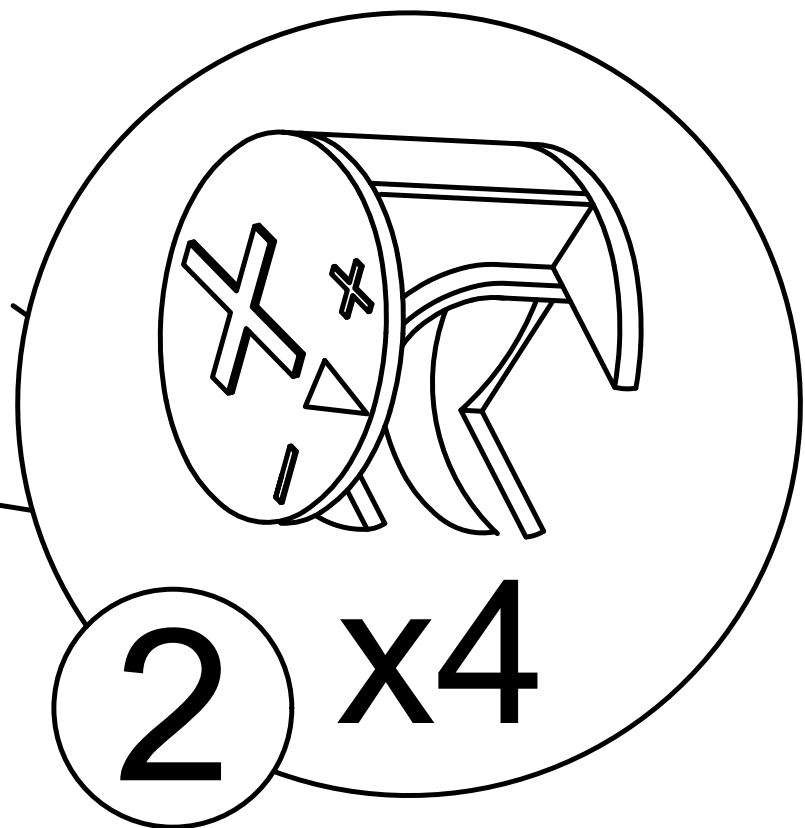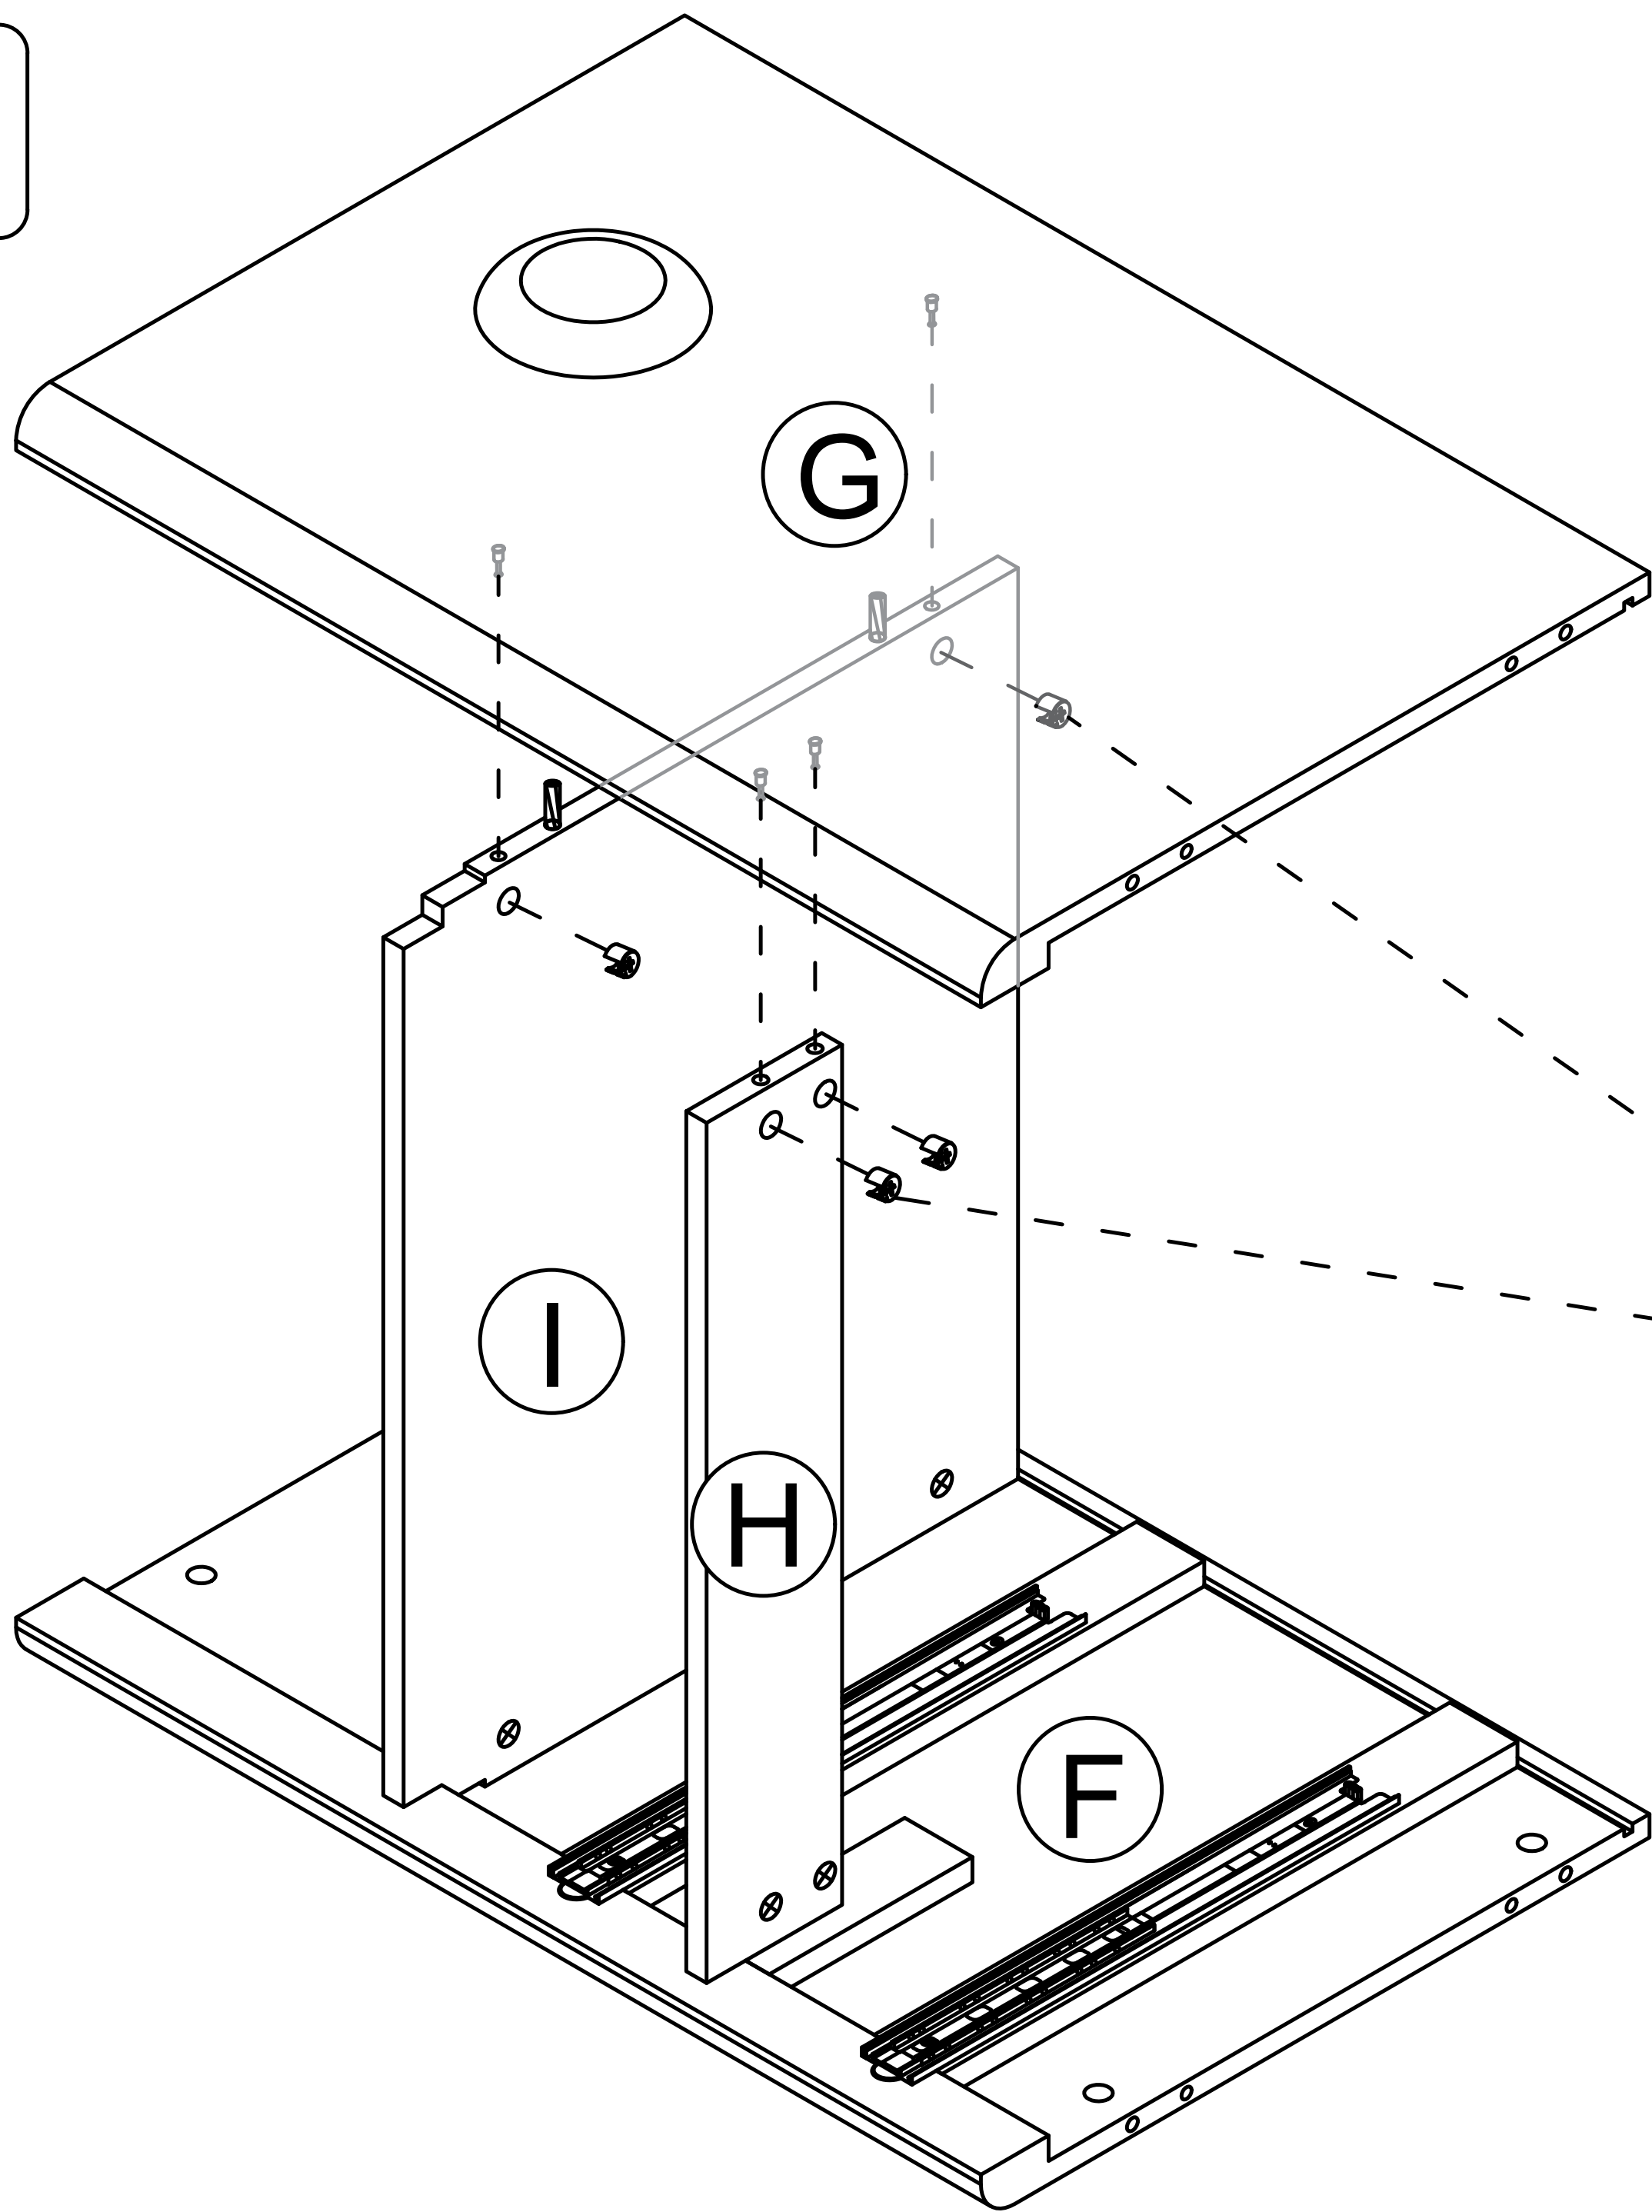  




Step 17

 6  x4

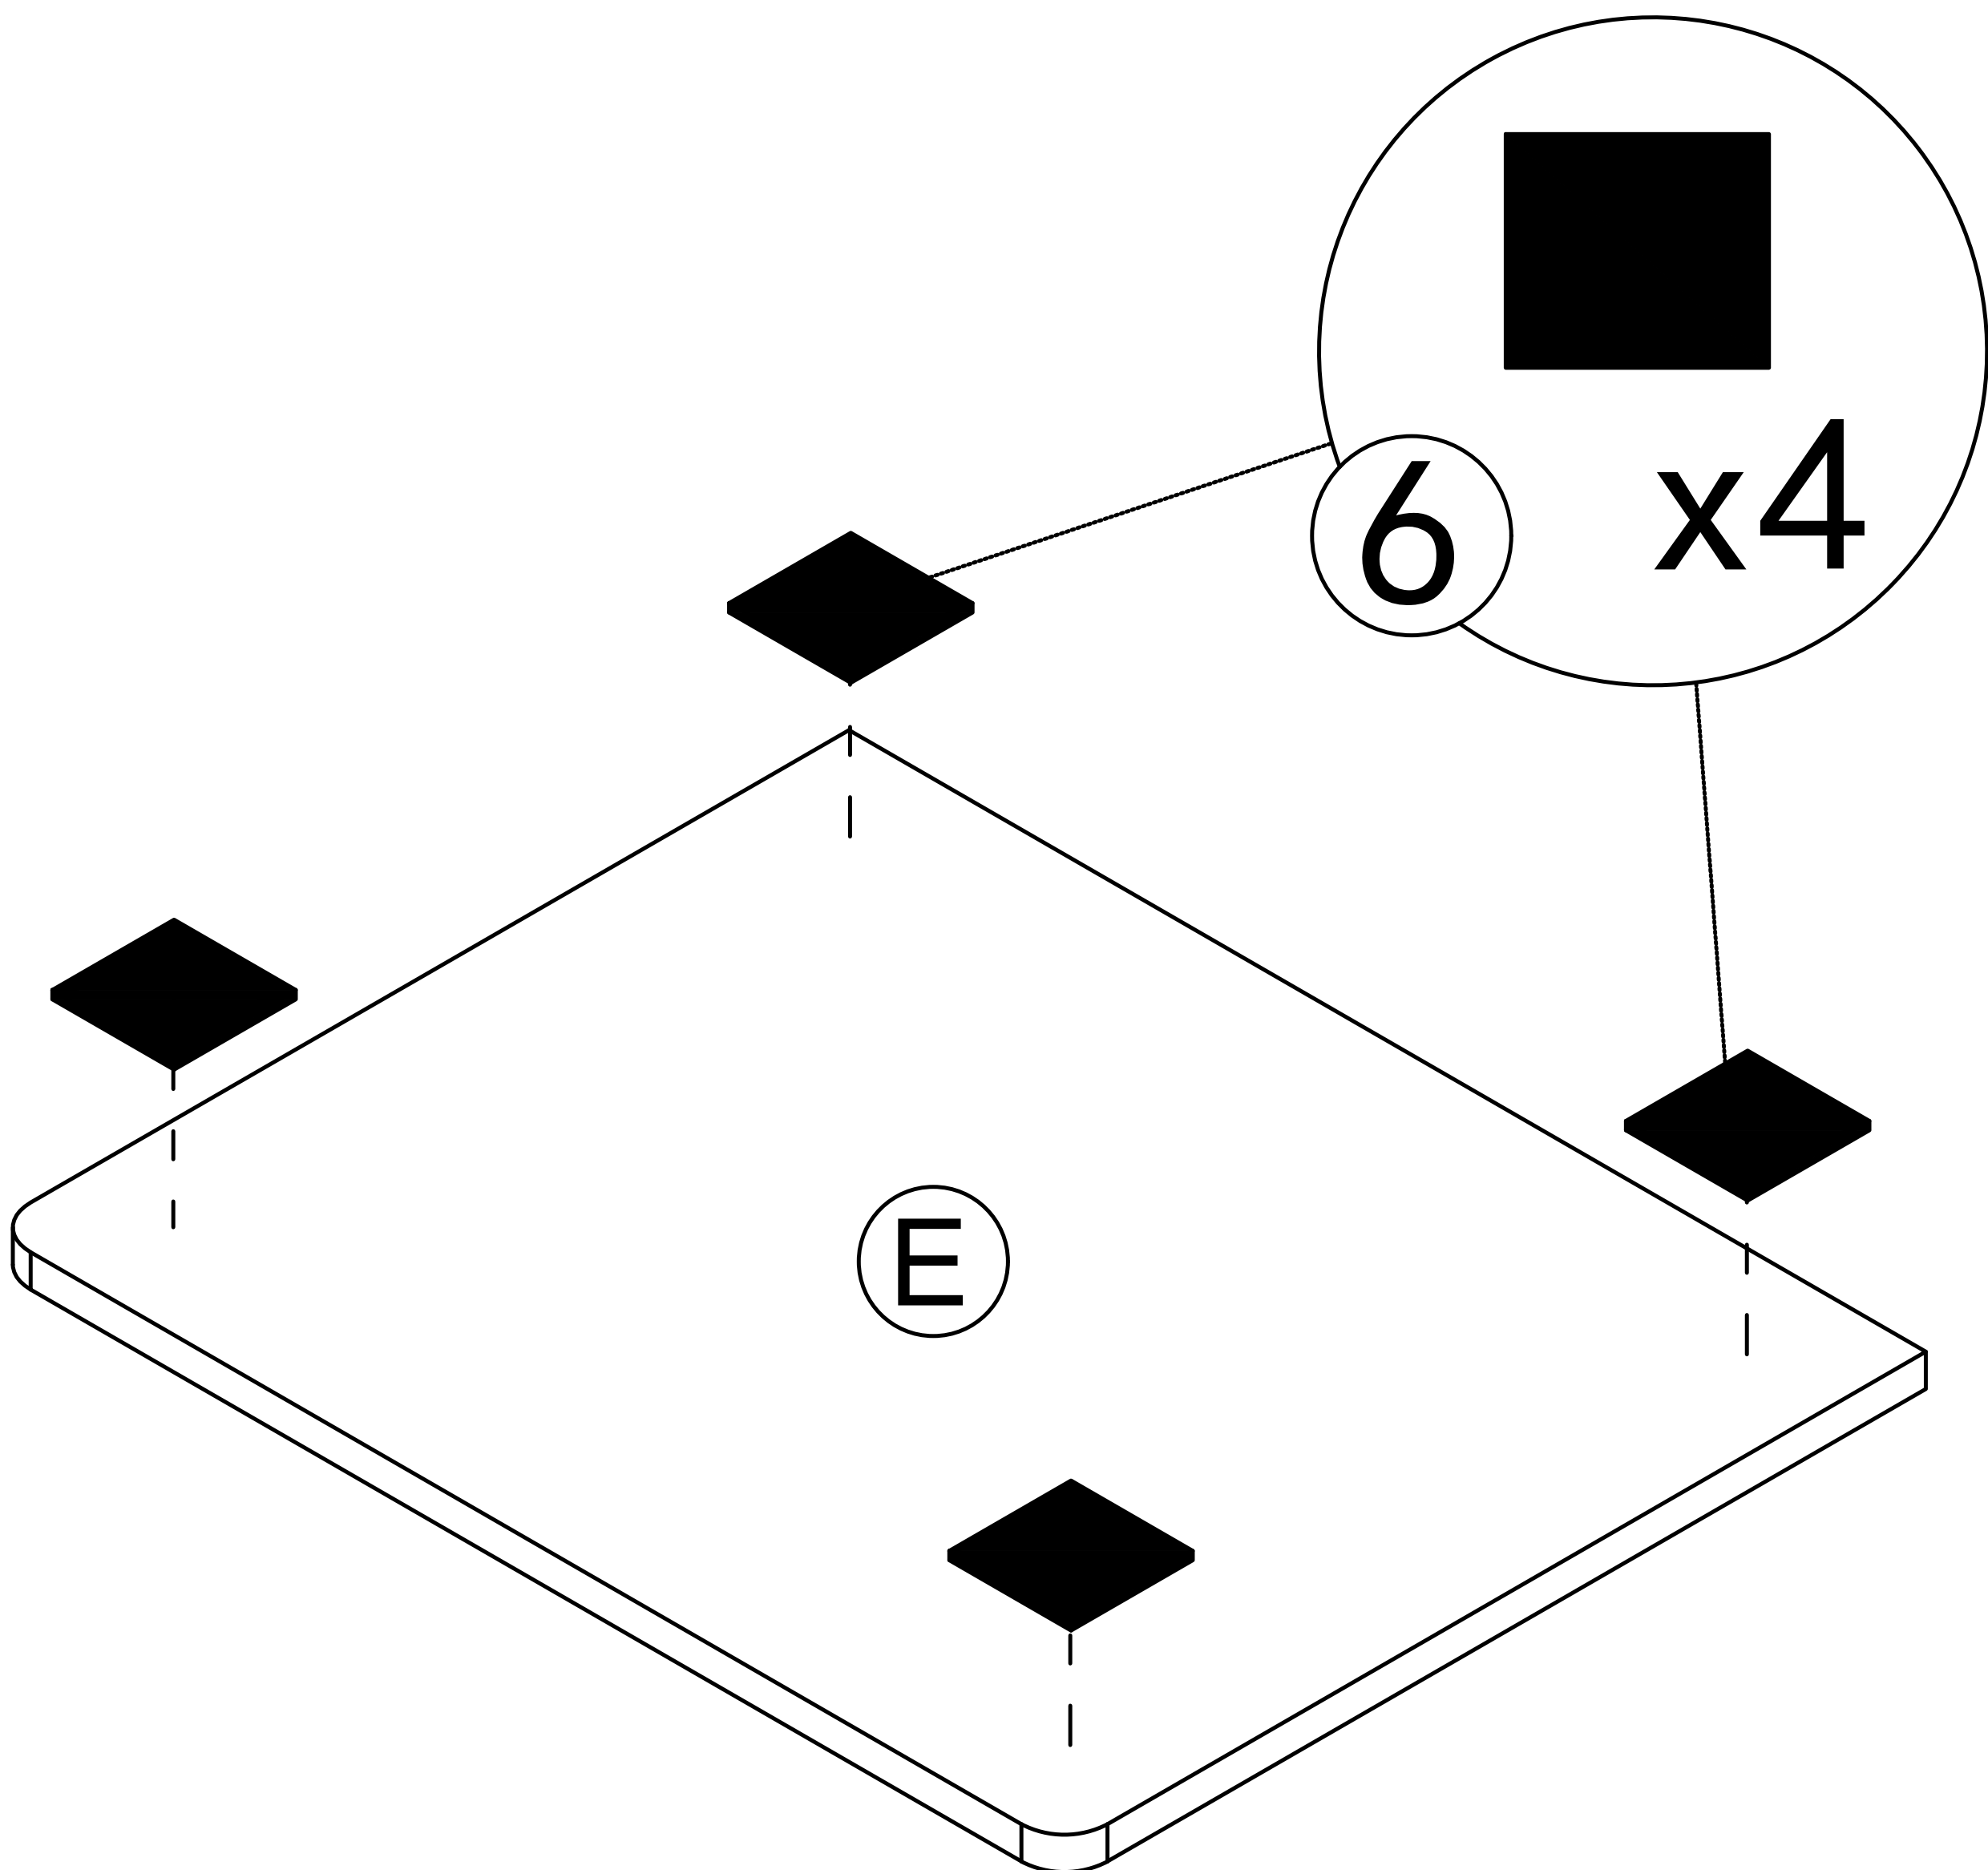


   
Step 18

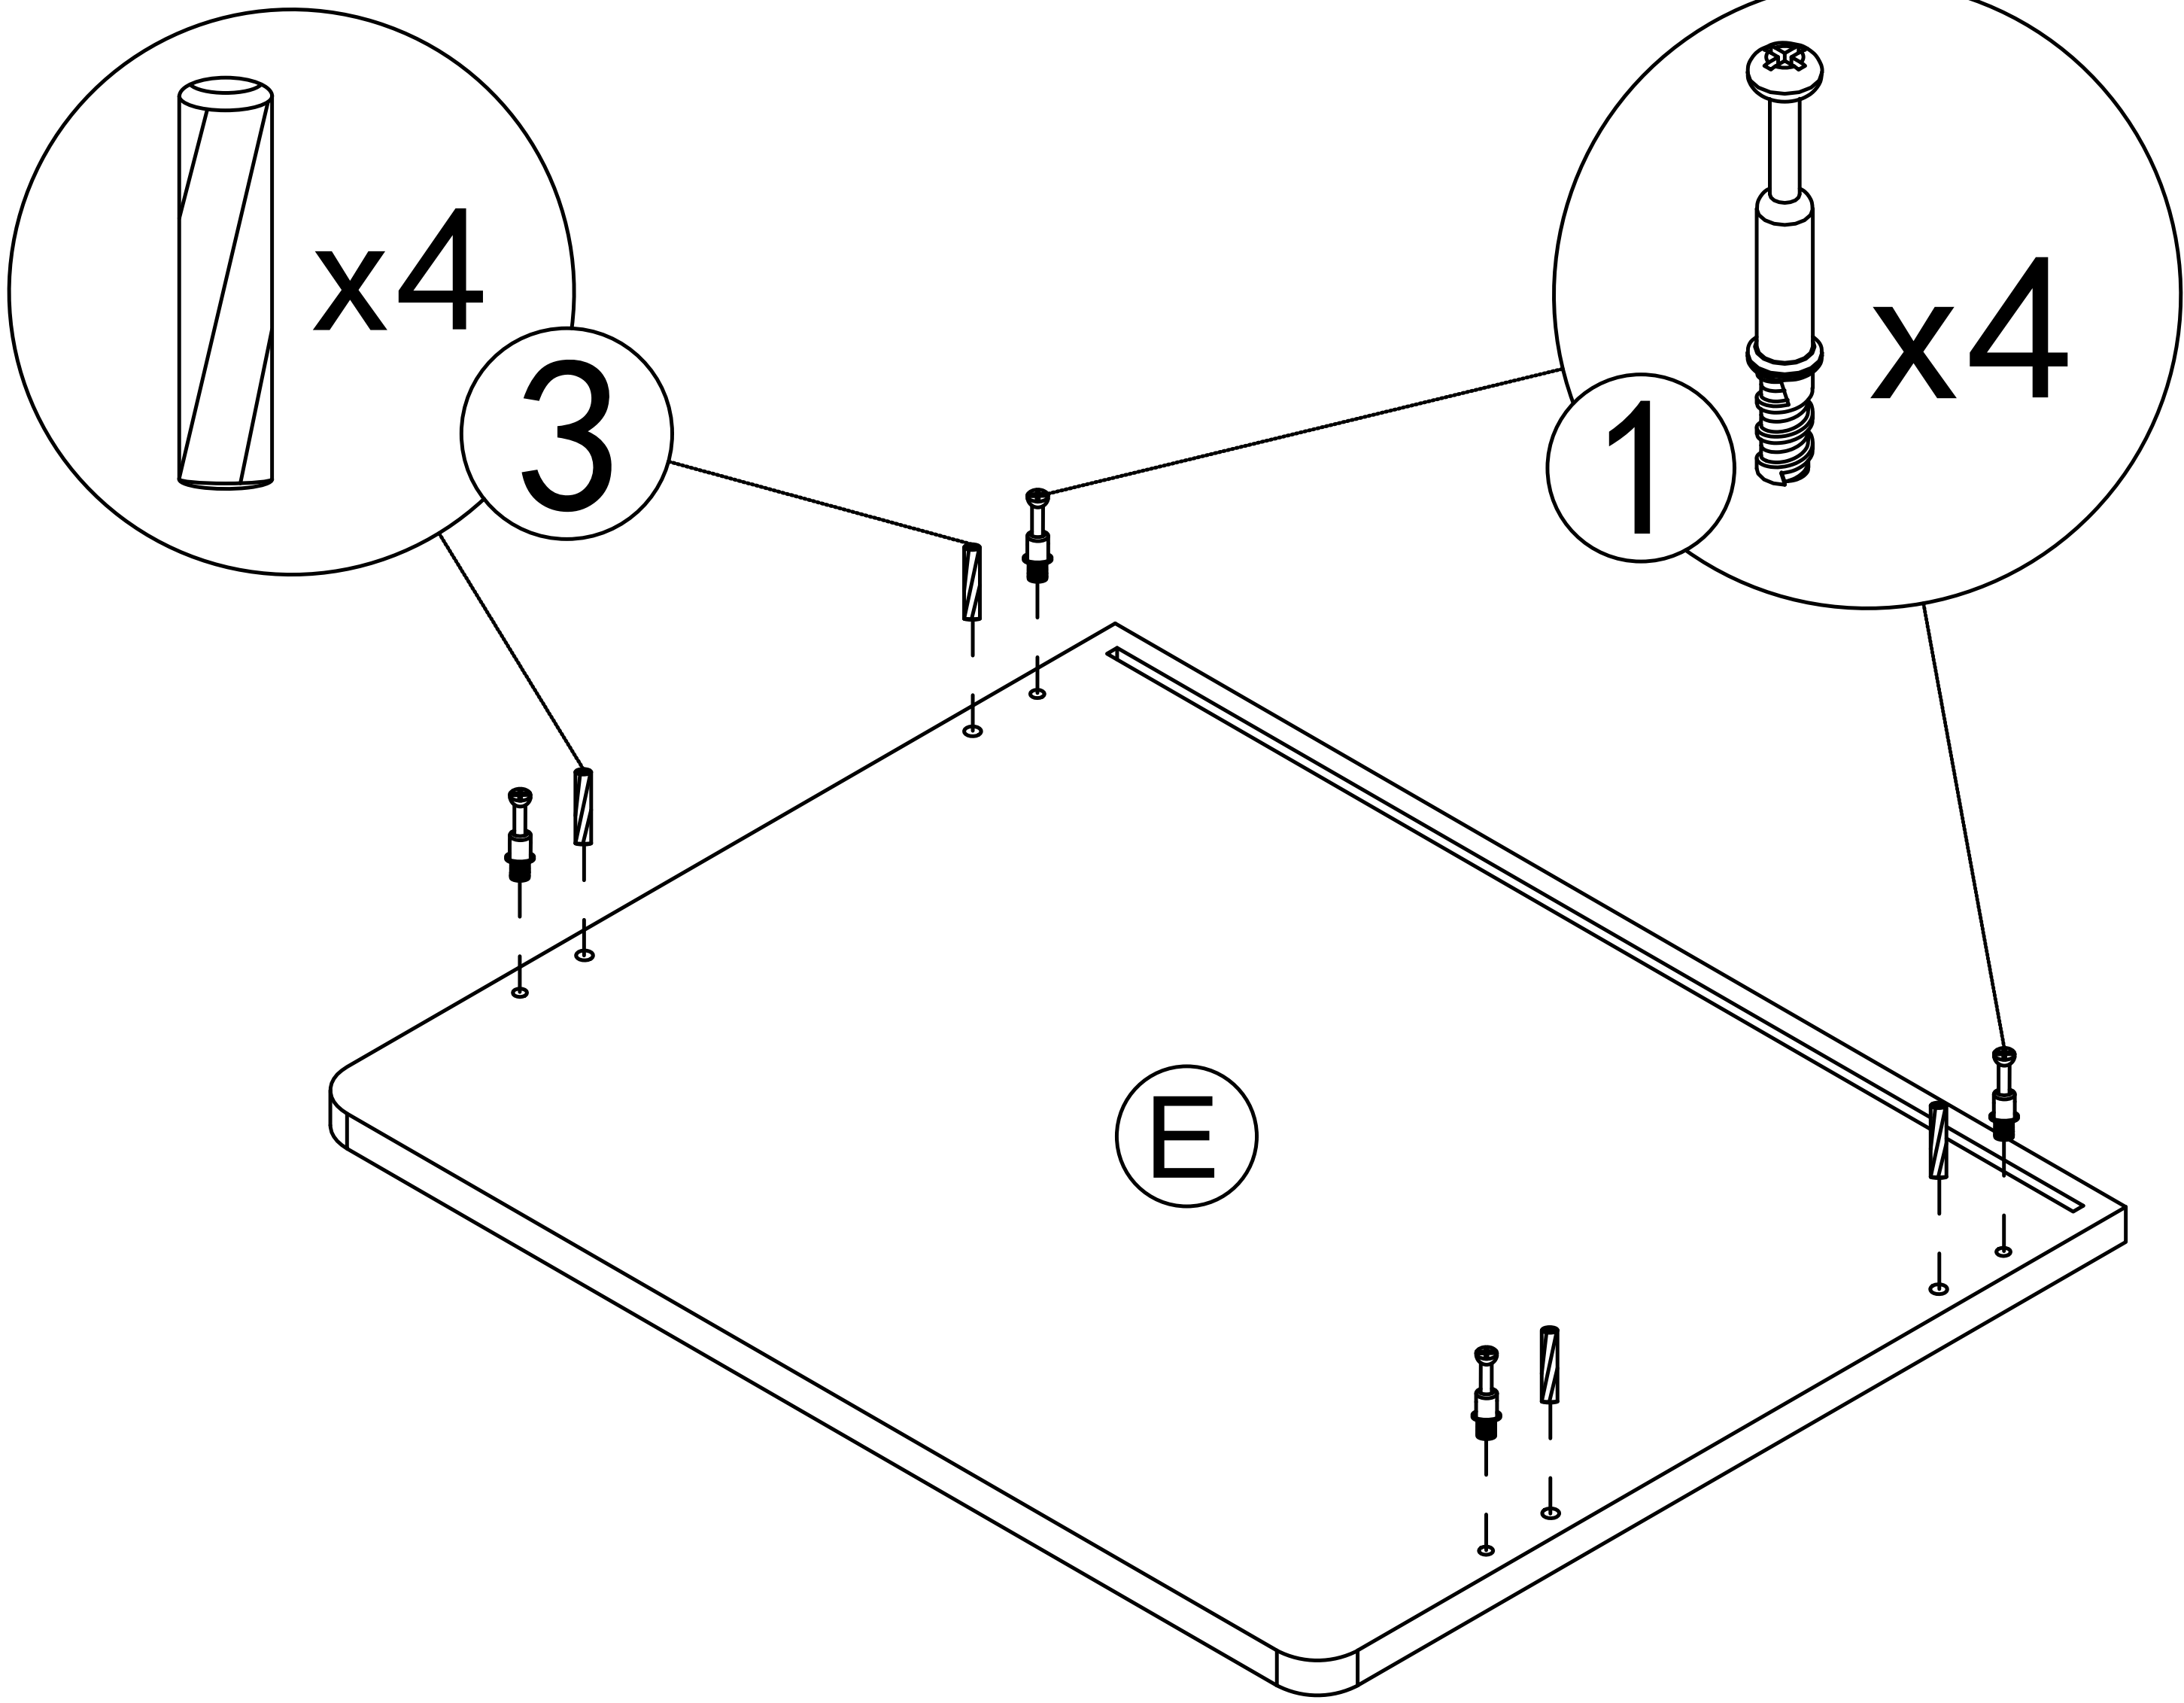

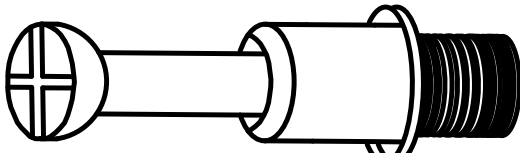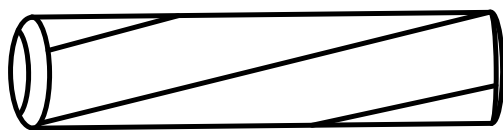
- 1**  **x4**
- 3**  **x4**

  Step 19

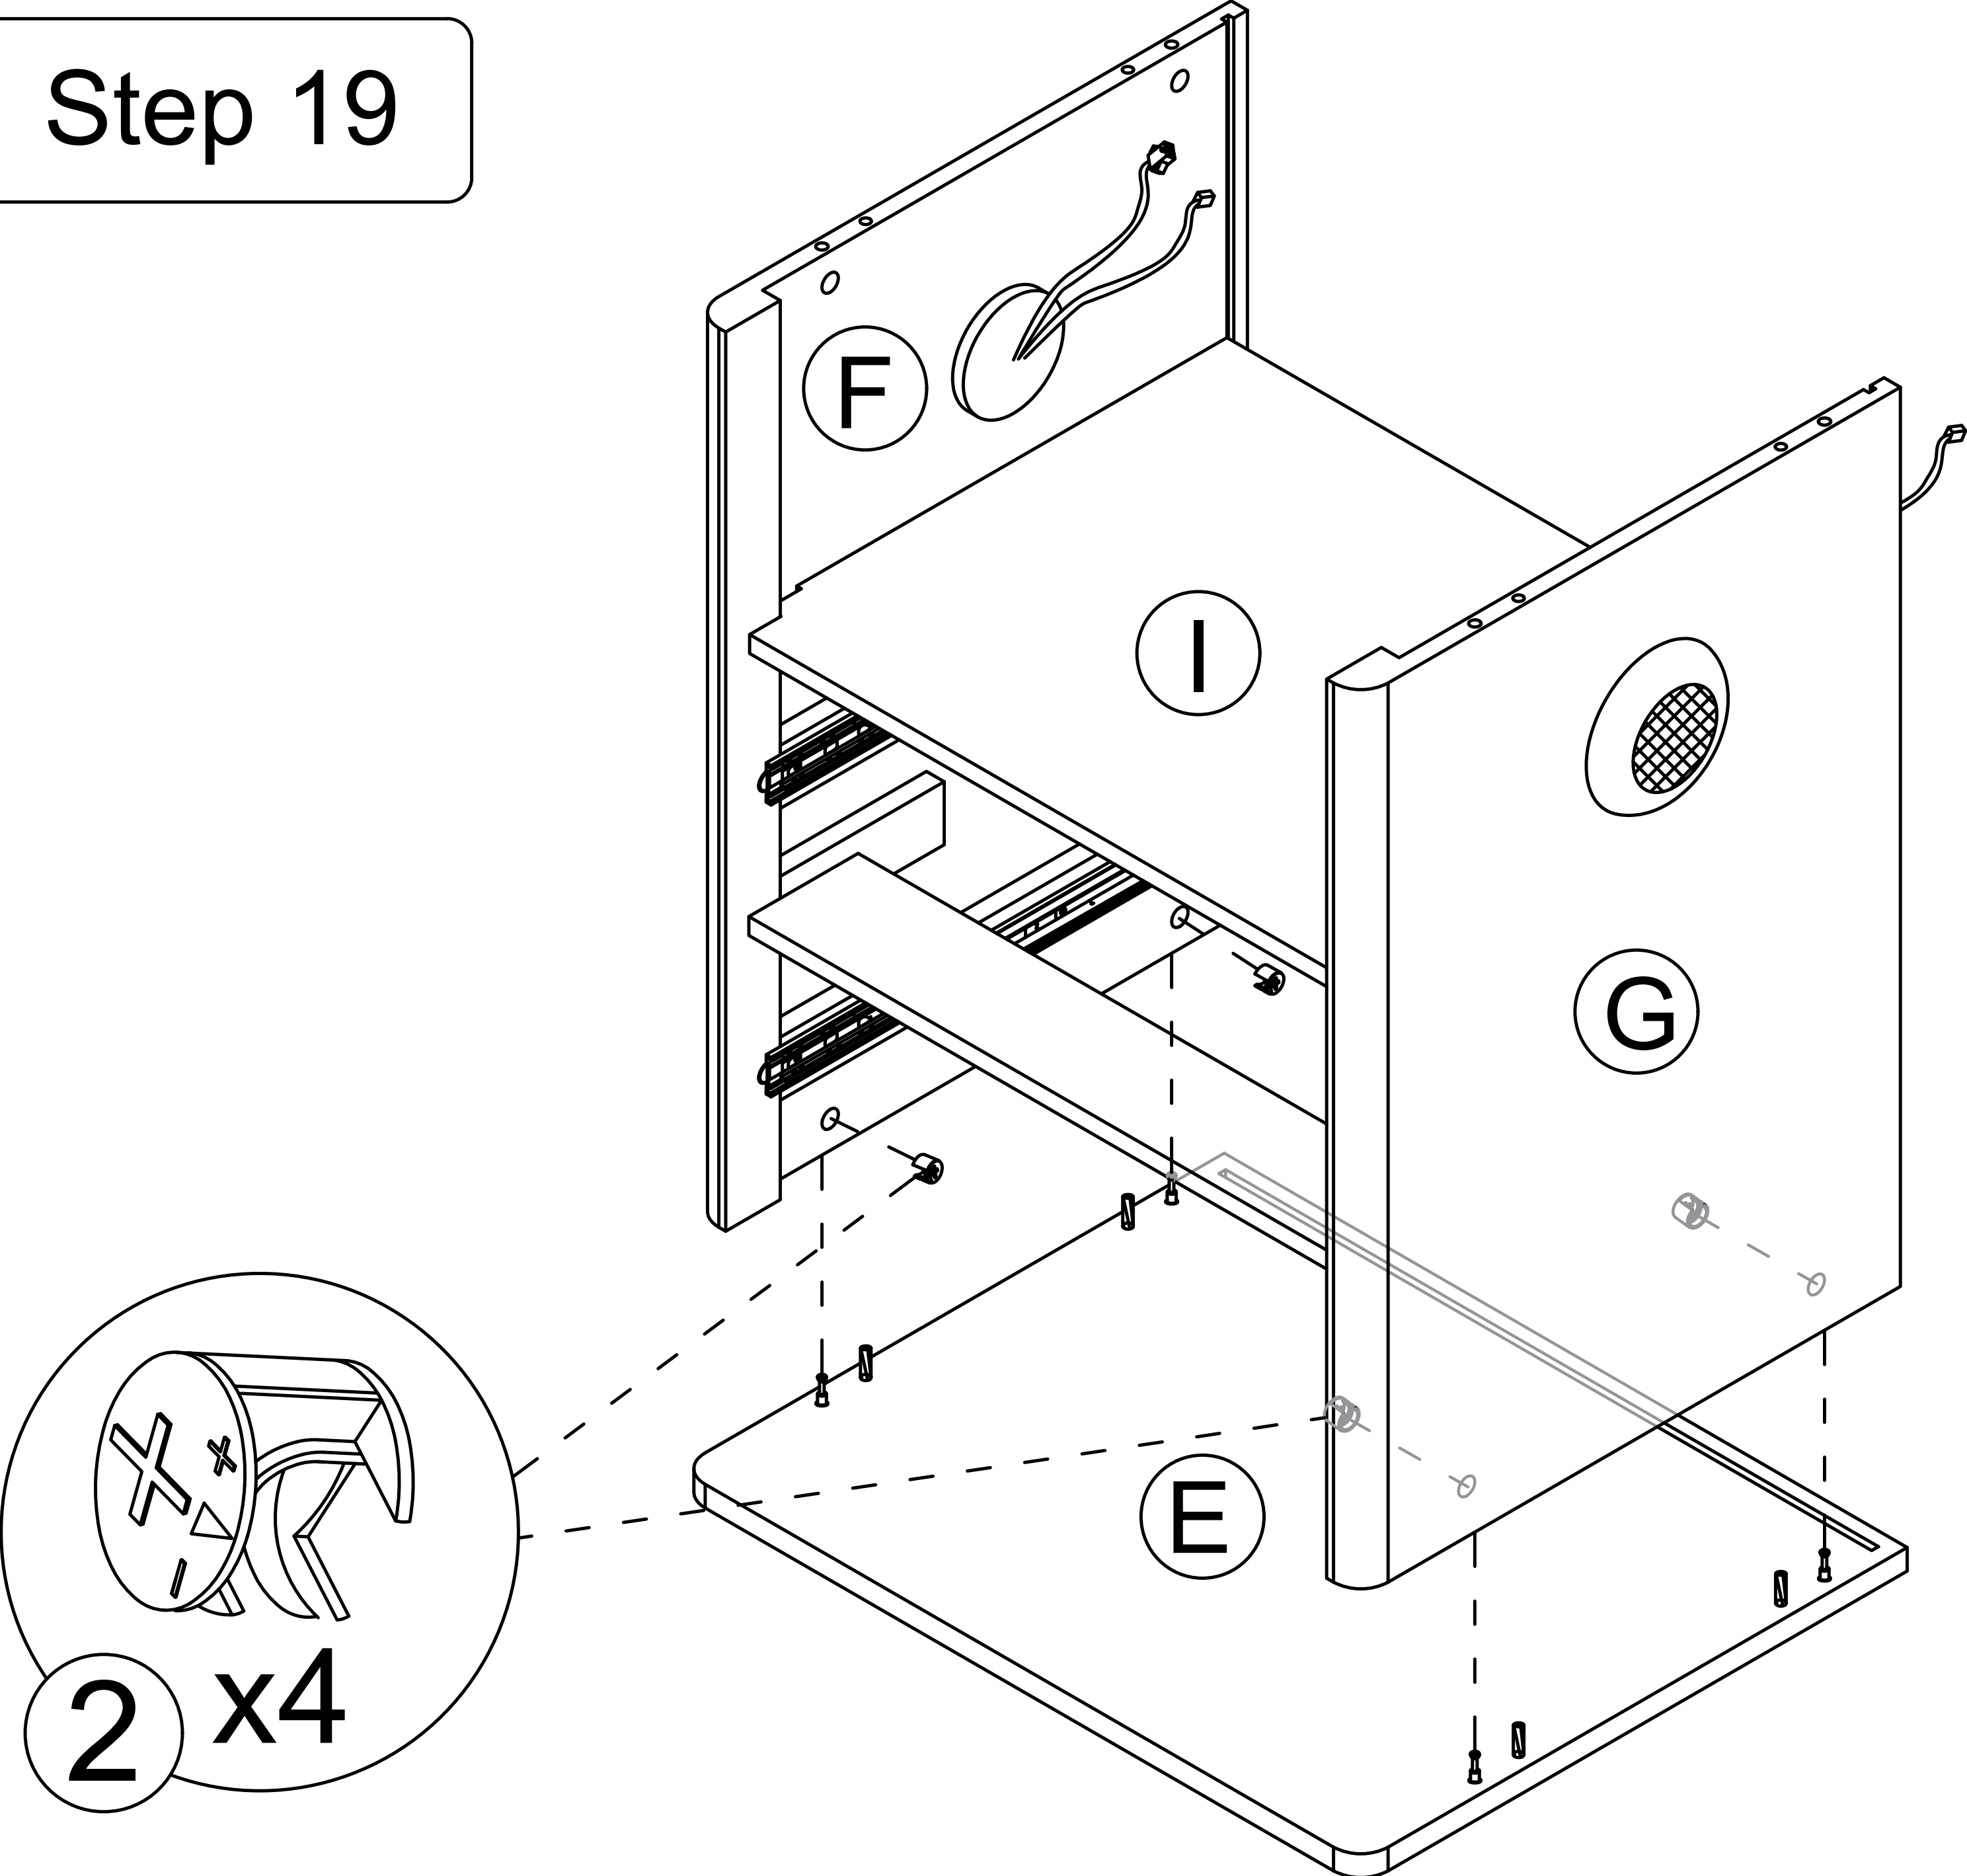


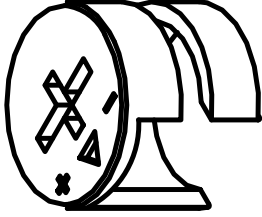- 2**  **x4**

 Step 20


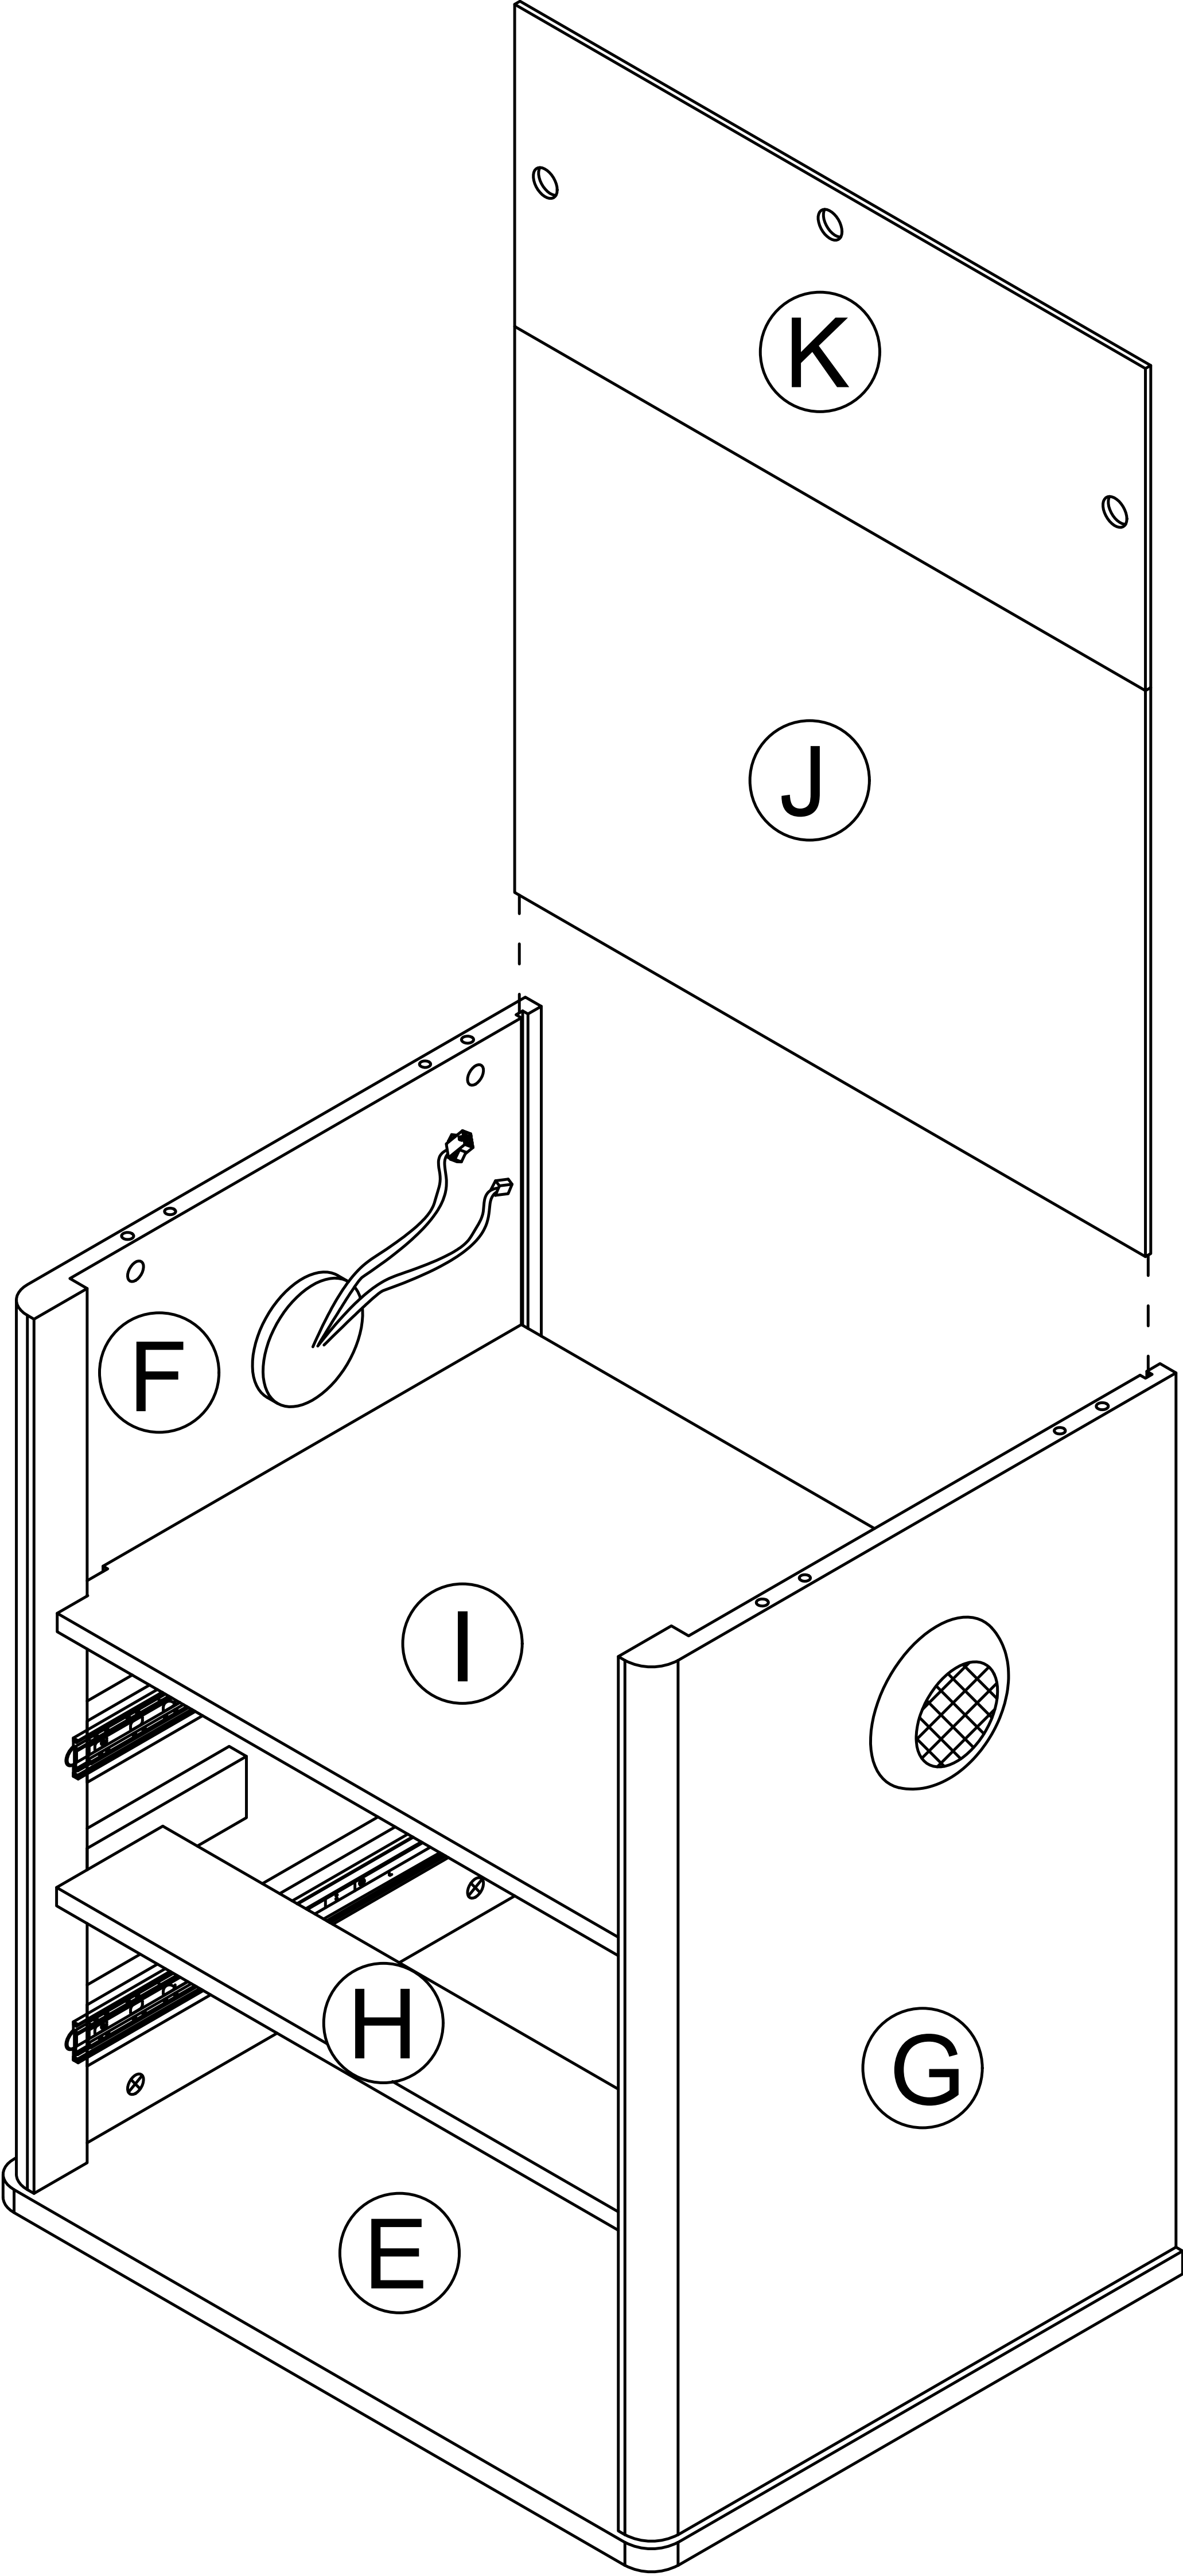


 Step 21

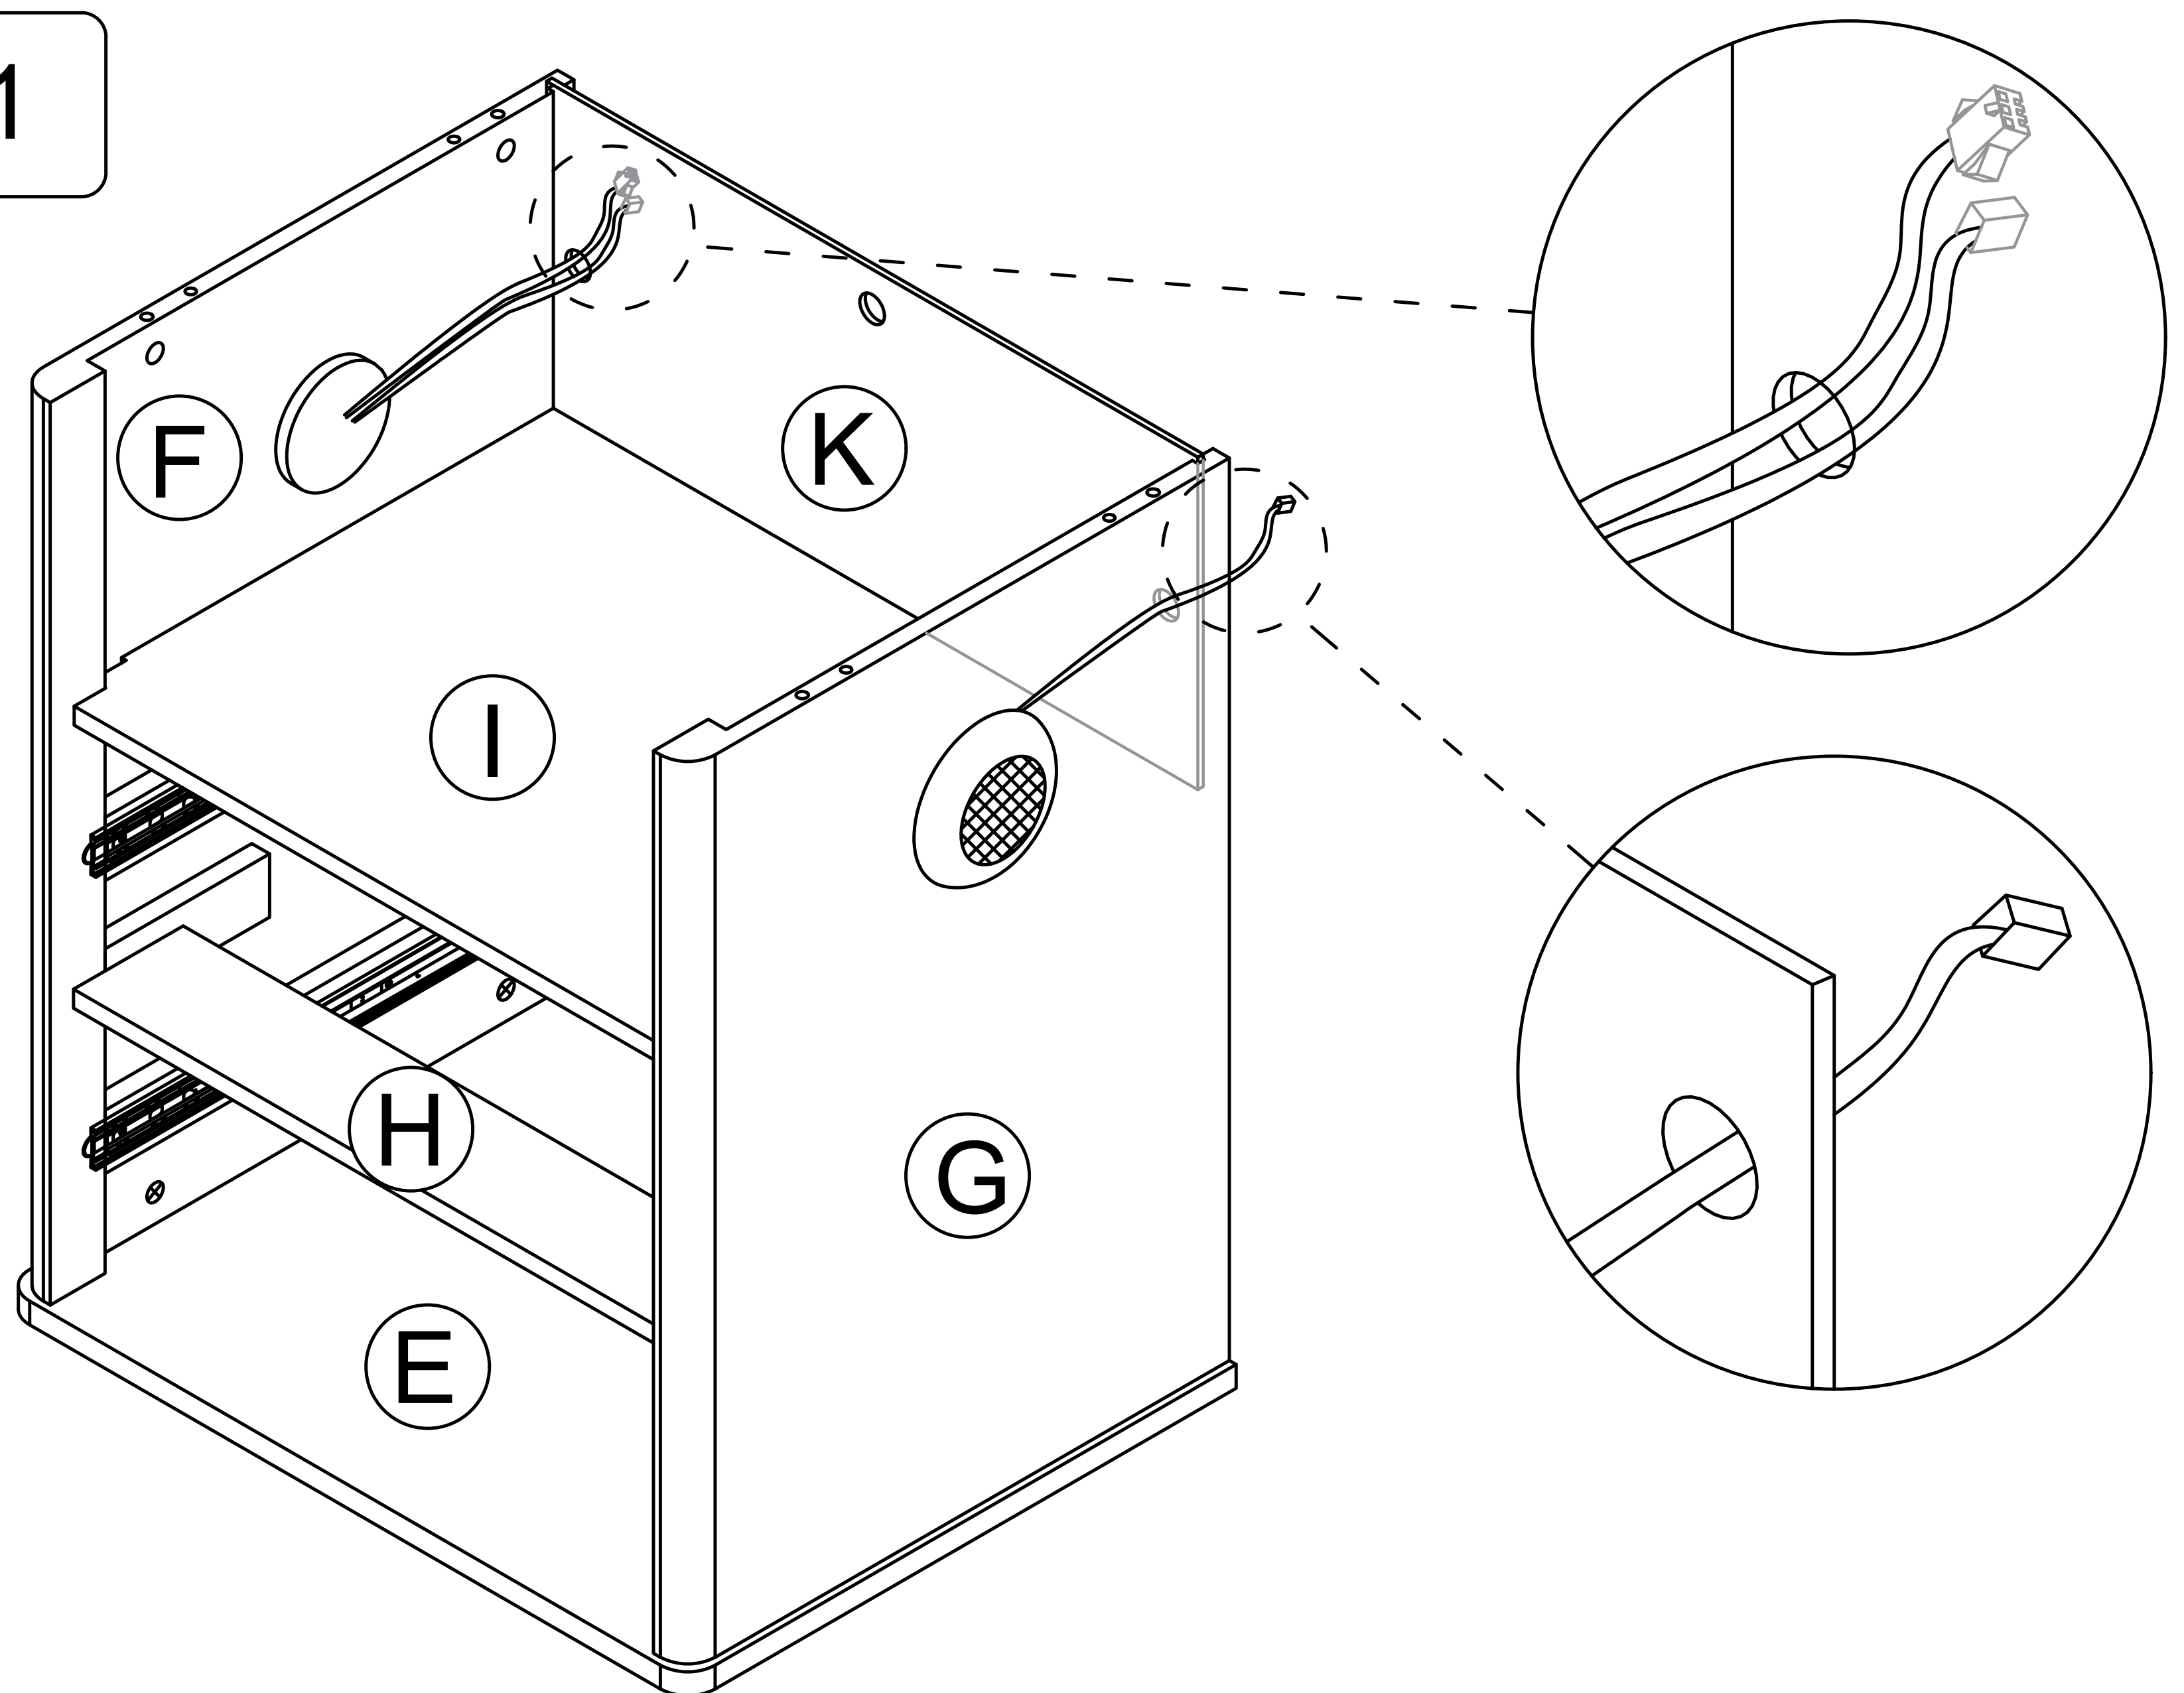



Thread the wiring harnesses of the two speakers through the K-board separately

  Step 22

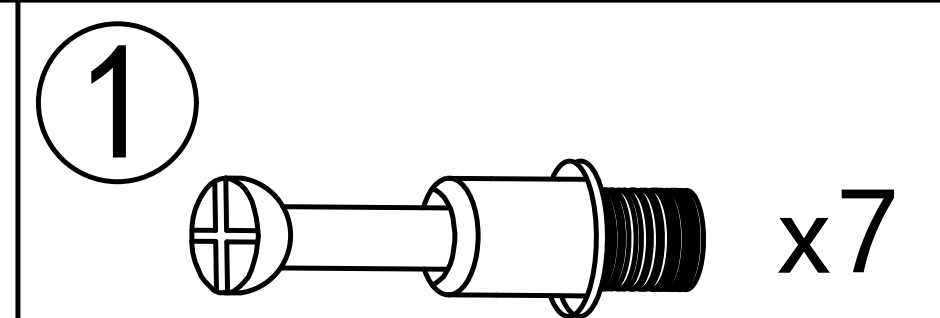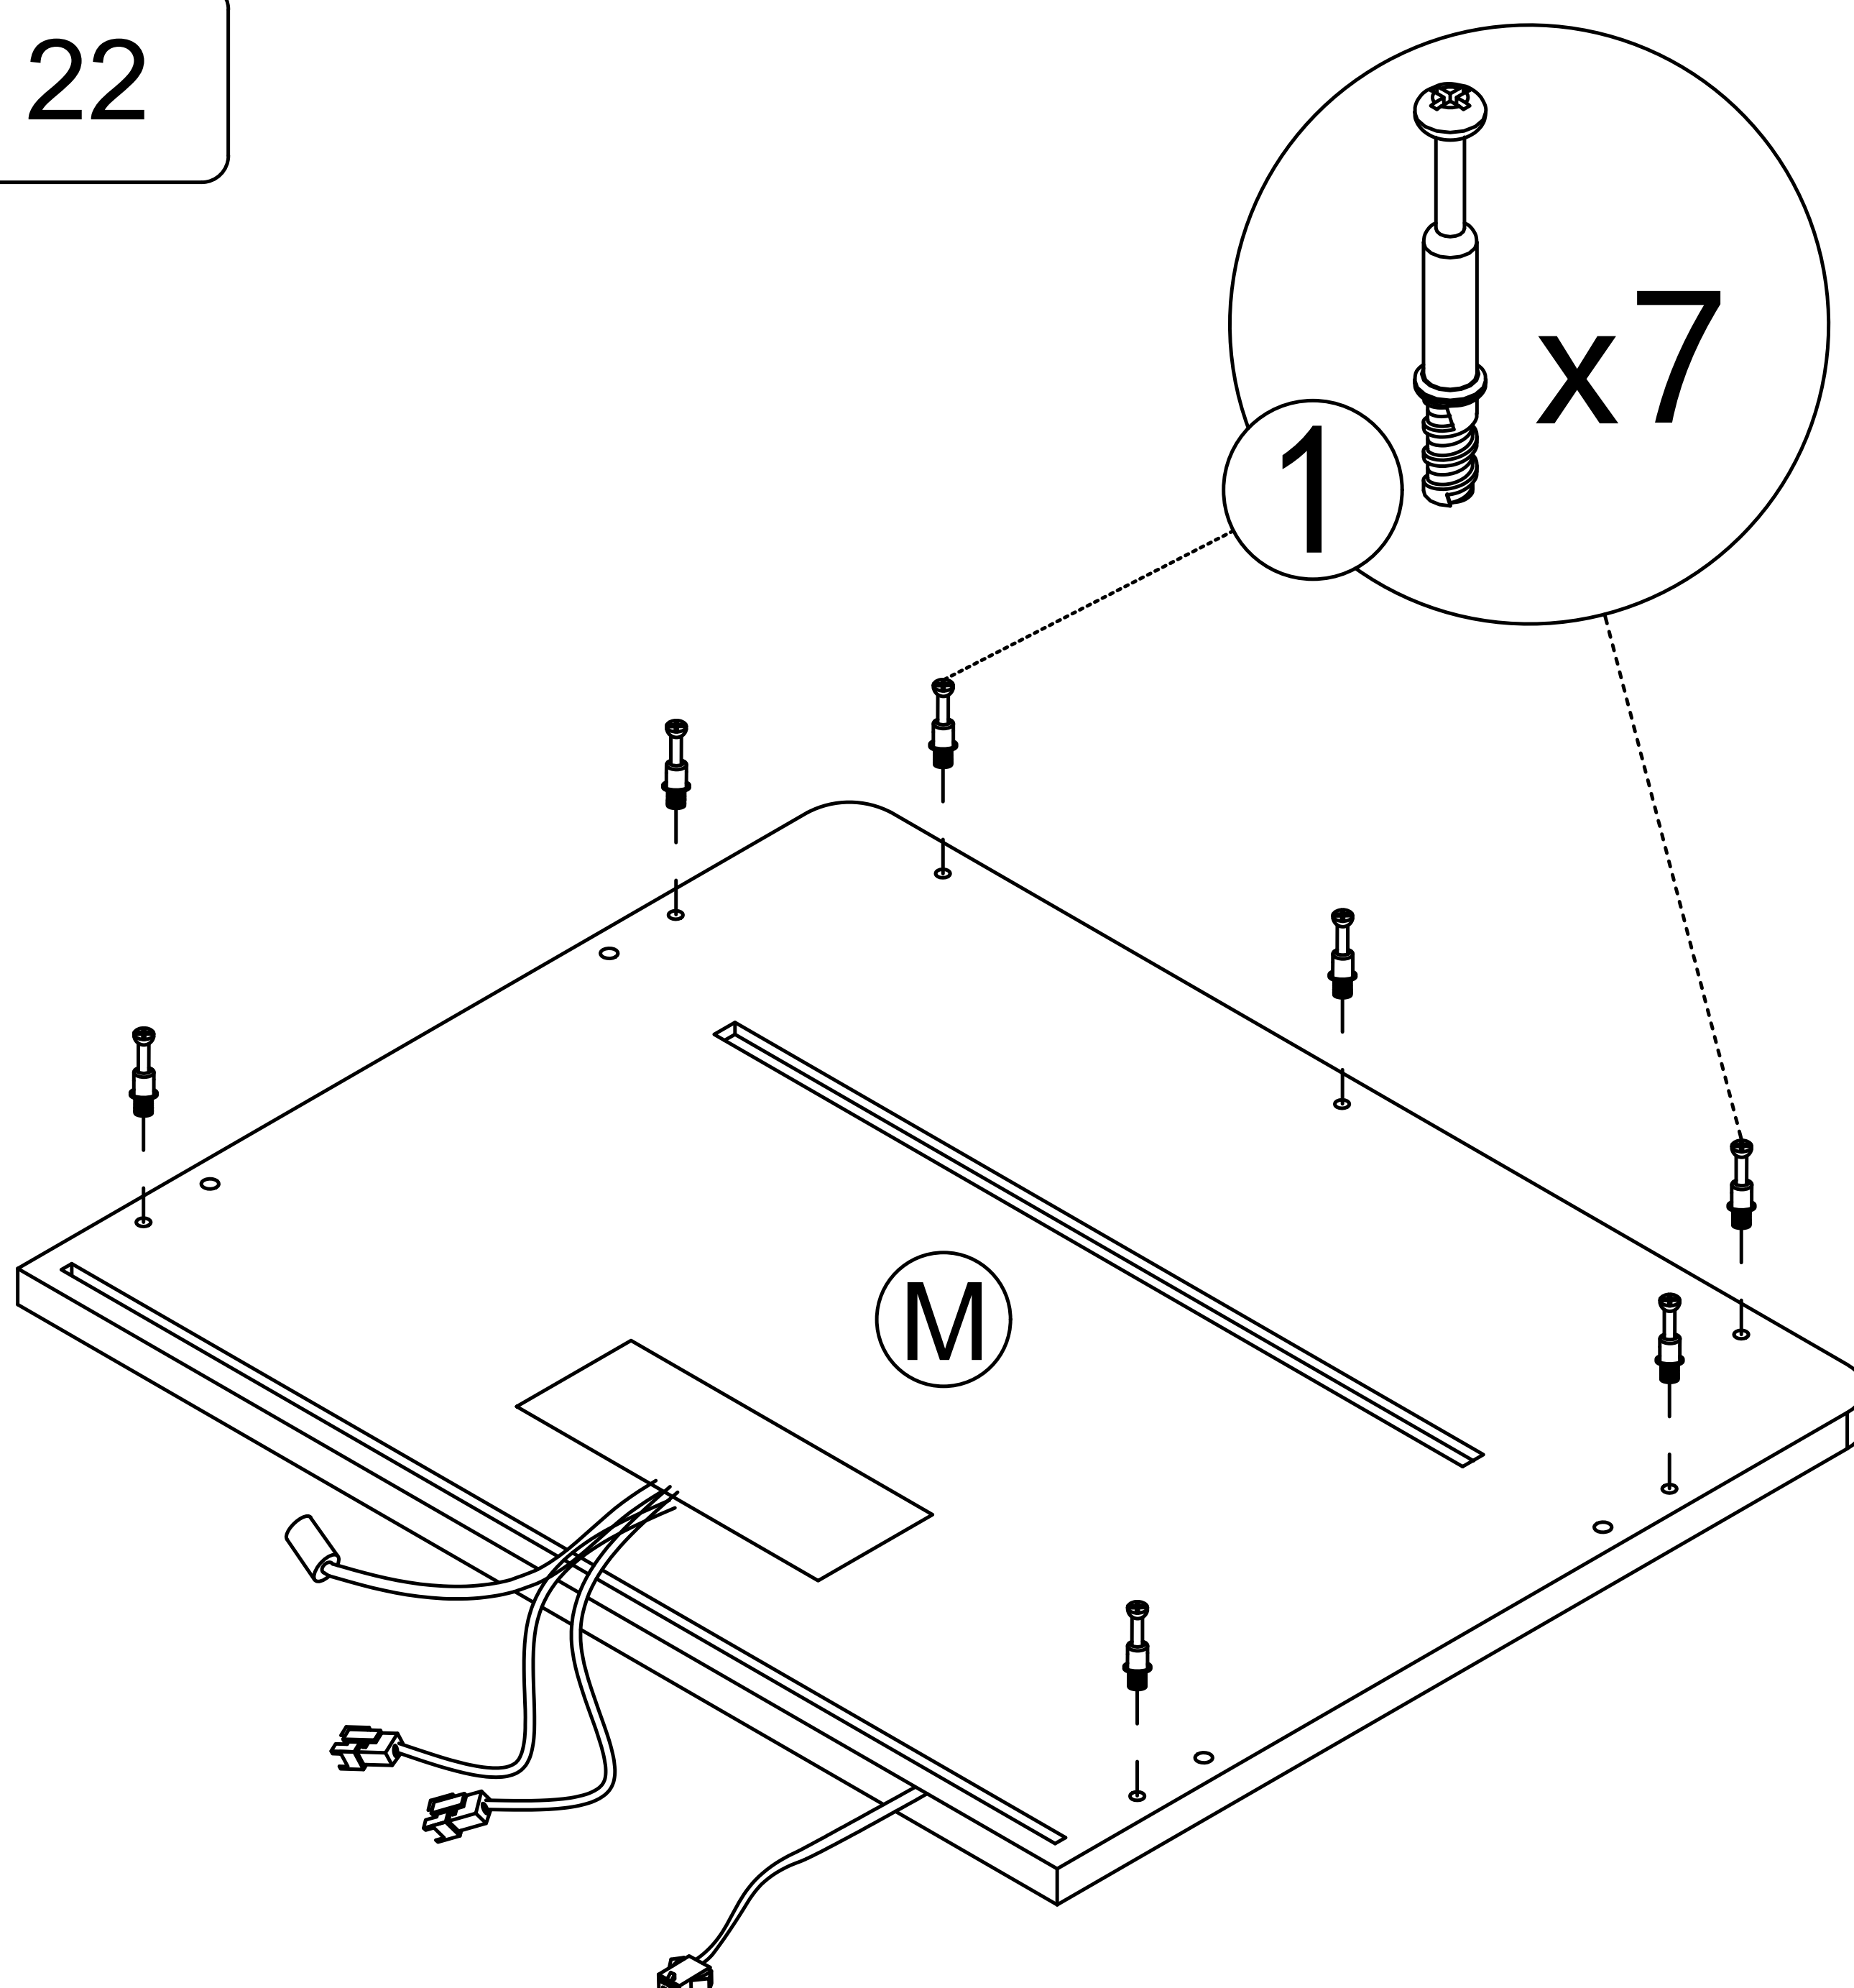


 
Step 23

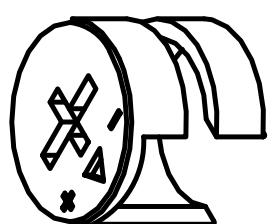2  x3

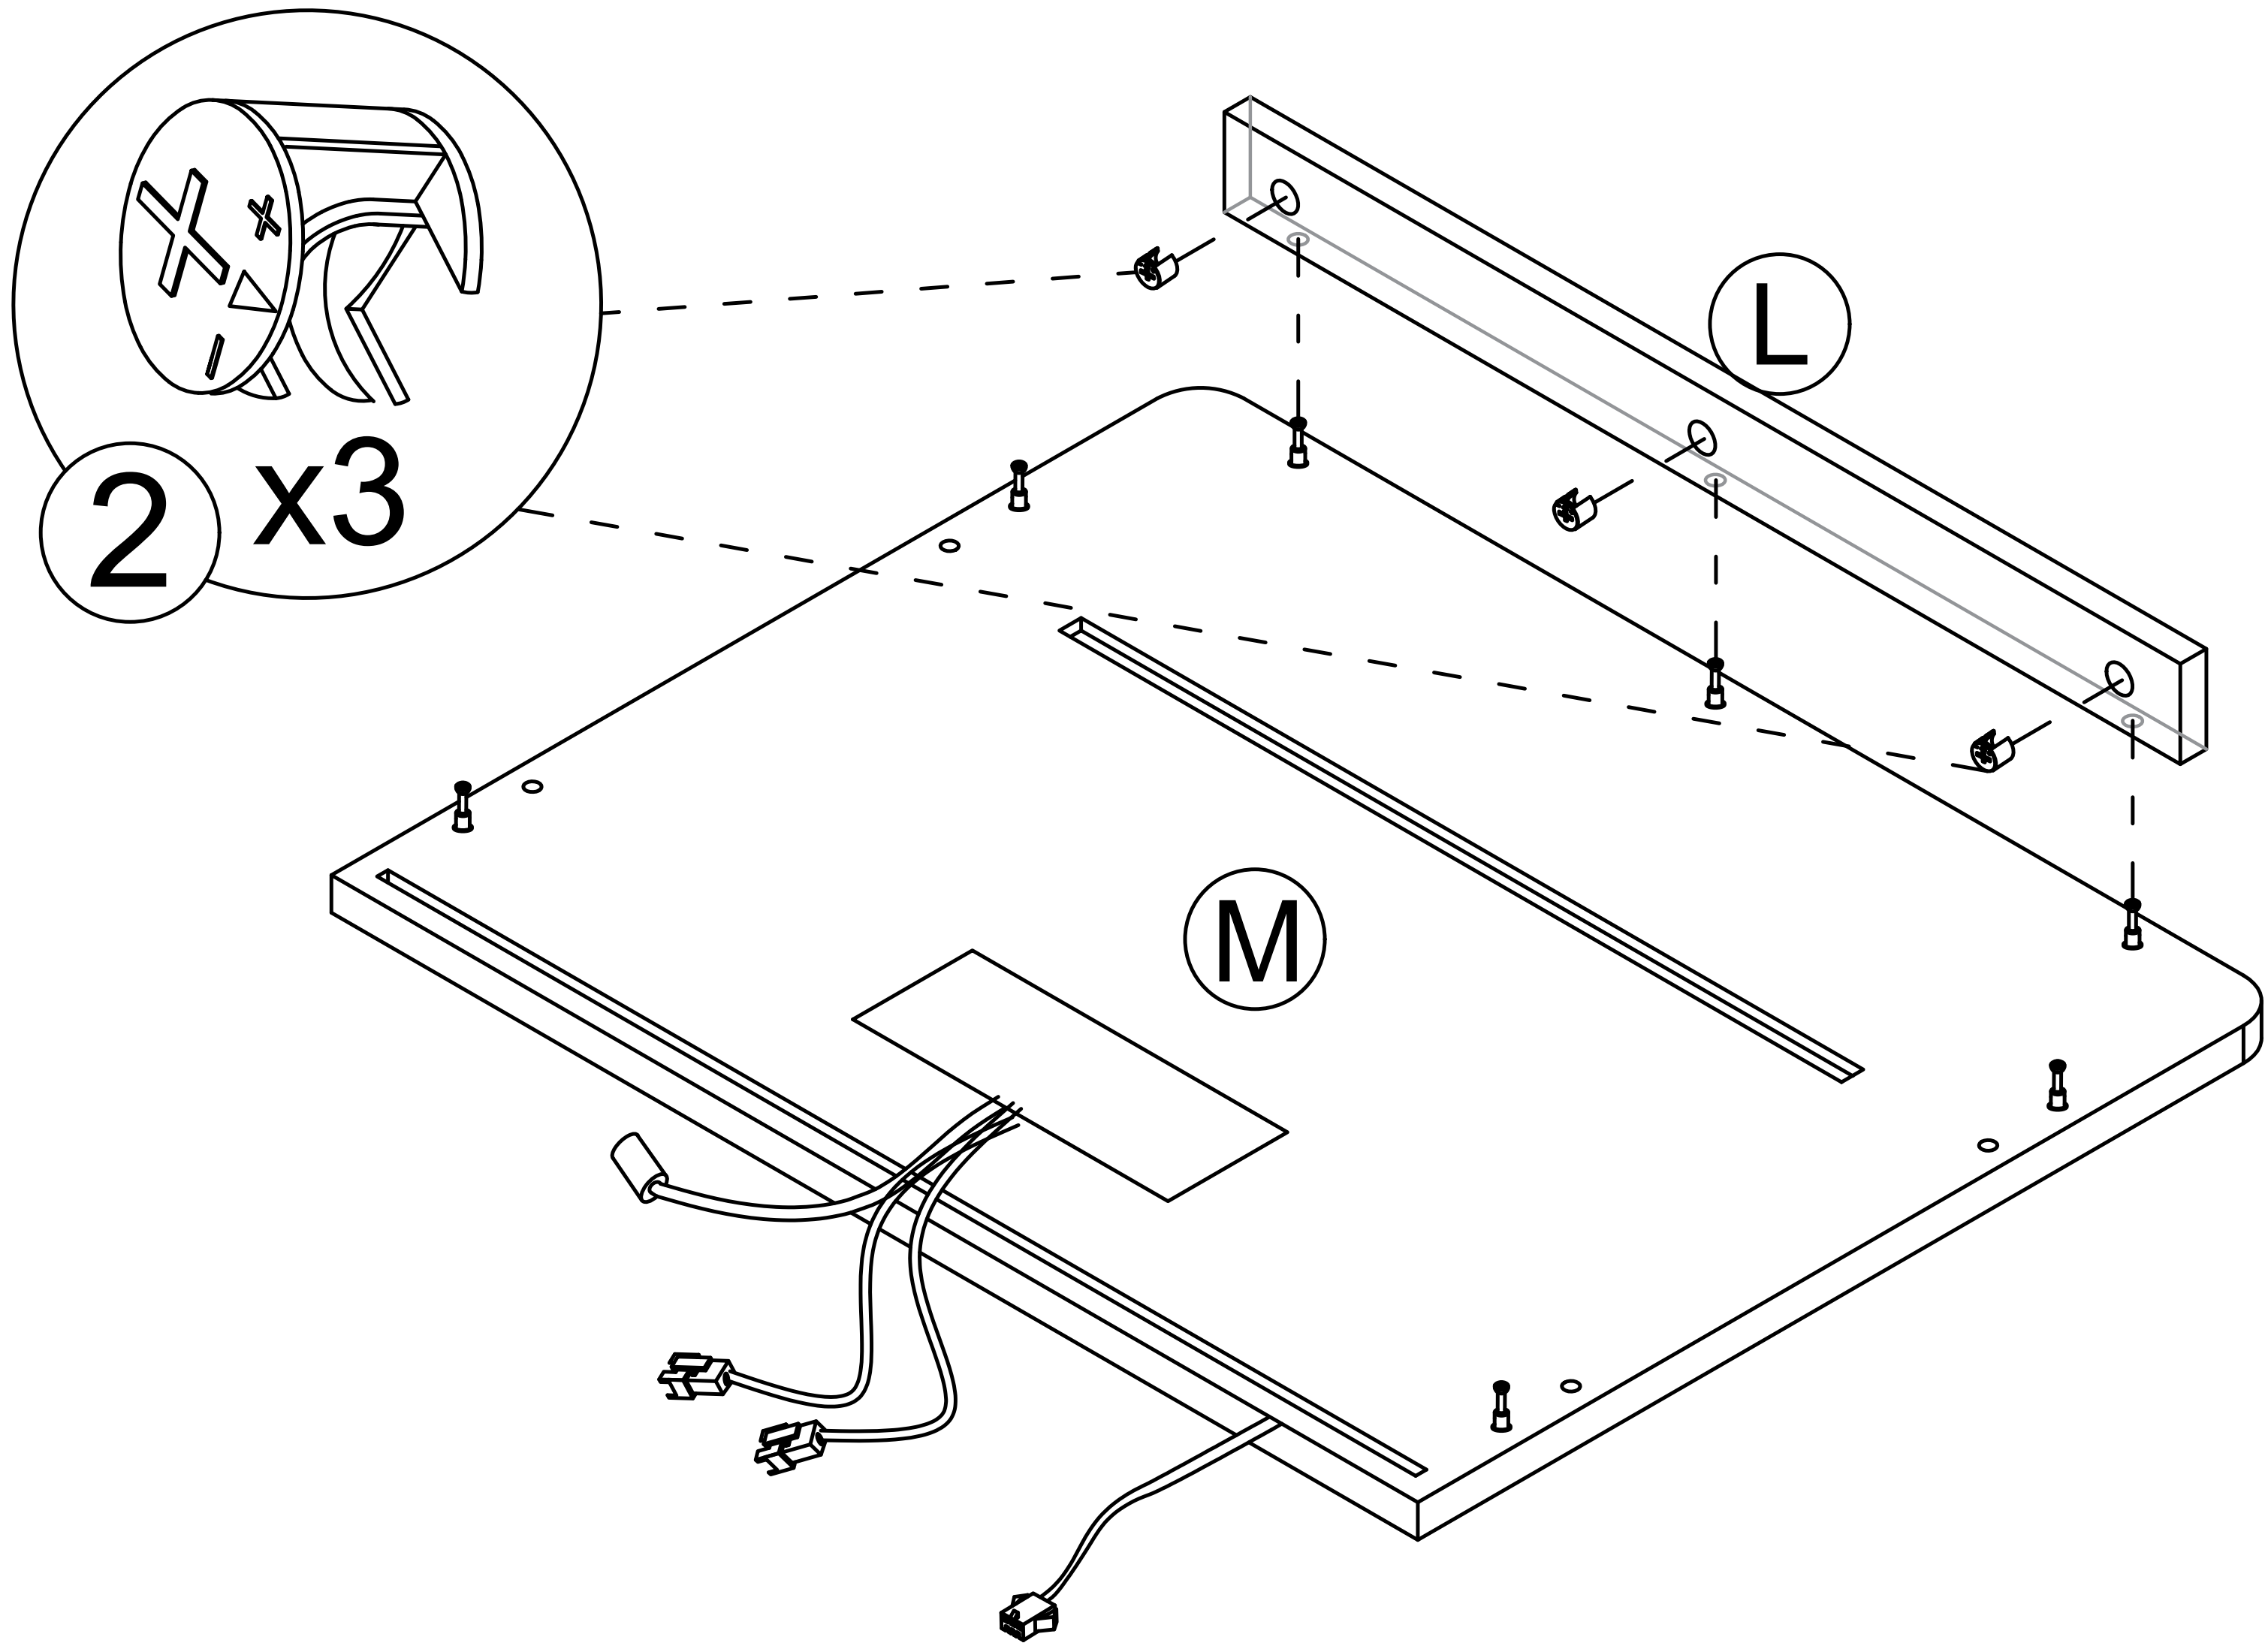 

 
Step 24

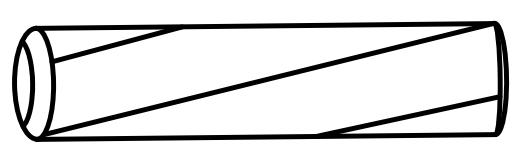3  x4



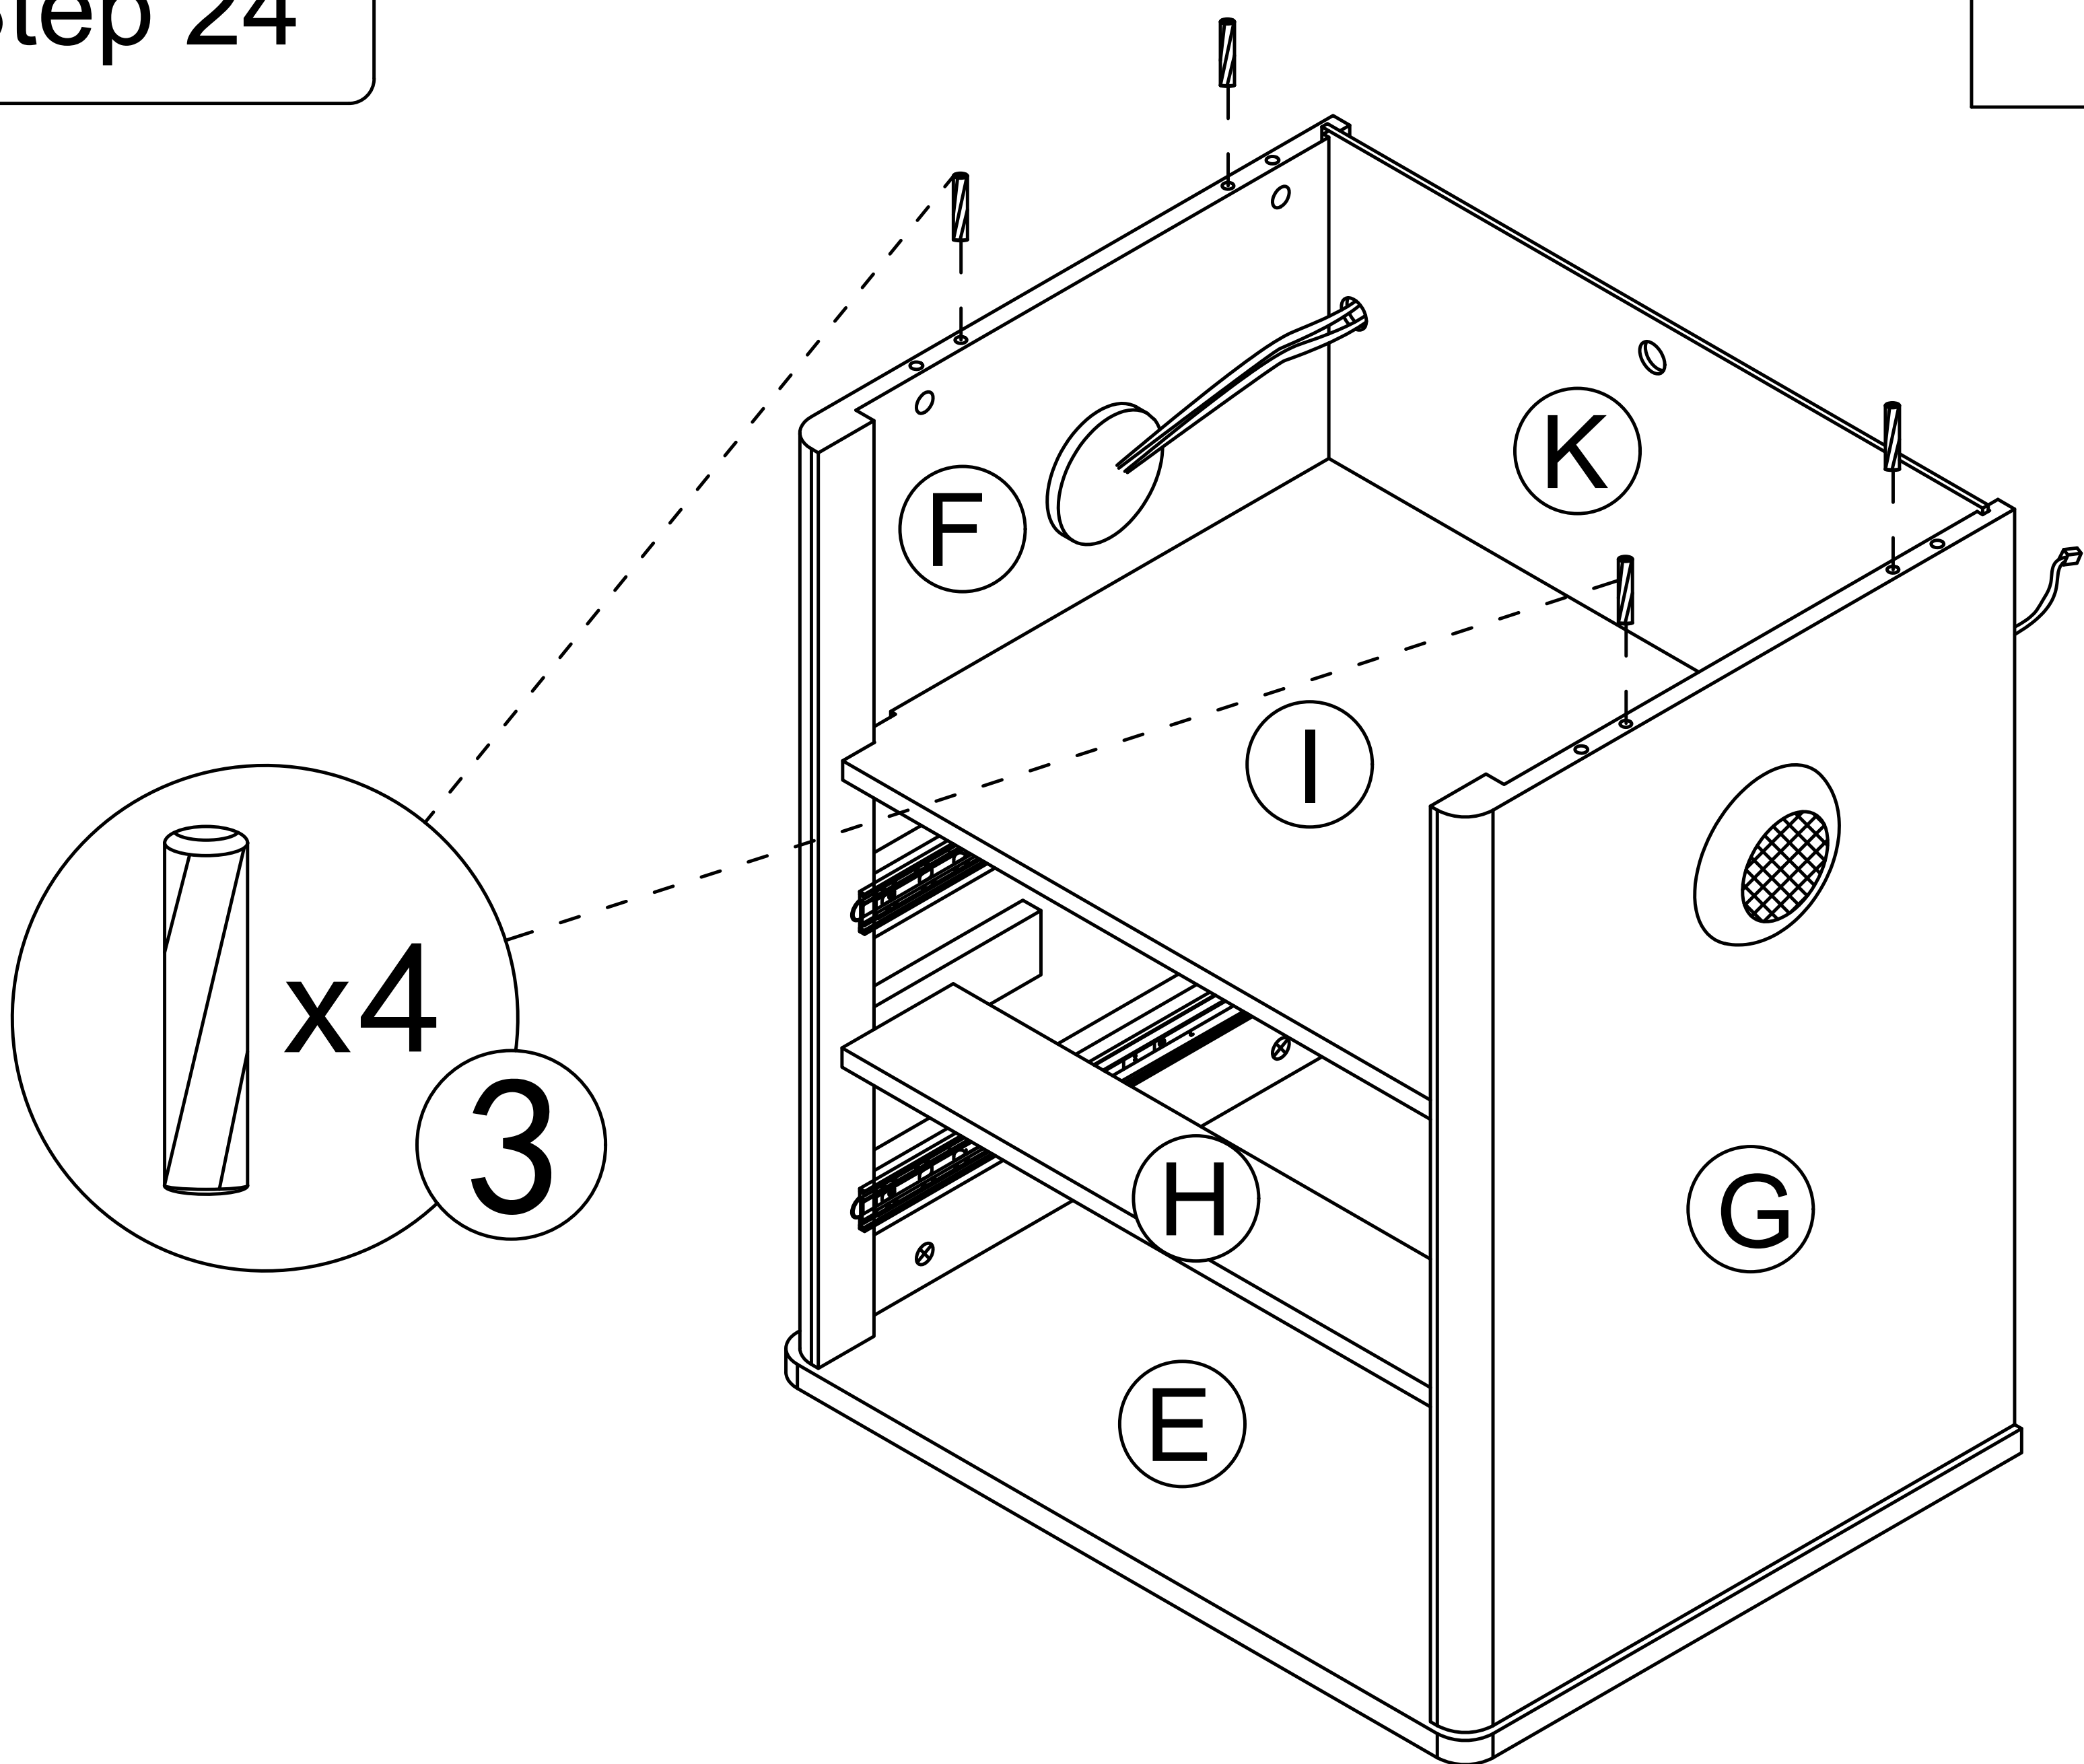 


Step 25

 2

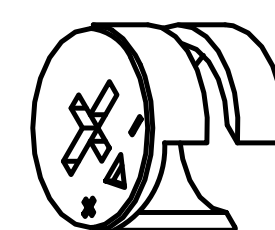


x4

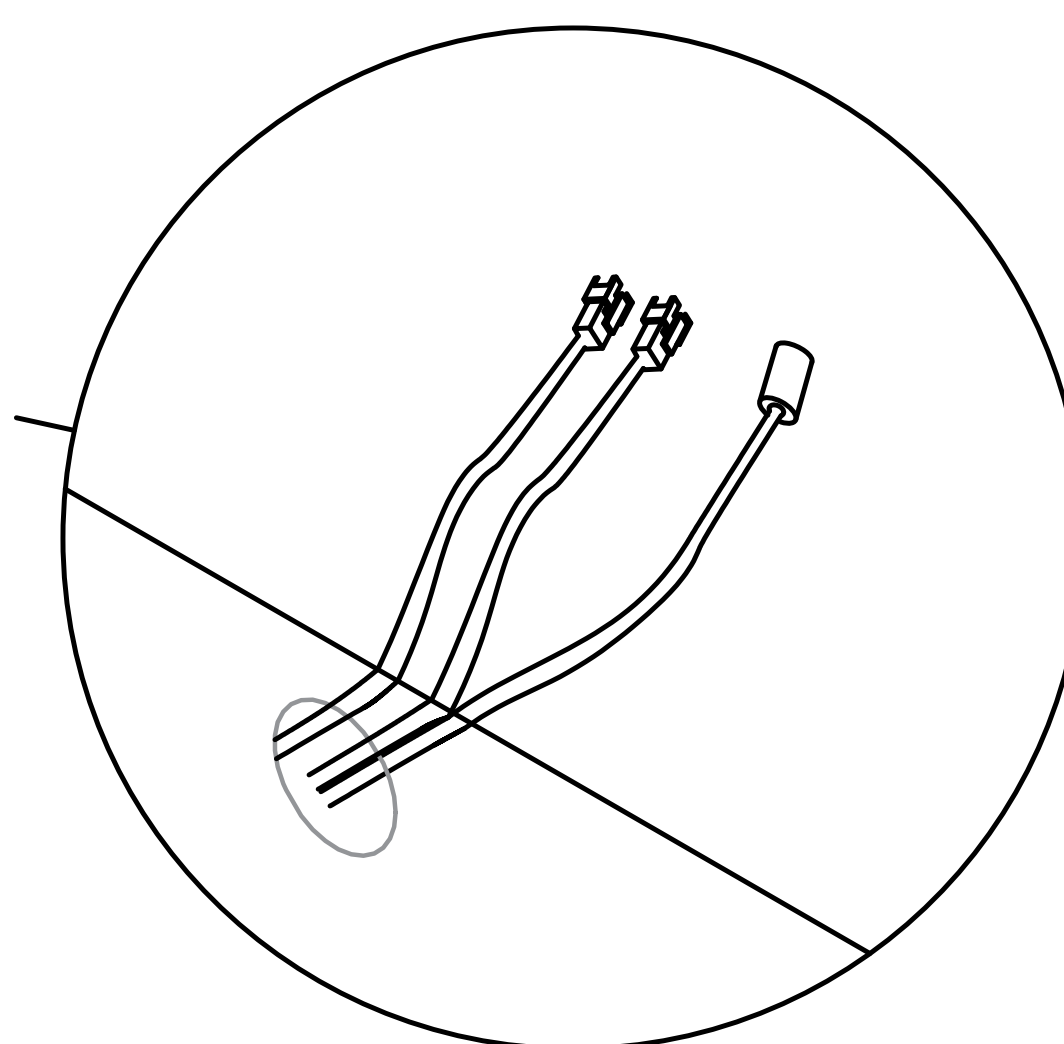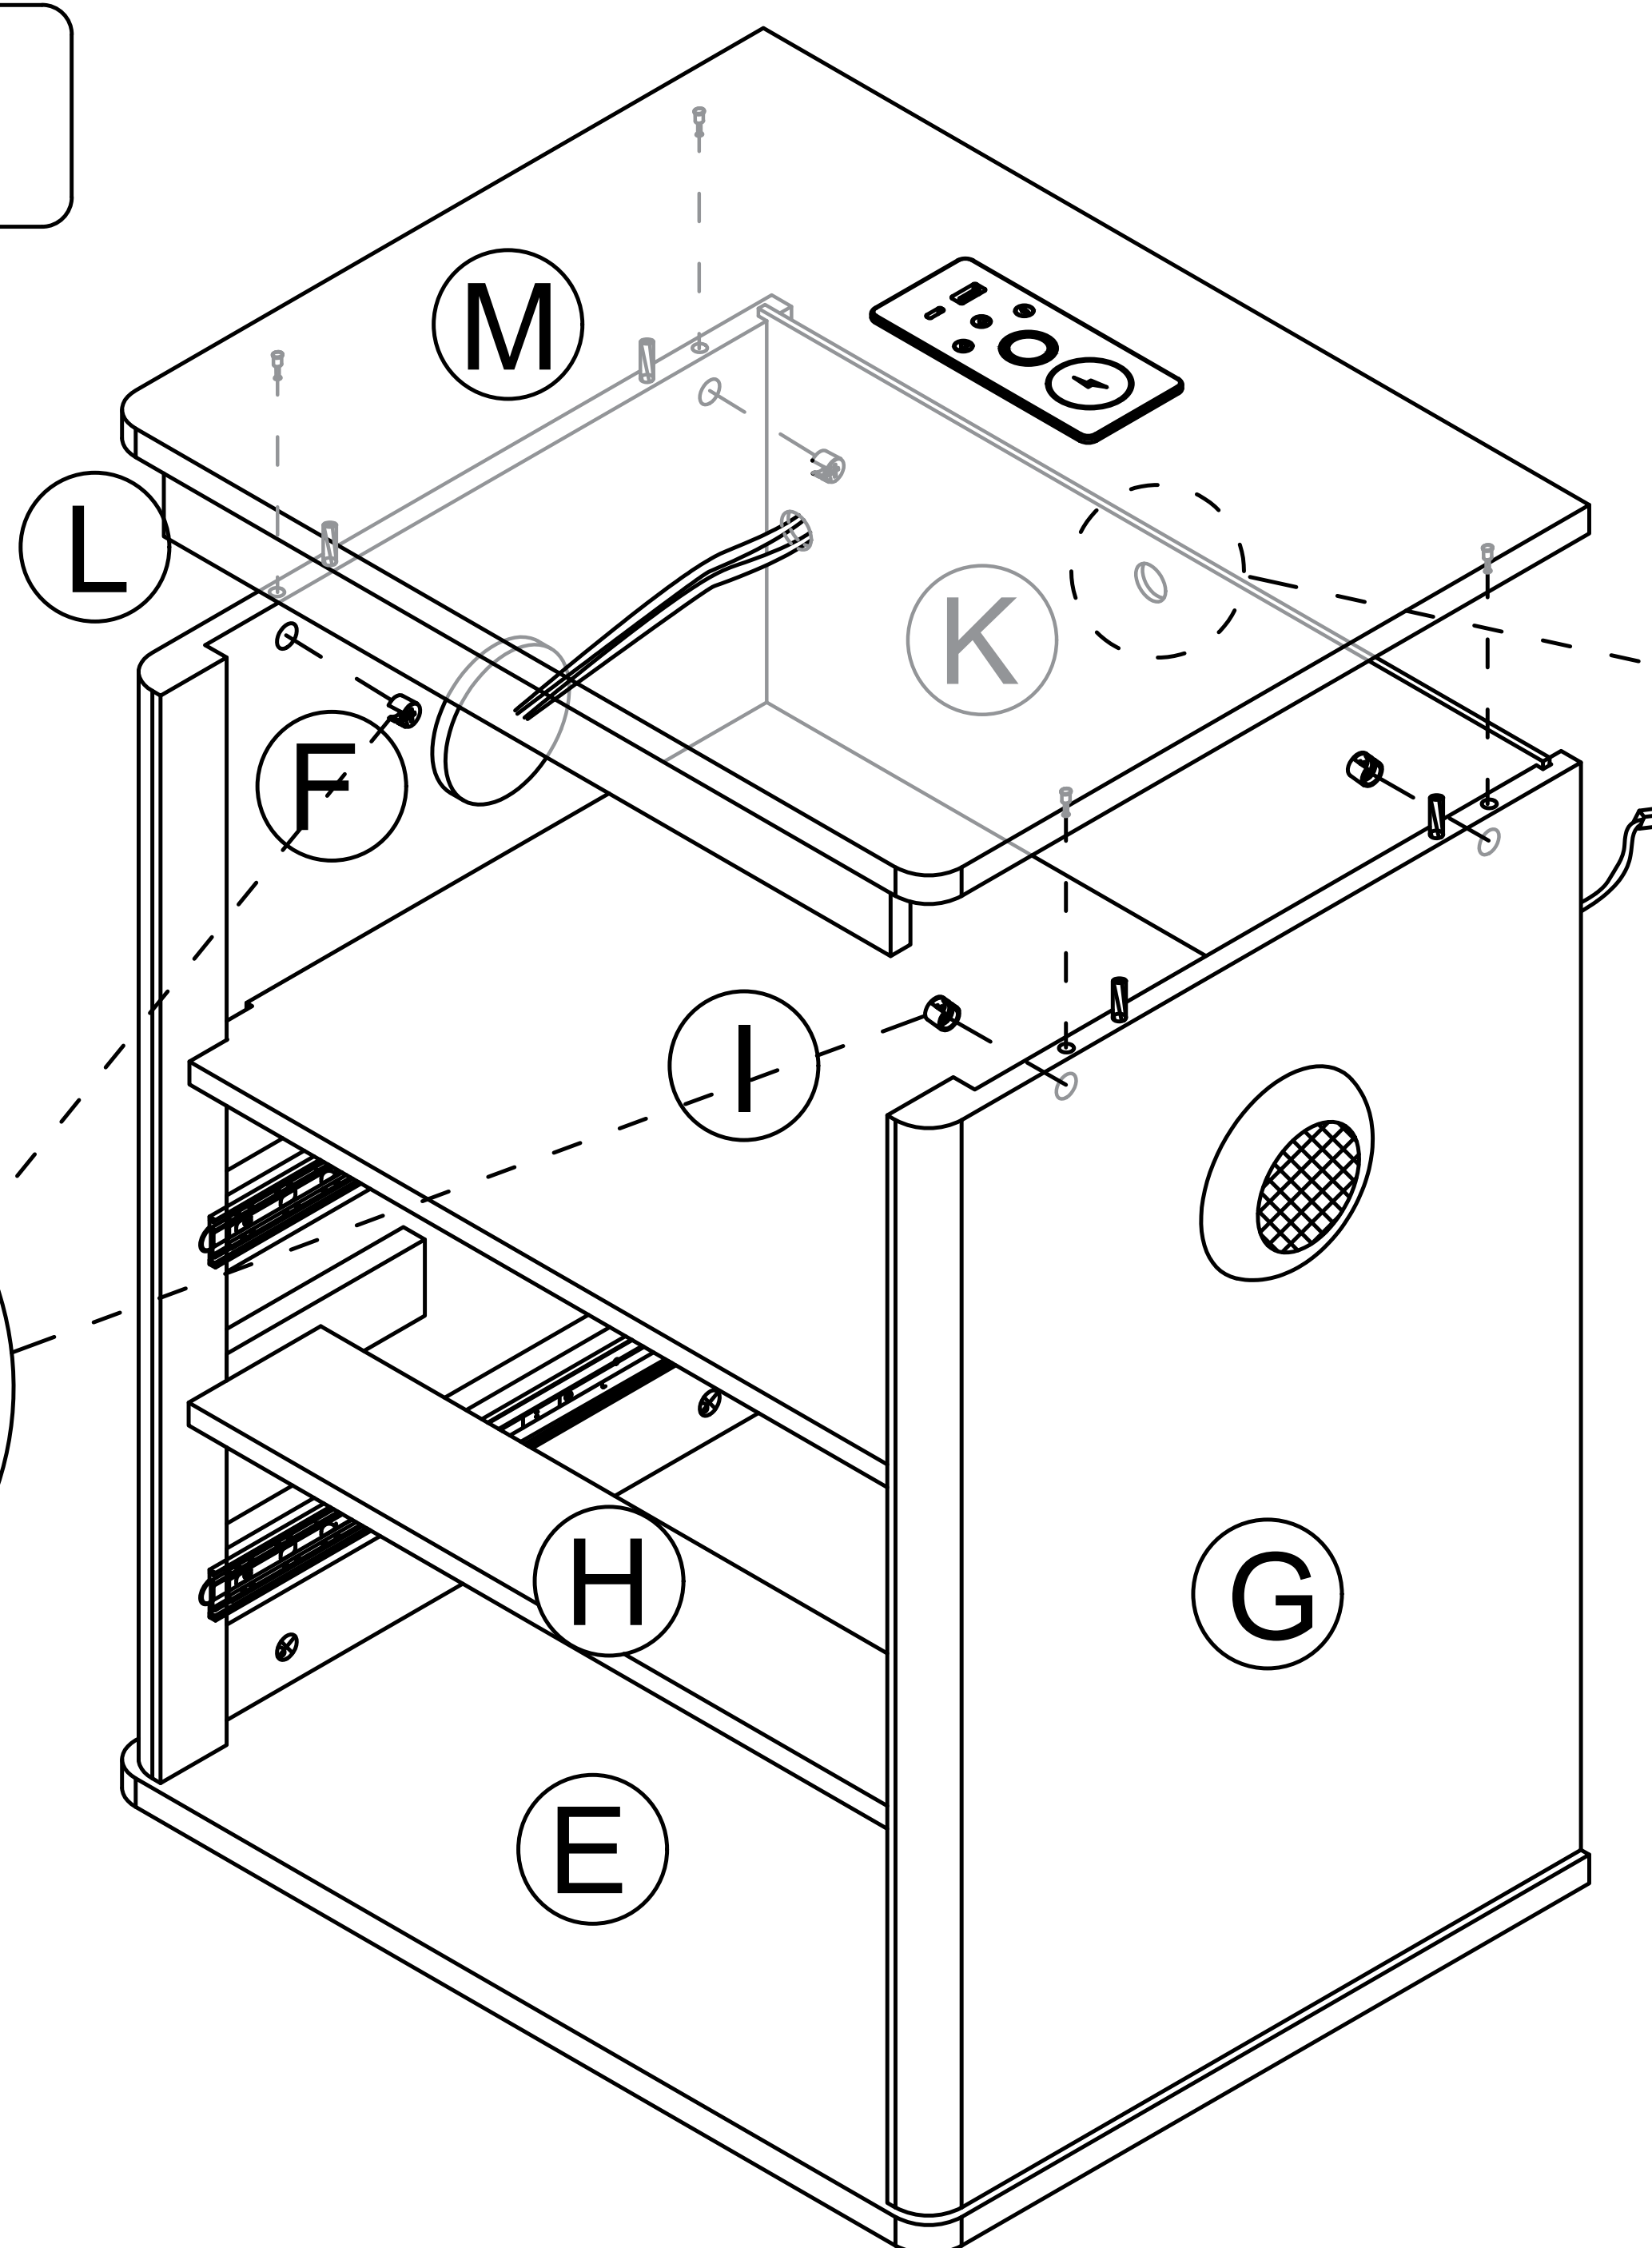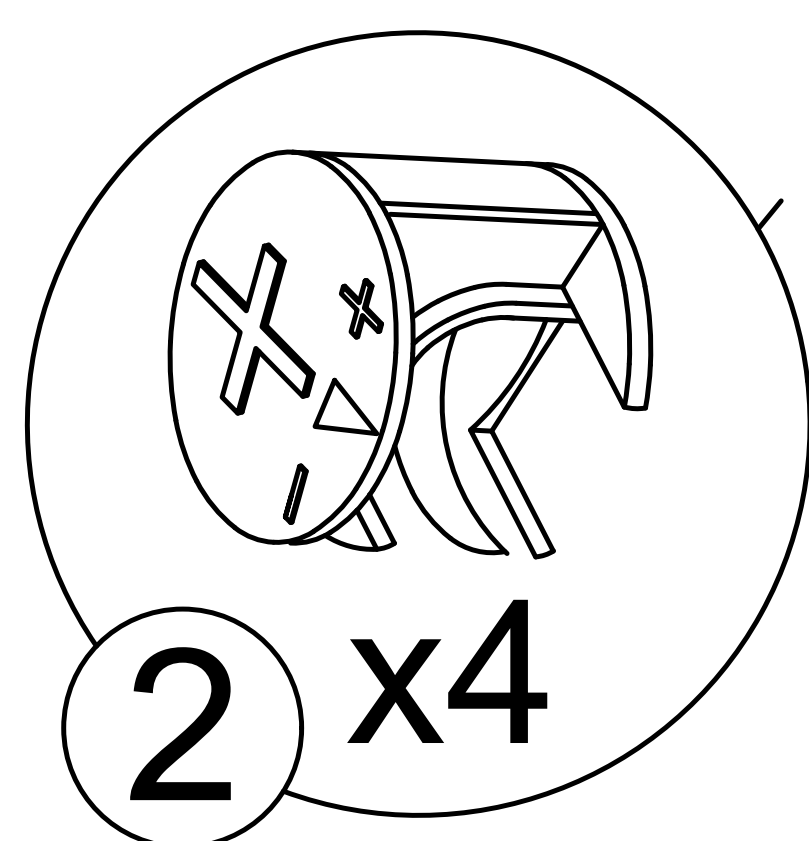   


Thread the Lamp power cord through the hole on board No.K

 Step 26

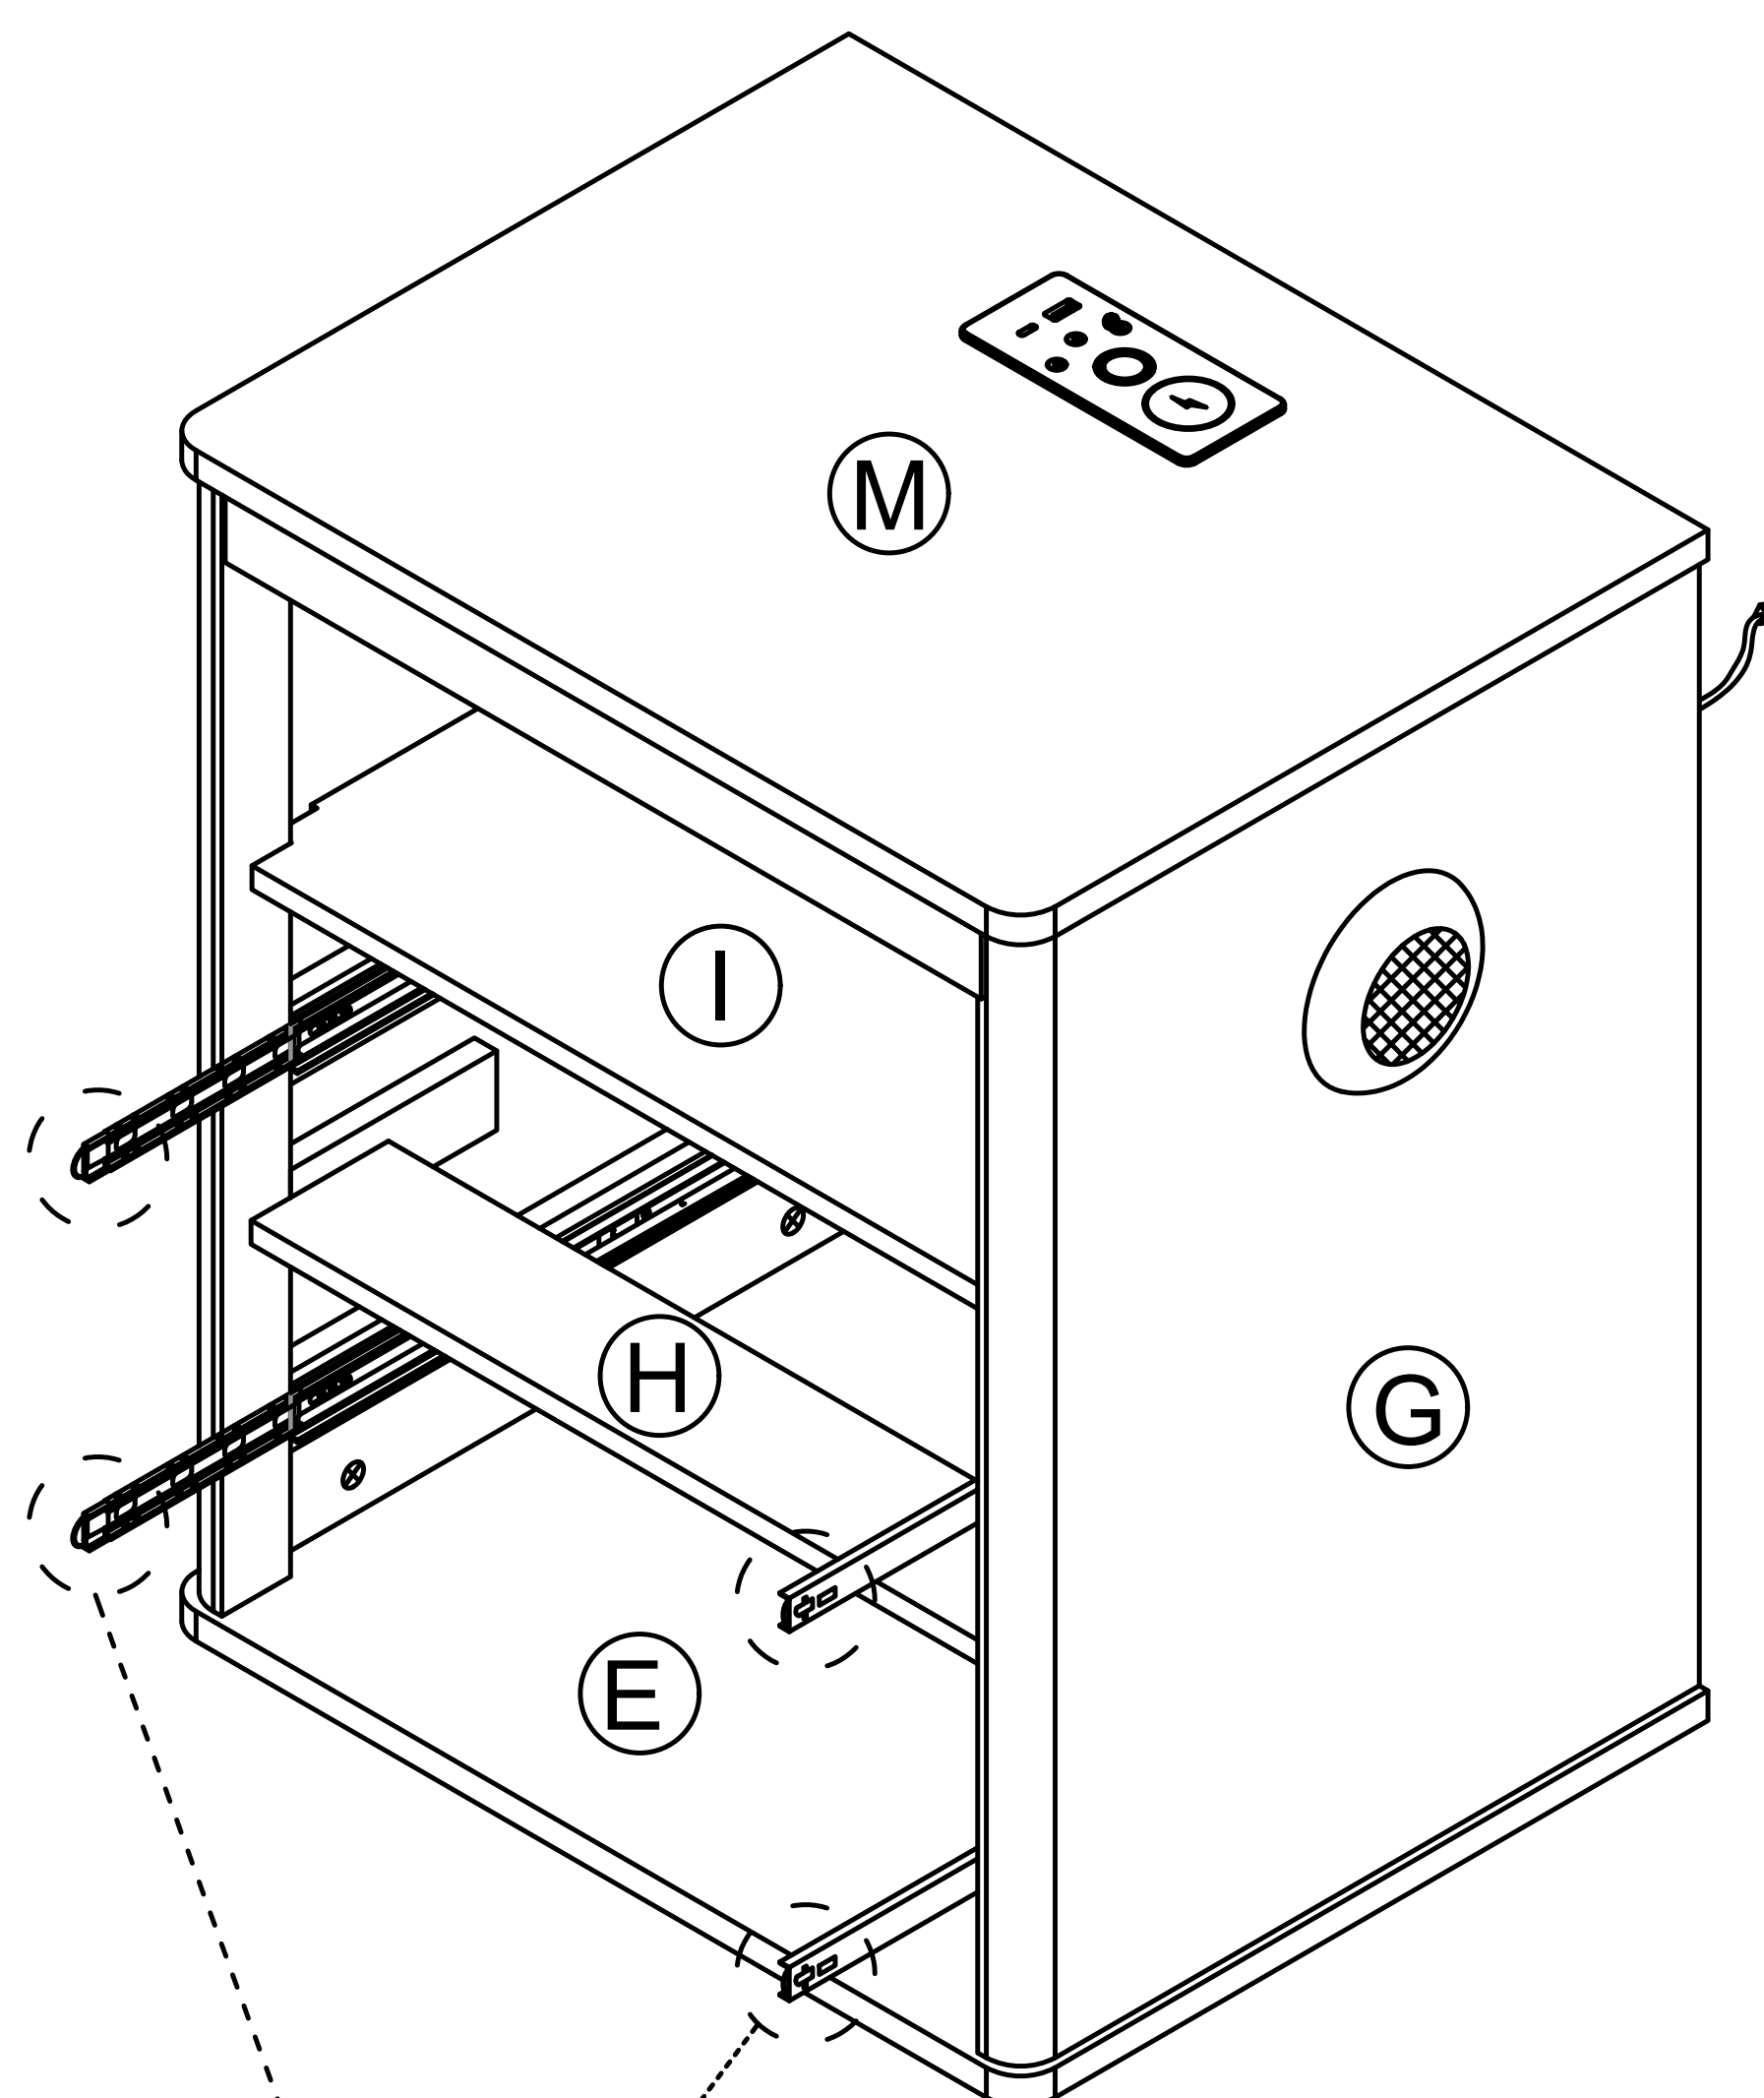




As shown, When installing the drawer, pull the guide rail out first, Slide beads are also pulled out.

 Step 27

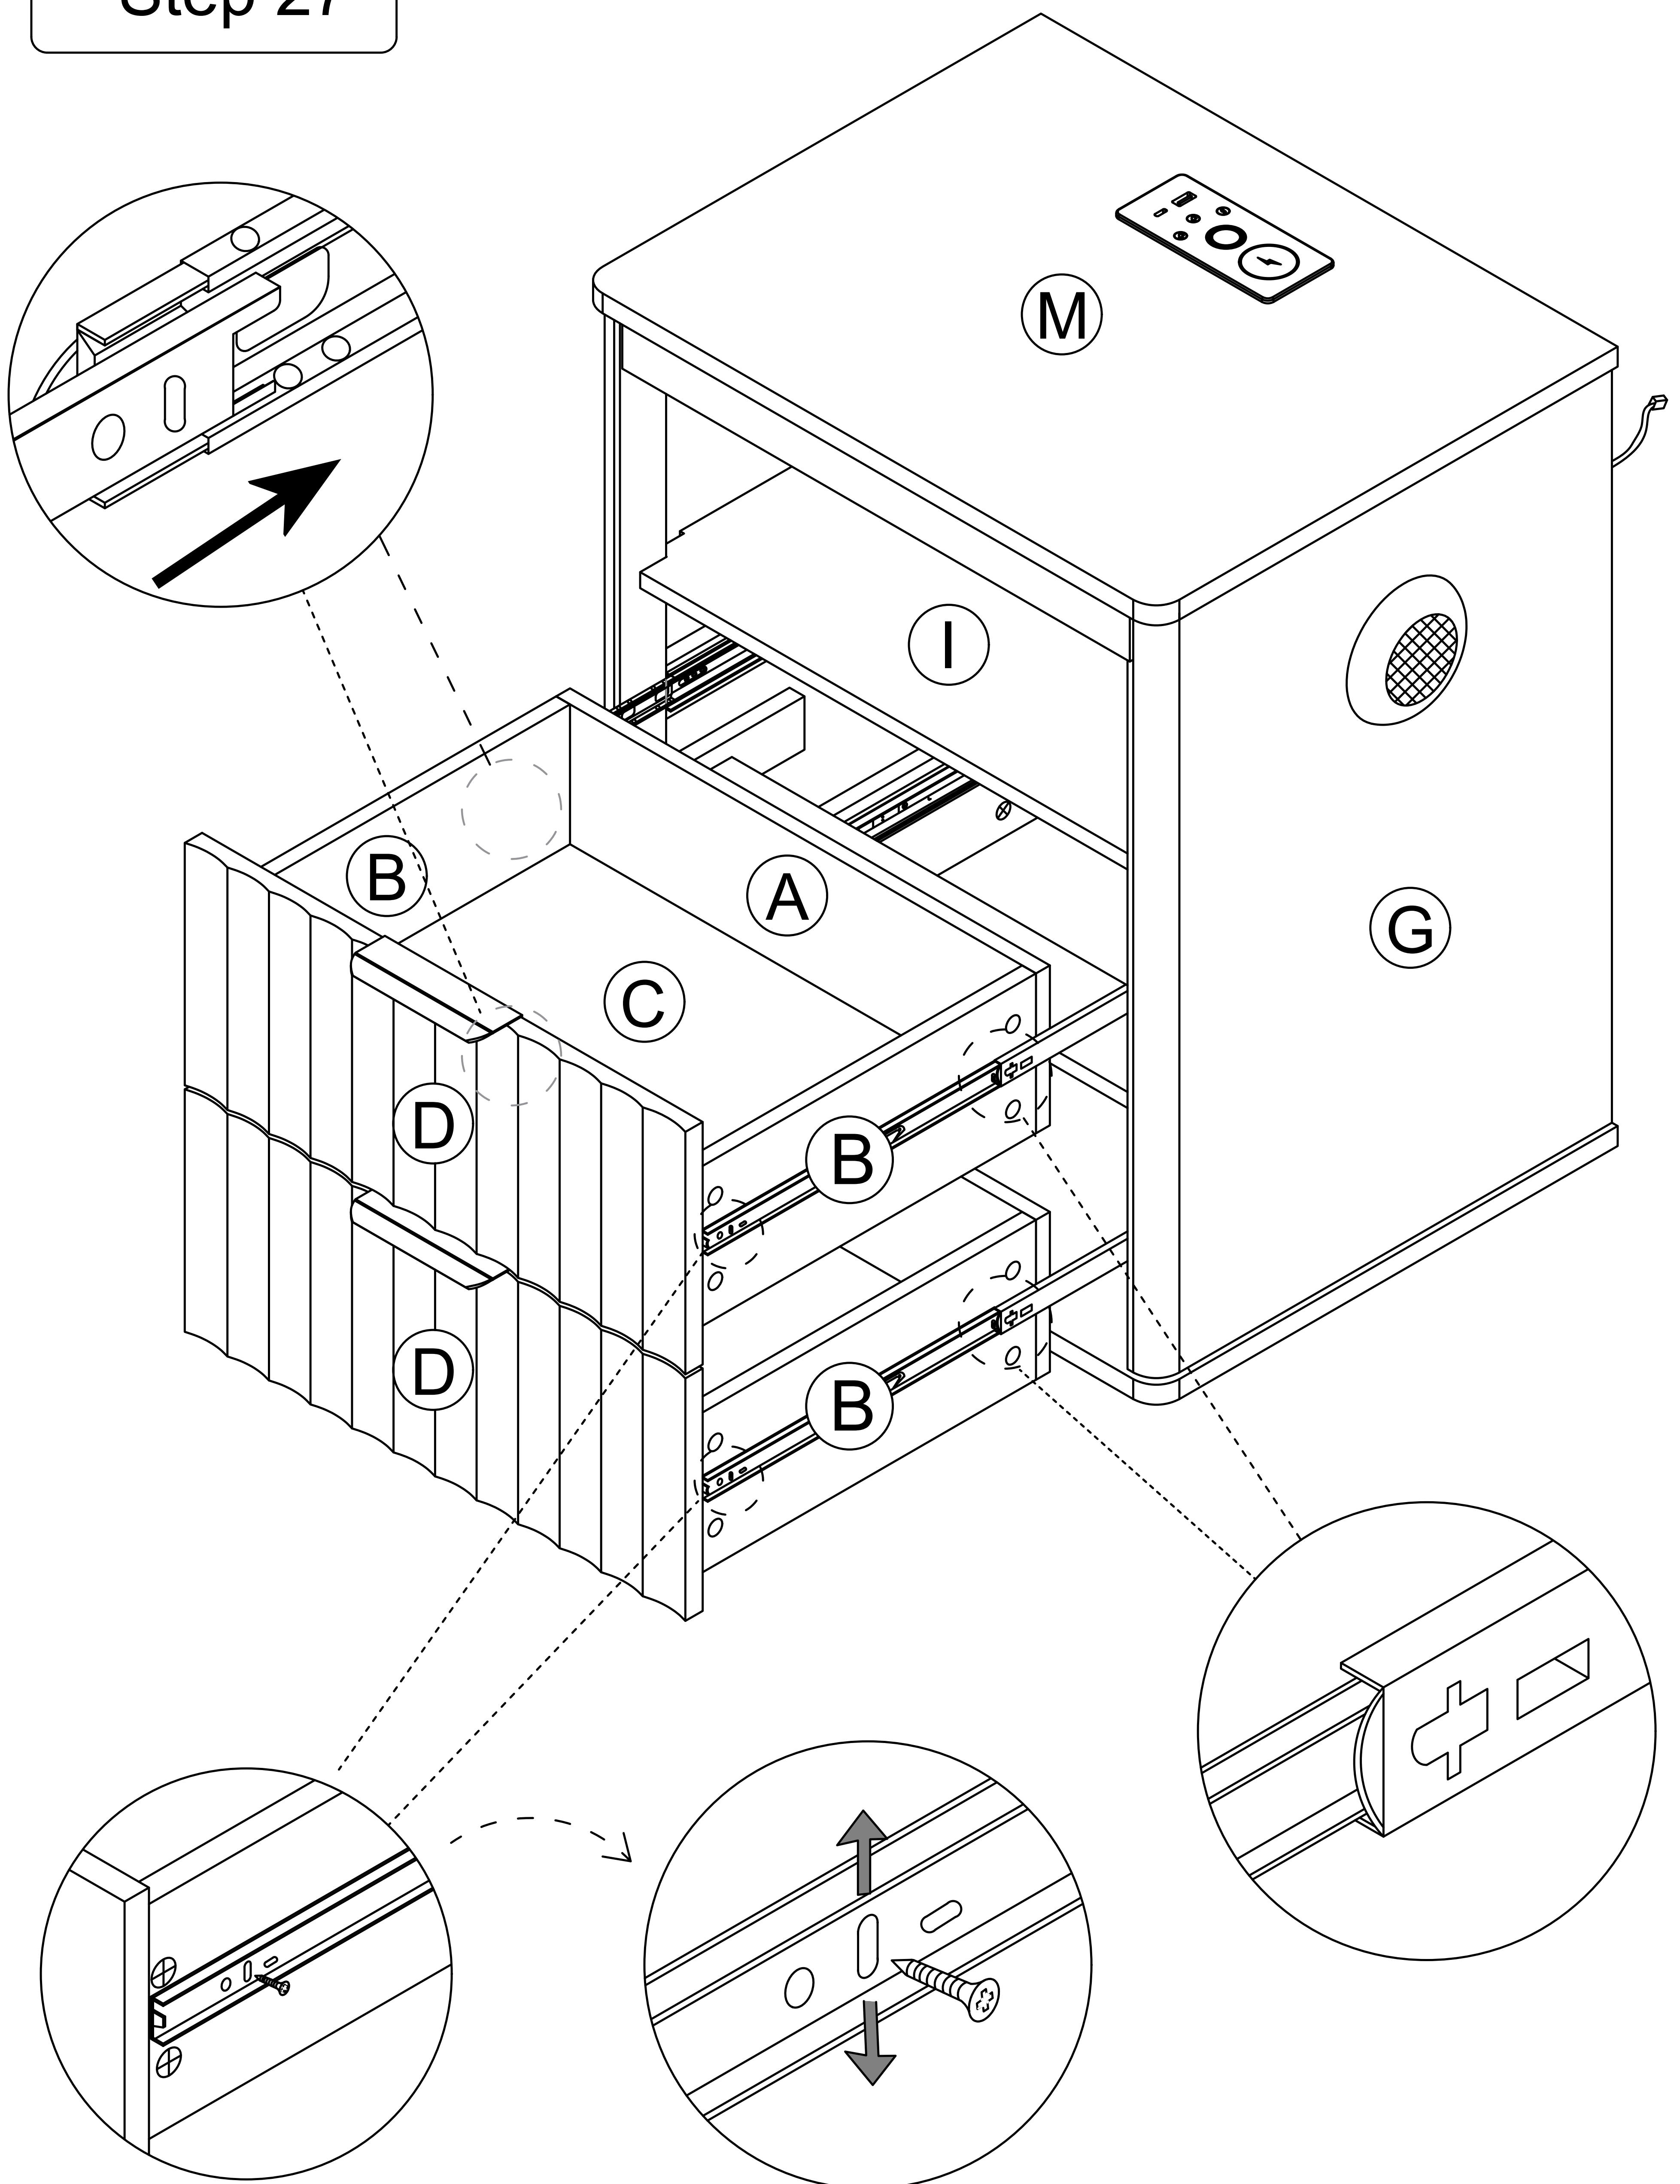

If a large gap is found after installing the drawer the slide rail can be moved up and down to adjust the gap

  
 
Step 28

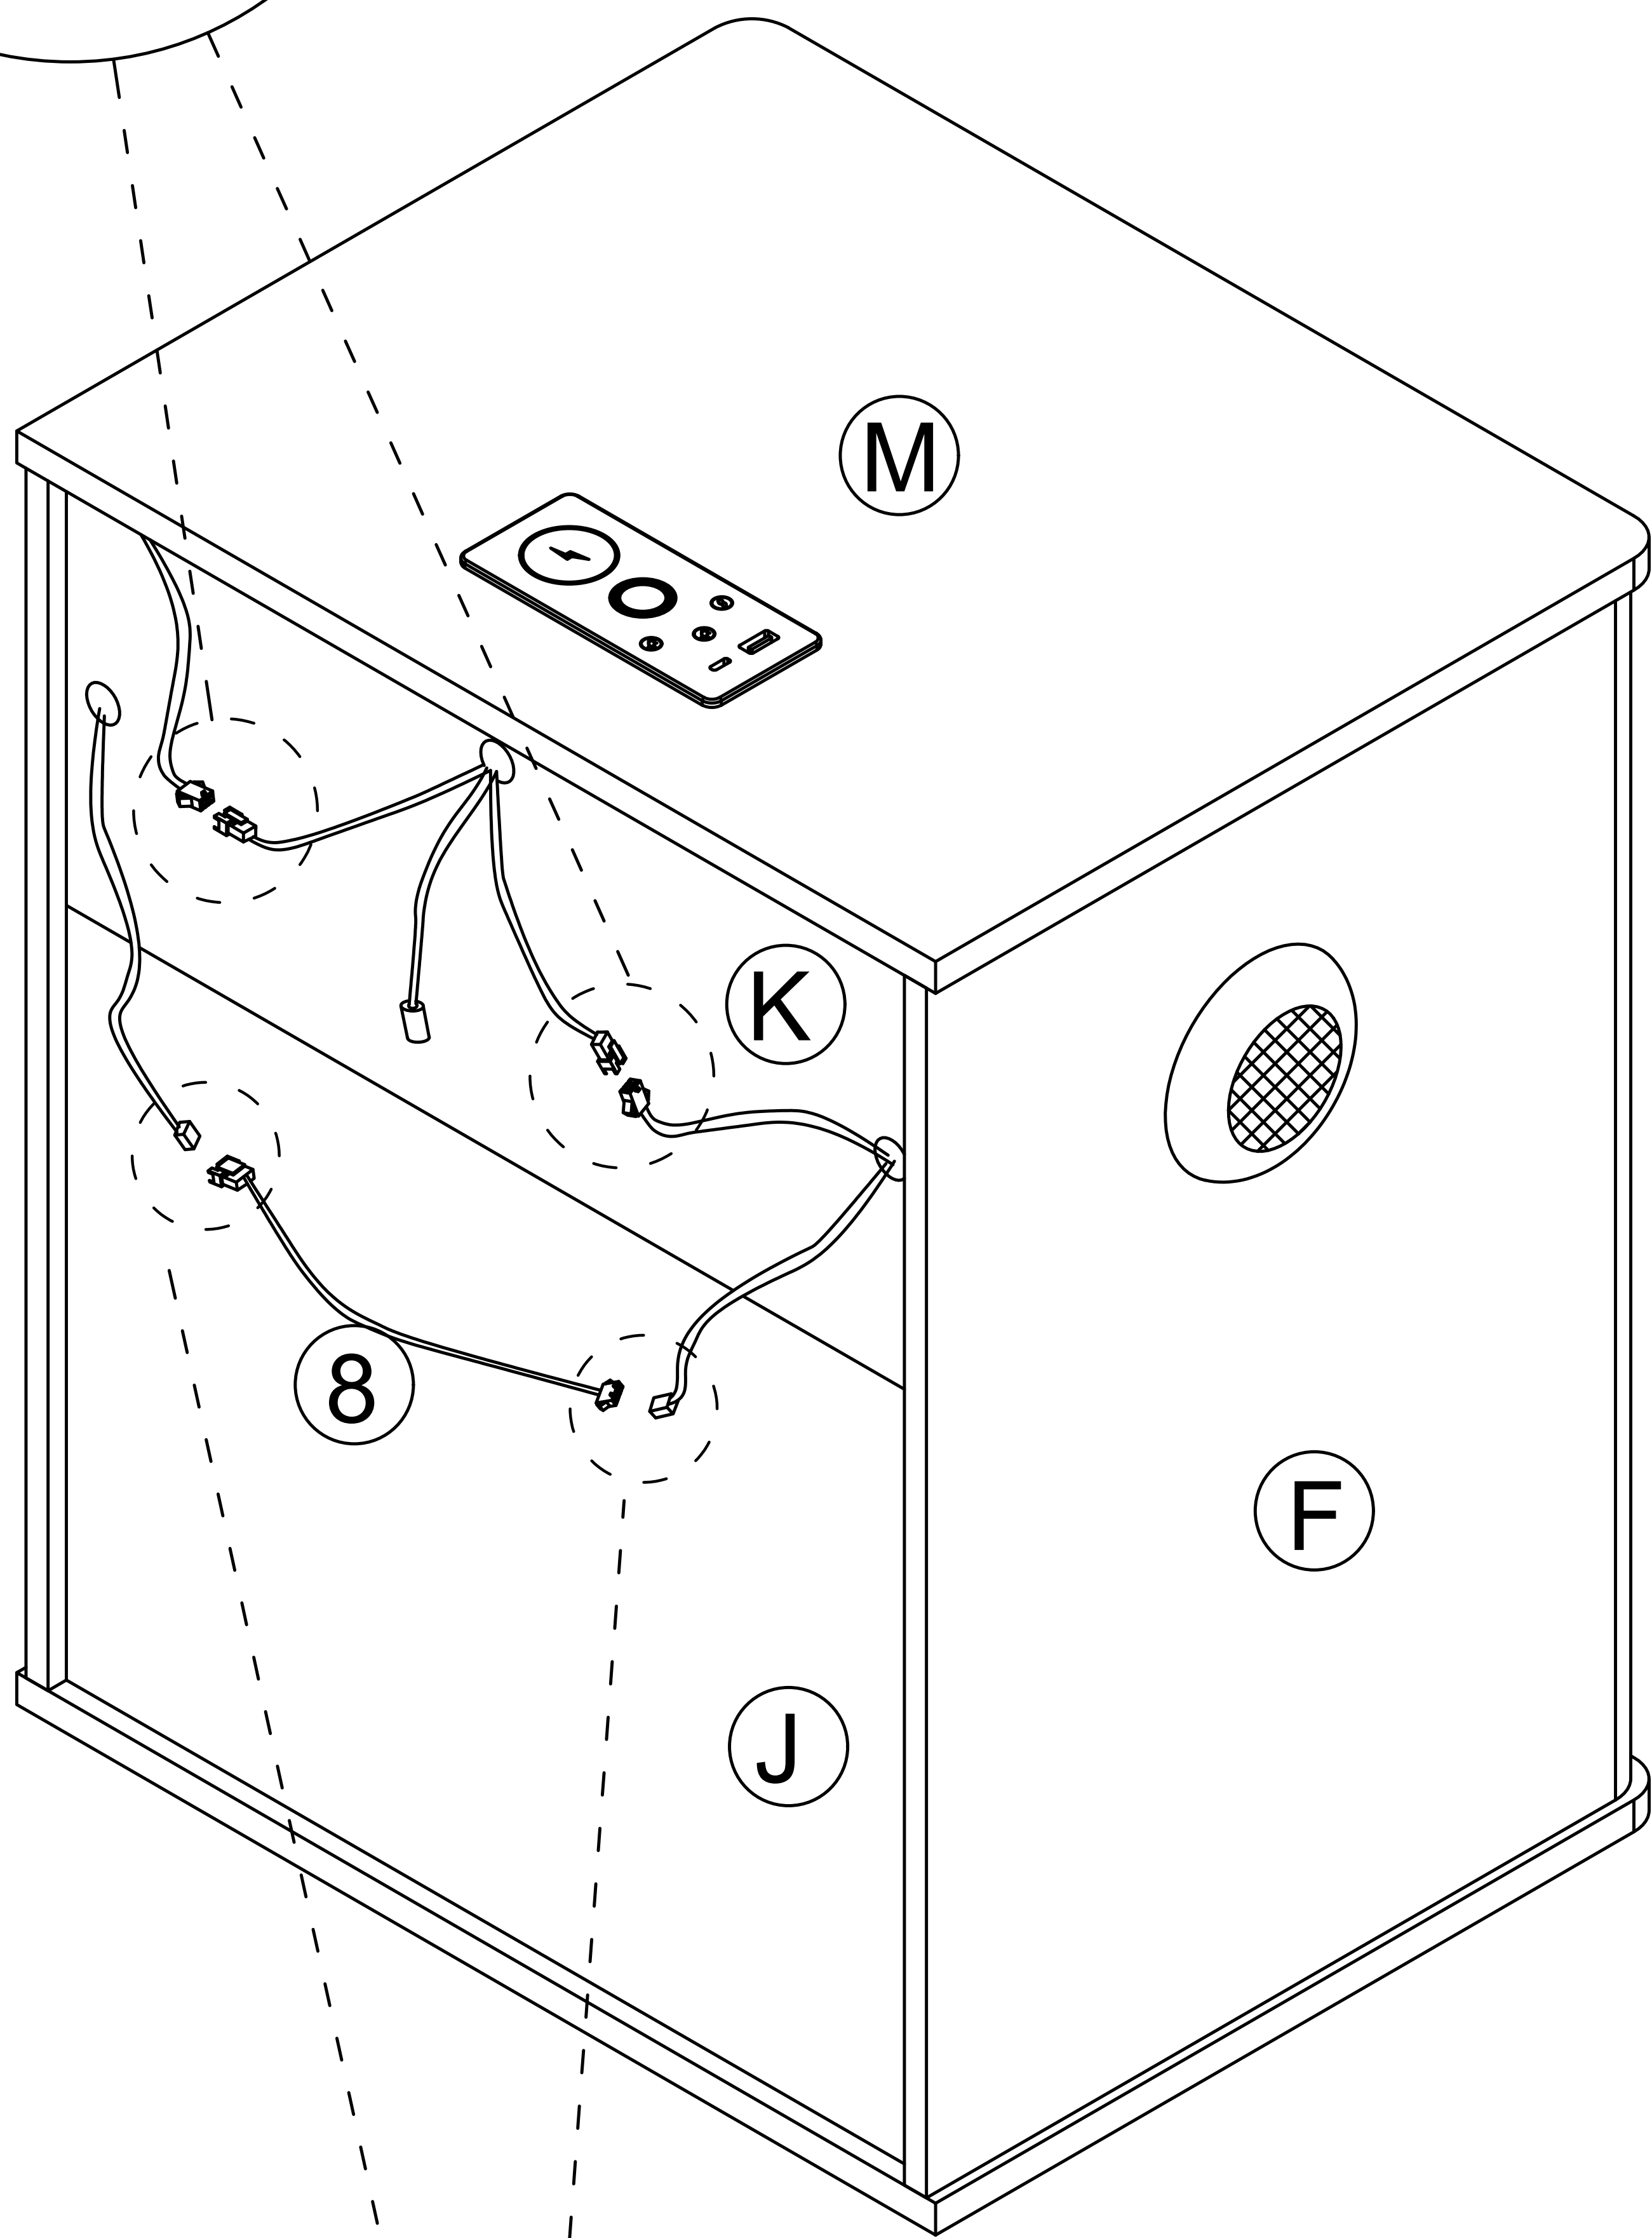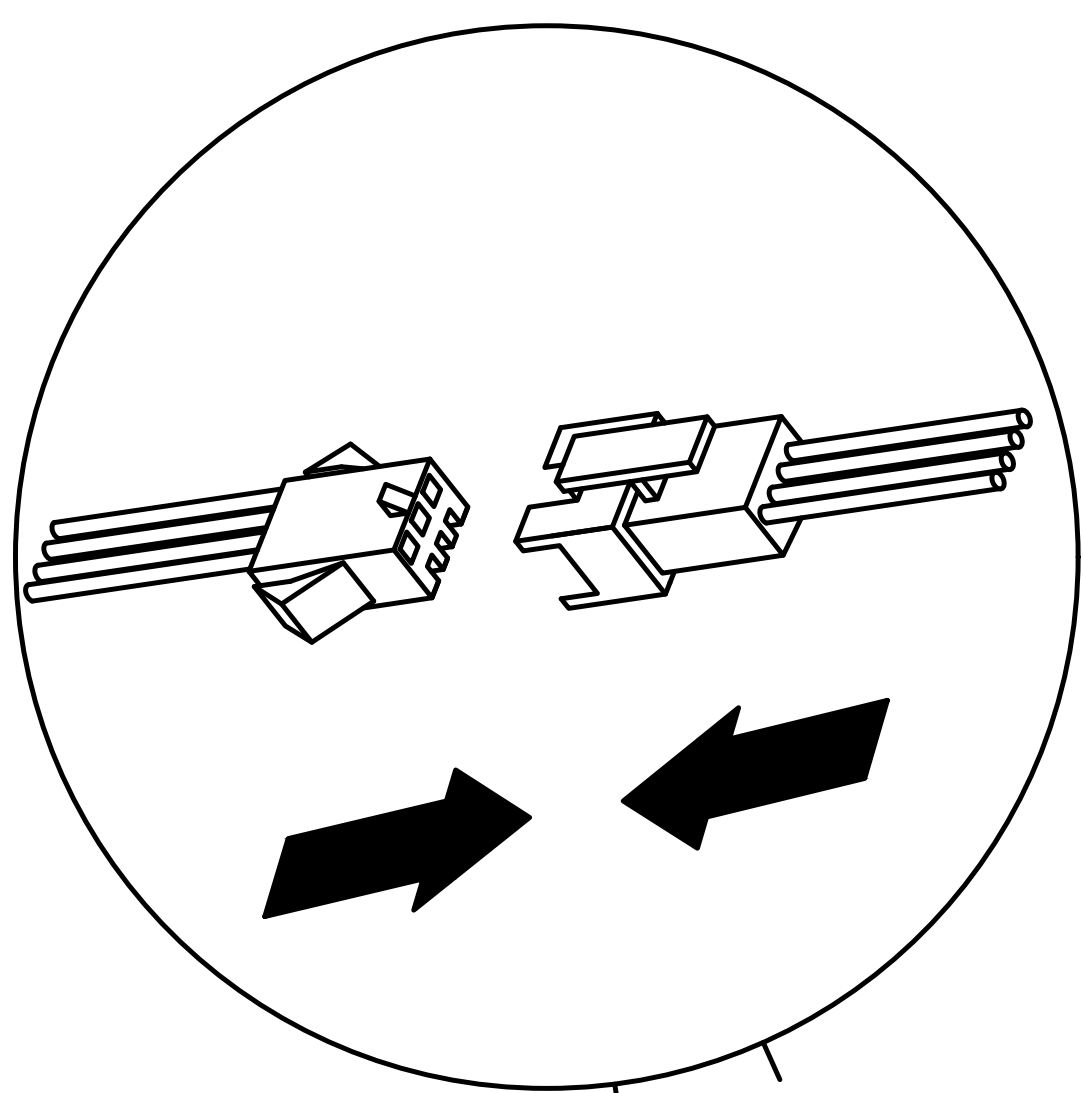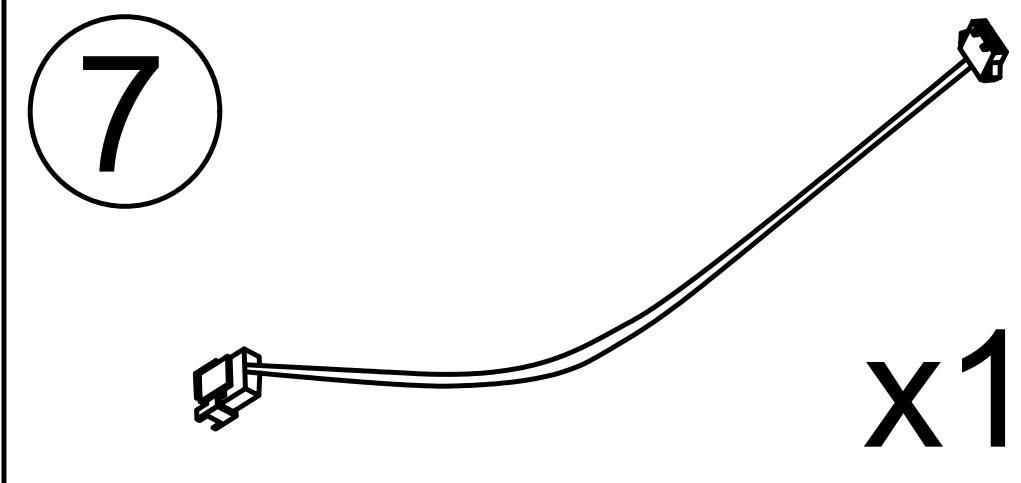


Connect two speakers together using speaker cables

Step 29

  
8

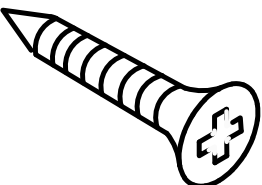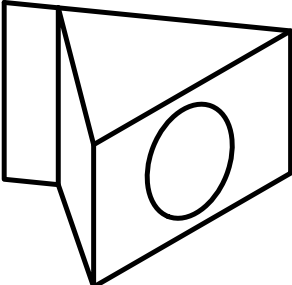



x6

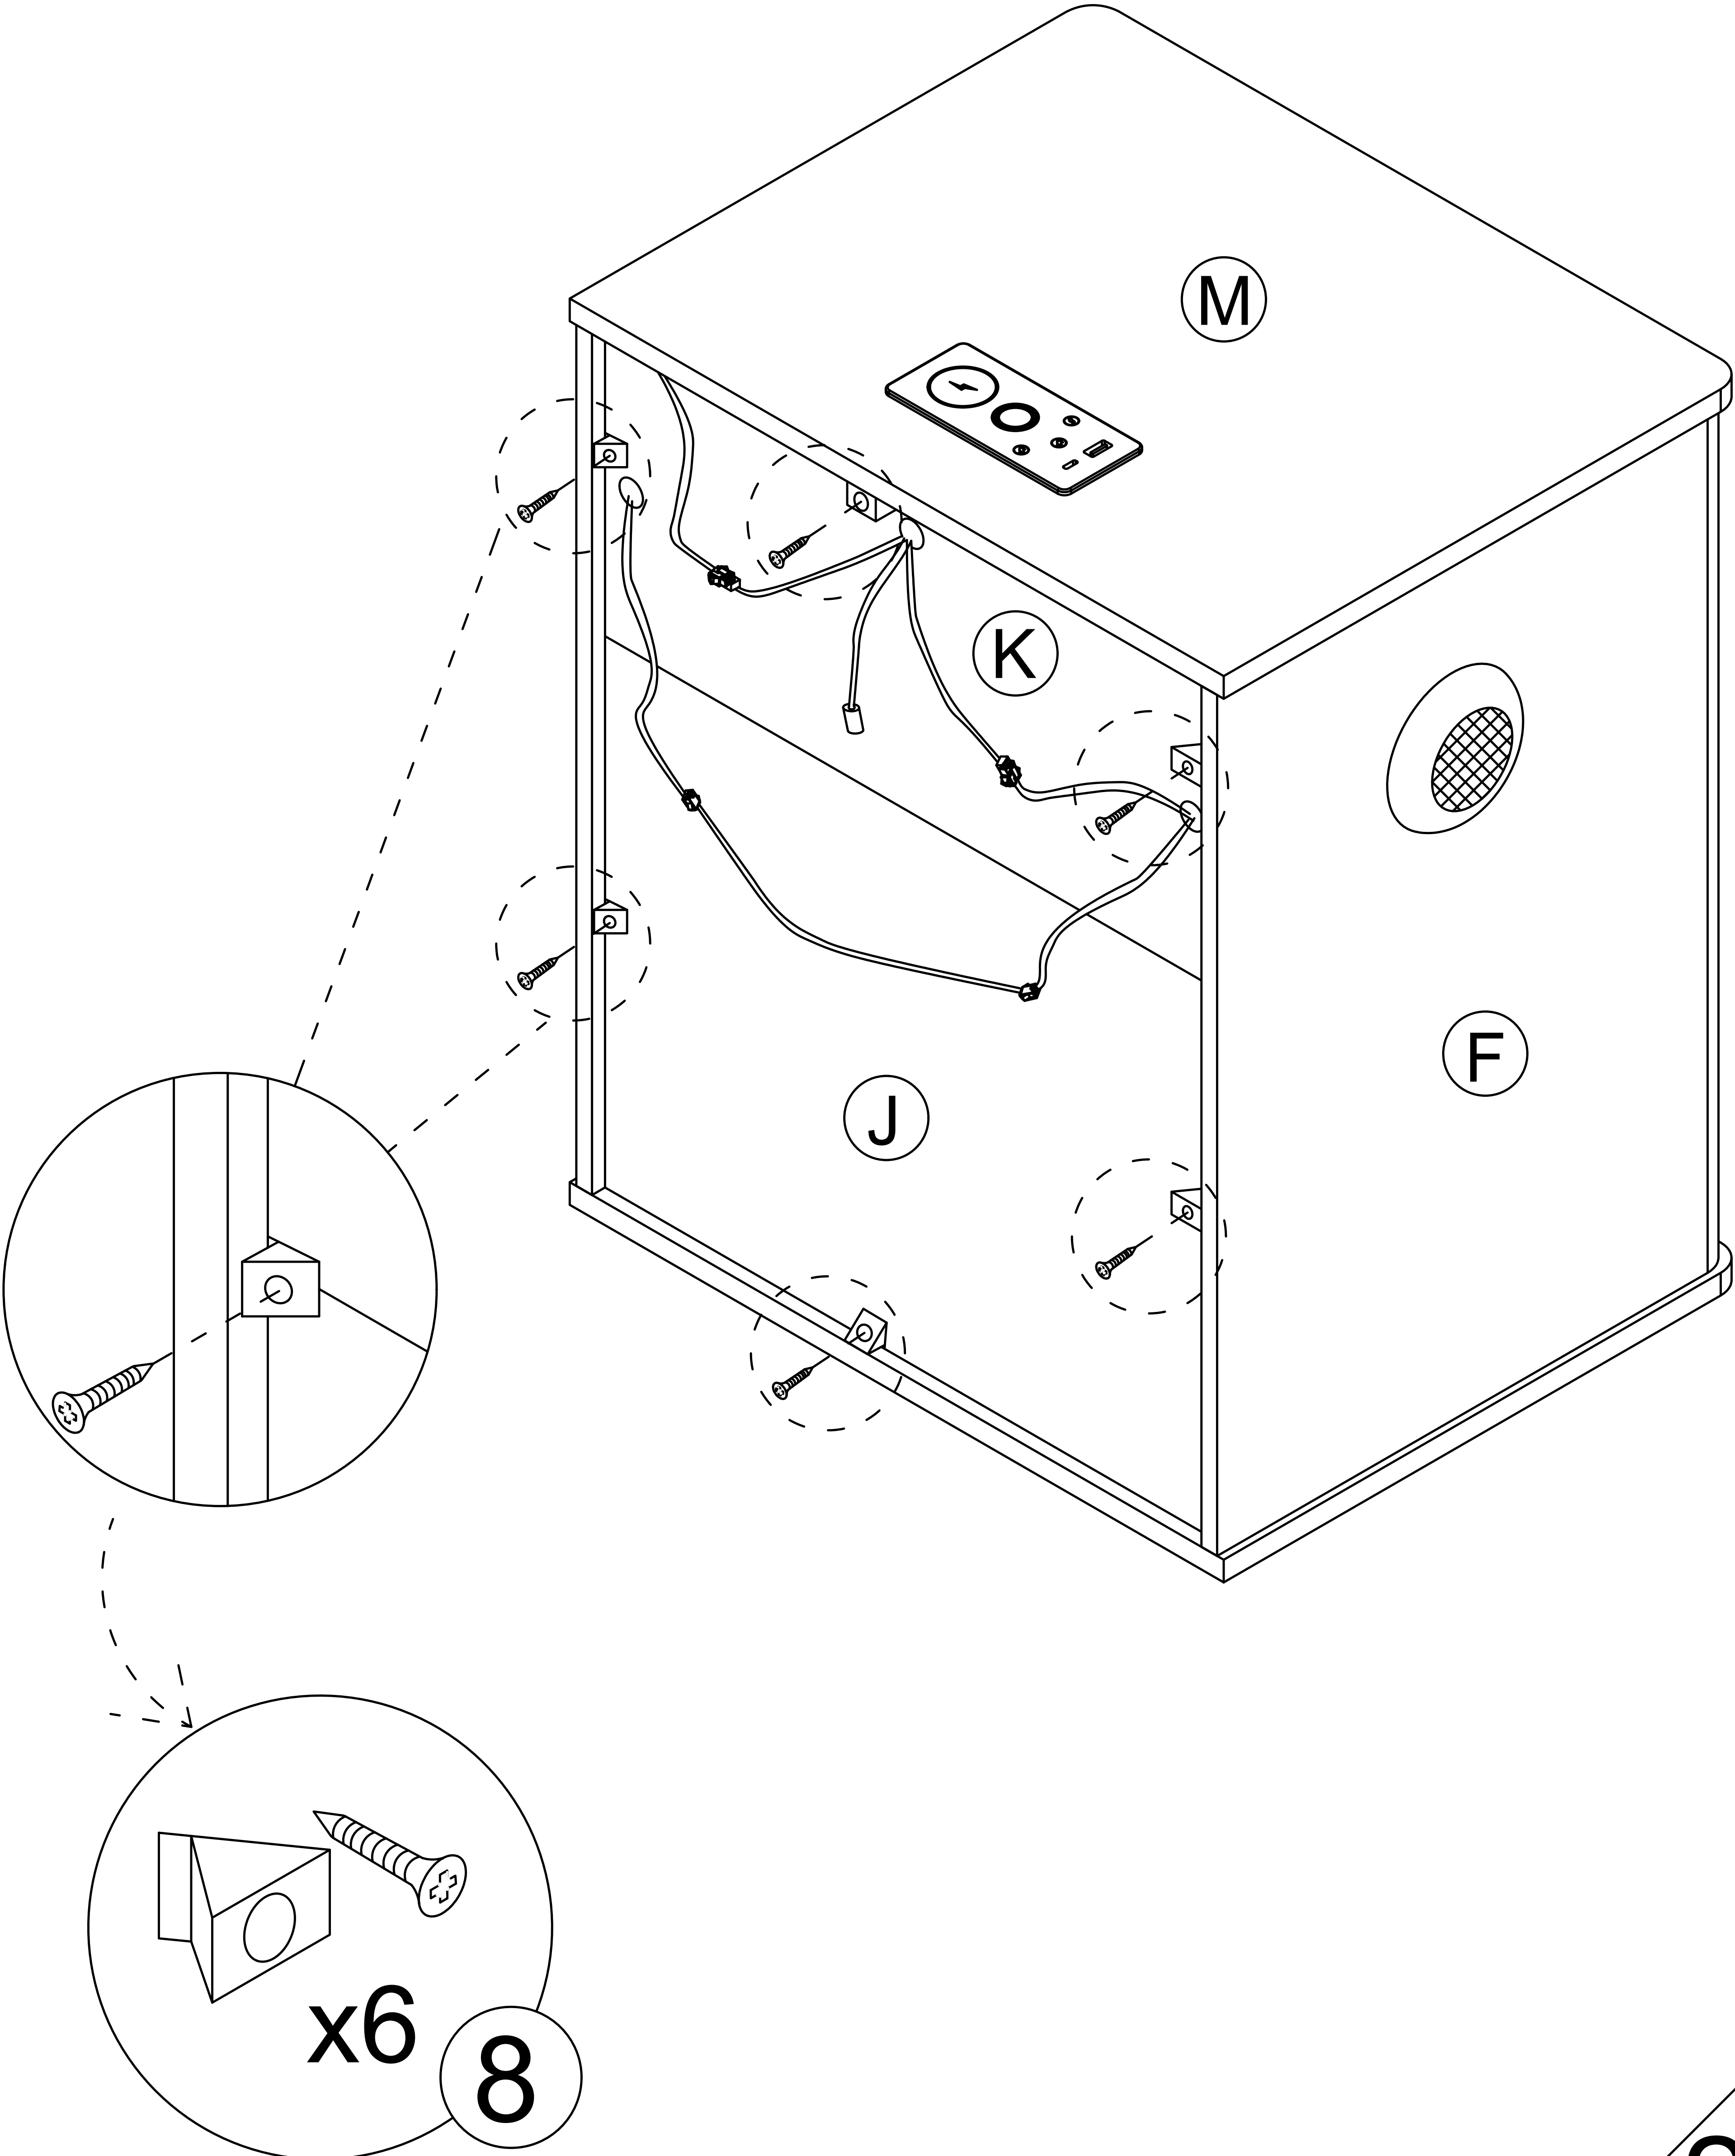 

 Step 30

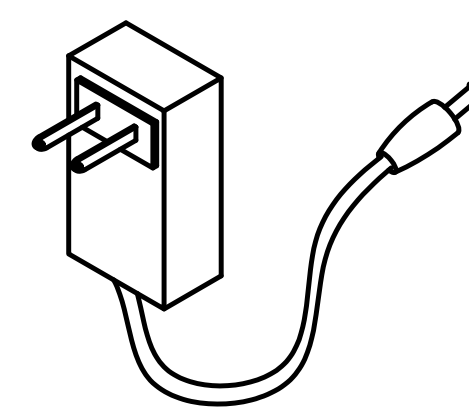

x1

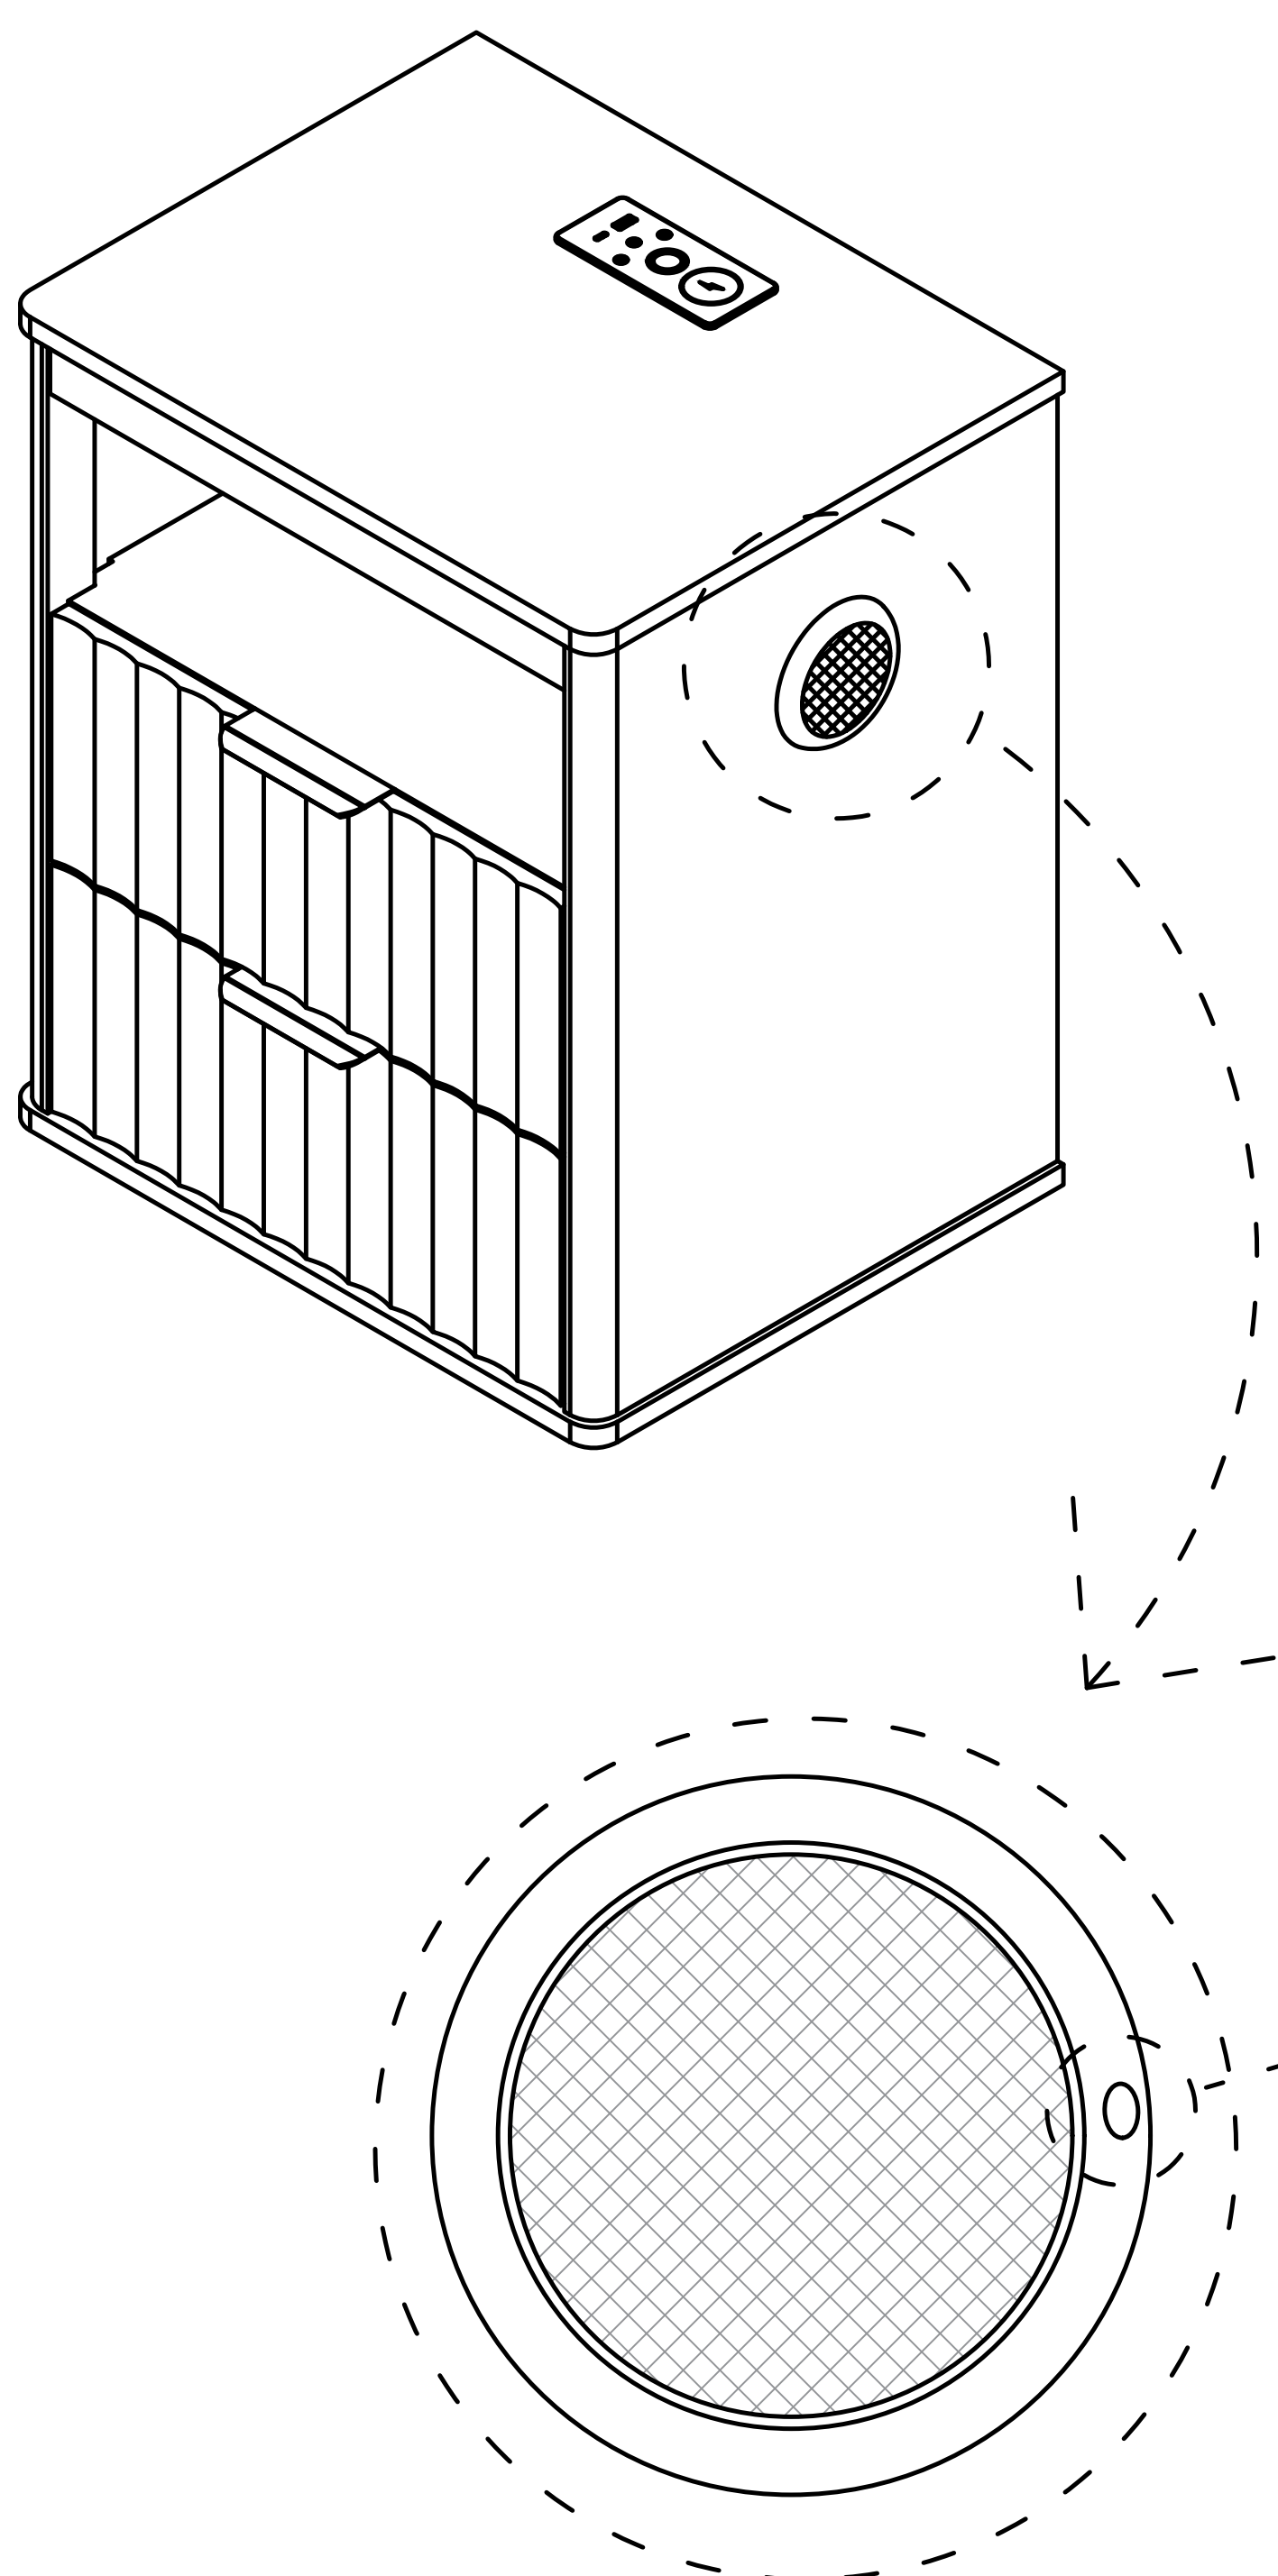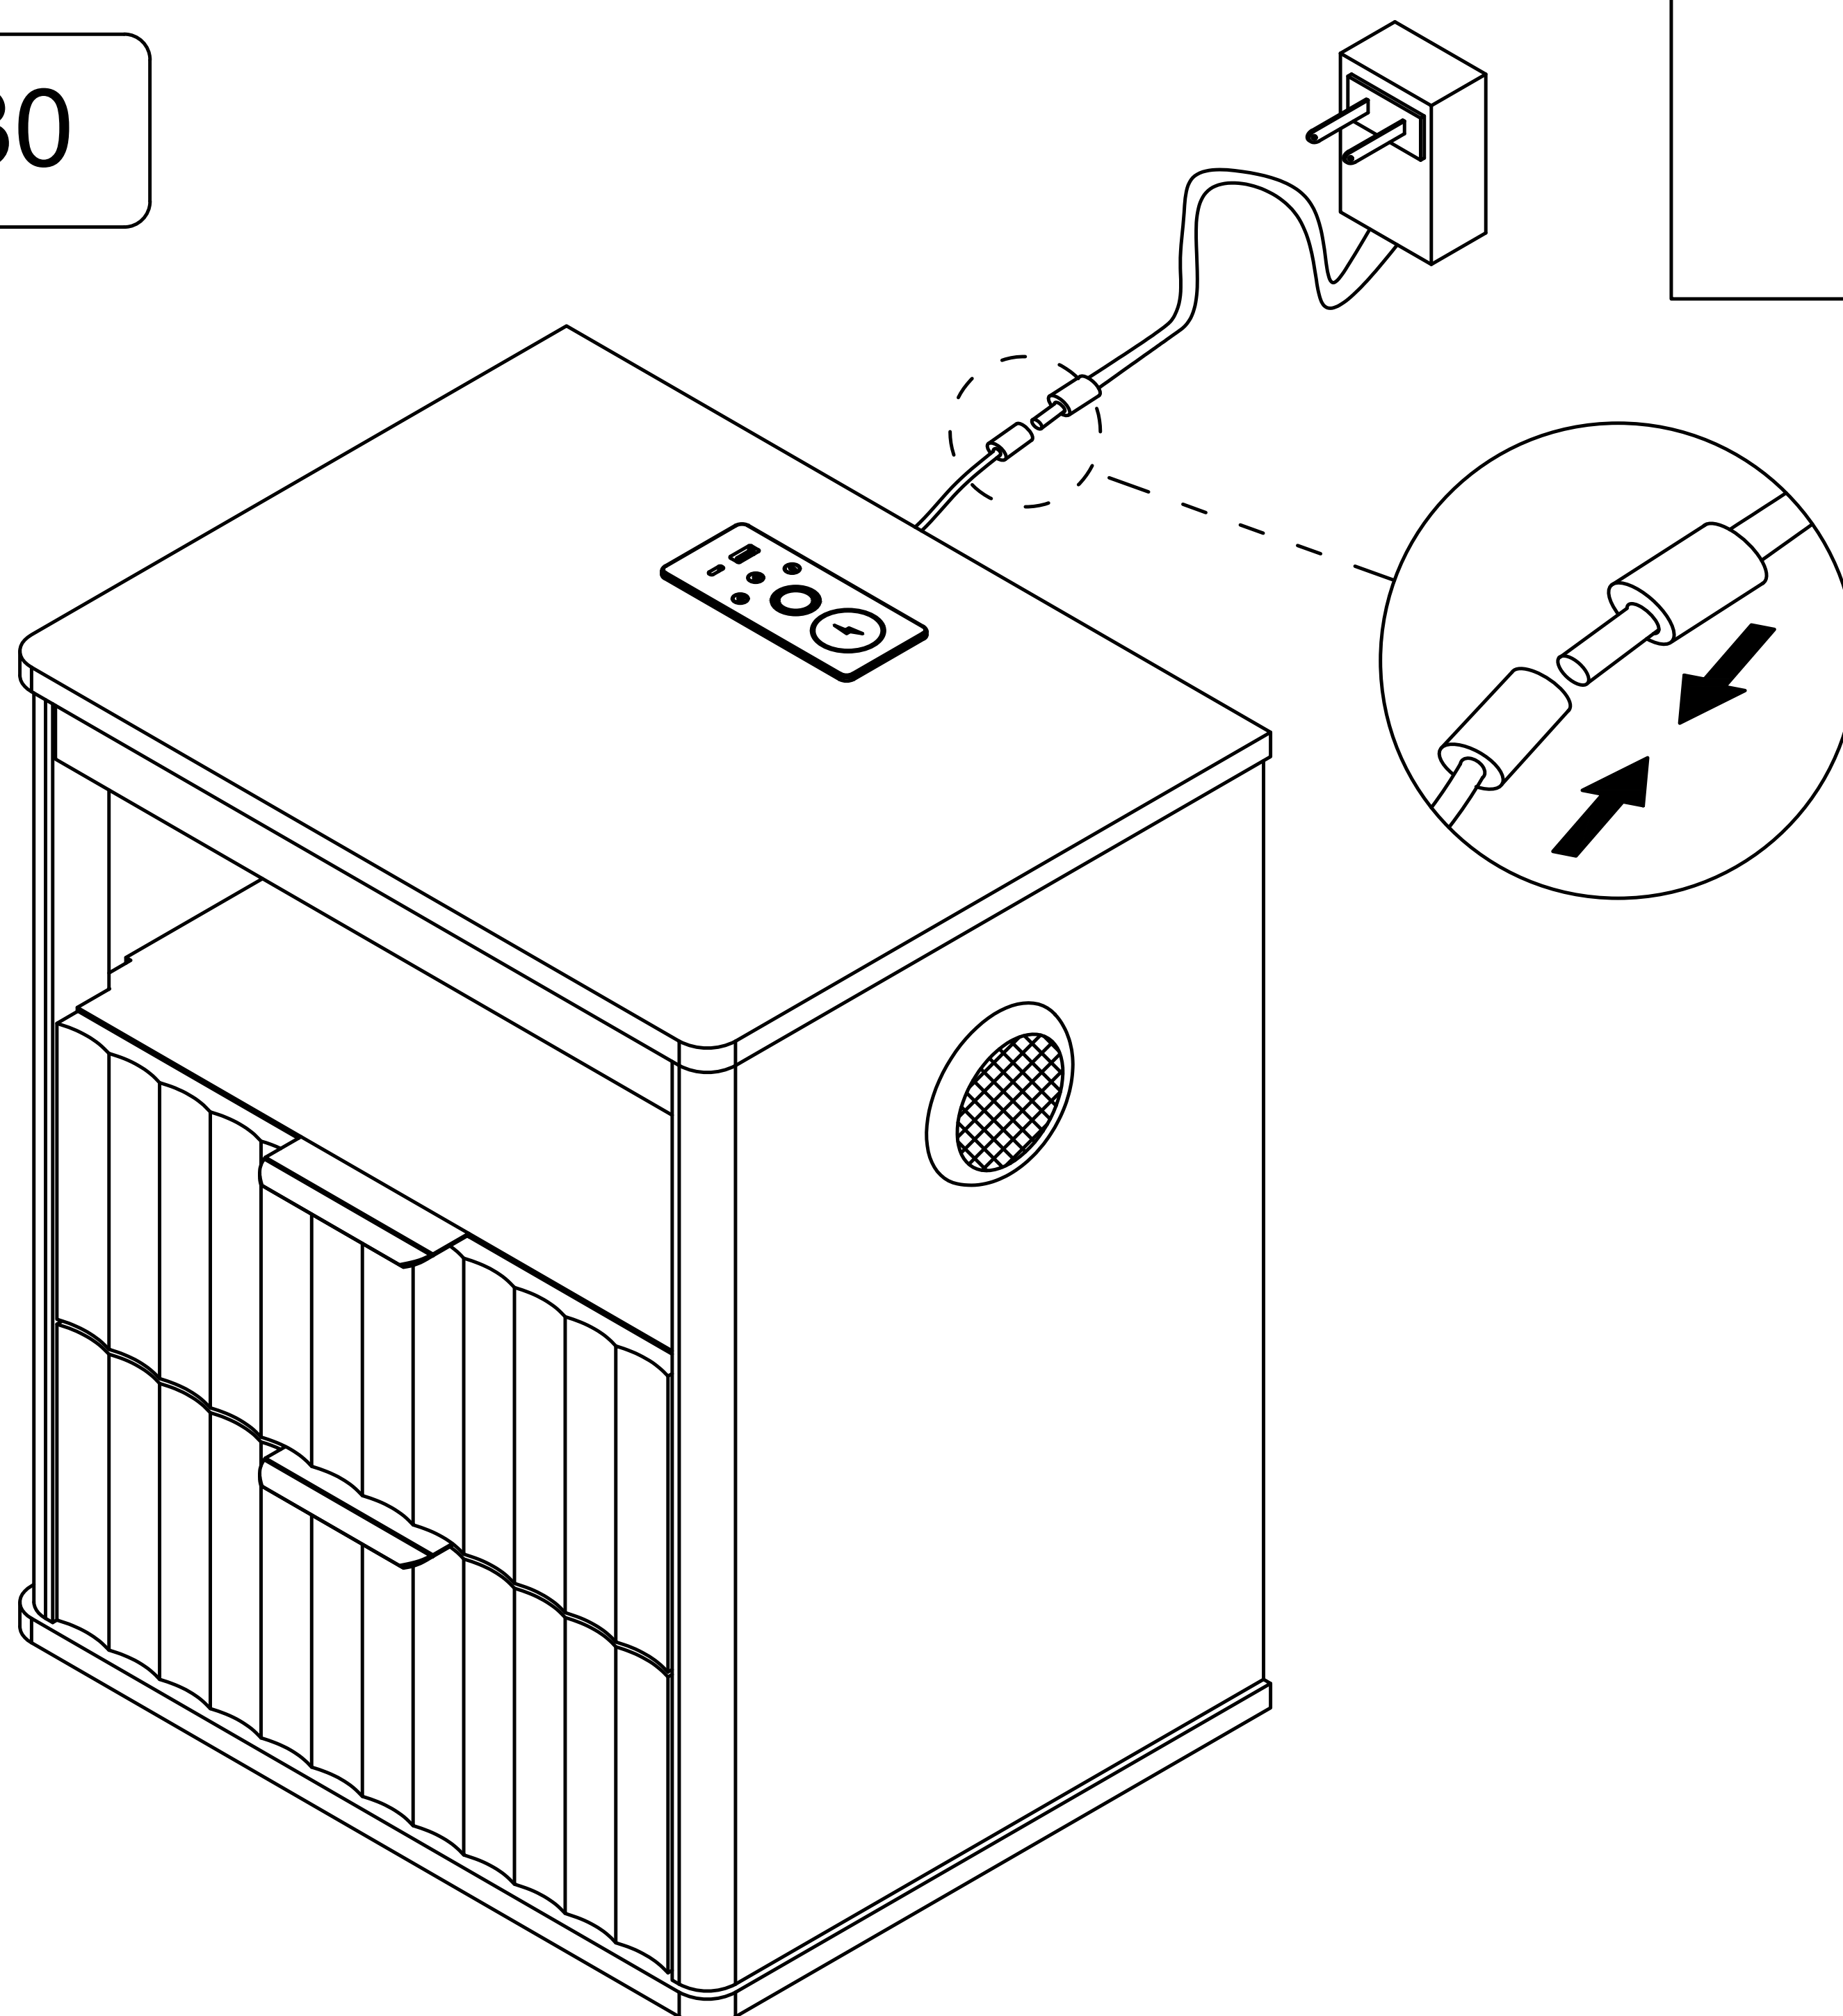  

Bluetooth speaker (Name:A22)

Open your phone, turn on Bluetooth, find the Bluetooth named "A22", and click to connect.

After connecting your phone, you can play the phone's sound

To connect to other devices, you need to first disconnect the currently connected device

Lamp switch button

Light mode: Rhythm mode, Breath light mode, Jump rhythm mode, Light off mode.
(Default mode is Rhythm mode)



User's Guide

- 1.To use this product, please plug it into a 12V DC power supply.
- 2. If there is no touch response suddenly, Re-plug the power to reset the touch static electricity.
- 3. If bubbles appear on the panel, remove the protective film.

Product Introduction

 
Smart box is powered by USB-A and Type-C, meeting the general charging needs of all phone models. Equipped with a built-in human body sensor, it can detect objects approaching within a range of 2 meters and achieve intelligent sensing to turn on lights. And with 24 colors light、 music beat、 fast and wireless charging function is 15W .



This touch button enables the switch of radar sensing function
A.touch this button once to turn on the radar sensing function (indicator light on). After the person leaves or remains stationary for more than 30 seconds, the light strip goes out; people and objects within a range of 2 meters move will light up the light strip.
B. Long press this button for 0.5 seconds to turn off the human body sensing function (the indicator light goes out). At this point, Keep the light strip as it was before turning off and no longer be affected by human and object activities.
By default, radar sensing is enabled when powered on.



This touch button achieves functions such as light strip on /off, light color switching,and adjust the brightness of the light.
A. Touch this button can turn on or off the light (the indicator light will turn on or goes out)
B.With the circle of light, long press this button to achieve to adjust brightness of the light’ s function.
White light is enabled by default when powered on.

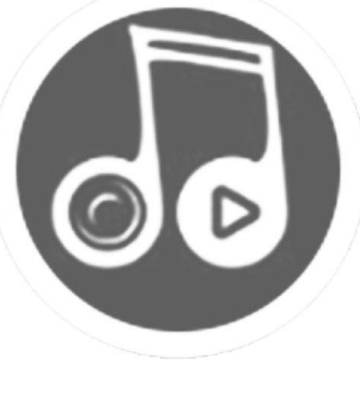

This touch button implements the function of a music rhythm light
Touch this button to turn the music jump light on or off (the light jumps with the sound)

This range is a wireless charging area,and only mobile phones with wireless charging function can be charged.

Consumer Reminder: Important Notice for Wireless Charging Use

1, Phone-Only Wireless Charging:

This device supports wireless charging for mobile phones only. Attempting to charge other electronic devices may result in danger.

2, Metal Warning:

Ensure that no metal objects are placed between your phone and the wireless charger (this includes magnetic or metal phone cases).
If there are metal objects can interfere with charging or cause hazardous conditions.



This area is the color switch function, you can click or slide to any color circle position to achieve color switch. The center hexagon of the color circle is marked as the dynamic phantom color mode which have 5 magic color modes.