

Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance



- Not for commercial use. For residential use only.



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Stains may be removed with mild soap solution and damp cloth.

 


- Children should not climb or jump on the furniture.









- Dust and pick-up spills using a clean, non-colored, lint-free cloth.



Dining Table

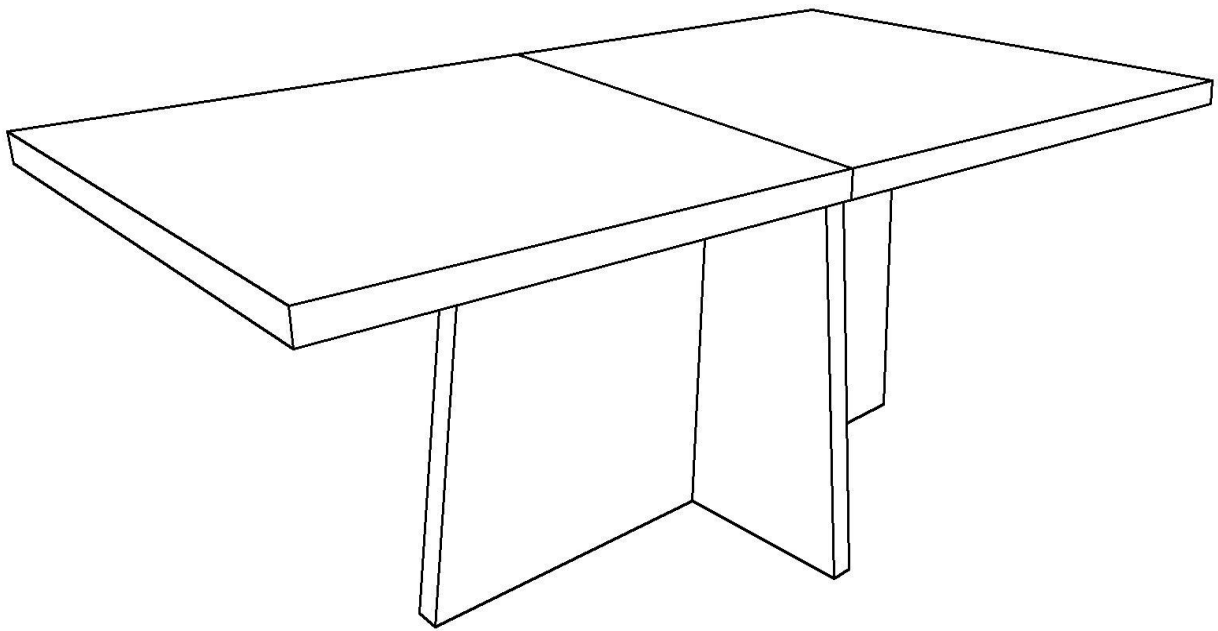


Parts List

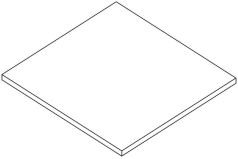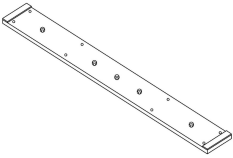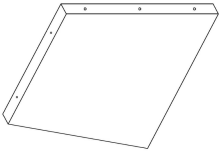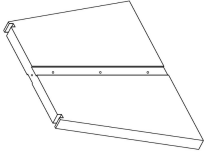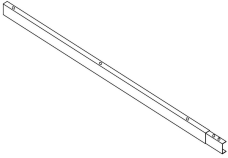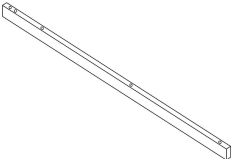      Label	Picture	Description	QTY
A		Table Top	2
B		Fixed plate	1
C		Leg Base Plate	2
D		Leg Base Plate	1
E		Iron	2
F		Iron	2

  
Hardware

Label	Picture	Description	QTY
①		5mm Allen Wrench	1
②		Bolt (M8*20mm)	4
③		Bolt (M8*32mm)	14
④		Bolt (M8*50mm)	17

 ⑤		Spring Washer (M8)	14
⑥		Flat Washer (M8)	14
⑦		Iron	1
⑧		Wood Tenon (Φ10x40mm)	7

Assembly Preparation

 Before
Beginning
Assembly:

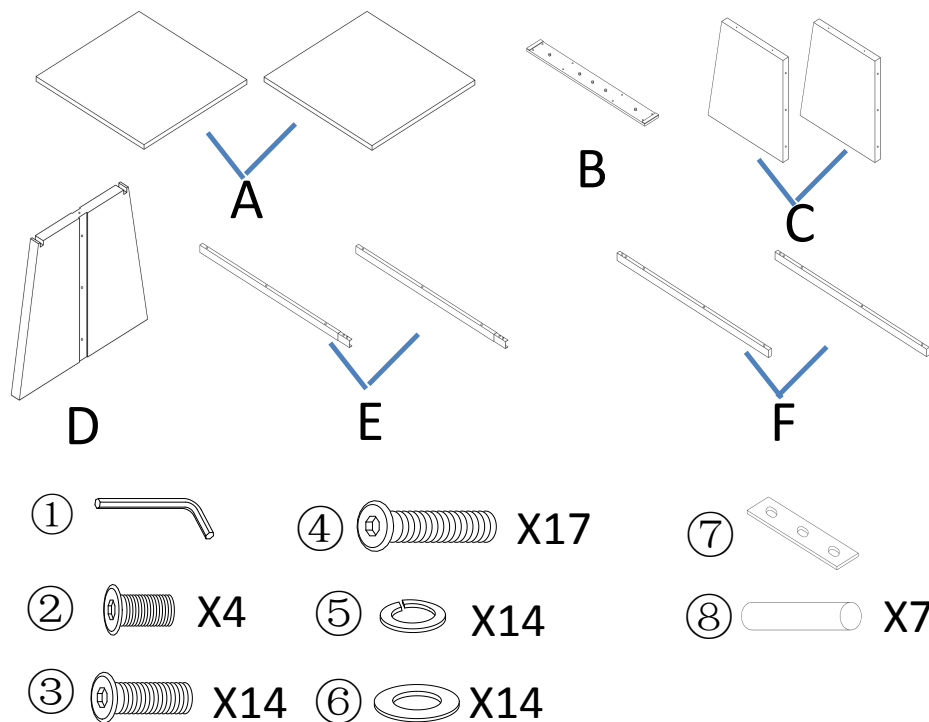

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-



 
- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


Assembly Steps

Overview

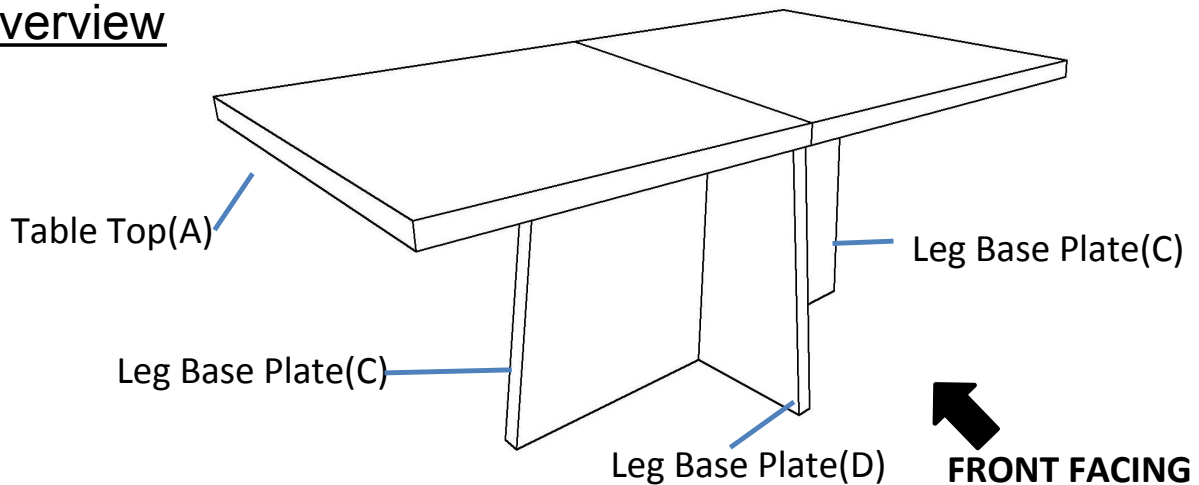


This Dining Table has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Dining Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

 Step 1

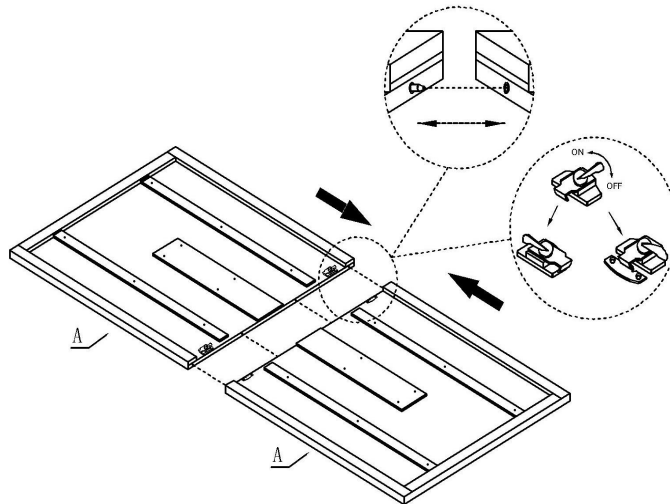


Please put the two Table Tops (A) together as shown.
Place all parts on a clean, undamaged surface.

 Step 2

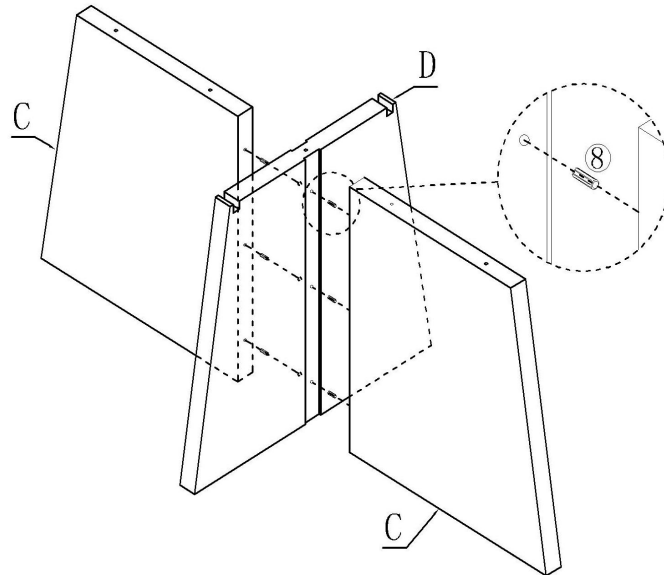

As shown in the picture: Connect the Leg Base Plate (C) and (D) with Wood Tenon (⑧).

 
Step 3

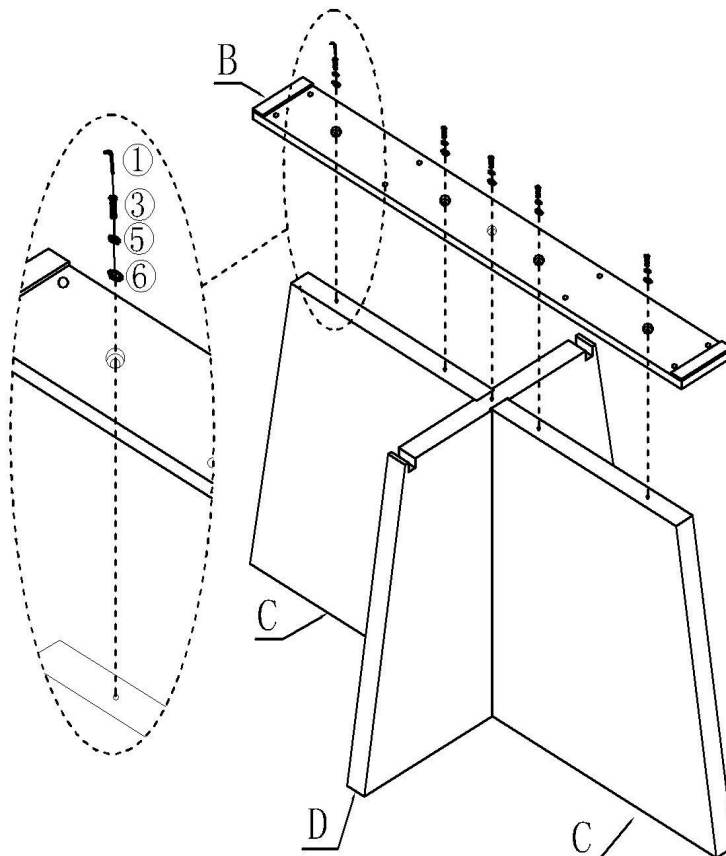

As shown in the picture: Use Bolts(③)+Spring washers(⑤)+Flat washers(⑥), and Allen wrenches(①) to fix the Fixed plate (B) and Leg Base Plate (C) (D).


Please tighten the bolts.

 Step 4

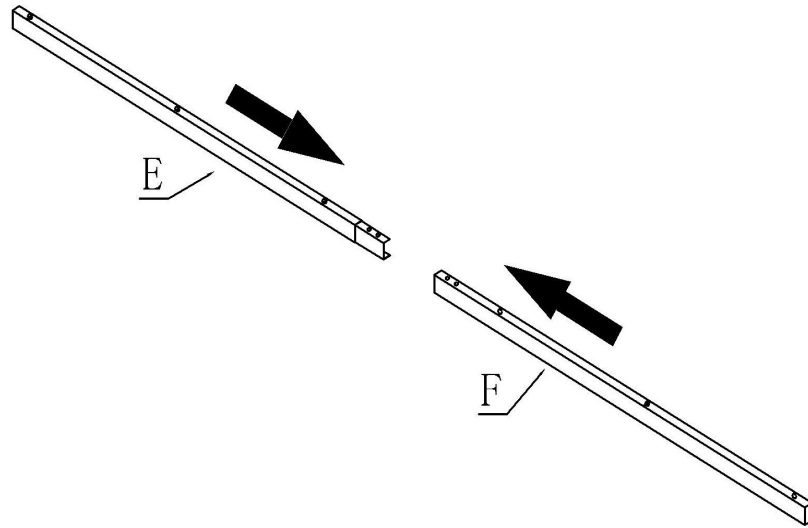

As shown in the picture: Connect the irons (E) (F).

 
Step 5

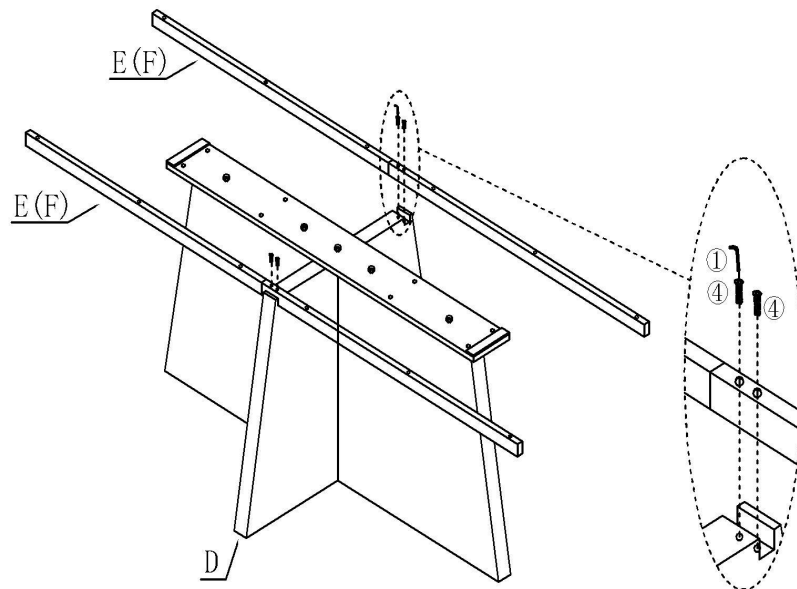

As shown in the picture: Use the Bolt (④) Allen wrench to fix the Iron (E) (F) and the Leg Base Plate (D).

Please tighten the bolts.

 Step 6

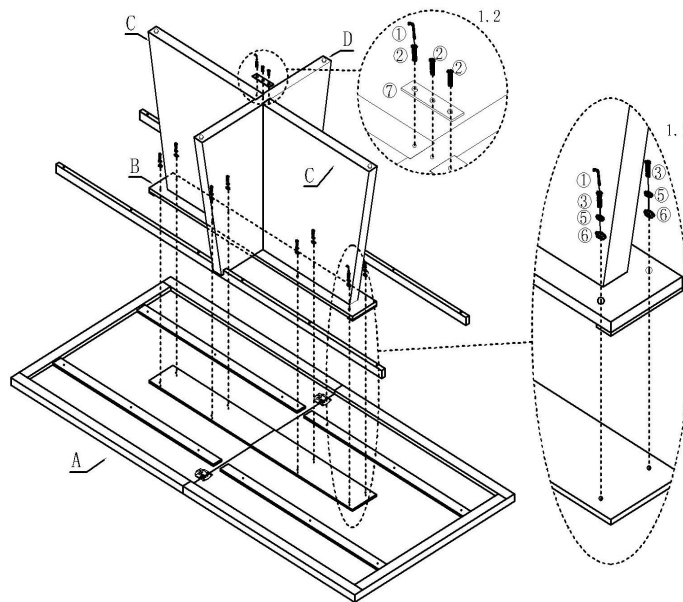


1.1: As shown in the picture: Use Bolts (③) + Spring washers (⑤) + Flat washers (⑥), and Allen wrenches (①) to fix the Fixed plate (B) and Table Top (A).

1.2: As shown in the picture: Use bolts (②) + Allen wrench (①) to fix the iron (⑦) on the Leg Base Plate (C)(D).

Please tighten the bolts.

 
Step 7

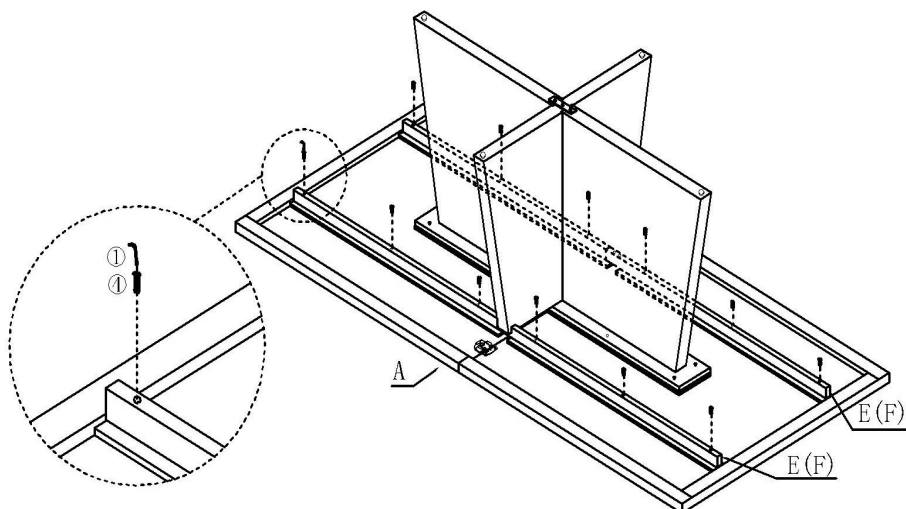

As shown in the picture: Use the Bolt (④) Allen wrench (①) to fix the Iron (E) (F) and the Table Top (A).


Please tighten the bolts.

 Step 8

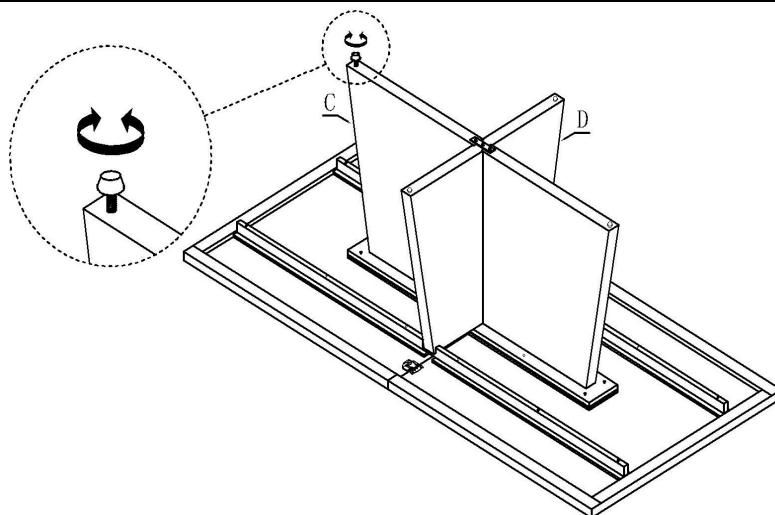

The bottom adjustment feet can be adjusted in height.

 Step 9

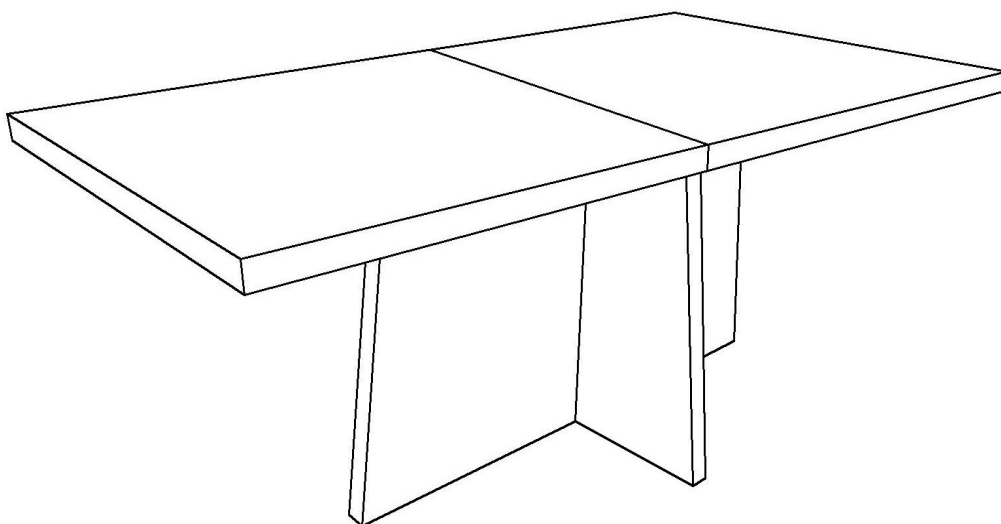

Your Dining Table is ready for use.
This Dining Table should only be used on a flat, level surface.