

2000W Convector Heater

With Thermostat - REDY02

With Thermostat & Timer REDY02T



2 year
guarantee

Instruction Manual



British engineering &
innovation since 1928

THANK YOU

FOR CHOOSING



We hope you love your product for many years!



Register your purchase

www.rediffusion.uk/pages/register-my-warranty

Scan QR code using mobile device

In line with our commitment to quality, your appliance is granted with a 2-year warranty cover. To optimize the benefits of this warranty, we suggest registering your product post-purchase, ensuring you get the most out of its features.

Please note: Warranty MUST be registered within 30 days of purchase. Any warranty registered after 30 days will be void.

CONTENTS

TECHNICAL SPECIFICATION	1
IMPORTANT SAFEGUARDS	2 & 3
HOW TO USE	4, 5 & 6
CLEANING & CARE	7
DISPOSING OF THE PRODUCT	8
CUSTOMER SUPPORT	9
GUARANTEE & WARRANTY	10

TECHNICAL SPECIFICATION

Power:	750-2000W
Voltage/Frequency:	220-240V~, 50Hz
Dimensions (CM):	20 (H) x 38.5 (W) x 53.5 (L)
Net Weight:	57.6 kg

This user manual can also be downloaded from our website.

www.rediffusion.uk

Important Safeguards

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before using your product.
2. Do not use the heater unless the feet are correctly attached if the heater is used as portable appliance.
3. Ensure the power supply to the socket into which the heater is plugged is in accordance with the rating label on the heater and that the socket is earthed.
4. Keep the mains lead away from the hot body of the heater.
5. The heater is not intended for use in bathrooms, laundry areas or similar indoor locations. Never place the heater where it may fall into a bathtub or other water container.
6. Do not use outdoors.
7. Do not cover or obstruct any of the heat outlet grilles or the air intake openings of the heater.
8. Do not place the heater on carpets having a very deep pile.
9. Always ensure that the heater is placed on a firm level surface. Ensure that the heater is not positioned close to curtains or furniture as this could create a fire hazard.
10. Do not position the heater in front of, or immediately below, a wall socket.
11. Do not insert any object through the heat outlet or air intake grilles of the heater.
12. Do not use the heater in areas where flammable liquids are stored or where flammable fumes may be present.
13. Particular care should be taken when the heater is situated in areas occupied by children or invalids.
14. Always unplug the heater when moving it from one location to another.
15. Do not use the heater if the power cord is damaged. If the power cord is damaged it must be replaced by a recognised service agent or other qualified person. If the plug is damaged, see Plug Replacement details below.
16. Young children should be supervised to ensure that they do not play with the appliance.
17. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out this appliance must not be supplied through an external switching device such as a timer or connected to a circuit that is regularly switched on and off by the utility

Important Safeguards

Power Cord Safety Tips

1. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
2. The appliance should be connected to an earthed mains socket.
3. Ensure your mains voltage corresponds to that stated on the appliance.
4. Never pull or yank on the cord or the appliance.
5. Fully uncoil the cable before plugging into the mains.
6. Always switch the clothes rack off on the unit and socket before unplugging from the mains. Unplug and fold away when not in use.
7. To disconnect the appliance, grasp the plug and remove it from the outlet.
8. Never wrap the cord tightly around the appliance as this could cause the wire to fray and break.
9. Do not operate the appliance if the power cord shows any damage.
10. Be aware that a trailing lead may present a trip hazard.
11. Ensure mains cable is not touching the heated surfaces.

NOTE: It is normal when the heaters are turned on for the first time or when they are turned on after having not been used for a long period of time the heaters may emit some smell and fumes. This will disappear when the heater has been on a short while.

How To Use

How To Use:

Before using the heater, the feet (supplied separately in the carton), must be fitted to the unit. These are to be attached to the base of the heater using the 4 self-tapping screws provided, taking care to ensure that they are located correctly in the bottom ends of the heater side moldings

Convactor Heater With Thermostat REDY02

- Choose a suitable location for the heater, taking into account the safety instructions above.
- Insert the plug of the heater into a suitable socket.
- Turn the thermostat knob fully in a clockwise direction to the maximum setting.
- Turn on the heating elements by means of the rocker switches on the side panel. When the heating elements are on the switches will illuminate. For maximum heat output both switches should be on.
- When the desired room temperature has been reached, the thermostat knob should be turned slowly anti-clockwise until the thermostat is heard to click off and the lights on the element switches are seen to go out. After this, the heater will keep the air temperature in the room at the set temperature by switching on and off automatically.

Convactor Heater With Thermostat & Timer REDY02T

All the above instructions for model REDY02 (above) also apply to model REDY02T. This model is also fitted with a 24hr timer which has 96 segments around its circumference, each segment being equivalent to 15 minutes of time. With the aid of this timer it is possible to preset the time and duration of the period(s) that it is desired the heater will operate, in any 24hr period.

Note: When using in timer mode, due consideration should be given to the fact that the heater may come on whilst unattended.

Timer Operation

The centre of the timer has a 3 position slide switch.

In the central position (denoted by the clock symbol) the timer will switch the heater on and off at times set by the segments, (see setting the timer, below).



The position denoted by the "I", is a timer override position. The timer will continue to run but power will be fed continuously to the heater. This enables the heater to be on all the time if required.

In the position denoted by the "O", the timer continues to run but no power is fed to the heater.

How To Use

Setting The Timer

1. Ensure the slide switch on the timer is at the mid position next to the clock symbol.
2. Rotate the outer ring of the timer in a clockwise direction until the current time is lined up with the arrow pointer, i.e. if the time the timer is being set is 8 p.m. rotate the outer ring until the number 20 is in line with the arrow pointer.
3. Set the time the heater is required to run by pulling the segments around the outer ring forward appropriate to the running period(s) required.

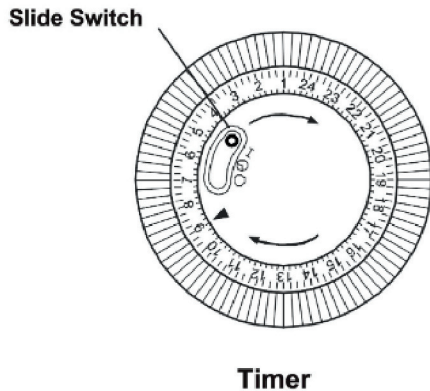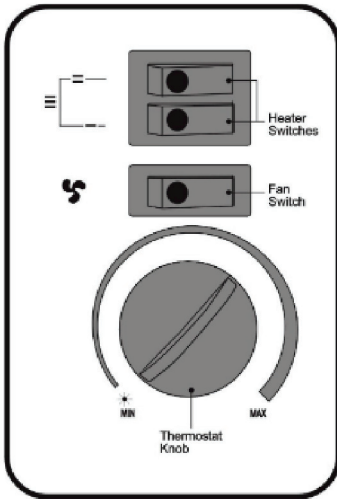

When set, the heater will operate each day during the times programmed.

NOTE: the heater must always be plugged into a power socket, the element switches must be in the on position and the thermostat must be suitably set to ensure the heater will come on. If the heater is required to run continuously the slide switch on the timer should be set to the "1" position. If it is subsequently required to revert back to timer operation, the slide switch on the timer should be set to the central (clock) position.

How To Use

Wall Mounting The Heater

Caution: - there should be a distance of at least 40 cm between the lower part of the appliance and the floor. Feet must be removed before mounting the appliance on the wall

1. Measure the distance between the two slots situated at the back of the appliance (see picture A)
2. Drill two holes at the same distance in the wall and insert a plug in each hole you just drilled. Place the brackets facing the holes as indicated on picture B and attach them in this position with the screws supplied.
3. Before attaching the appliance on the brackets, attach the two other brackets underneath the appliance as indicated on picture C.
4. Attach the appliance on the wall. To do so, hold it in such way that the slots are facing the brackets; insert the appliance halfway onto the brackets until the appliance can go down into the grooves of the brackets.
5. As soon as the appliance is positioned correctly, take a pencil and mark a dot in the hole of each bracket situated underneath the appliance.
6. Then take off the appliance by proceeding the other way around compared to point 4 above.
7. Drill a hole in the wall on each dot you just marked and insert a plug in each hole.
8. Attach the appliance back on the wall as indicated in point 4, insert screws through the brackets underneath the appliance and tighten without forcing.

Cleaning & Care

This appliance requires little maintenance and contains no user-serviceable parts. Do not try to fix it yourself. Refer it to qualified service personnel if servicing is needed.

Cleaning

1. Always un-plug the heater from the wall socket and allow it to cool down before cleaning.
2. Clean the outside of the heater by wiping with a damp cloth and buff with a dry cloth.
3. Do not use any detergents or abrasives and do not allow any water to enter the heater.

Storage

1. When the heater is not used for long periods of time it should be protected from dust and stored in a clean dry place.
2. Never store the appliance while it is still plugged in.
3. Never wrap the cord tightly around the appliance, and do not put any stress on the cord - This could cause the cord to fray and break.

Disposing Of The Product

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill. Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.

Correct Disposal Of This Product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Customer Support

If you have any questions or concerns about your new product, please contact our helpful Customer Support Team:

Please have your Model No. available. This can be found on the front cover of this manual and on the products rating label.

We're here to help!



01274 752624



customerservice@rediffusion.uk



www.rediffusion.uk

Happy with your new product?

We would love to hear your suggestions and feedback about your experience.



Guarantee & Warranty



Register your purchase

www.rediffusion.uk/pages/register-my-warranty

Scan QR code using mobile device



**2 year
guarantee**

To make a warranty claim, do not return this appliance to the store.

Please call 01274 752624 or email customerservice@rediffusion.uk. For faster service, locate the model number on the rating label on your appliance. Alternatively, please scan the QR code above to be directed to our warranty registration page.

This product is covered by a 2 year warranty, please read the guarantee and service carefully and keep for future use.

Please Note: To maintain the validity of the warranty, it is imperative to register it within the initial 30 days of purchase. Any registration made beyond this time frame will result in the warranty being deemed void.

This warranty is valid for products purchased and used in the UK and serves as the sole express warranty for the product, replacing any other warranty or condition. The product is guaranteed to be free from defects in material and workmanship for a specified period from the original purchase date. The warranty covers the repair or replacement of defective components, with the responsibility for return shipping costs falling on the customer. If the original product or component is unavailable, a replacement of equal or greater value will be provided.

Exclusions to this warranty include glass, filters, normal wear, improper use, accidents, alterations, abuse, or misuse. The warranty is applicable only to the original consumer purchaser or gift recipient, requiring proof of purchase for warranty claims. It becomes void if the product is used for purposes other than single-family household use or operated outside specified voltage and waveform requirements. The warranty disclaims all claims for special, incidental, and consequential damages, limiting liability to the purchase price. Every implied warranty, except where prohibited by law, is disclaimed, and any statutory warranty or condition is limited to the duration of this written warranty.



Capture, tag, and win with
#Rediffusionfamily



@Rediffusionuk

Tag us with **#Rediffusionfamily** on social media. We love seeing your amazing home transformations so much that we regularly feature our favourites and even host exclusive giveaways to show our online family some extra love!

Rediffusion

Belfry House, Roydsdale Way,
Bradford, BD4 6SU
01274 752624
www.rediffusion.uk

Illustrations may differ from actual product. We are consistently striving to improve our products, therefore all specifications contained herein are subject to change without notice.