

26" Prelit Halloween Plaid Wreath



TO SET UP

Step 1: Straighten up the branches and shape them to get desired look.

Step 2: Locate battery box at back of wreath. Open lid of the battery box by releasing the locks. Insert 4 AA batteries (not included) into the compartment, making sure that the batteries are in the correct orientation. Close the lid with the locks. Replace batteries when the lights become dim. Remove batteries from unit when it is not in use.

OPERATION

Press the button on the battery box once for timer mode, again to turn the lights on, and a third time to turn the lights off or reset the timer. The built-in timer mode causes the lights to turn on and off in a cycle: on for 6 hours then off for 18. The user should initially turn on the lights at a specific time of their choice, and then the lights will turn on every day at approximately the same time.

TROUBLESHOOTING

If Lights Do Not Work:

1. In extreme cold temperatures, lithium AA batteries are recommended. Otherwise, the lifespan of the batteries may be reduced.
2. Ensure the batteries are new and are inserted correctly into the battery box.

STORAGE

DO NOT STORE WREATH IN A DAMP AREA OR IN AN AREA WHERE THE TEMPERATURE EXCEEDS 100°F (40°C).

WARNING – Risk of Fire and Electric Shock

- Read all instructions included with this wreath.
- For indoor use and outdoor use if under a cover to protect from the elements.
- Do not place near gas or electric heaters, radiators, fireplaces, candles or other heat sources.
- Do not place in uncovered area where there is prolonged exposure to sunlight, snow or rain.
- Replace batteries when the lights become dim. Remove batteries from unit when it is not used.

BATTERY WARNING

- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Non-rechargeable batteries are not to be recharged.
- Do not mix different types of batteries such as alkaline, carbon-zinc or rechargeable batteries.
- Do not mix old and new batteries.
- Make sure to insert batteries with the correct polarity.
- Remove exhausted batteries from product.
- **DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE OR LEAK.**
- Improper handling/disposal of batteries may cause batteries to explode or leak.
- Please recycle or dispose of batteries according to the local laws and regulations of your region.

Note: For occasional use only - not intended for consecutive use over 90 days each season.

**SAVE THESE
INSTRUCTIONS FOR
FUTURE USE**