

Cocktail 412 Arcade Quick Start

Important: Never lift your cocktail arcade machine by it's top! To properly remove your new machine from the box will require two people. When removing from the box slide your arms between the foam and lift from the control panels

Your arcade machine is already fully set up and ready to plug in and play. On the left side, from the player one spot, you will notice two red buttons just beneath the top. You will also notice a toggle switch on the bottom that is connected to a power supply receptacle. Plug in the power cord to the machine first and then into the wall. Once plugged in, switch the toggle switch and your game will boot up and be ready to play within about 20 seconds. The left red button is your service/credit button and the right one is your test button.

To select a game press the Player 1 button. Once the game loads press the P1 button once for one player, or the P2 button twice for two players. If at any time you wish to **exit a game** hold the P1 button down until it brings up a menu allowing you to exit the game. **The volume control** is located inside the cabinet. Open the back of the access panel to locate the game board (blue box on the left side on machine). There is a small black dial that you can turn to adjust the volume level.

Always make sure the cabinet is closed when powering up your machine. The machine should be off if opening the access panel for any reason. There are wires that could cause electrical shock if touched. Refer to a qualified technician for any repairs. We test every machine before it is shipped, however it is possible during shipping that wires can come loose from their connections. If you find something is not working, please refer to your troubleshooting guide and call us if you need additional help. We hope you enjoy your new arcade machine!

Thank you for your business,
Suncoast Arcade
www.SuncoastArcade.com
727-692-9762

