 


# ASSEMBLY INSTRUCTION

 
## DINING TABLE

**A** Top Panel




1pc

**B** Leg



2pcs

 **C** Side Rail



2pcs

**D** Middle Rail



1pc

**E** Bolt  
Ø5/16"x1-3/4"



**F** Bolt  
Ø5/16"x2-1/4"



**G** Flat Washer  
Ø5/16"x22mm



**H** Lock Washer  
Ø5/16"x13mm



8pcs  
**I** Allen Key  
M5



4pcs  
**J** Bolt  
Ø5/16"x3-3/4"



 
12pcs  
**K** Half Moon Nut  
Ø5/16"



12pcs  
**L** Hex Nut  
Ø5/16"x6mm



1pc  
**M** Spanner  
Ø5/16"




2pcs

2pcs


2pcs

1pc

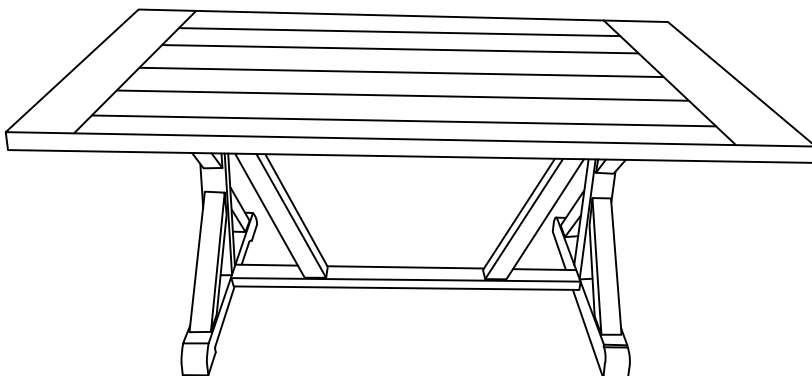


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


- 1** Assembling Middle Rail (D) to Leg (B), rotate Bolt (J) to Leg (B) Firstly, then attach Middle Rail (D) to Leg (B) through Bolt (J). Next using Half Moon Nut (K) and Hex Nut (L) to lock with Bolt (J) by Spanner (M) as below shown.

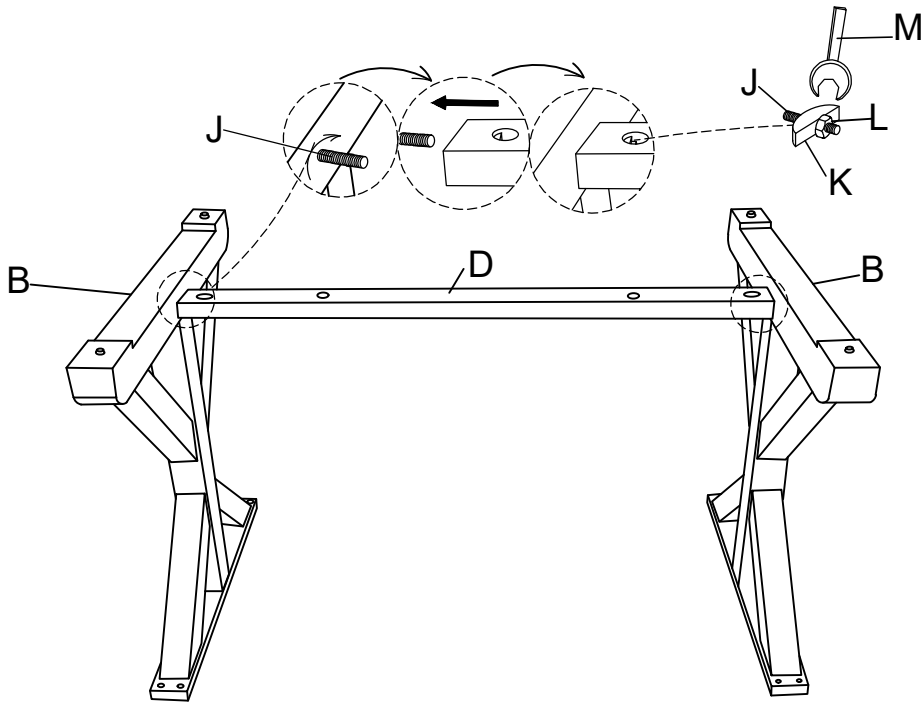

- 2** Attach Side Rail (C) to Leg (B) & Middle Rail (D) using Bolt (F), Flat Washer (G) and Lock Washer (H) by Allen Key (I) as below shown.

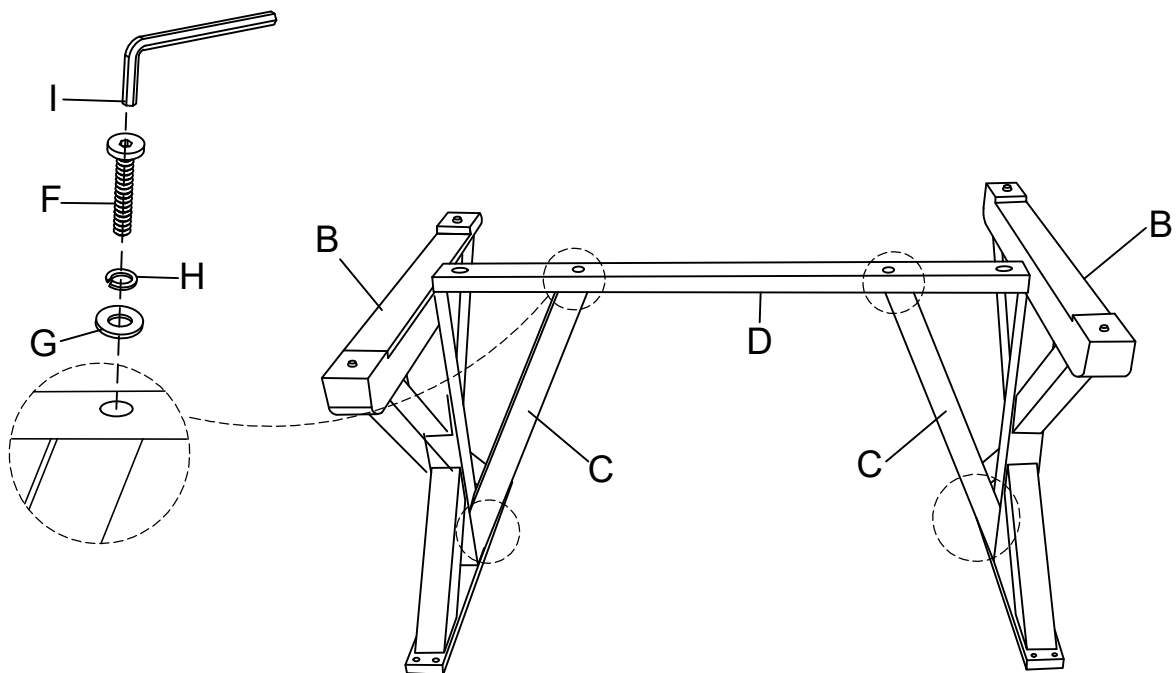

**3** Attach pre-assembled Leg (B) to Top (A) using Bolt (E), Flat Washer (G) and Lock Washer (H) by Allen Key (I) as below shown.

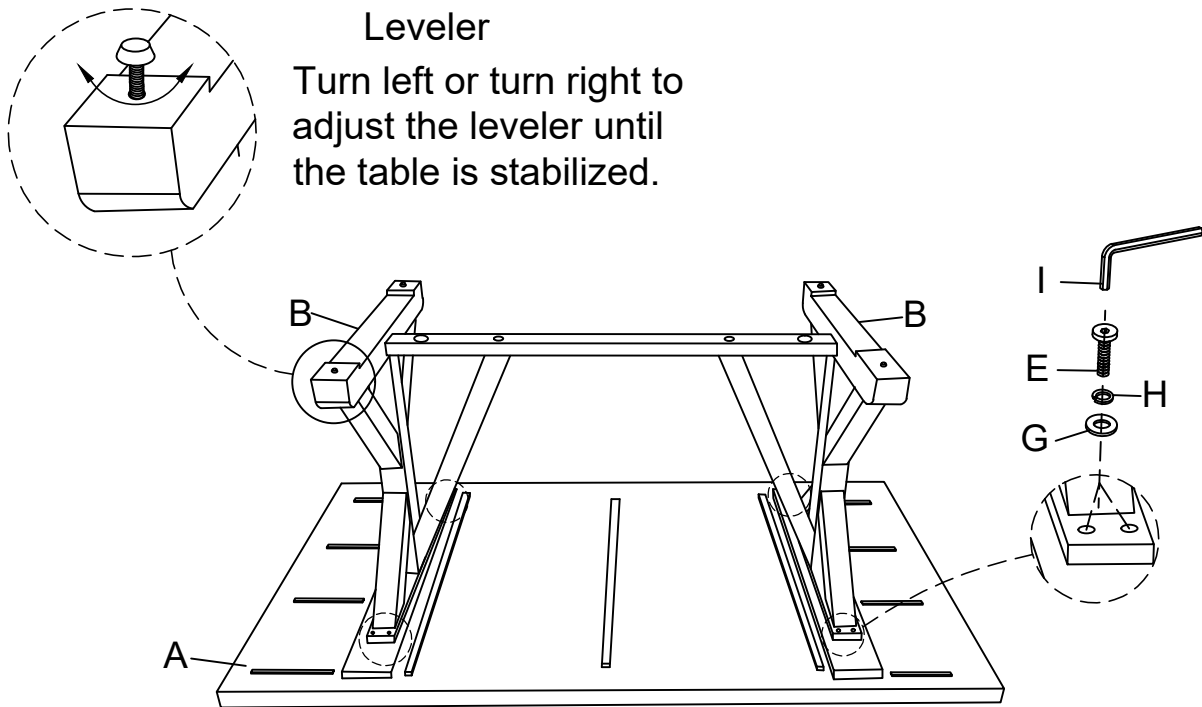

### Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.