

NOTICE

Due to strict mailing regulations, butane fuel has been removed from this lighter.

Follow the butane refill instructions carefully to insure safe and reliable operation.

WARNING/SAFETY

- DO NOT puncture or use near open flame
- DO NOT expose to temperatures above 122°F (50°C)
- DO NOT place in direct sunlight for prolonged periods of time
- DO NOT keep flame lit for more than 5 seconds at a time
- Lighters are NOT toys-Keep AWAY from Children
- Use ONLY in a well-ventilated area
- Ensure the flame is extinguished after use
- Butane fuel is cold and flammable-avoid contact with skin or clothing

TROUBLESHOOTING

>My lighter will spark but will NOT ignite :

- Your lighter's fuel tank may be empty-Refer to BUTANE REFILL INSTRUCTIONS
- Your butane pressure may be set too low
- Your piezo spark mechanism may be too far away from the butane jet nozzles-adjust it by carefully bending it closer toward the jet nozzles.

>My flame does NOT light consistently and/or fluctuates:

- Your butane is too low (refer to BUTANE REFILL INSTRUCTIONS)

>My lighter will NOT spark at all:

- Your lighter may be defective-Contact us for warranty replacement information

BUTANE REFILL INSTRUCTIONS

Prior to using or refilling the lighter, please read the WARNING/SAFETY section of the insert. Your Prestige Import Group torch lighter MUST be depressurized prior to first use. To depressurize:

- Hold your lighter with the refill valve facing up
- Depress the refill valve with a small screwdriver and hold for 10 seconds
- FAILURE TO DEPRESSURIZE BEFORE REFILLING MAY DAMAGE YOUR PRESTIGE IMPORT GROUP Lighter.
- Hold lighter with the refill valve facing up
- Place butane fuel can nozzle into the refill valve and depress the can several times with a firm yet gentle pressure until your lighter is roughly 80% full. Keep your lighter and butane can vertical and be sure your butane can nozzle is seated correctly on the filling valve before depressing the nozzle. Your lighter's fuel tank capacity may vary.
- Wait 10 minutes before using your lighter. This allows the fuel to settle/seal to stabilize and allow any vapors to dissipate. (If your lighter is ignited during this time it may ruin your lighter or cause a fire/explosion).
- Set the butane pressure to the lowest setting. Turn dial a ¼ of a turn counterclockwise(+) and push the igniter button. Continue adjusting the butane pressure dial until your desired flame size is achieved. Repeat steps as necessary.