

USER MANUAL: CL-SLWW48 | 48-FT LED OUTDOOR STRING LIGHT

CARE FOR YOUR PRODUCT:

Your product will last for many years with minimum care. Therefore, it is essential to clean the product periodically. **Turn the product off**, then use a soft, non-abrasive cloth. It is essential NOT to use any solvents or harsh cleaning agents.

TROUBLE SHOOTING:

The whole light does not come on, or some bulbs do not light up:

1. Make sure the wall switch and circuit breaker are on.
2. Check the power plug is securely connected to the outlet.
3. If a bulb doesn't light up, carefully tighten it by hand in the socket by turning clockwise. If it still doesn't light up, remove the bulb and replace it with one of the spare bulbs provided. DO NOT OVERTIGHTEN A BULB AS IT MAY DAMAGE THE SOCKET*

WARRANTY:



This product has a **two-year limited warranty** from the date of purchase. This guarantees against failure due to factory defects, whether caused by materials or workmanship. The warranty is non-transferable and only pertains to the original purchaser. Proof of purchase is required for any repair or replacement, so please keep your proof of purchase receipt. This warranty does not cover normal wear and tear or damage due to misuse. Misuse of this product includes but is not limited to:


- Using outdoors in extreme weather conditions.
- Opening the product's housing.
- Any attempts to update, remodel or fix the unit yourself.

If you have questions or are missing parts, please contact customer service at 1-888-745-4837 M-F 9-5 MST



**LINKABLE
UP TO 720-FT (15 SETS)**

USER MANUAL: CL-SLWW48 | 48-FT LED OUTDOOR STRING LIGHT

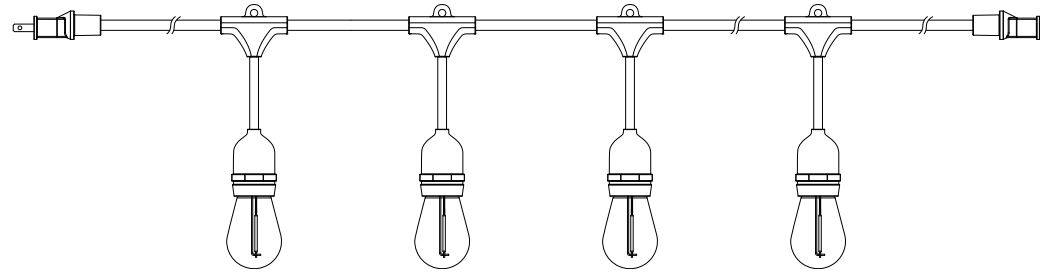

INSTALLATION PREPARATION

1. Determine Your Desired Hanging Location

- Identify the location where you want to hang the string lights. Avoid hanging them near trees or other objects that could potentially come into contact with them during wind or storms.
- Check the weight rating of the structural support. Ensure that the support can handle the weight of the lights you plan to hang.

2. Choose Your Hanging Method


- Choose a hanging method that is suitable for your structure and will provide secure support for the string lights. This could be either attaching the string lights to a guide wire or to screw hooks.
- If you are attaching the lights to a guide wire, use an appropriate hardware such as an eye bolt or a wire rope clip to fasten one end of the guide wire to the chosen structural support. Then, extend the guide wire to the next structural support and repeat the process. Ensure that the guide wire is level and between the supports. Attach the string lights to the guide wire or you can use clips or hooks.
- If you are attaching the lights to screw hooks, ensure that you attach a screw hook to a structural support to provide adequate support. Tighten the screw hooks firmly into the structural support, ensuring that they are securely in place. Attach the string lights to the screw hooks using appropriate clips or hooks.

3. Prepare the Lights

- Unpack the lights. Check that each bulb is securely screwed into the socket.

4. Test the Lights

- Once the lights are in place, turn them on to check that they are working correctly.
- Following these detailed and safe instructions will ensure that your outdoor string lights are securely and safely installed, providing a beautiful and welcoming atmosphere to your outdoor space.

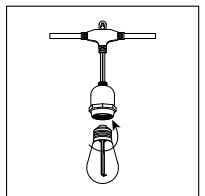

If you have questions or are missing parts, please contact customer service at 1-888-745-4837 M-F 9-5 MST

USER MANUAL: CL-SLWW48 | 48-FT LED OUTDOOR STRING LIGHT

IMPORTANT SAFETY INSTRUCTIONS

CAUTION: READ & SAVE THESE INSTRUCTIONS

- To avoid risk of shock, always make sure the product is unplugged from the electrical outlet before assembling, disassembling, installing, relocating, servicing or cleaning it.
- Do not overload. This string light is rated for 20 Watts. You can connect more string lights end-to-end for a maximum of 15 total string lights (720-ft).
- Do not use with extension cord near water or where water may accumulate. Keep at least 48 m/16 ft from pools and spas. Keep plugs and receptacles dry. Do not submerge.
- Replace bulbs only with 120V 1W S14 bulbs provided.

- Read and follow all instructions that are on the product or provided with the product.
- Connect this product to a Ground Fault Circuit interrupting (GFCI) outlet. If one is not available, contact a qualified electrician for proper installation.
- Only use outdoor extension cords such as type SEW, SEOW, SEOOW, SOW, SOOW, STW, STOW, STOOW, SJEW, SJEOW, SJEOOW, SJW, SJOW, SJOOW, SJTW, SJTOW, or SJTOOW.
- For your safety, please refrain from touching the HOT bare bulb. You must wait for the product to cool down before handling it.
- Before attempting to install this unit, ensure all power connections are off for your own safety.
- Install only using the mounting means provided.
- Do not use this product for other than its intended use. Any modification to the product itself will void the warranty.
- Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- Do not cover the product with cloth, paper or any material not part of the product when in use.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Do not mount or place near gas or electric heaters, fireplace, candles, or other similar sources of heat.
- Do not use this product for other than its intended use.
- Do not hang ornaments or other objects from the cord, wire, or lamps.
- This product should be installed out of the reach of children.
- String Lights should be installed so that bulbs are facing down. DO NOT mount the light string with sockets facing upward.
- If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement parts.


This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



If you have questions or are missing parts, please contact customer service at 1-888-745-4837 M-F 9-5 MST

USER MANUAL: CL-SLWW48 | 48-FT LED OUTDOOR STRING LIGHT


INSTALLATION INSTRUCTIONS

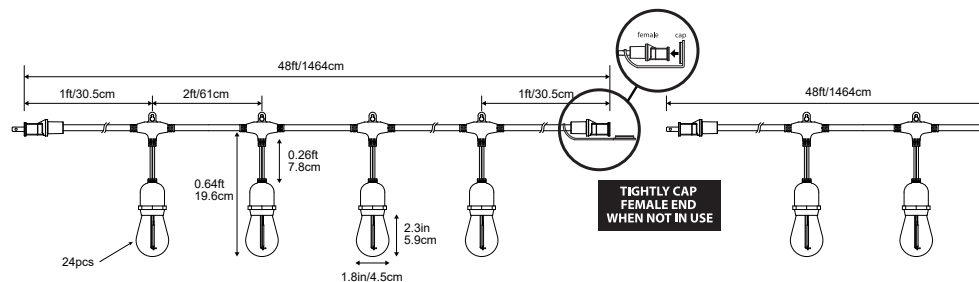


REPLACE BULBS ONLY WITH 120V 1W S14 BULBS PROVIDED

INSTALLATION METHODS

1. Using a guide wire with screw hooks or temporary ties (not included)

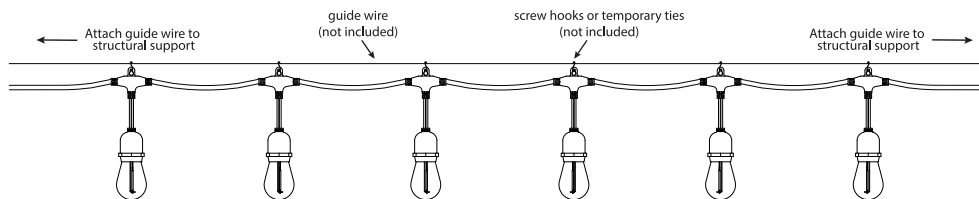

2. Attached to a structure

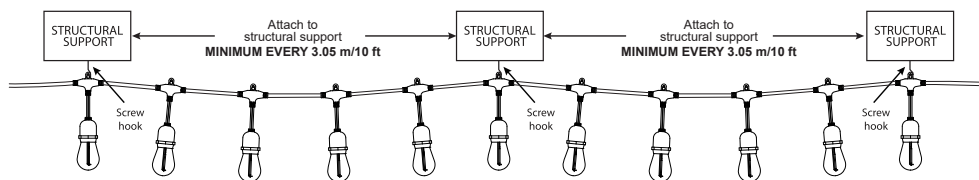

SCREW HOOKS OR TEMPORARY TIES NOT INCLUDED. DRAWINGS NOT TO SCALE.

IF A BULB DOES NOT LIGHT, TRY REMOVING IT OR REPLACING IT. MAKE SURE THE BULB IS SCREWED IN SECURELY. DO NOT OVERTIGHTEN!

If you have questions or are missing parts, please contact customer service at 1-888-745-4837 M-F 9-5 MST