 


Wardrobe

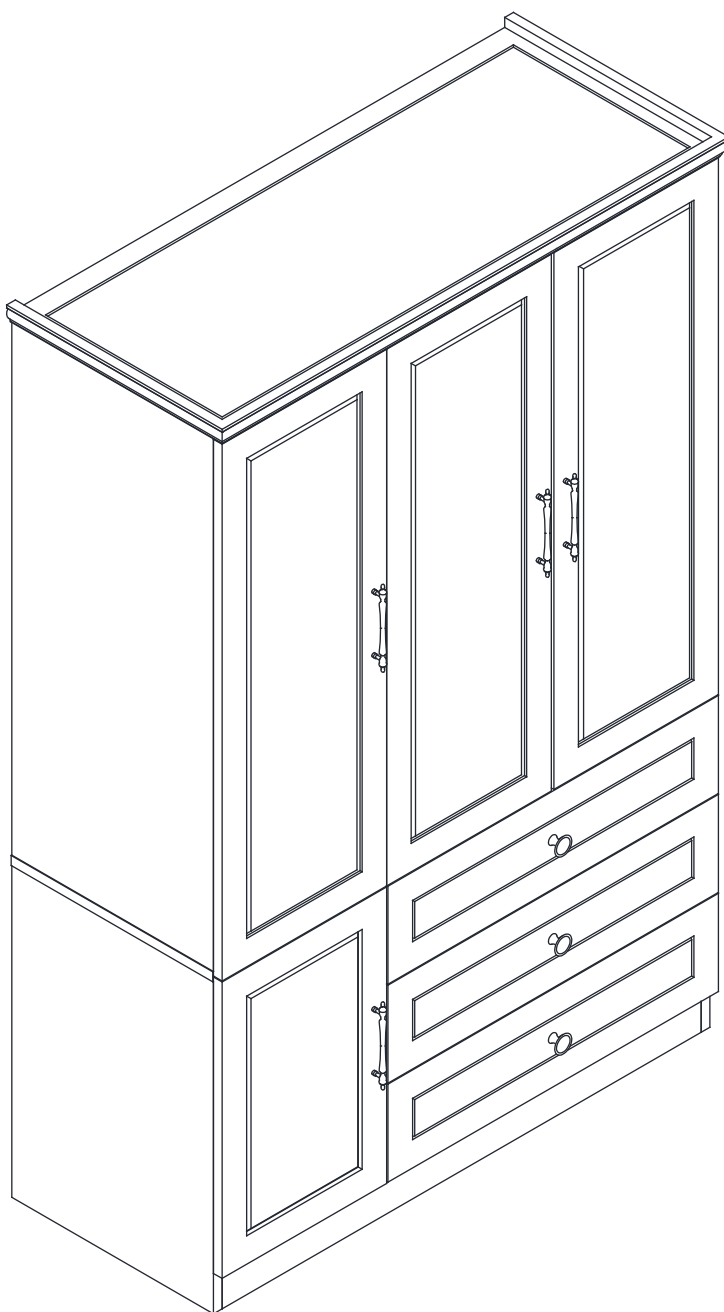

SKU: YG-SM-9-WH

MFSKU: GZWH-YG-SM-9

PO250320005

20250520

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please consult our FAQ section at Service@househub.cn as there may be a simple solution to the issue.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.

- In all circumstances, please save all packaging material and paperwork for the order.

- Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the retailer, you jeopardize your chances of making a claim, and you may not receive a credit for the return.

EMAIL: Service@househub.cn



(Installation Video)

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

IMPORTANT INFORMATION!

•please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

AVOID SCRATCHES!

•In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

IMPROVE EFFICIENCY !

•Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

IMPORTANT !

 
•It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

•For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

•Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

ANTI-TOPPLE WARNING !


Overturnd furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

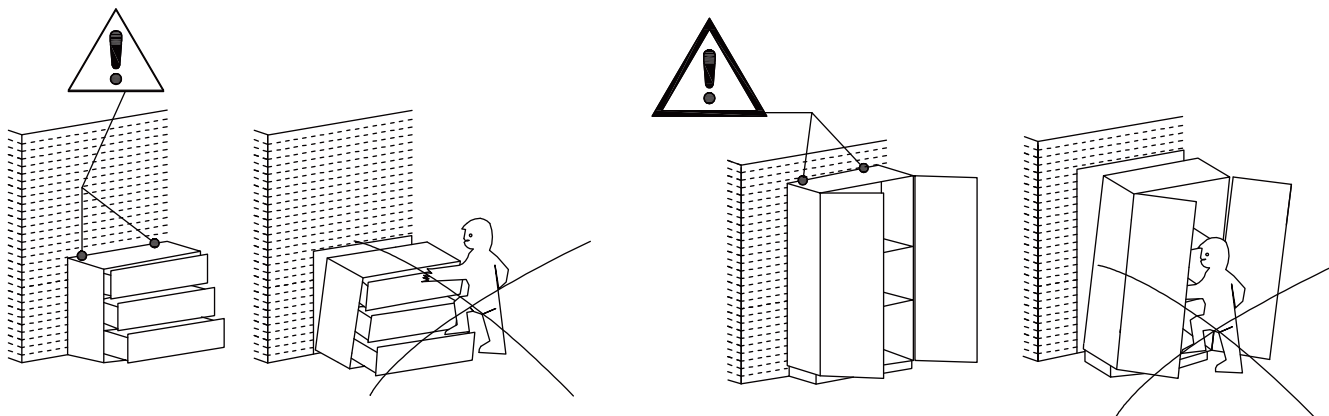

Slides Must be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.


Las diapositivas deben separarse antes del montaje.
Después de separarse, déjelo a un lado hasta que sea necesario.

 Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez-les de côté jusqu'au moment de l'assemblage.



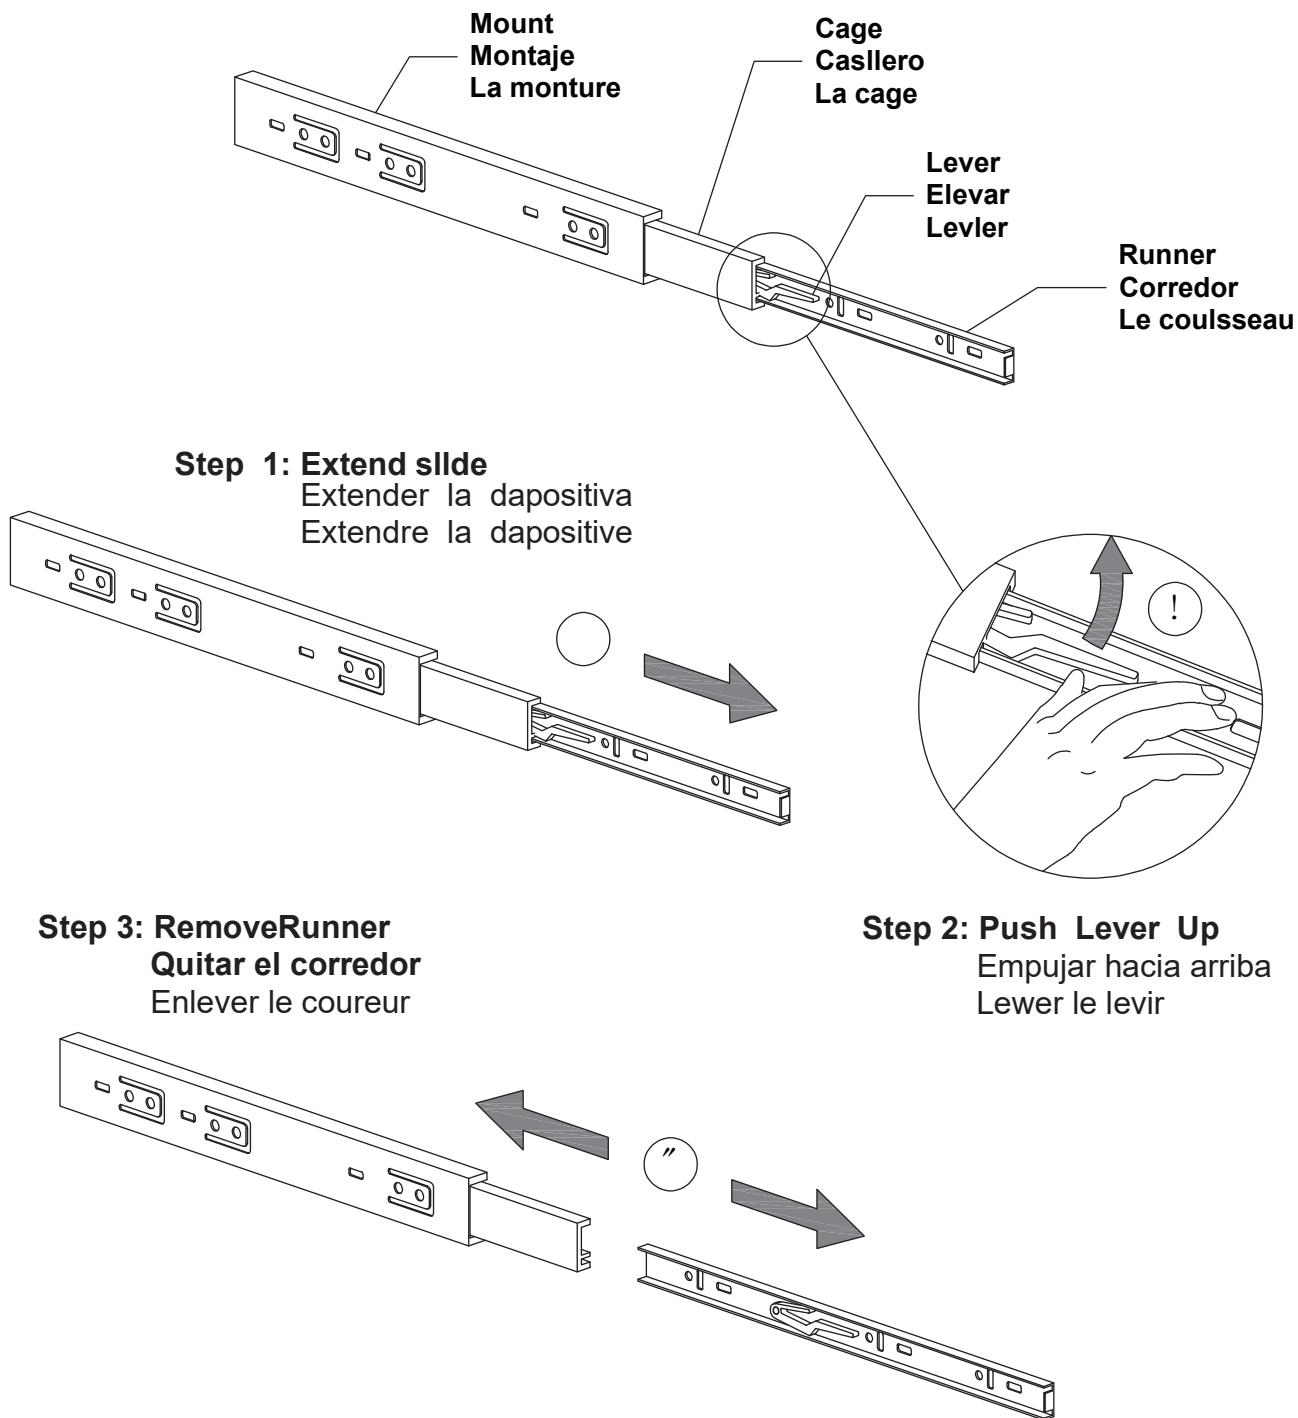


Installation Guide

 Exploded Views

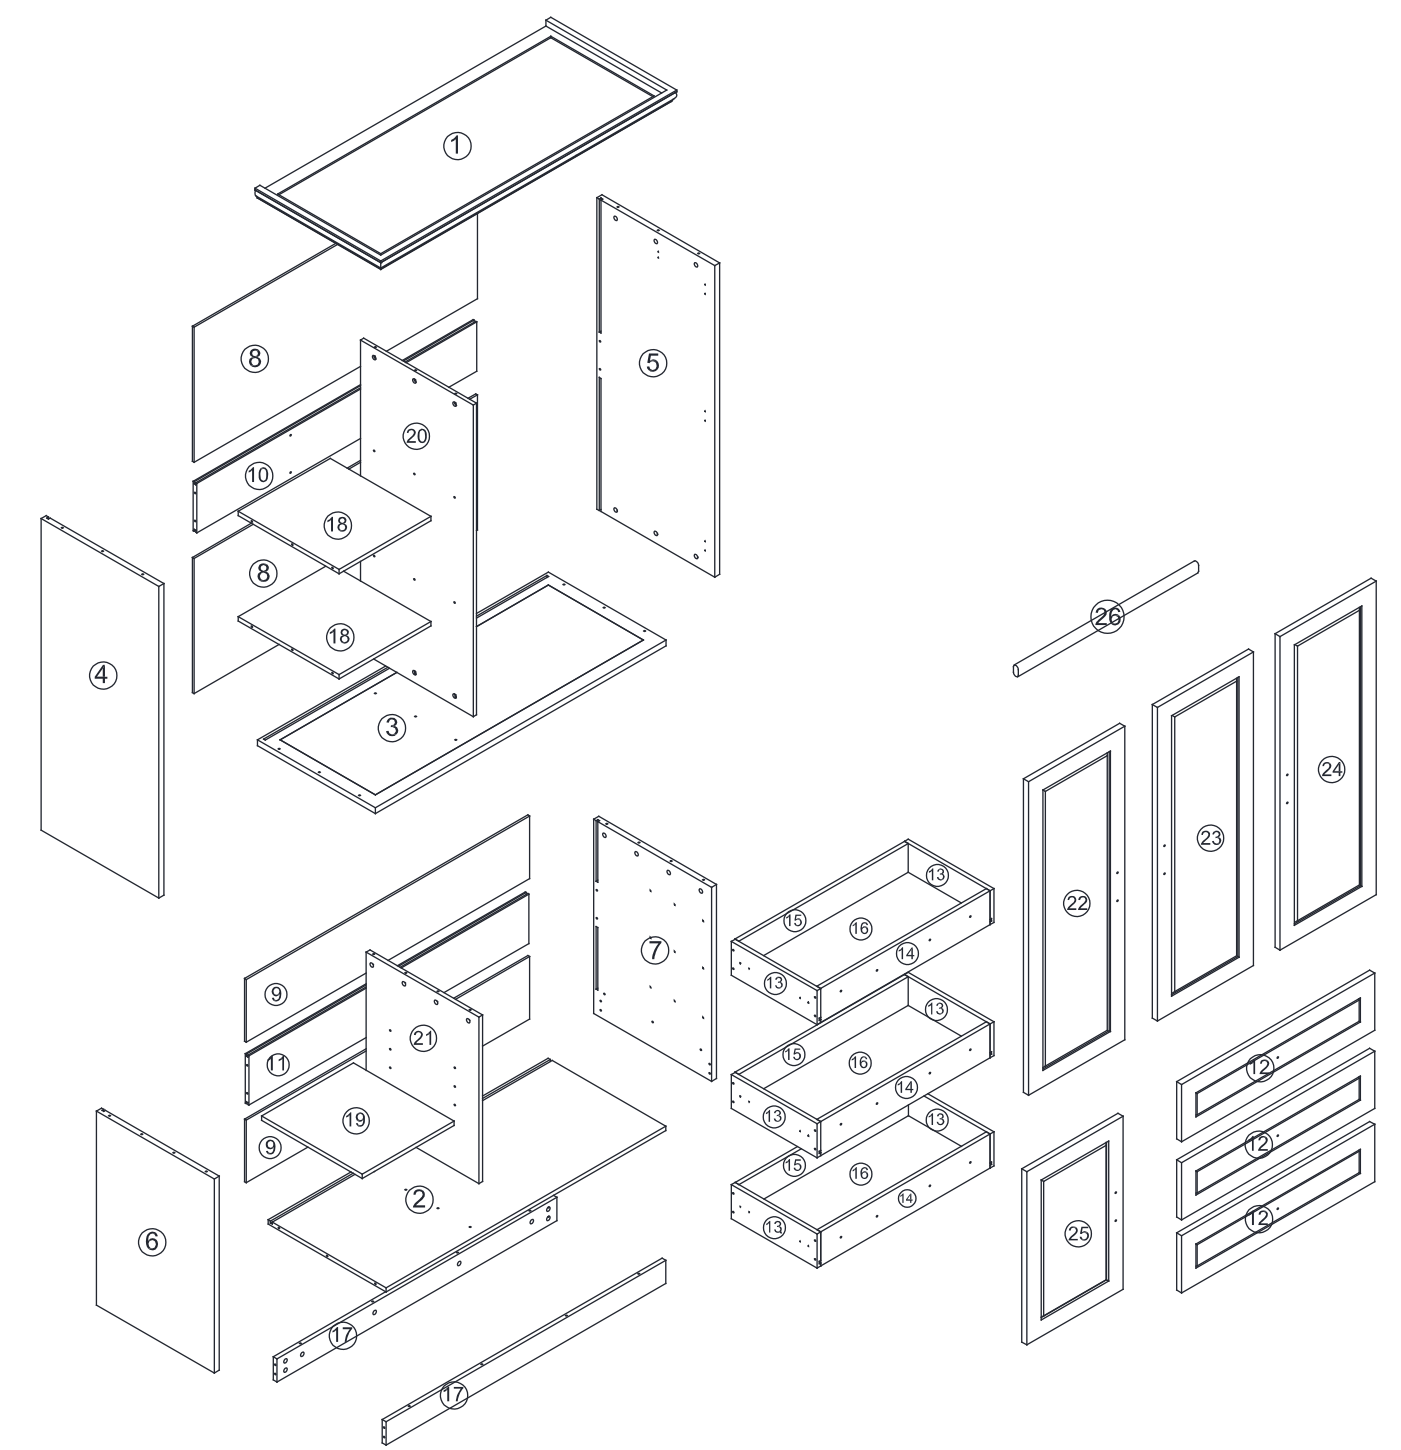

Please prepare the following tools

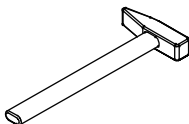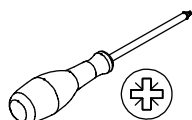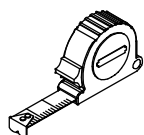   

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 76



Ø6 x 39mm

B x 76



Ø15 x 10mm

C x 12



Ø6 x 20mm

D x 1



M4

E x 26



Ø4 x 30mm

F x 48



 
Ø3.5 x 16mm

G x 4



9mm

H x 58



Ø3.5 x 14mm

I x 3



Ø3.5 x 18mm

J x 3



K x 4



M x 2



 
Ø55 x 20mm

N x 8



Ø3.5 x 22mm

O x 2




P x11



40mm

 V x 3

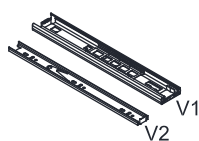




300mm

Troubleshoot


Product Category	Fault	Cause Analysis	Handling Method
Wood furniture	Door opening is not flexible	The furniture is not leveled	Use items to level the furniture
		The door hinges should be adjusted properly.	Adjust door hinges and apply lubricating oil.
	Inflexible opening of drawer	Overload or deformation	Reduce weight, adjust guide rails, lubricate
	Loose component connection	Loose hinges or screws	The poke part should be coated with an appropriate amount of 502 glue, then re-install or tighten the screws.
	Minor scratches	friction with hard o sharp objects	Use a brush to apply similar pigment ink along wood grain to the scratches, then wipe off the excess.
	Corrosive stains	Accidentally stained with chemical solvents such as nail polish, nail polish remover, ect.	Wipe them with a dry cotton cloth immediately

Possible Issues During Assembly:

   - The two boards can't be aligned at the same level.

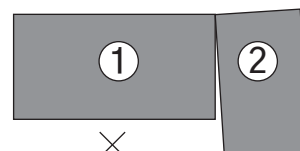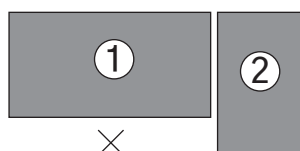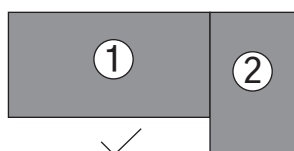


 - Holes on the boards and poles are not aligned, so screws can't be installed.

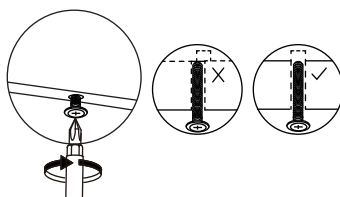

Recommended Solution:

 - Please slightly loosen all screws and adjust the boards. Because the diameter of the holes on the pipes is 23 mm larger than that of bolts, the position of the boards can be adjusted.

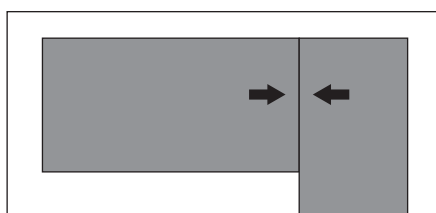





- If it still doesn't work after adjustment, please contact us for more solutions.

1

Ax8



    Ø6x39mm

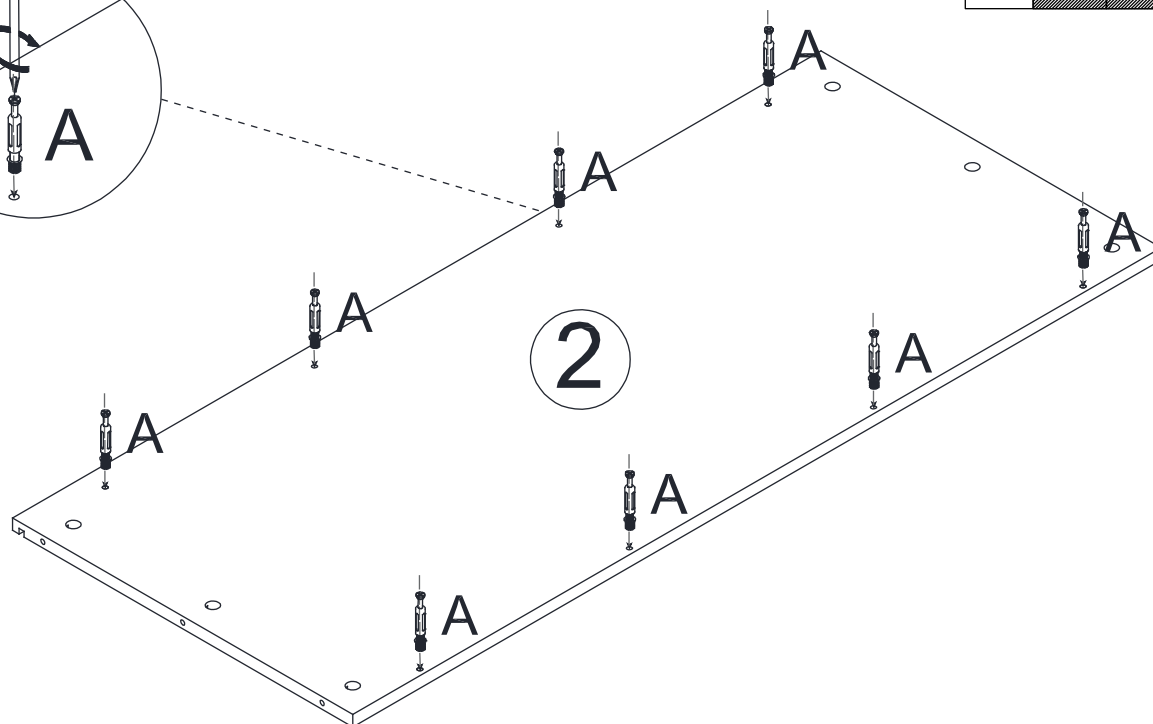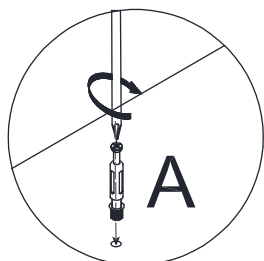





2

2

Bx8



    Ø15x10mm

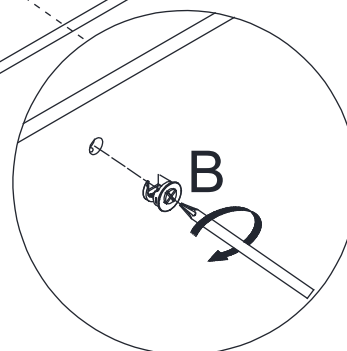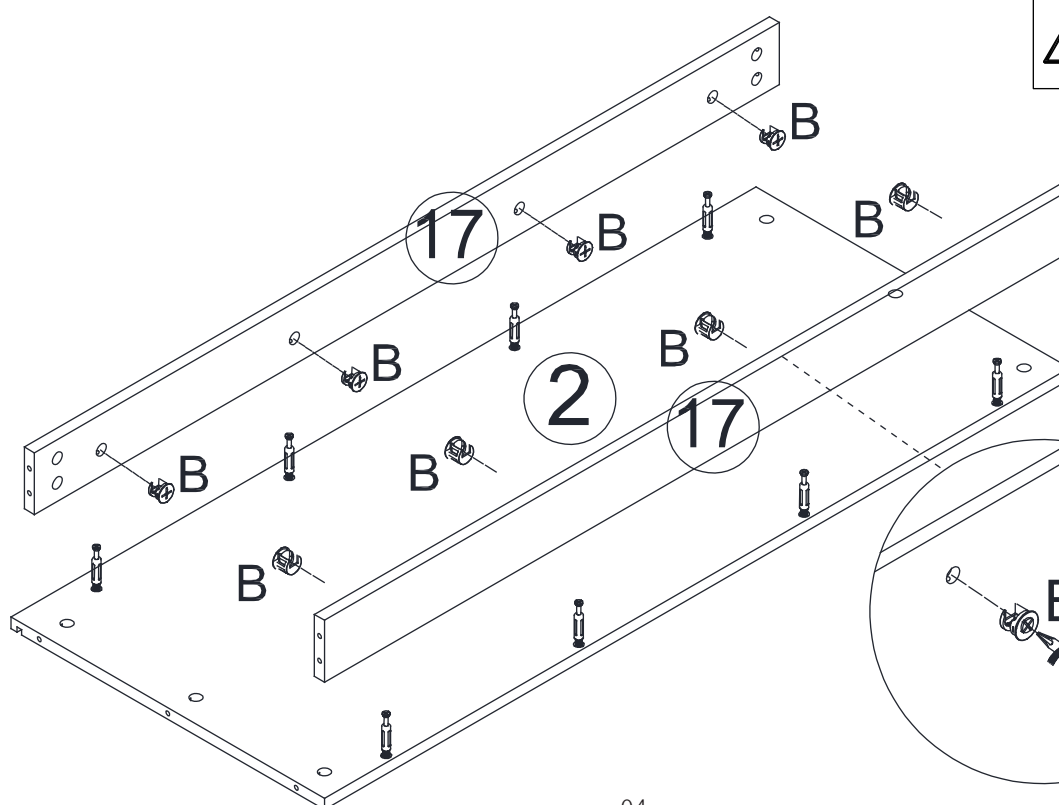




3

Ax4



   Ø6x39mm

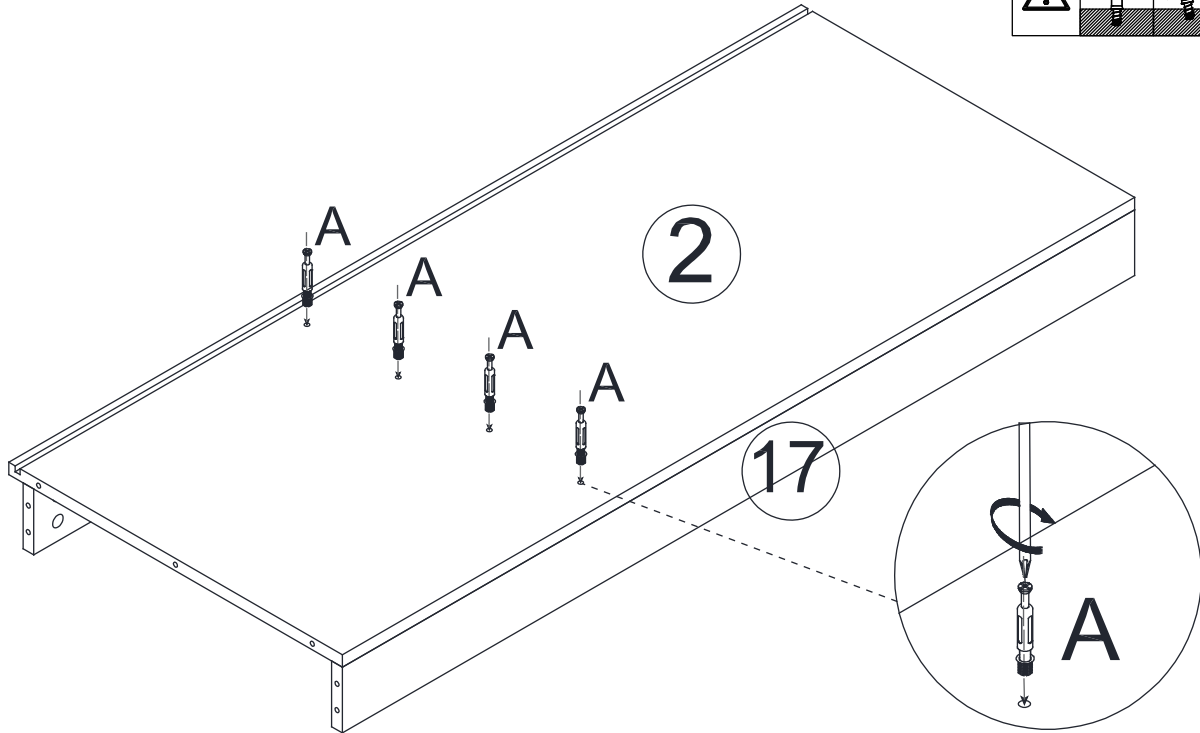

4

Ax9






Ø6x39mm

Gx2



   9mm

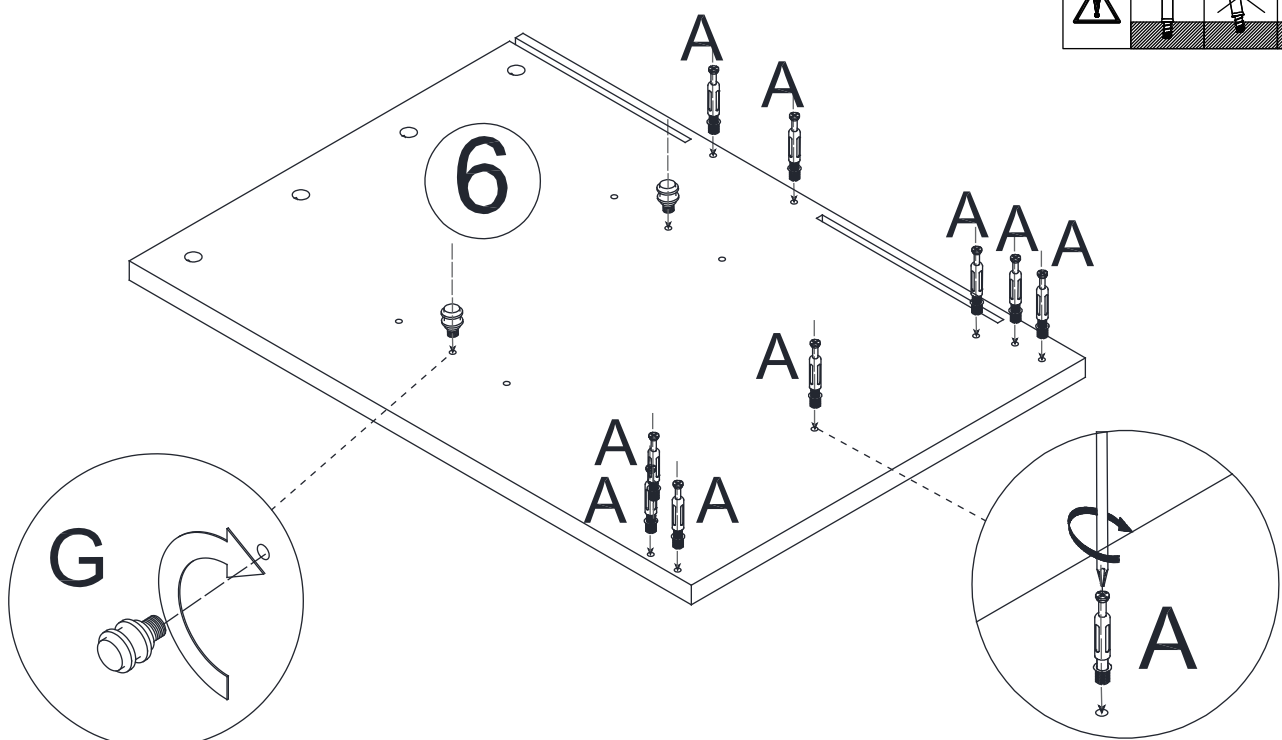

5



 
Ø6x39mm



Ø3.5x14mm



300mm

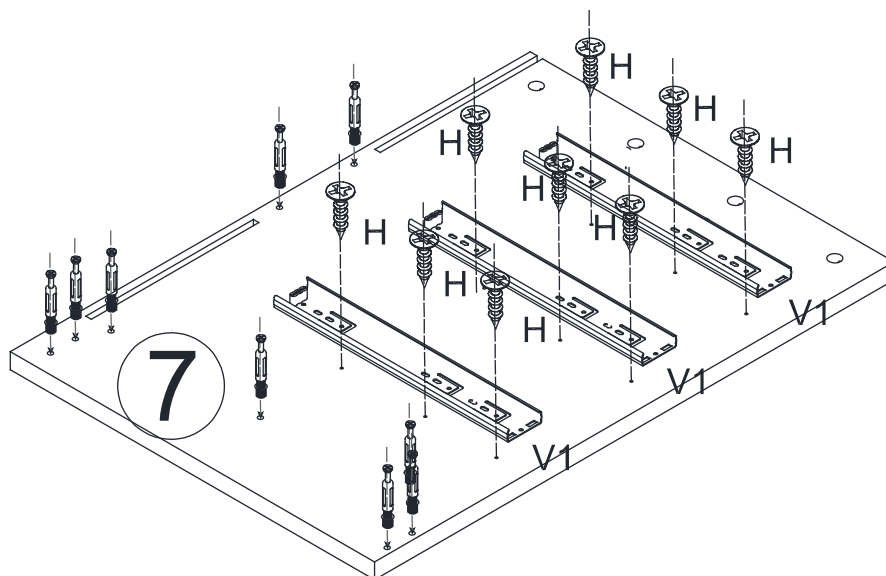


6



Bx7



 
Ø15x10mm



  Ensure all panel grooves are perfectly aligned before assembly.

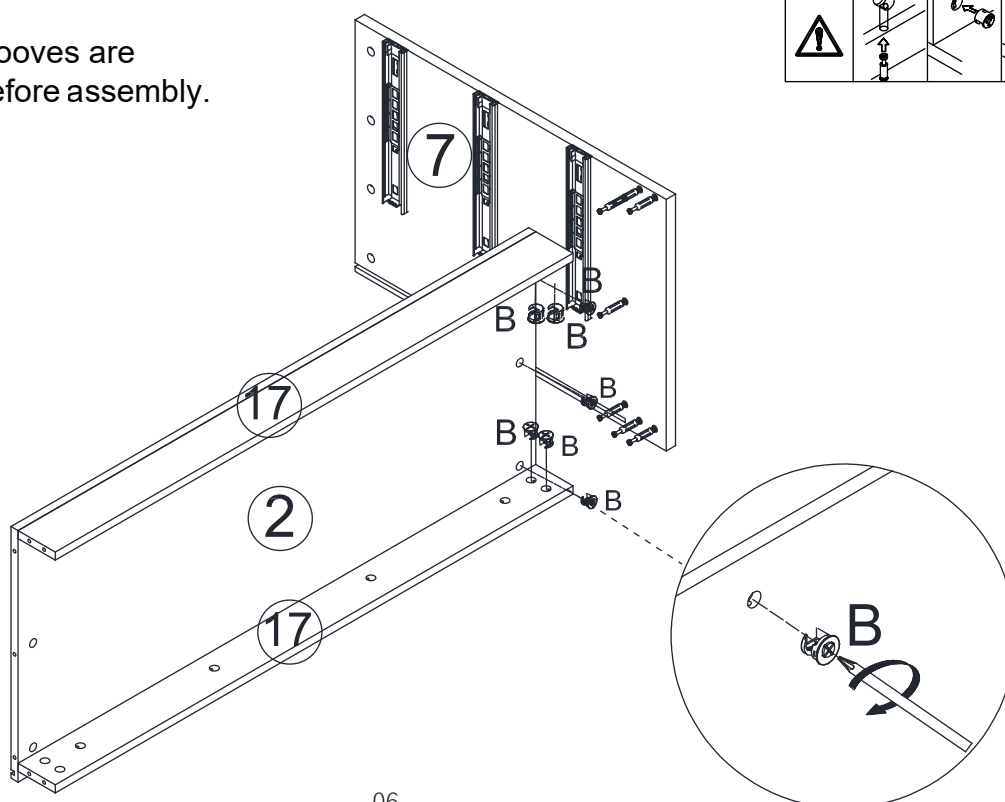




7

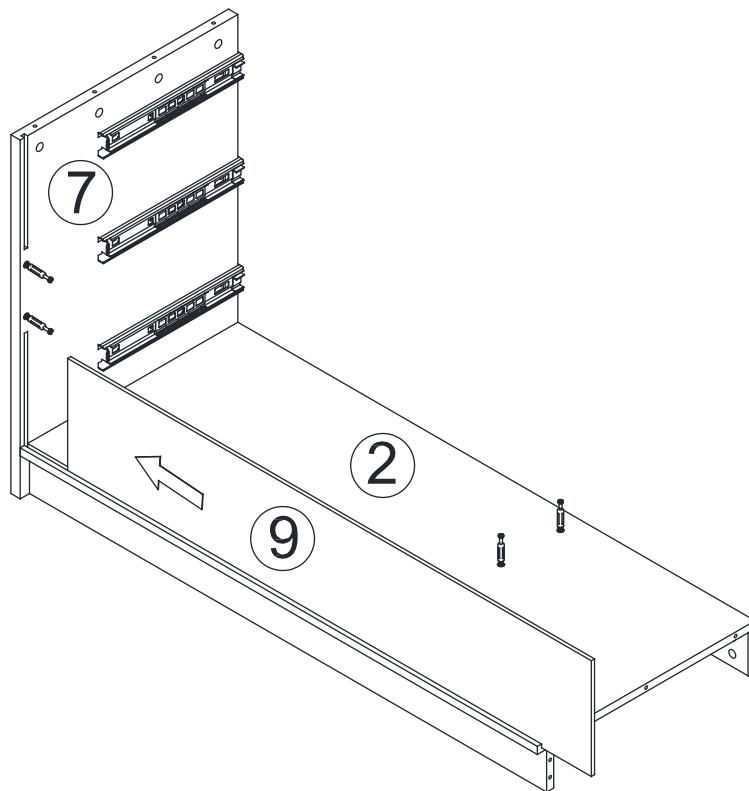 


8

Bx2

    Ø15x10mm

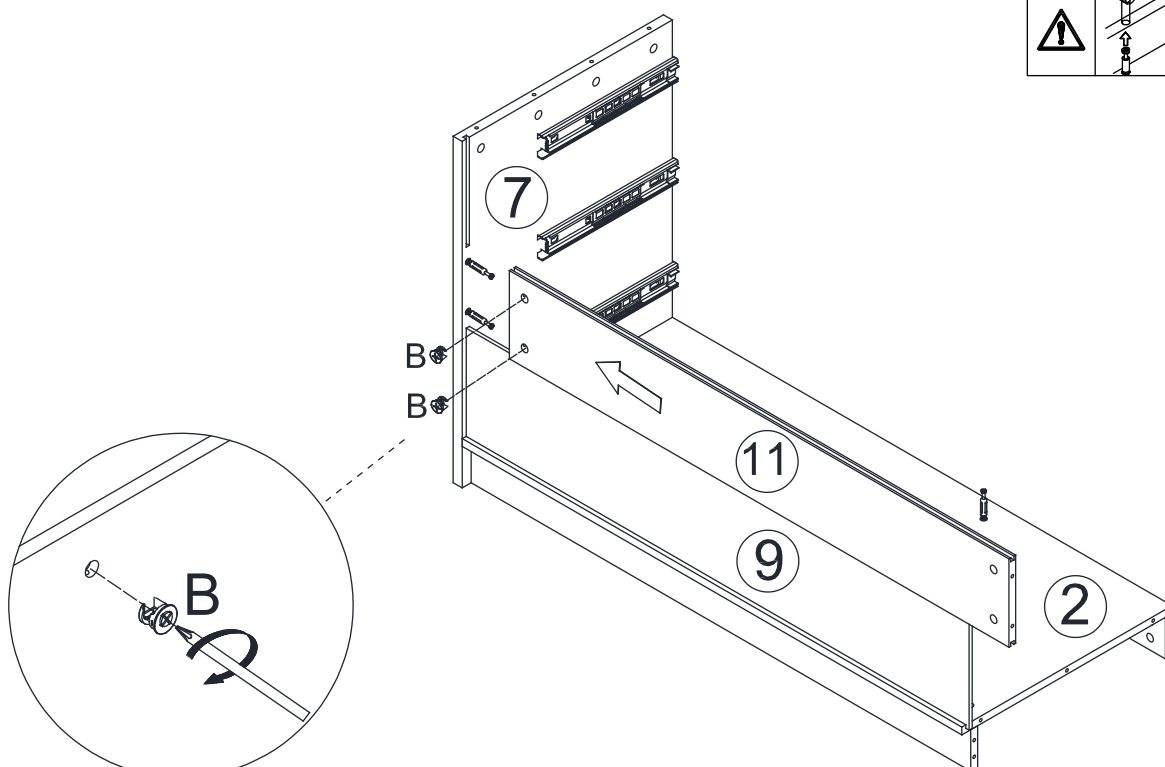




9

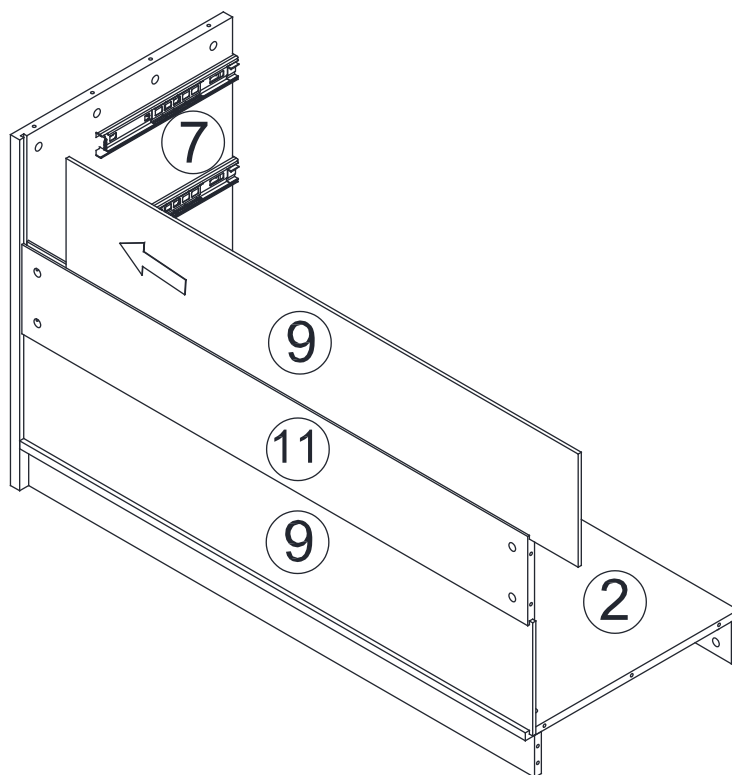 

10

Bx2

    Ø15x10mm

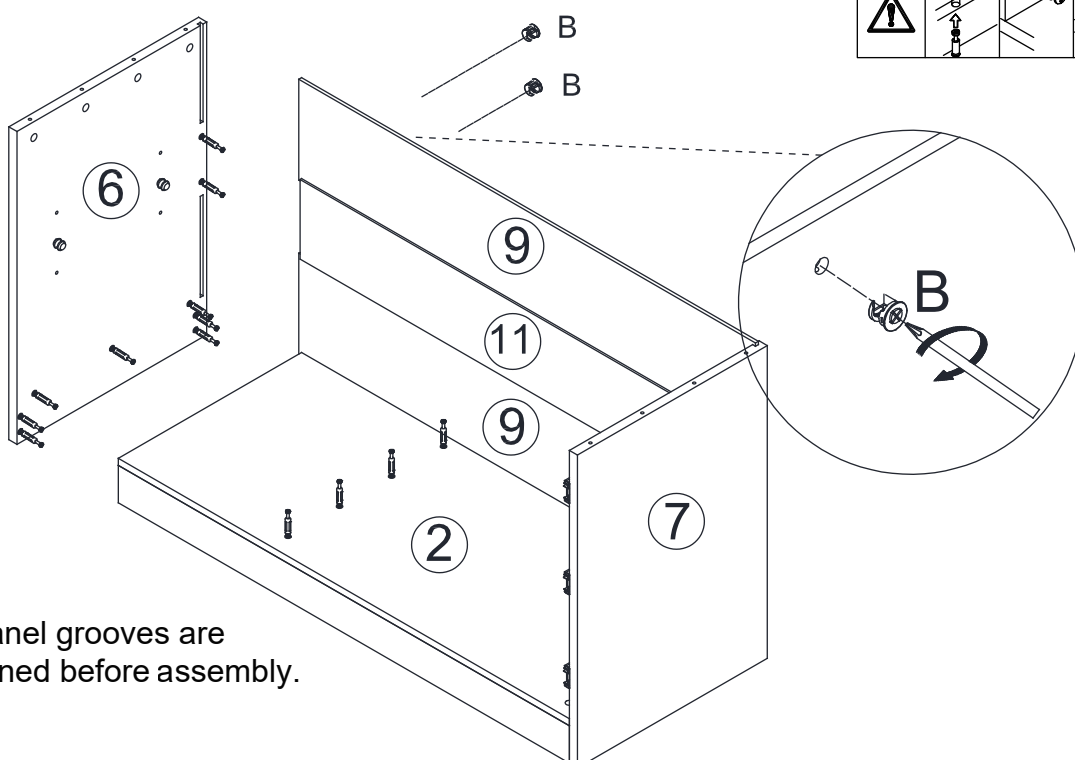



Ensure all panel grooves are perfectly aligned before assembly.

11

Bx7



  Ø15x10mm

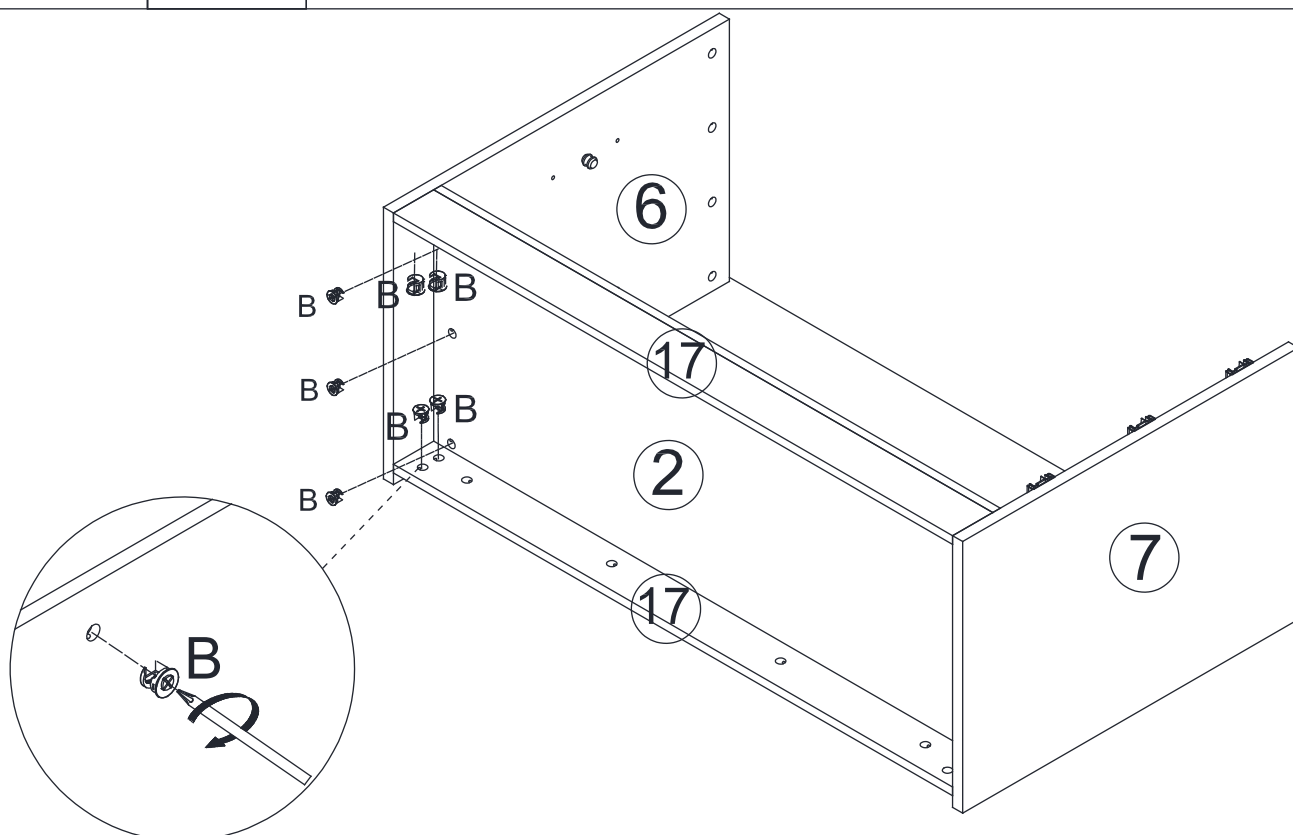

12

Hx9





Ø3.5x14mm

Vx3



  300mm

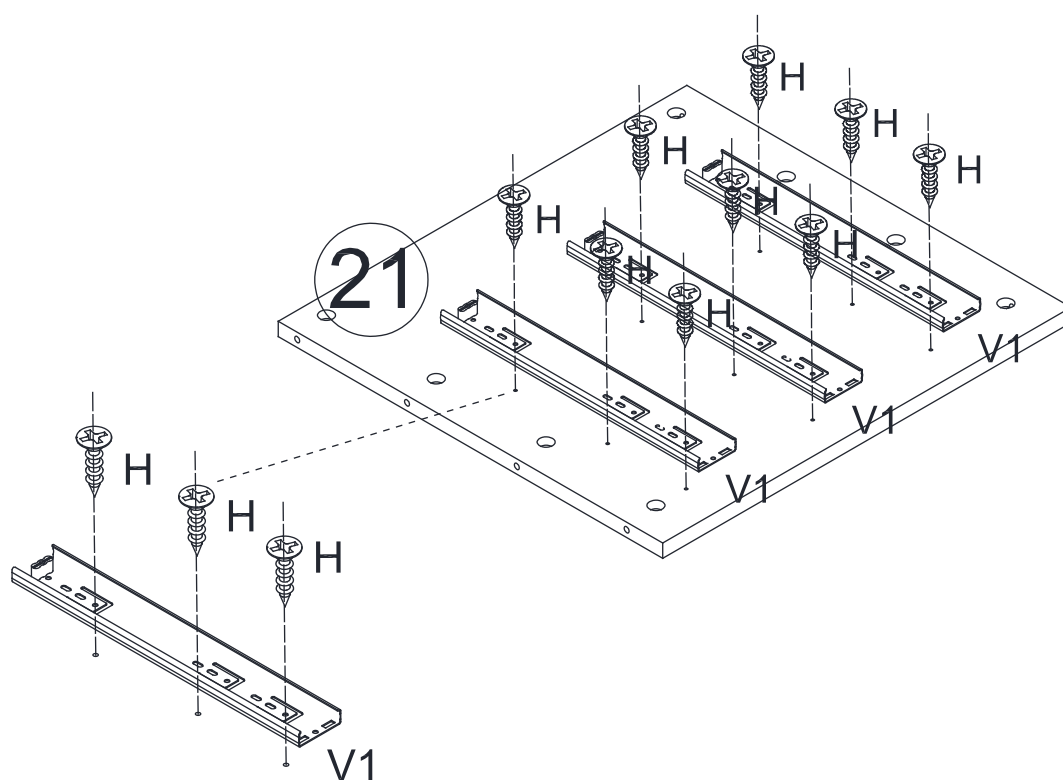



13

Gx2



  9mm



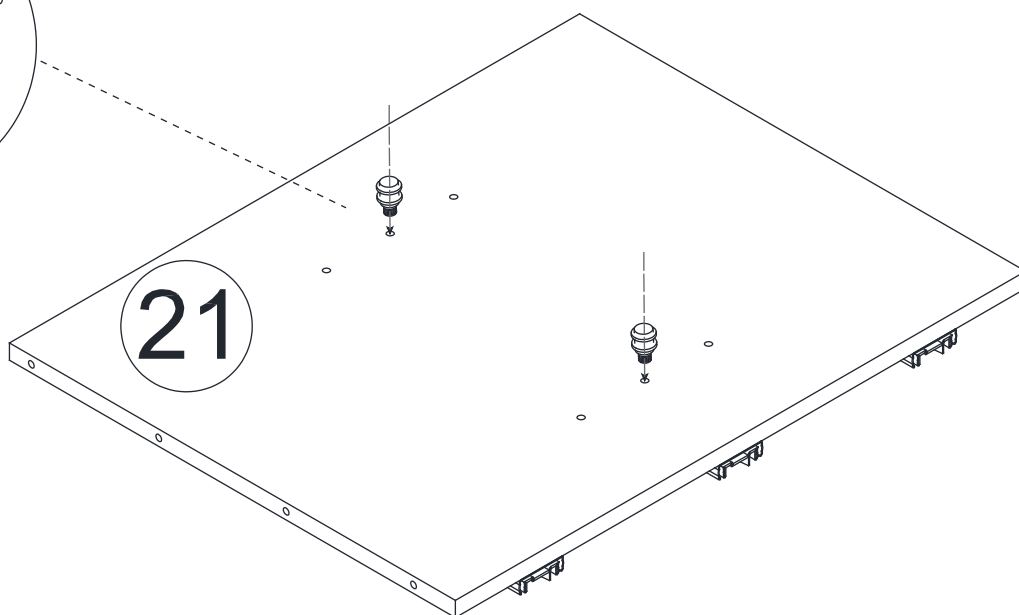
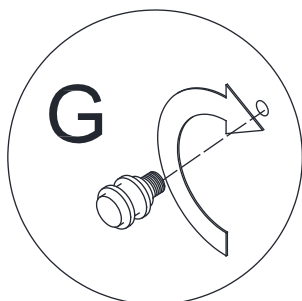


14

Bx4



    Ø15x10mm

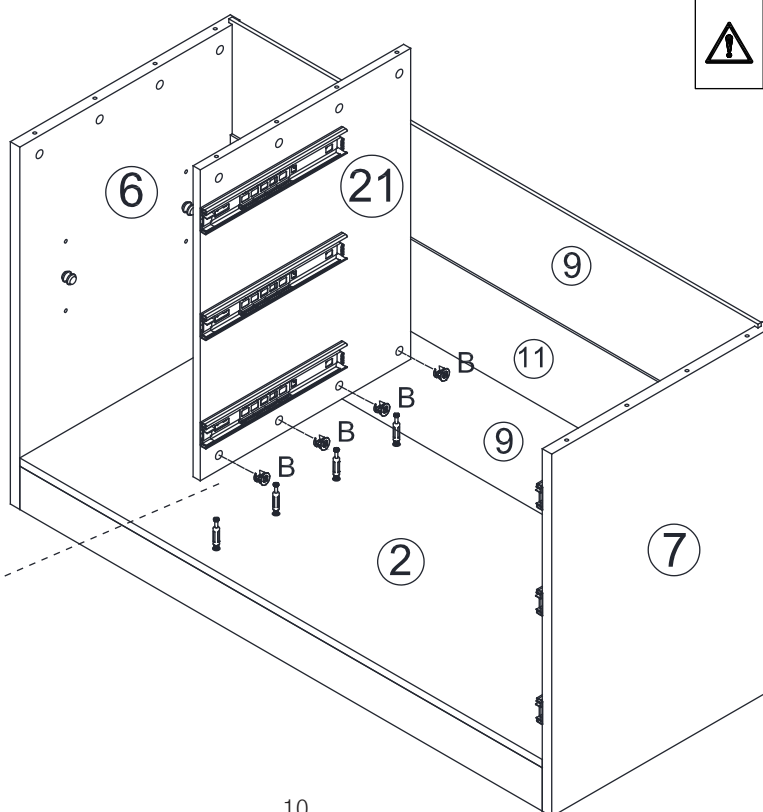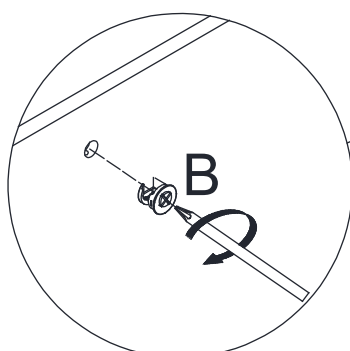




15

Ax12



   Ø6x39mm

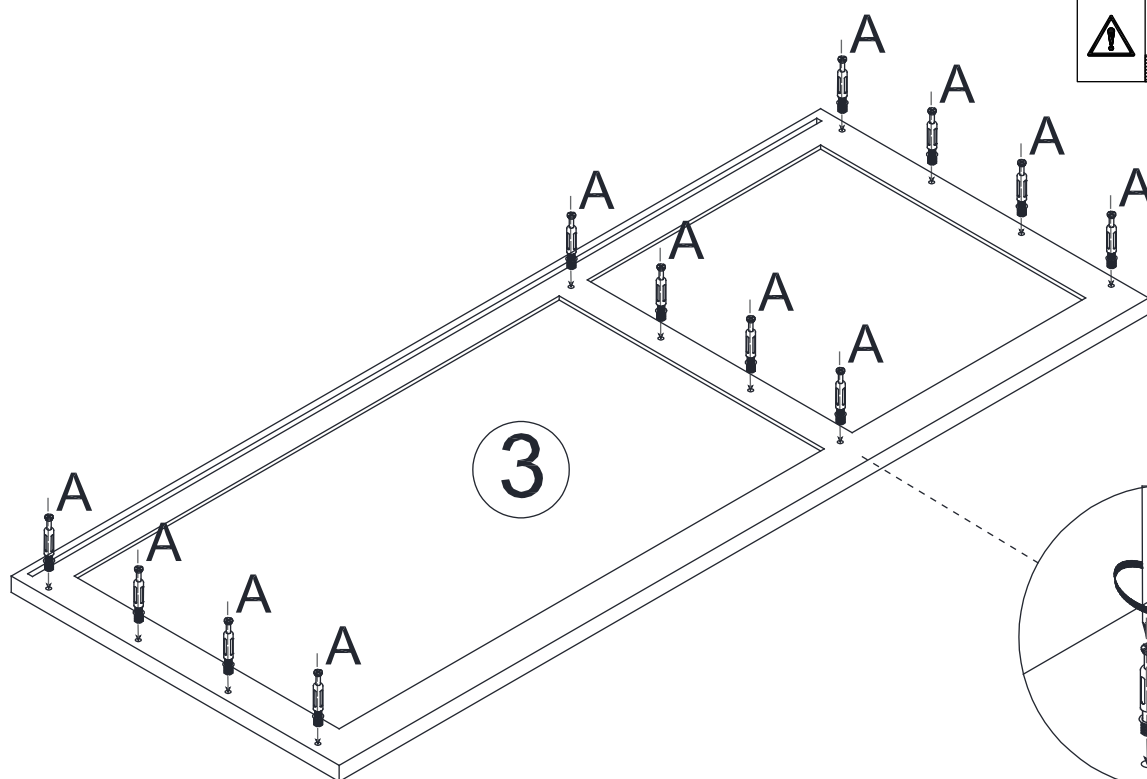



16


Bx12



  Ø15x10mm



 When installing Panel 3, gently tap it to ensure proper alignment and smooth installation.




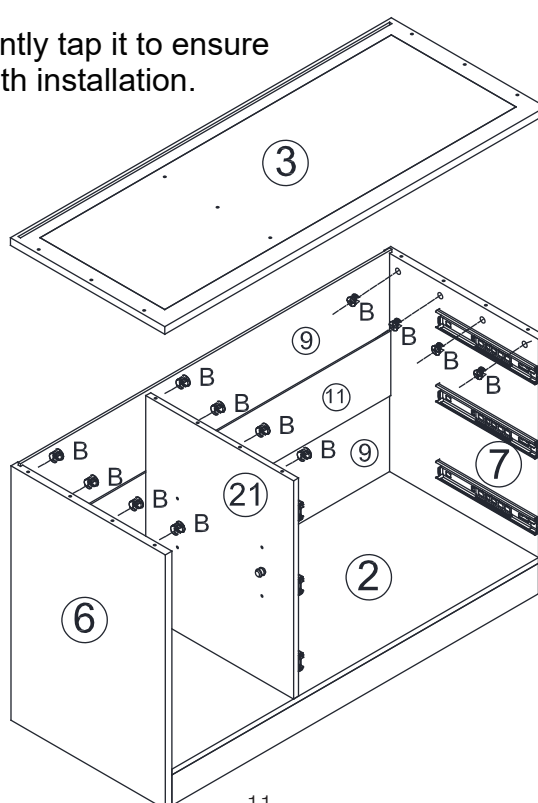


17

Ax9



    Ø6x39mm

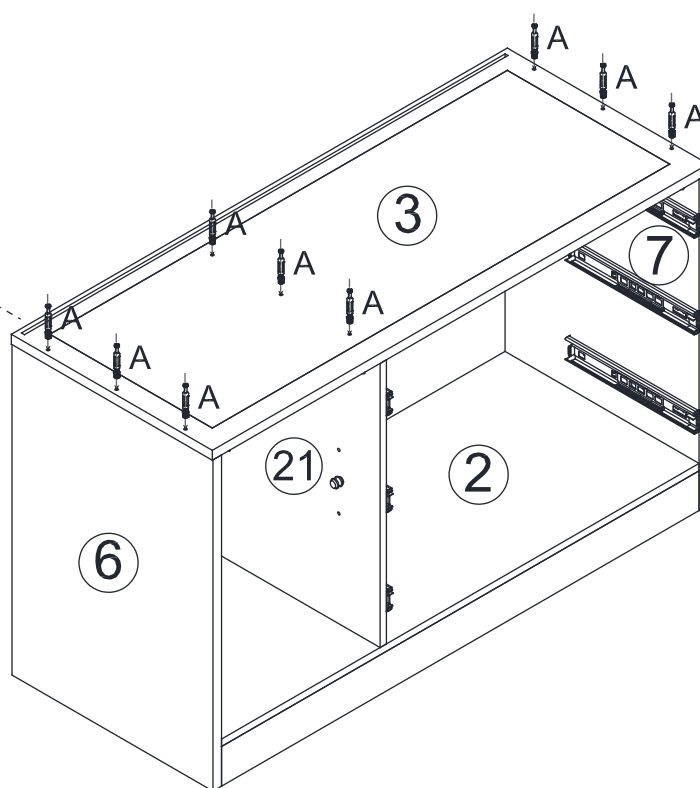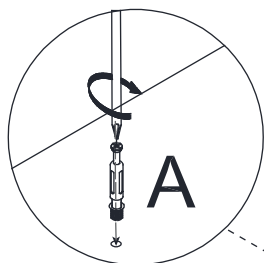

18

Ax16



Ø6x39mm

Fx2








Ø3.5x16mm

Mx1







     Ø55x20mm

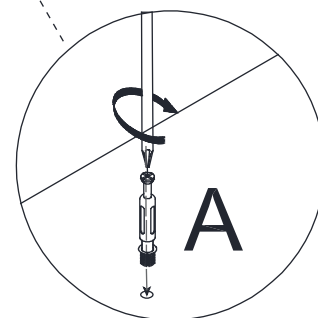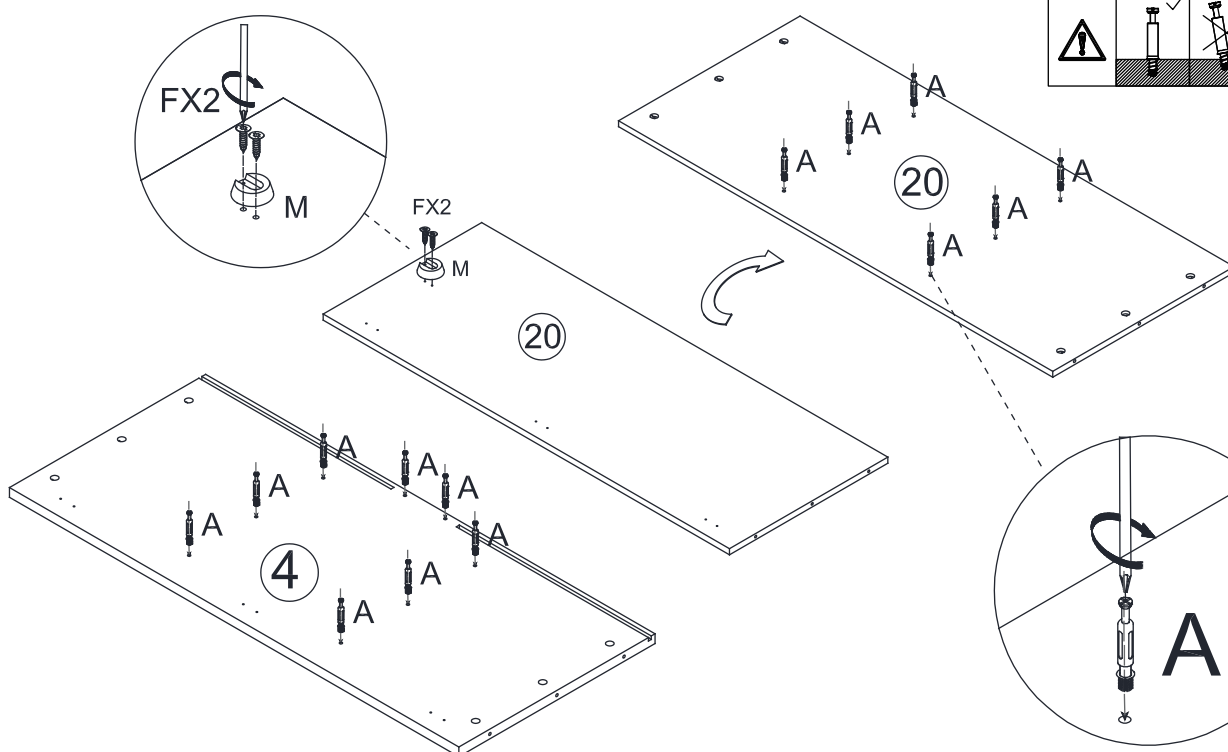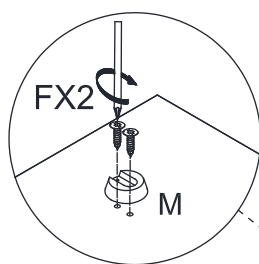





19

    Bx6
Ø15x10mm

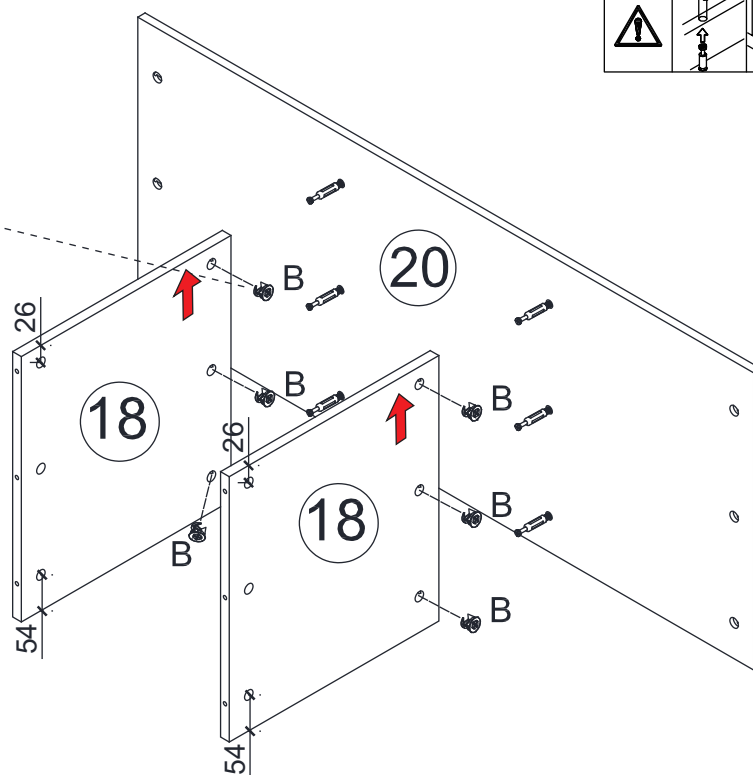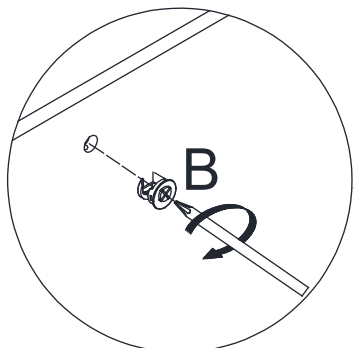

20

  
 
 
Bx6
Ø15x10mm

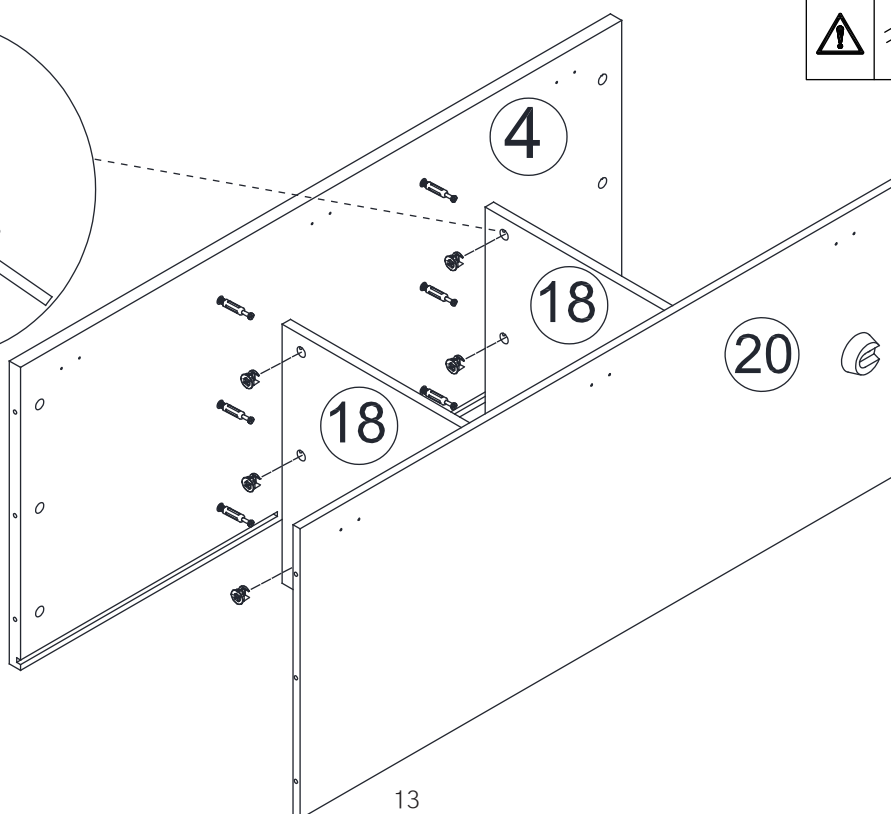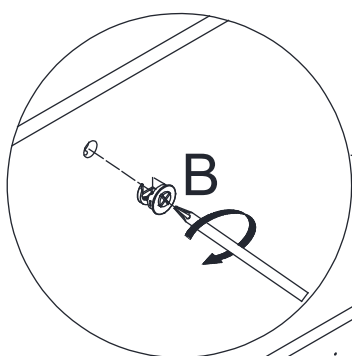


21

Bx6

    Ø15x10mm

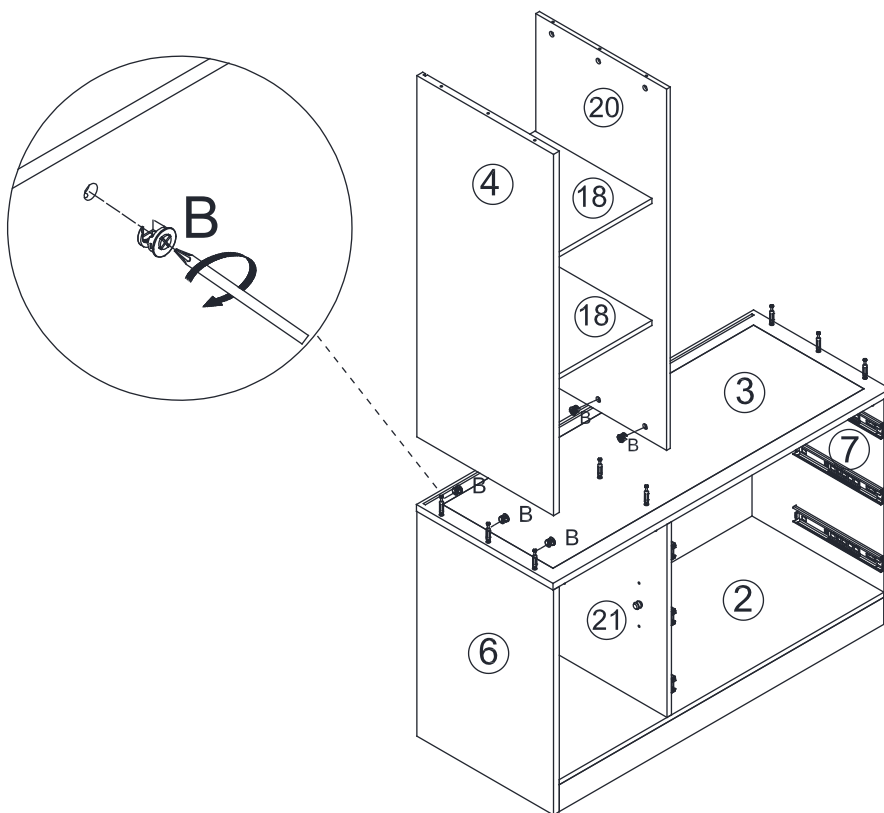

22

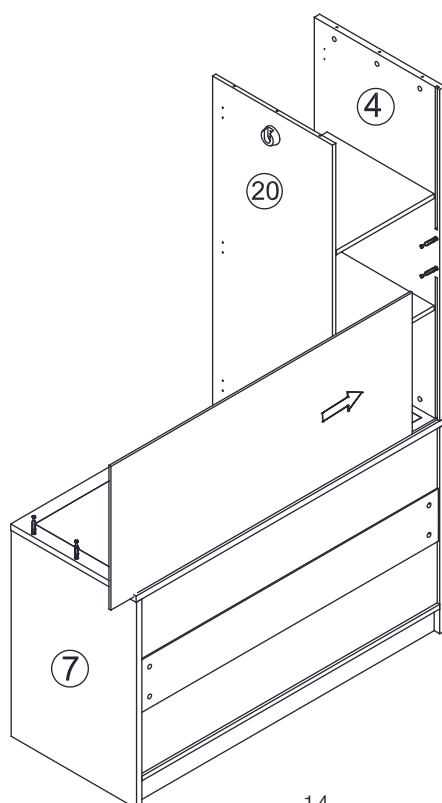 


Ensure all panel grooves are perfectly aligned before assembly.




23

Bx2

  Ø15x10mm




   Ensure all panel grooves are perfectly aligned before assembly.

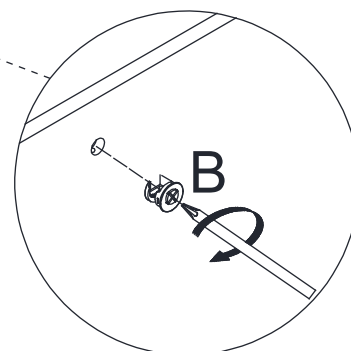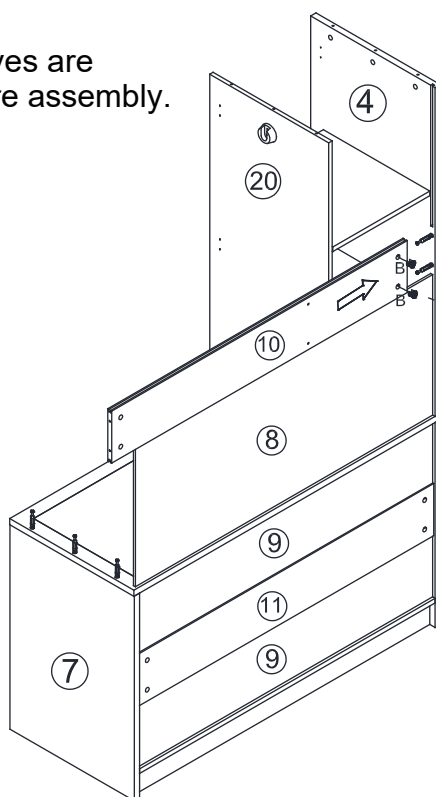

24

 Ensure all panel grooves are perfectly aligned before assembly.



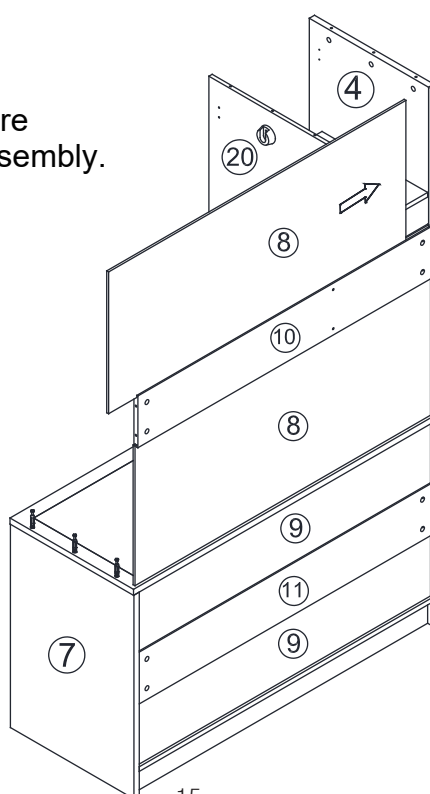


25

Ax2



   Ø6x39mm

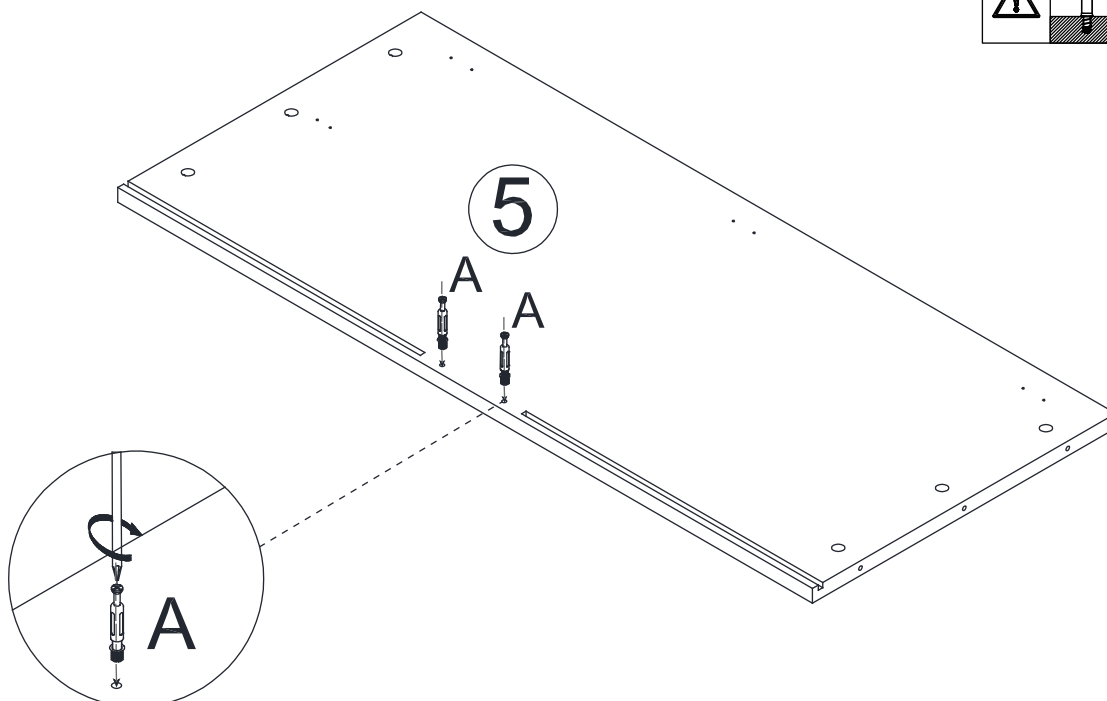

26

Fx2





Ø3.5x16mm

Mx1



 
 
Ø55x20mm

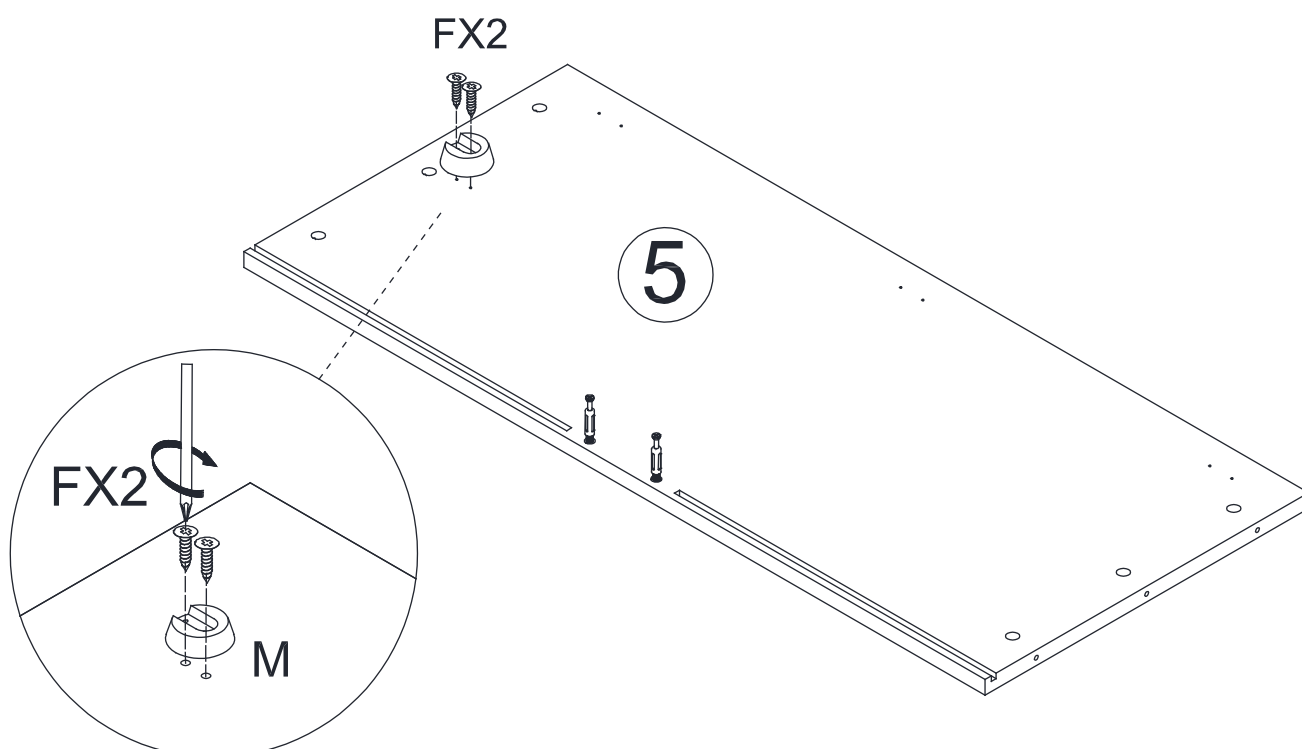



27

Bx5

   Ø15x10mm







Tilt about 10 degrees

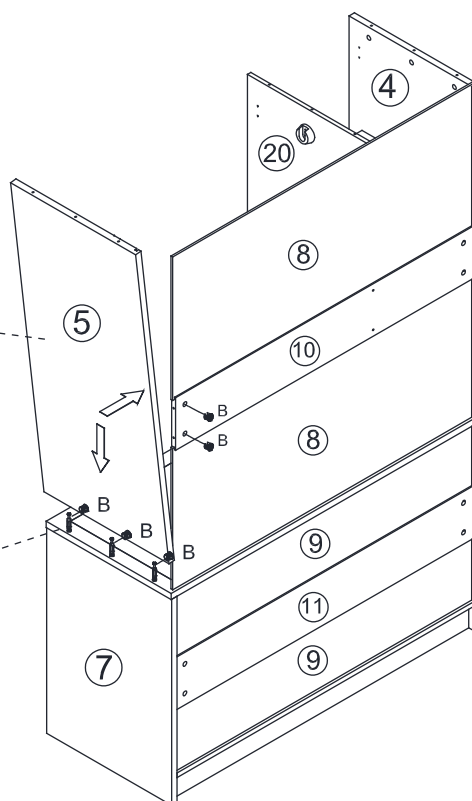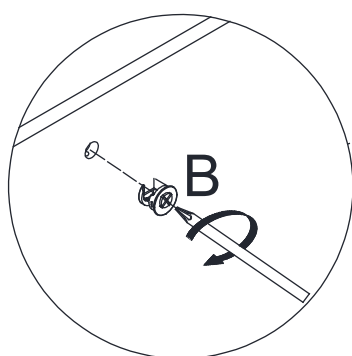  

28

Ax9

     Ø6x39mm

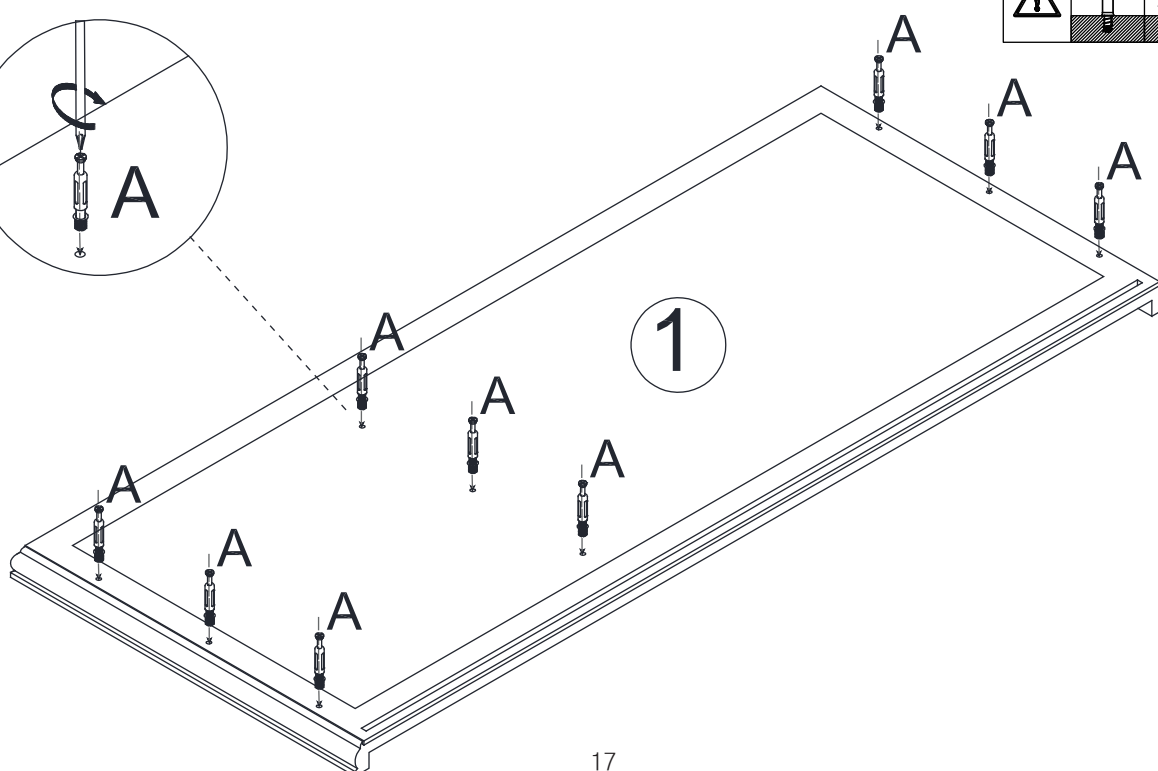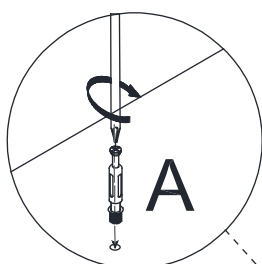


29




Bx9



 Ø15x10mm



   When installing Panel 1, gently tap it to ensure proper alignment and smooth installation.

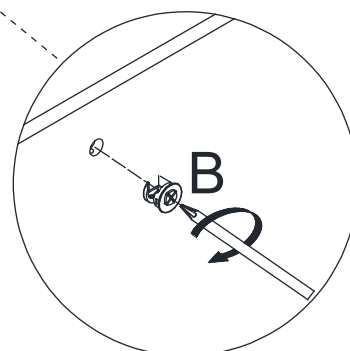
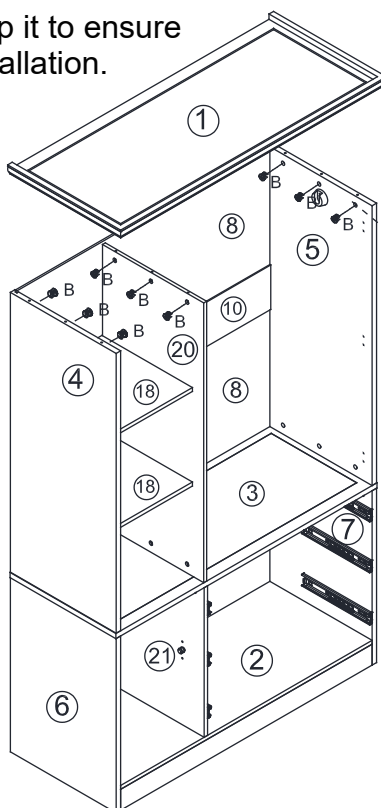



30


Ex2



   
Ø4x30mm

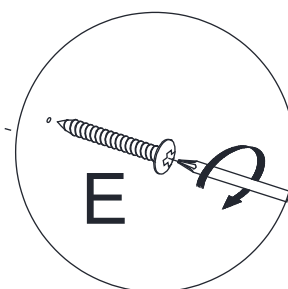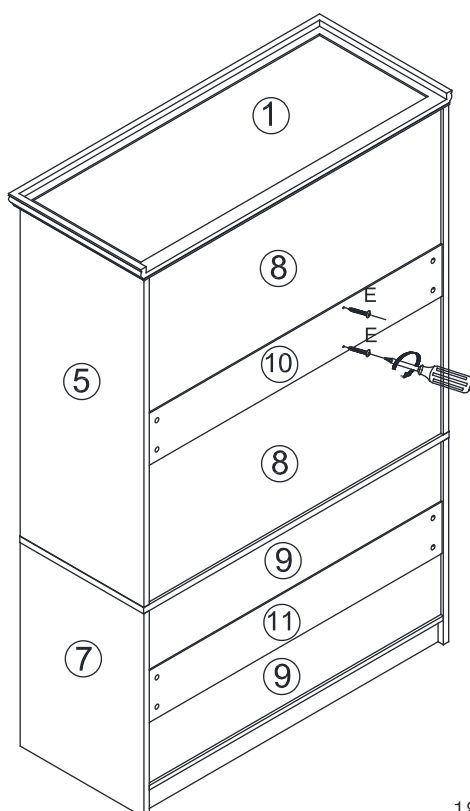


31

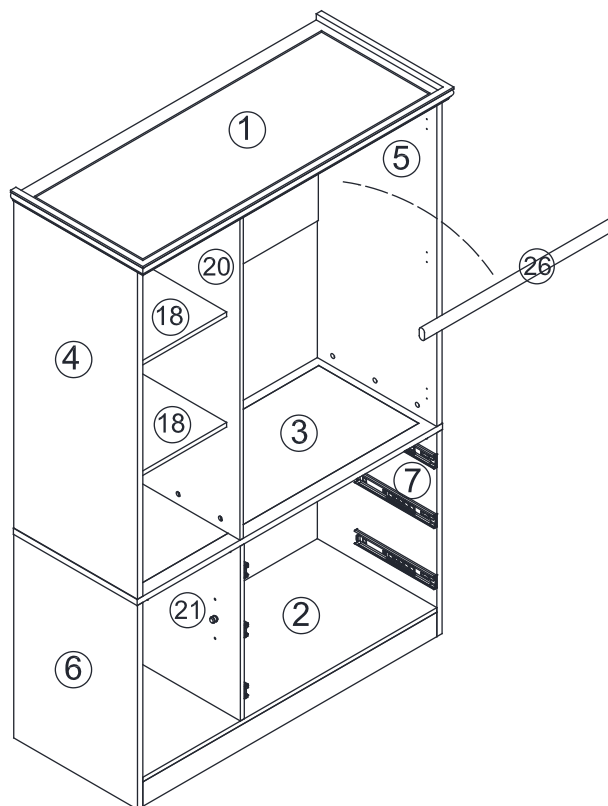 


1

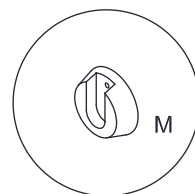 


2

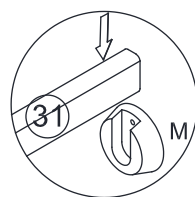 

3

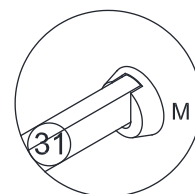 

32


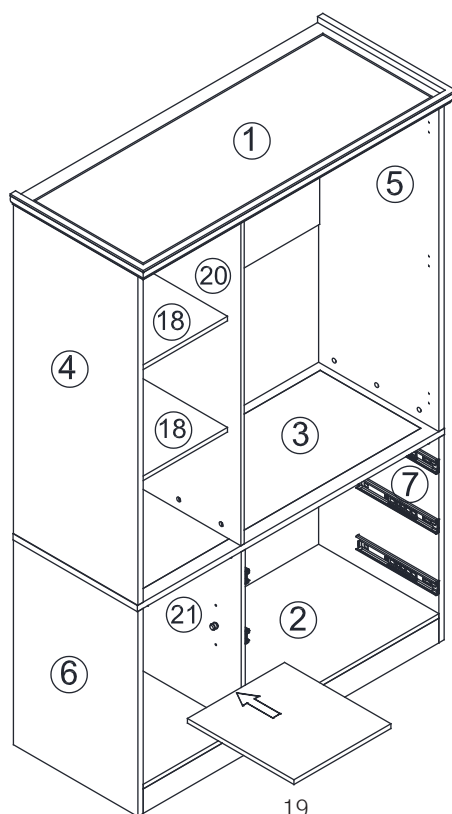 


33

Ex24



  Ø4x30mm

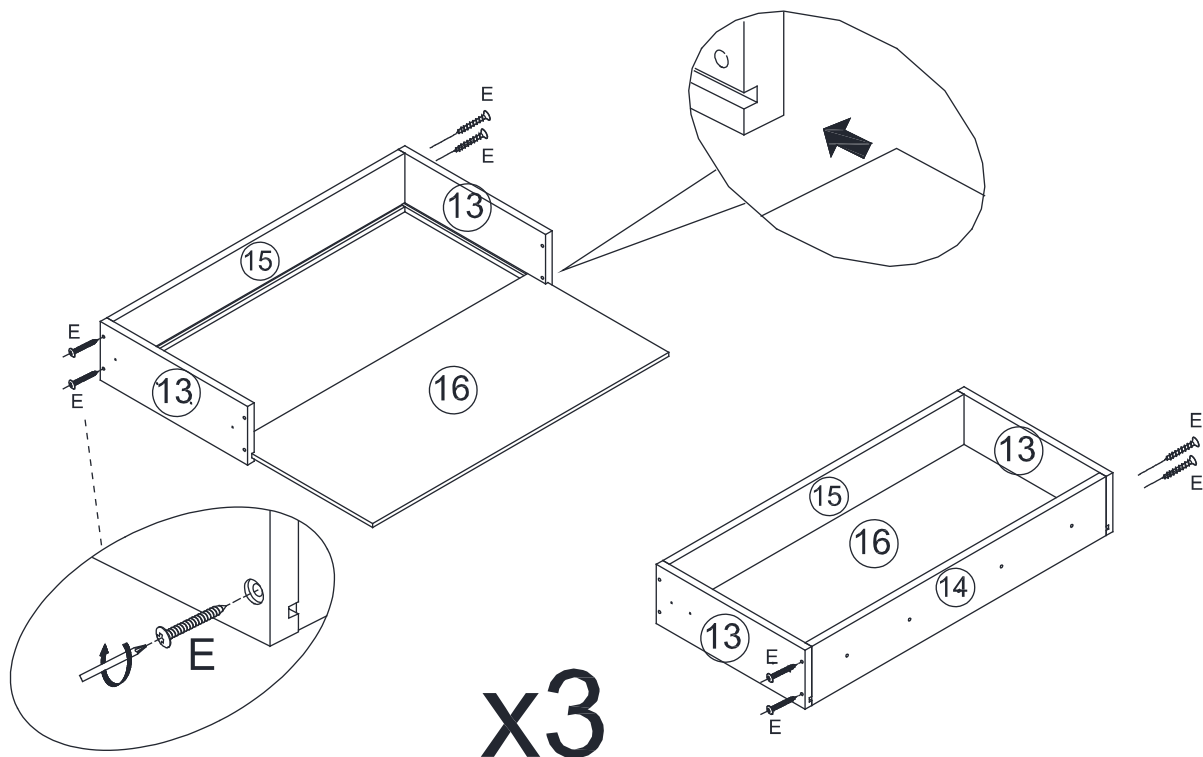

34

Cx12



Ø6x20mm

Dx1





M4

Ix3



Ø3.5x18mm

  Jx3

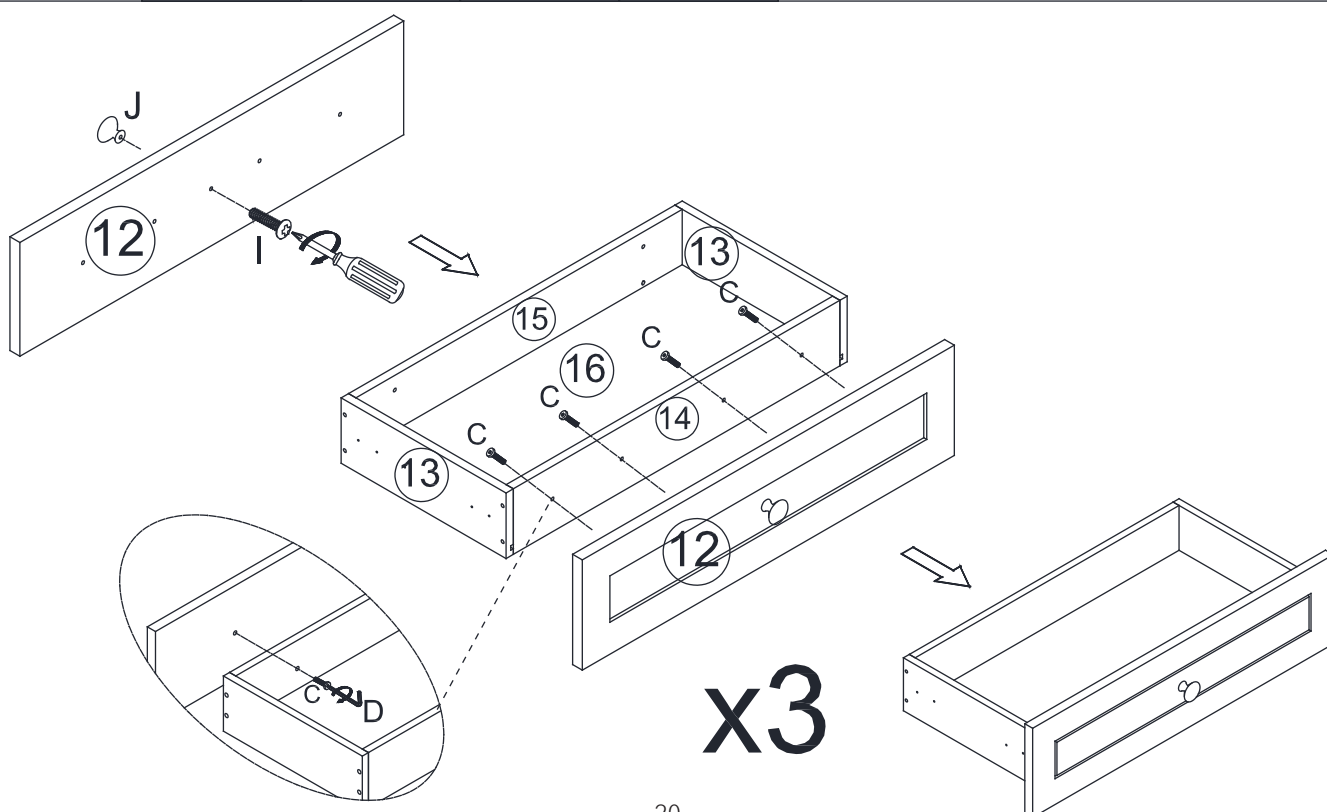

35

Hx18





Ø3.5x14mm


Vx3



  300mm

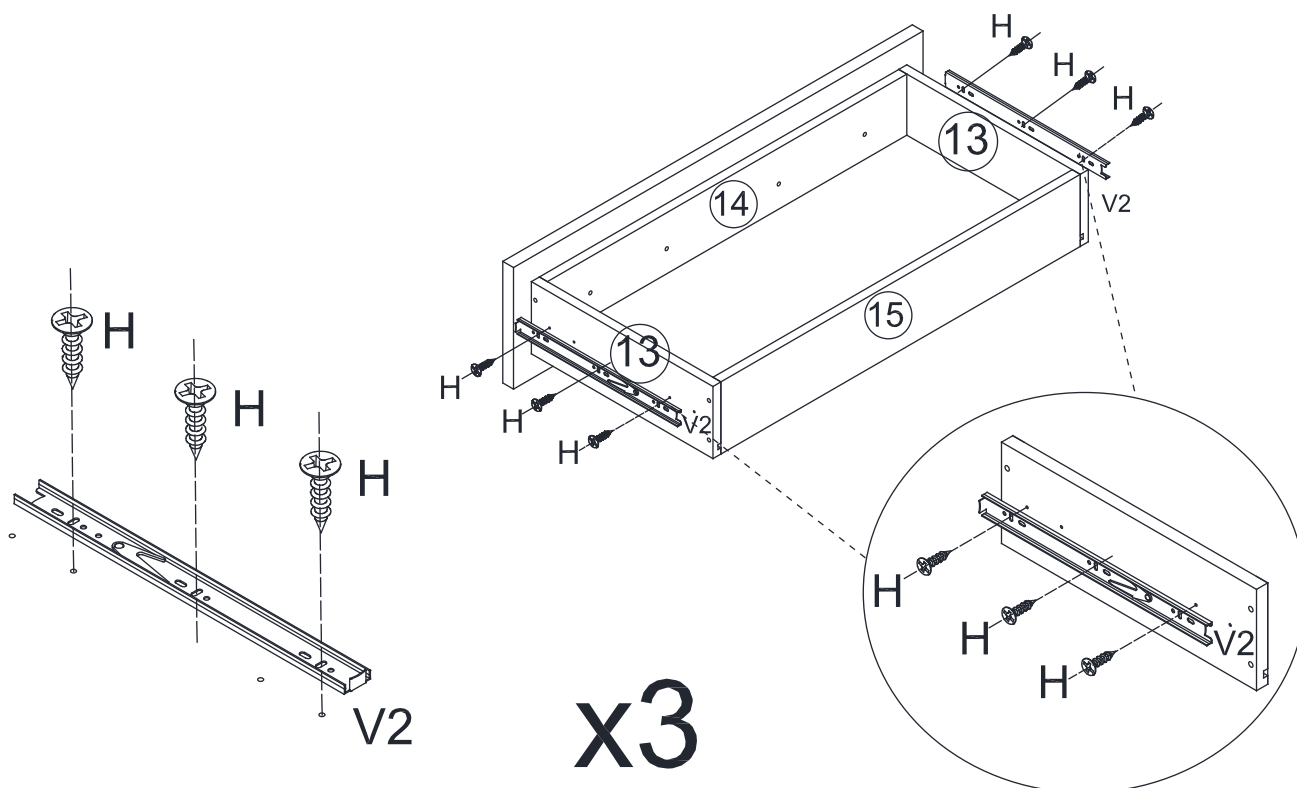

36

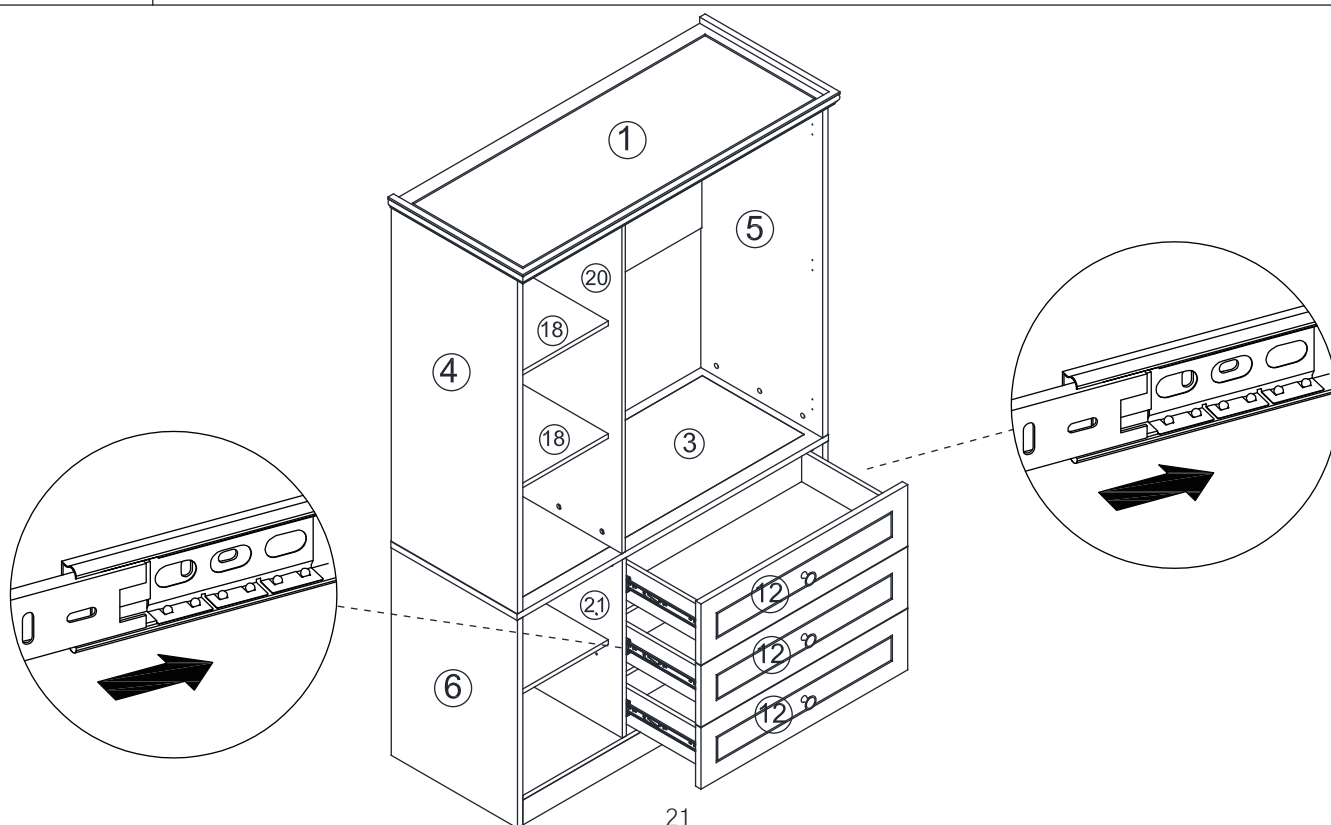 

37

Hx12





Ø3.5x14mm

Px6



  40mm

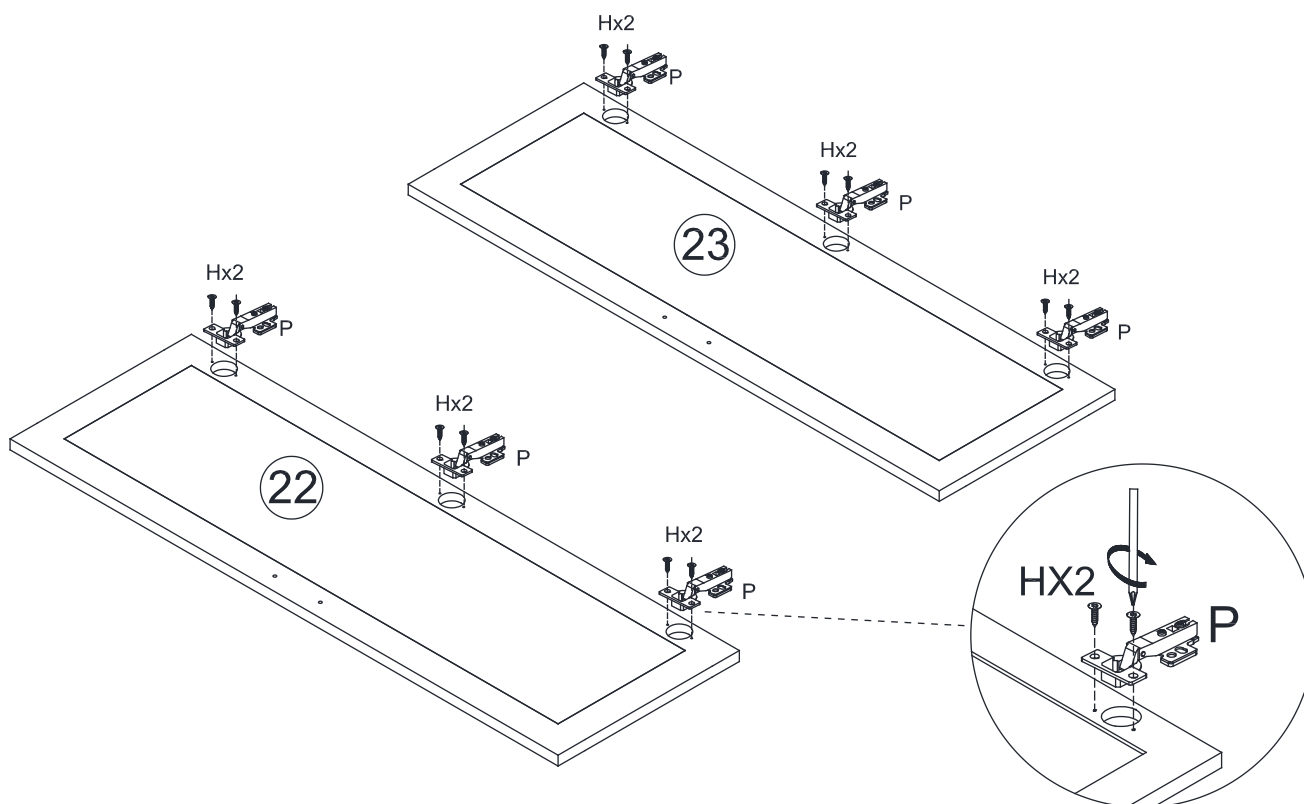

38

Hx10





Ø3.5x14mm

Px5



  40mm

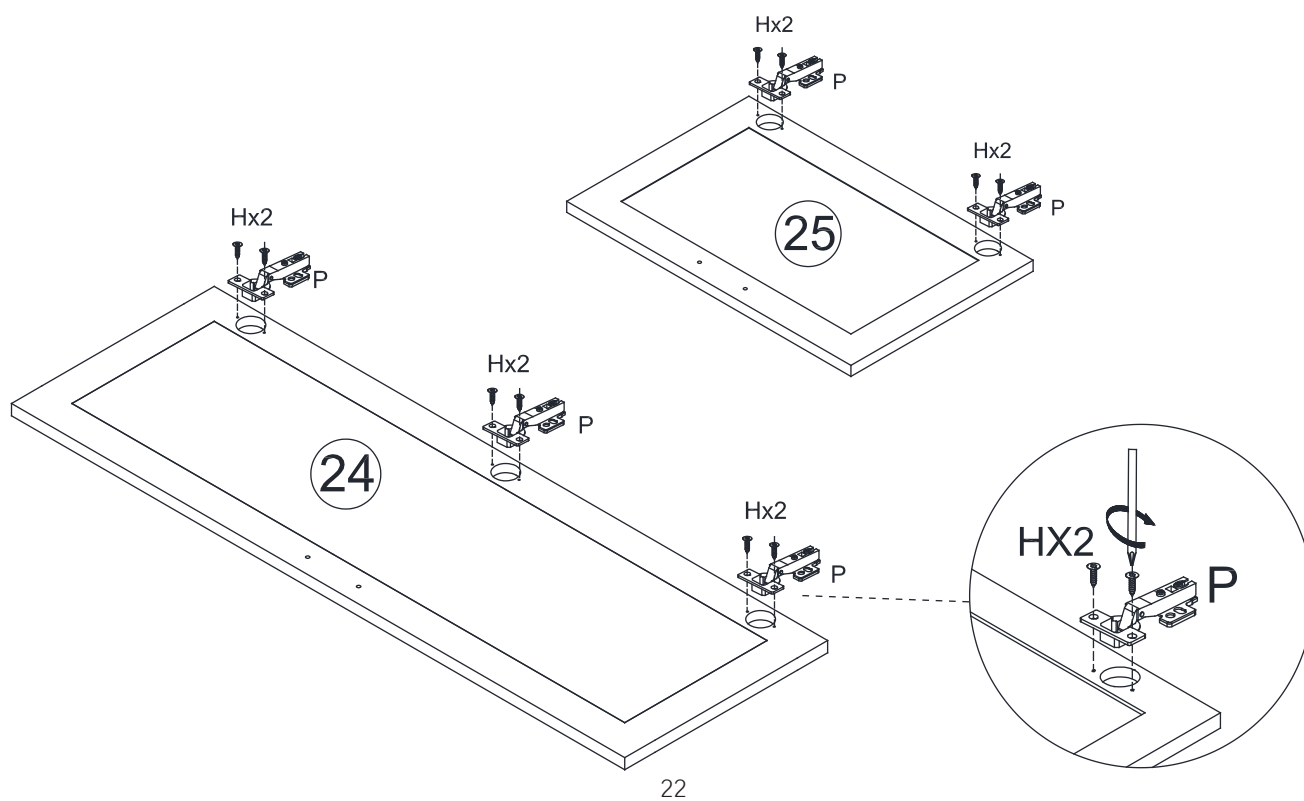

39

Fx32



Ø3.5x16mm


Kx3






Nx6



 Ø3.5x22mm



   First, use one screw for alignment and adjustment, then tighten the others once properly positioned.

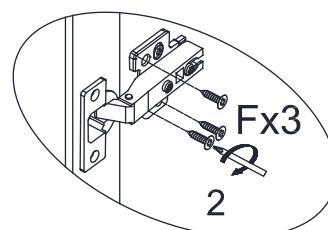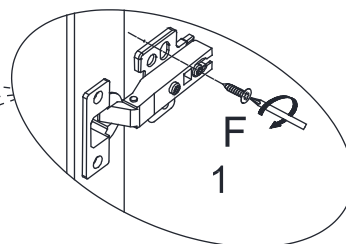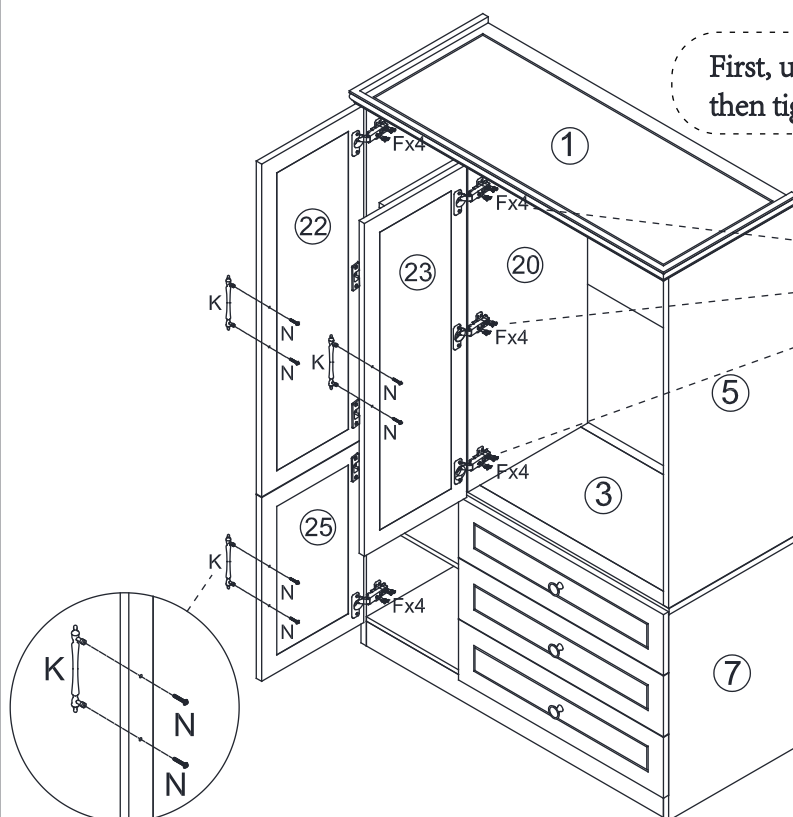

40

Fx12



Ø3.5x16mm


Kx1







Nx2



 Ø3.5x22mm







    First, use one screw for alignment and adjustment, then tighten the others once properly positioned.

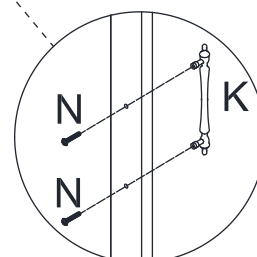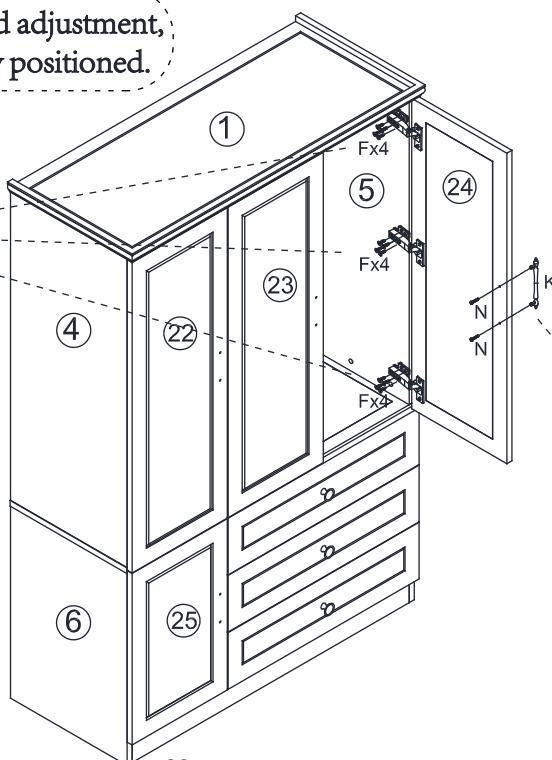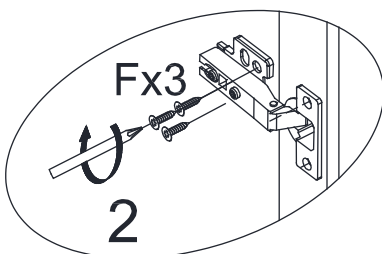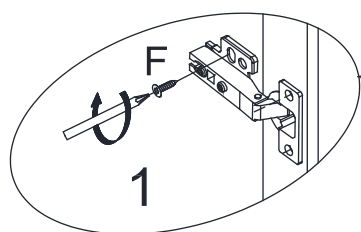

41

    
Ox2

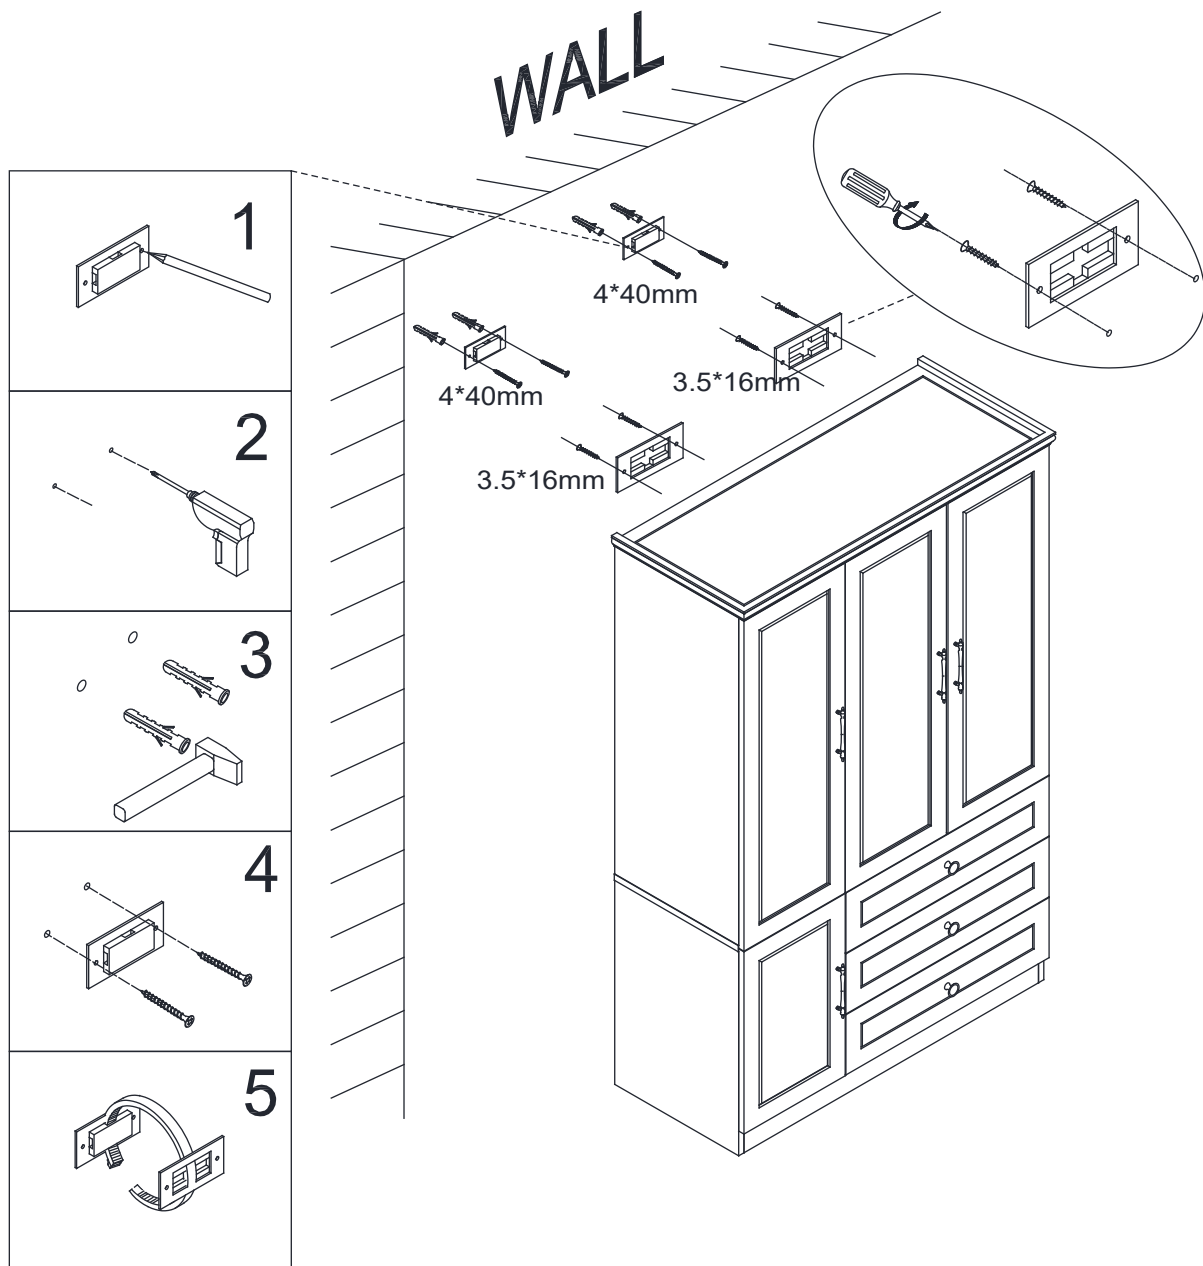

Installation instructions

1. Mark the distance of the bracket on the wall with a pencil.
2. Drill holes at the markers with a drill.
3. Insert the expansion screws into the holes.
4. Connect the bracket to the wall with screws.
5. Place the furniture against the wall and align the brackets vertically.
6. Secure the brackets to the top of the closet using the short screws provided.

 
Door Panel Adjustment Instruction

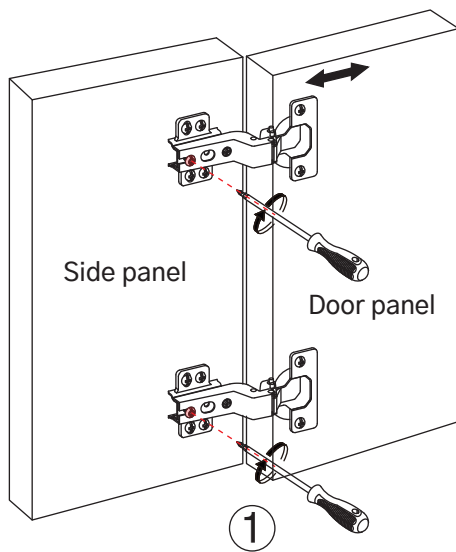

Front-to-Back Direction Adjustment:

Rotate the screws on the door hinges shown in the image. The door panel can be moved front-back.

 
Adjustment range: 4mm

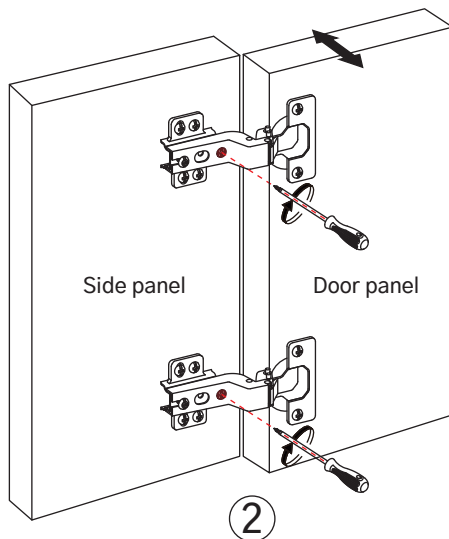

Left-Right Direction Adjustment:

Rotate the screws on the door hinges shown in the image. The door panel can be moved left-right.

 Adjustment range: 3mm

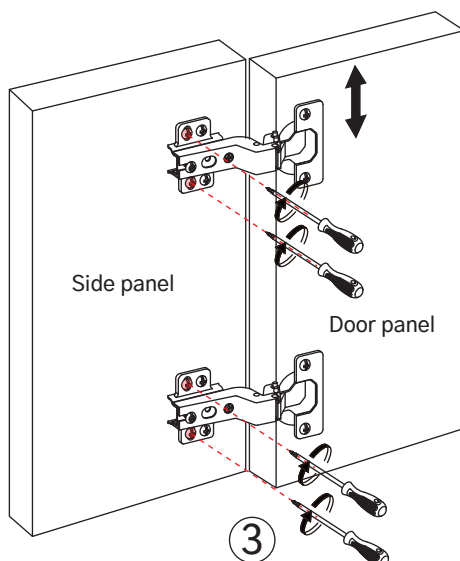


Up-Down Direction Adjustment:

Rotate the screws on the door hinges shown in the image. The door panel can be moved up-down.

Adjustment range: 4mm


Door Panel Adjustment Instruction

 Common Door Panel Issues:

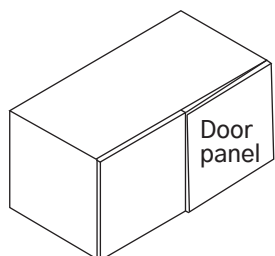



Door panel is not straight

 Adjust the door hinges
→

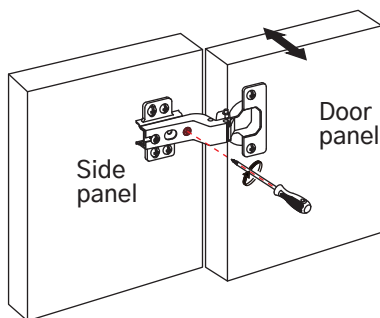


Adjust the door hinges
→

  Finished
→

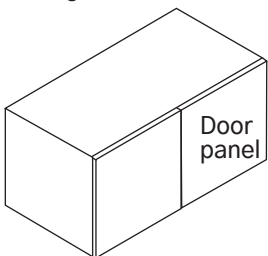
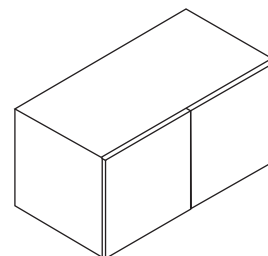


The gap between door panels is too large

 Adjust the door hinges
→

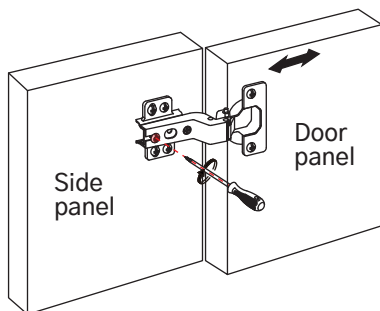


Finished
→

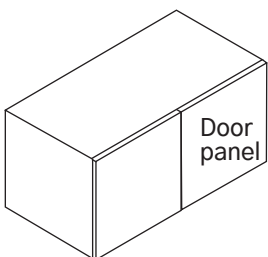 
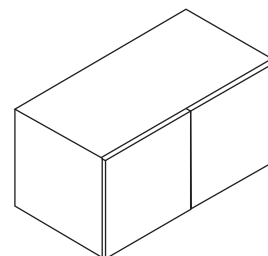 


The door panels are not coplanar

 Adjust the door hinges
→

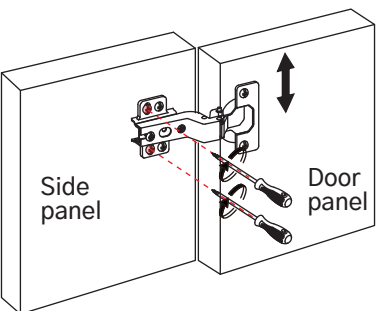

Finished
→

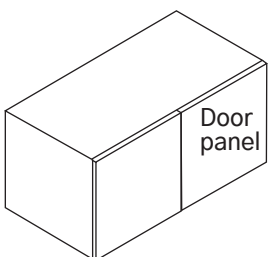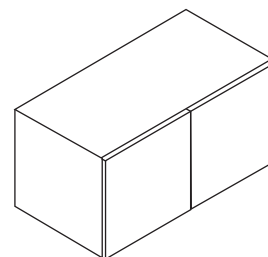  

The two door panels are not at the same height