


# **INSTALLATION**



## *Product Manual*

Version: 180196-01-24A-FG

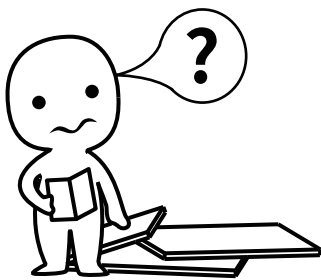


### **IMPORTANT INFORMATION!**

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

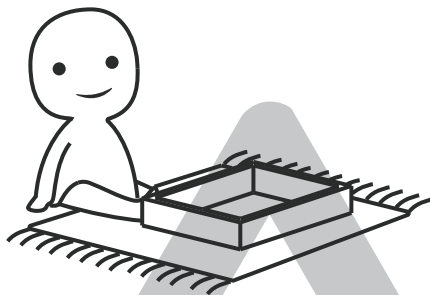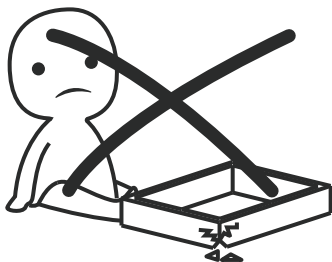




### **AVOID SCRATCHES!**

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

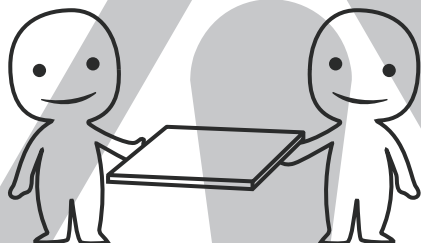

### **IMPROVE EFFICIENCY !**

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

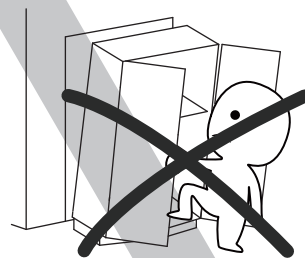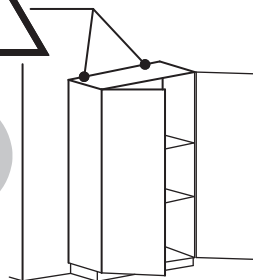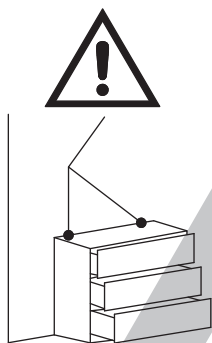

### **ANTI-TOPPLE WARNING !**

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

 
### **IMPORTANT !**

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.




For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.



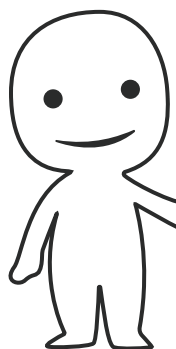


Please prepare the following tools

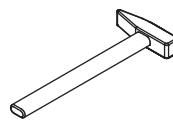   

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 114+5




Ø 6 x 35 mm

B x 60+5




Ø 15 x 9.5 mm

 C x 54+5




Ø 8 x 30 mm

 D x 3

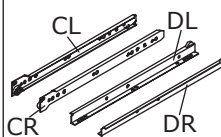


L = 400 mm

 E x 48+3



Ø 3 x 12 mm

 F x 12+1




G x 36+5




Ø 4 x 30 mm

 
H x 6

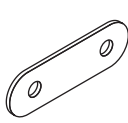


J x 4

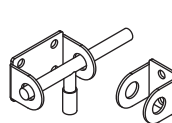 

K x 4

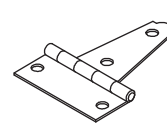 


L x 6

 


Ø 8 x 30 mm

 M x 2




N x 52+5

 


Ø 3.5 x 14 mm

 P x 8

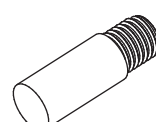


Q x 28+3

 


Ø 6 x 30 mm

 
R x 1

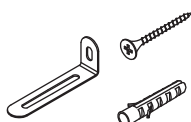


S x 6

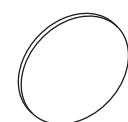 

T x 118+4

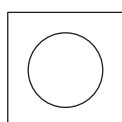 

U x 40+5

 


Ø 3.5 x 14 mm

V x 54+5




Ø 15 x 11 mm

 W x 4

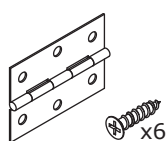



Ø 3 x 12 mm

 X x 4

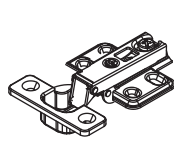

Y x 4

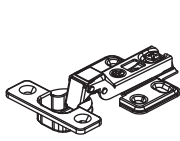 

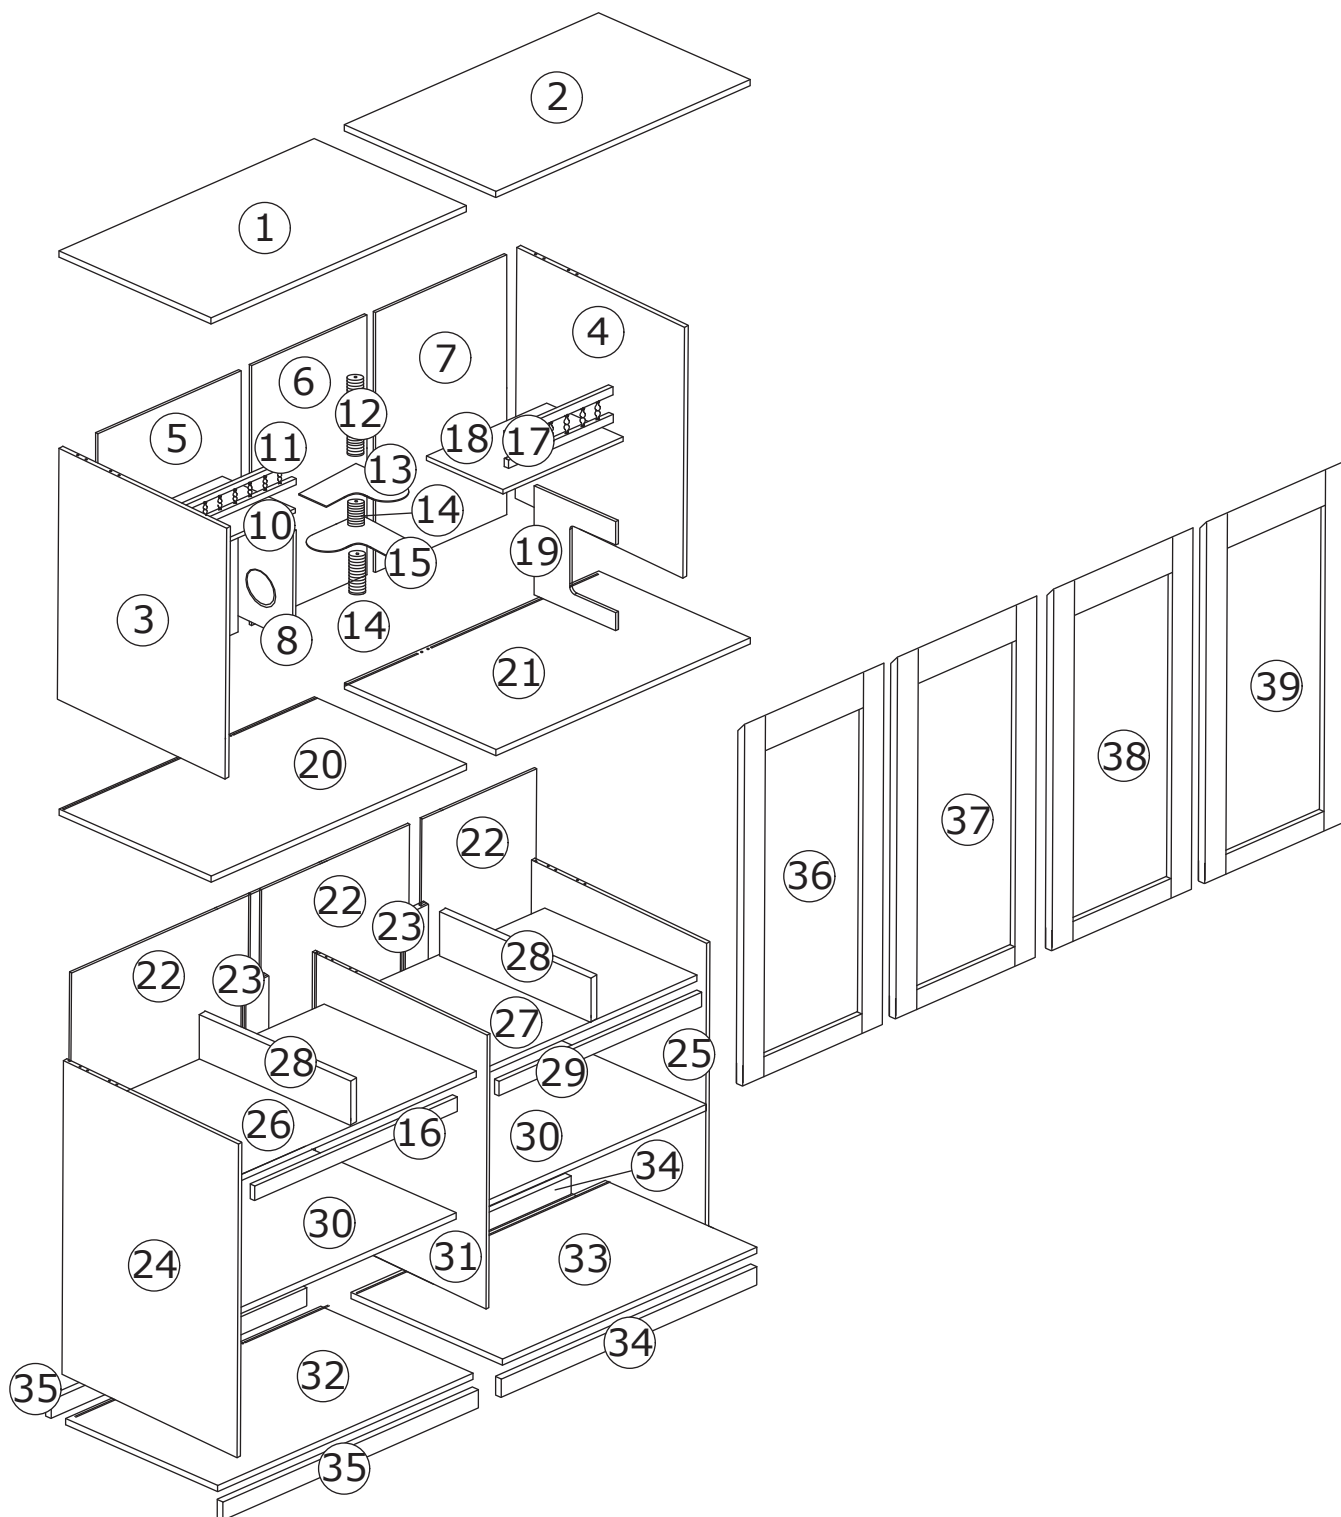 


## ⚠ WARNING








**Children have died from furniture tipover. To reduce the risk of furniture tipover:**

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.  
Do not remove!*

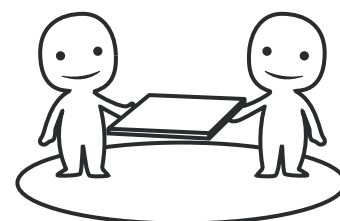

ASSEMBLED BY 2 ADULTS

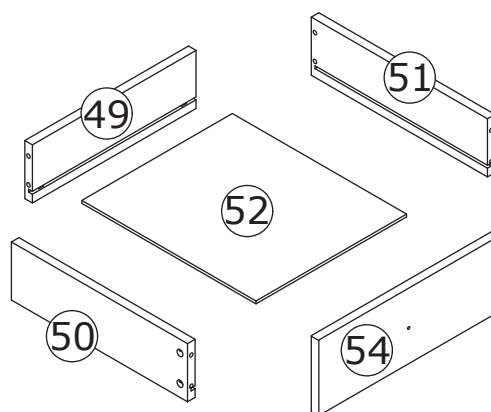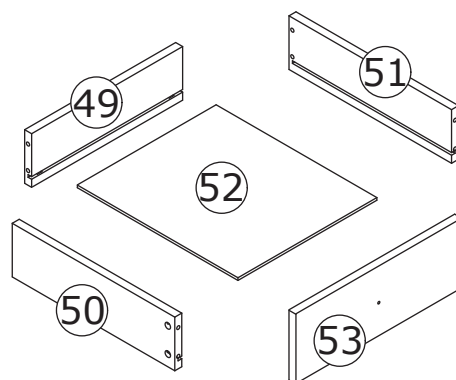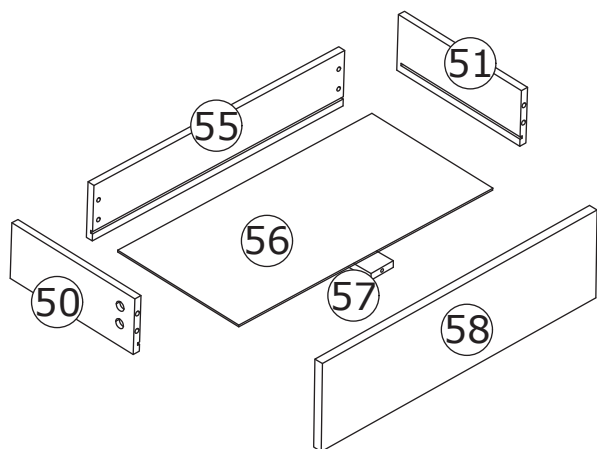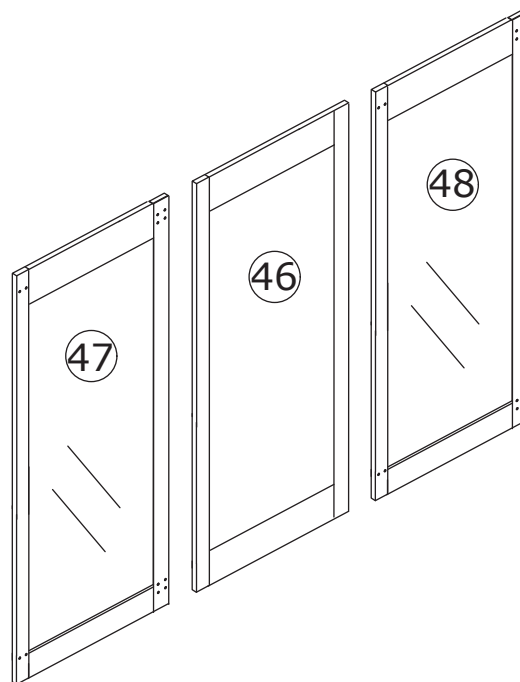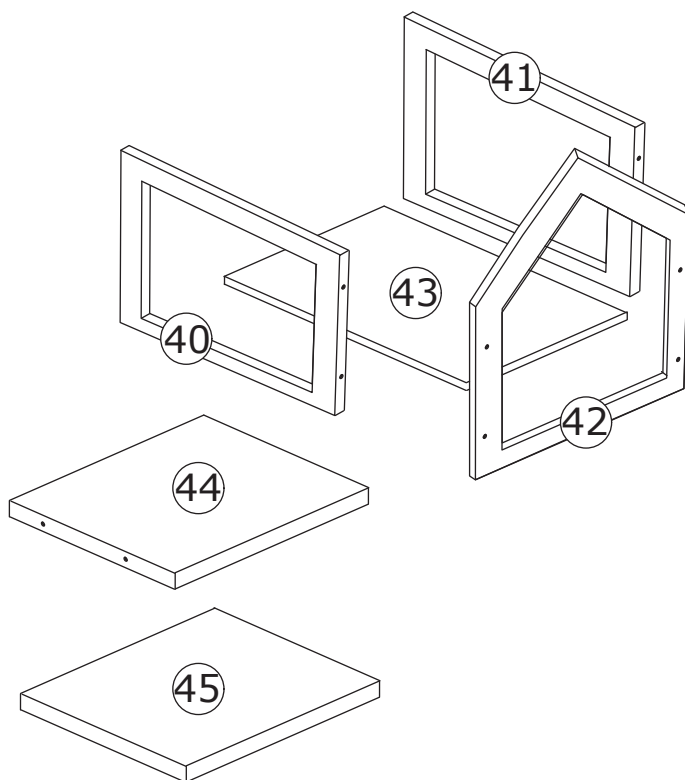     


## ⚠ WARNING



**Children have died from furniture tipover. To reduce the risk of furniture tipover:**



- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.  
Do not remove!*

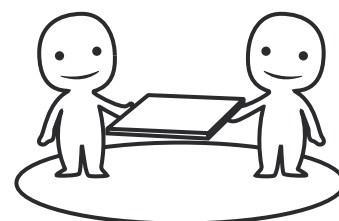


ASSEMBLED BY 2 ADULTS




 
 
1

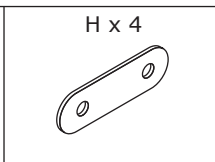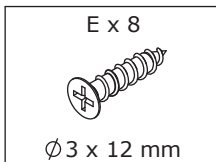


 
Fix iron sheet(H) to panel 5, 6 and 7 with screw(E) as shown.

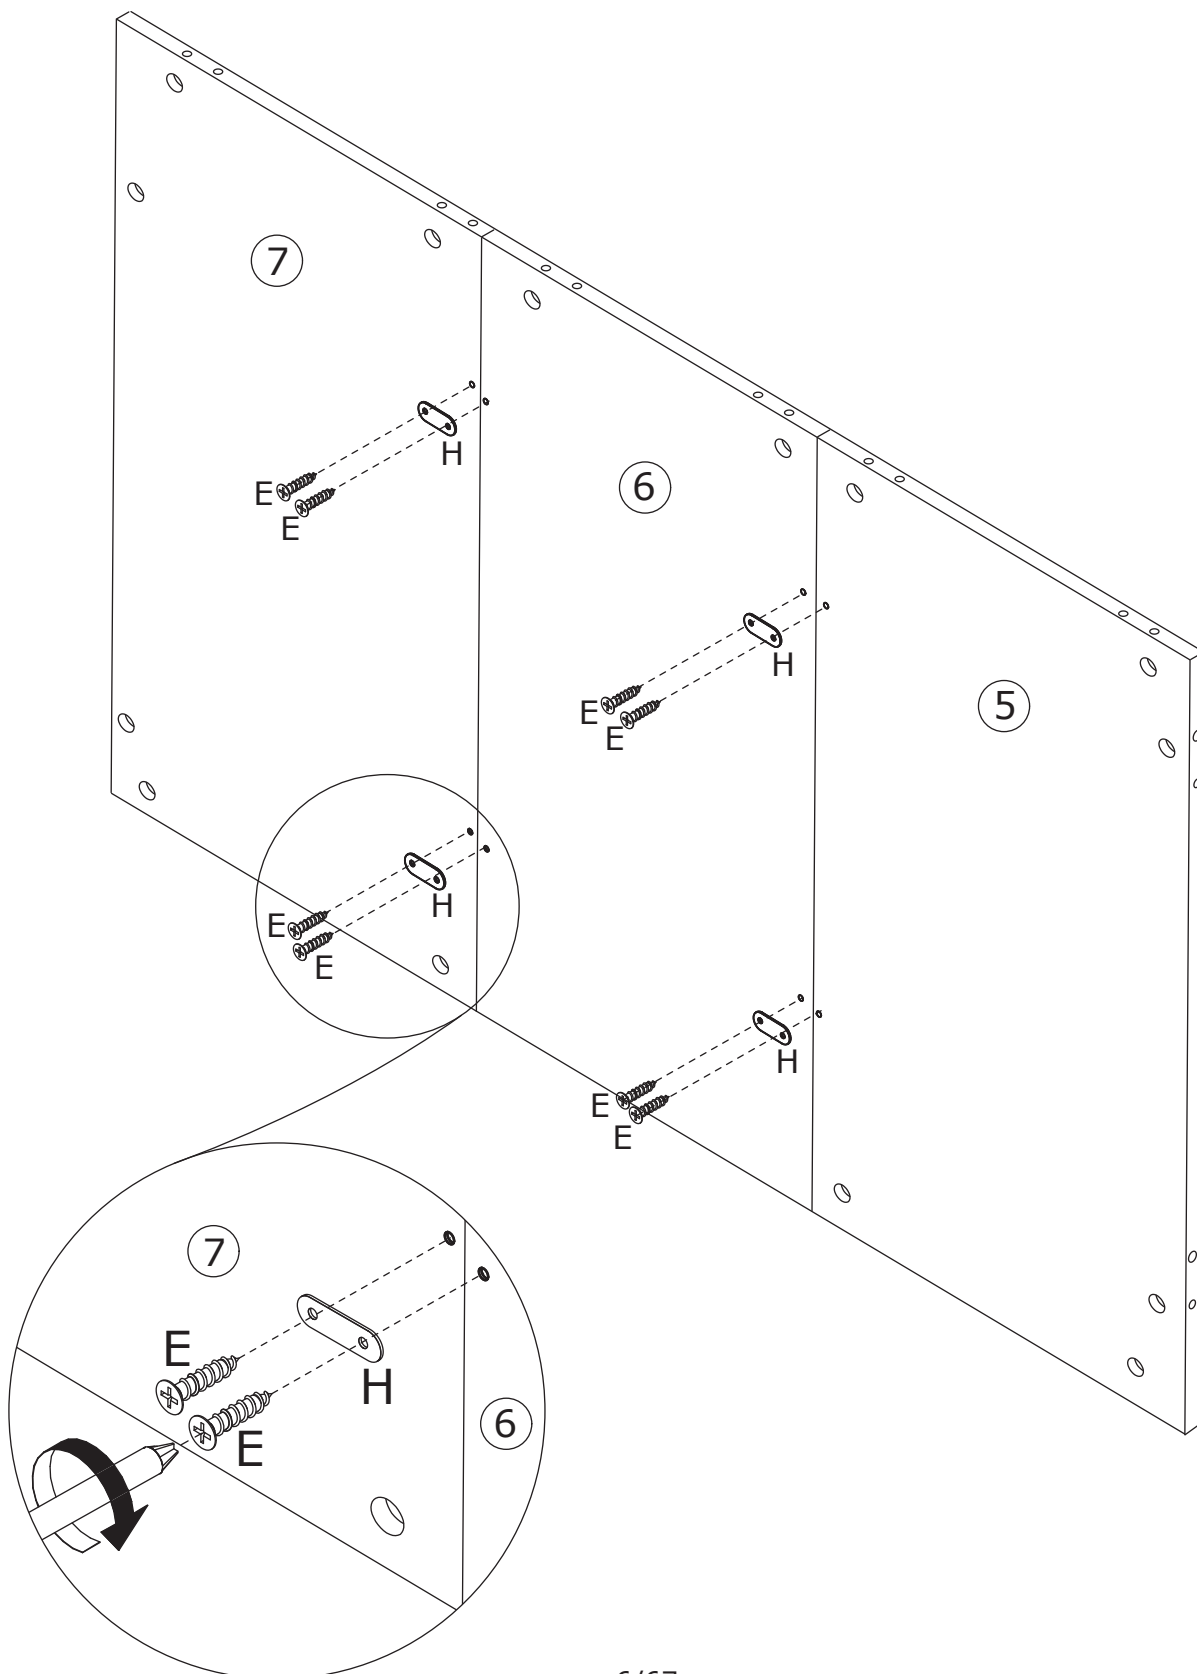



2

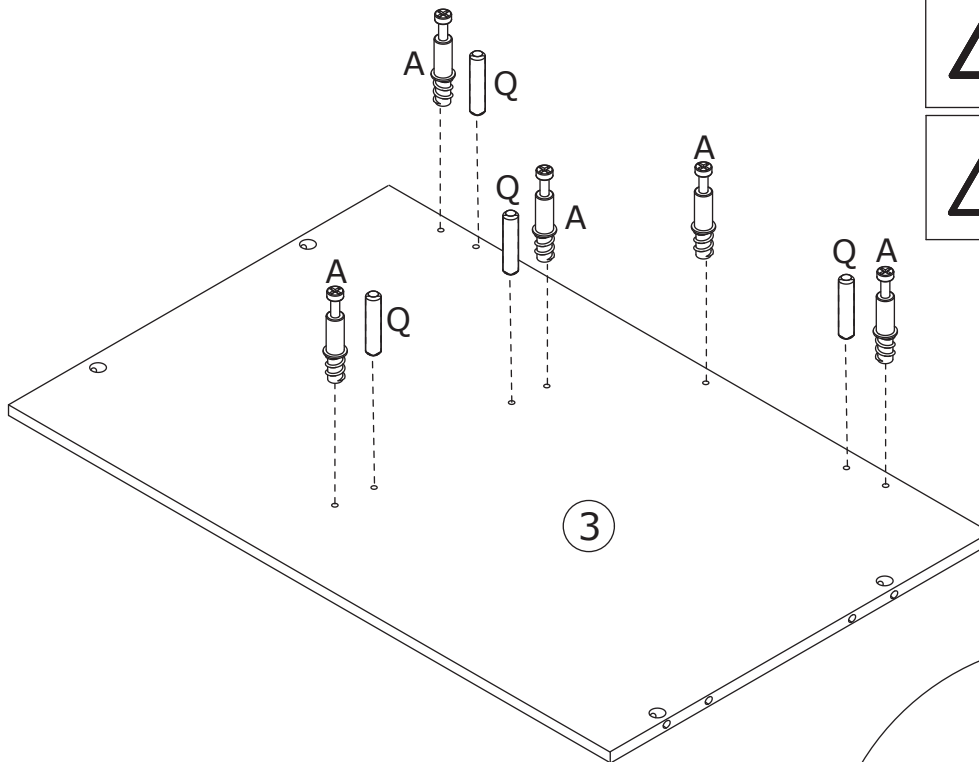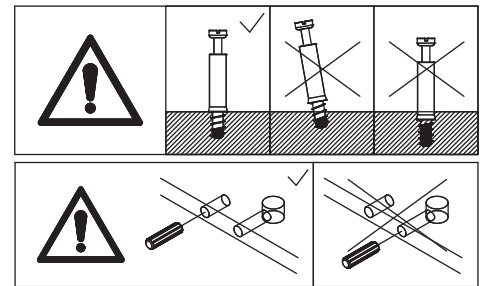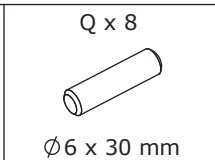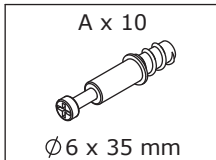     


 
 
Screw eccentric rod(A) and insert wooden dowel(Q) into panel 3 and 4 as shown.

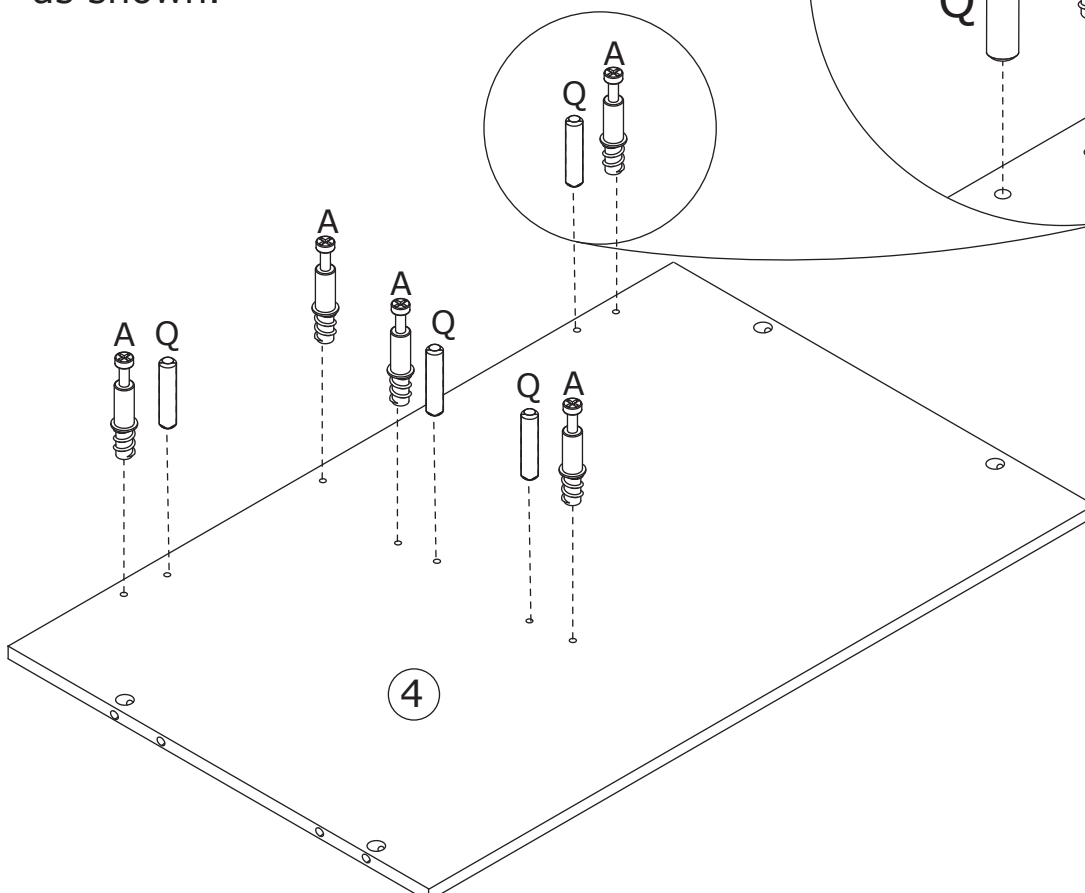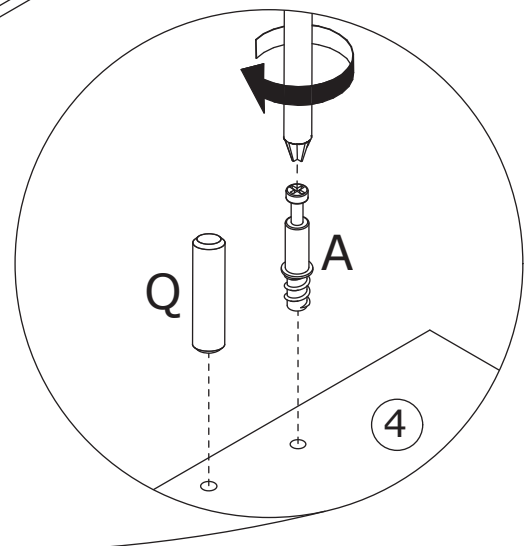



# 3

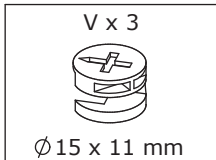  

 
 
 
Attach panel 3 to panel 5,  
add cam lock(V) into panel 5  
and turn clockwise to tighten  
as shown.

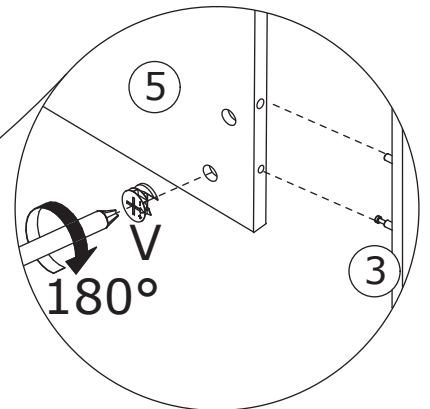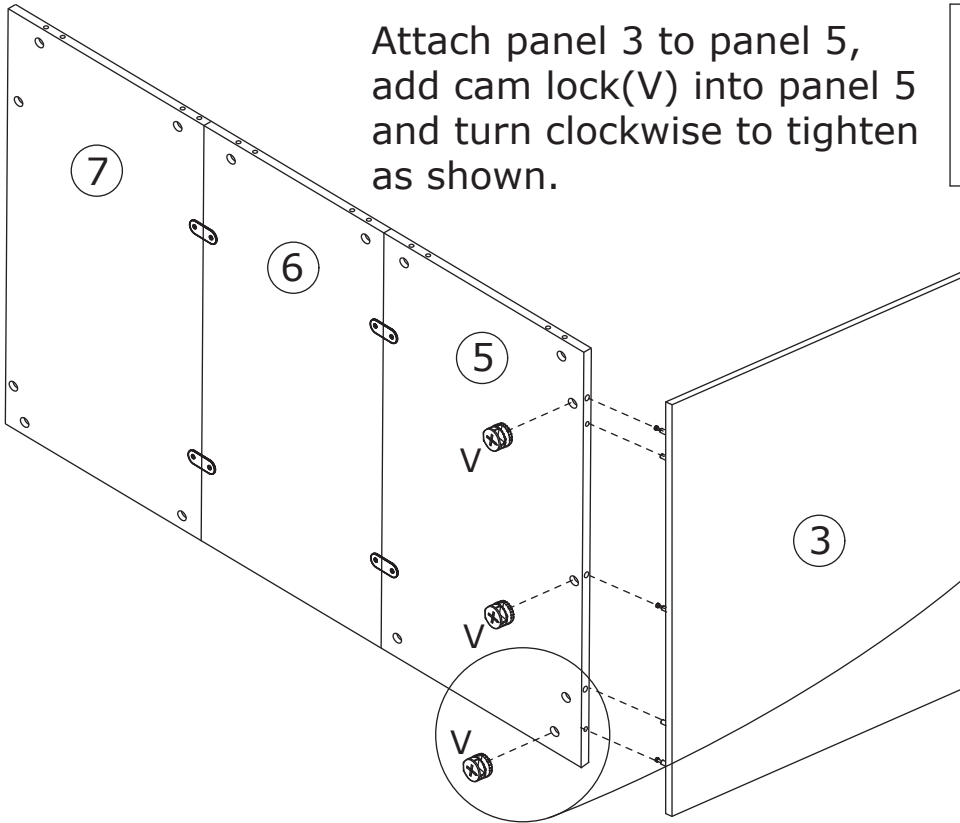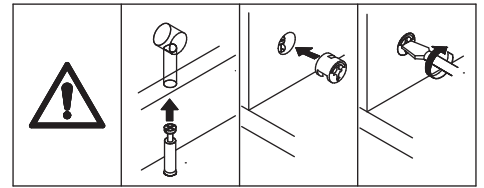



# 4

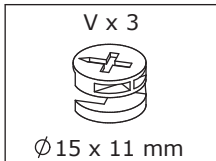  

 
 
 
Attach panel 4 to panel 7,  
add cam lock(V) into panel 7  
and turn clockwise to  
tighten as shown.

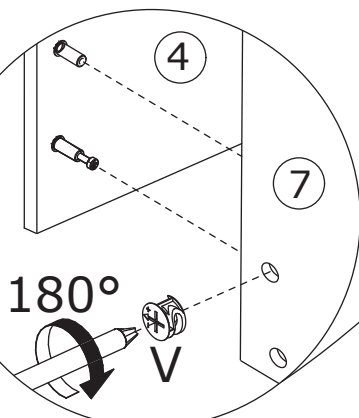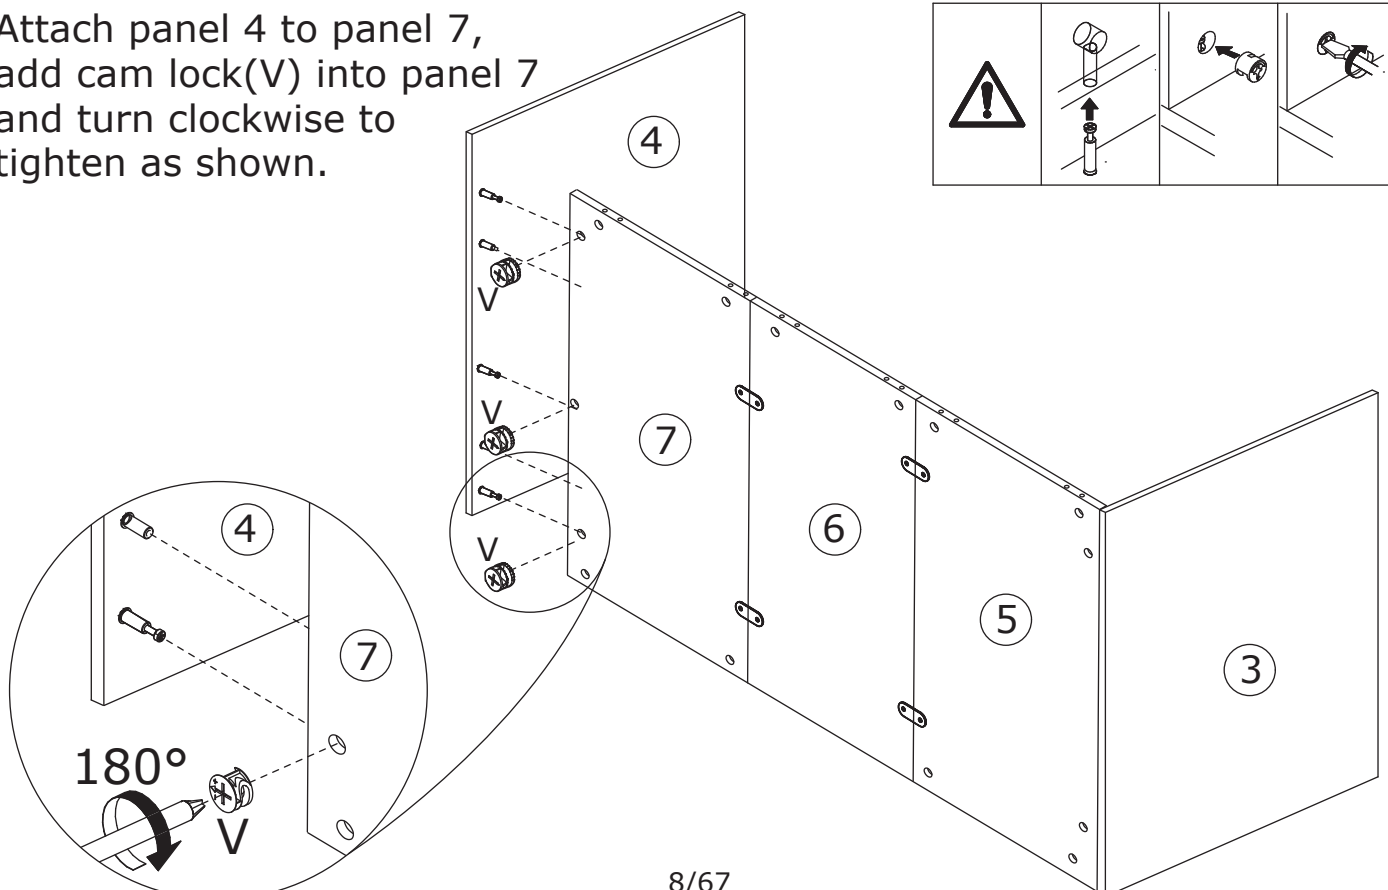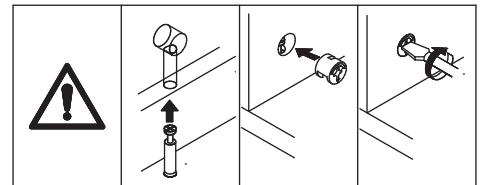








5

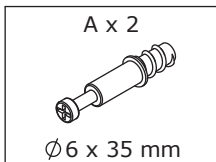  

   Screw eccentric rod(A) into panel 8 as shown.

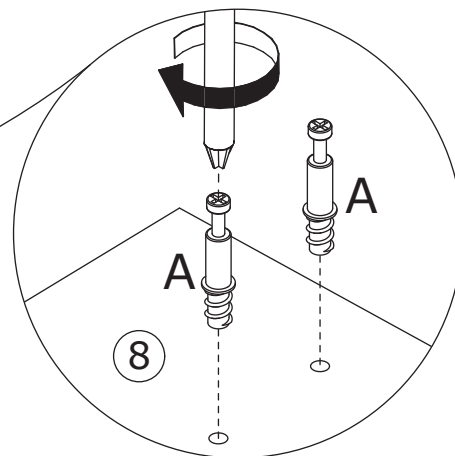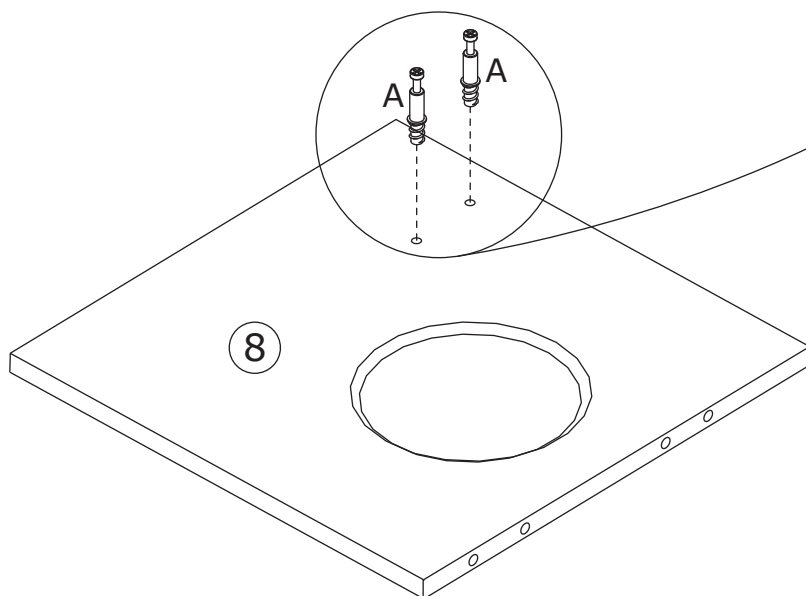
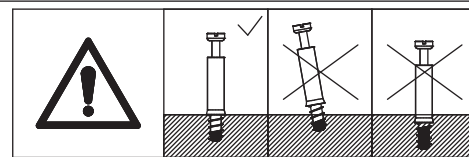


6

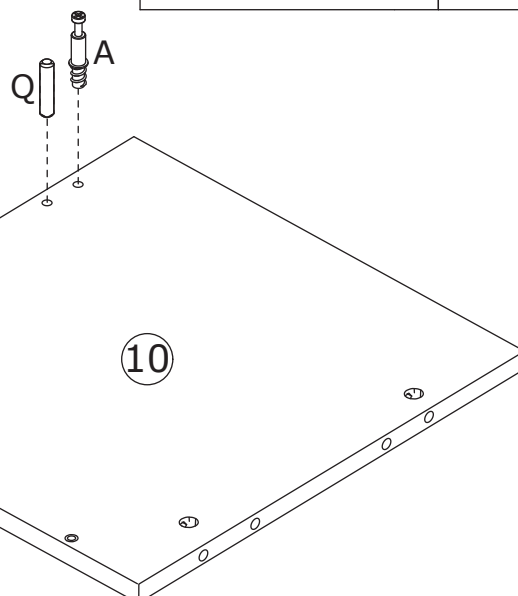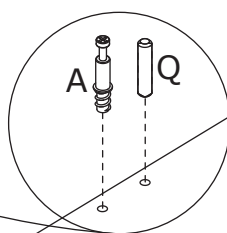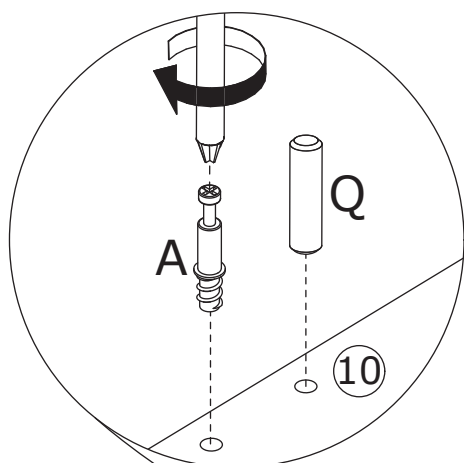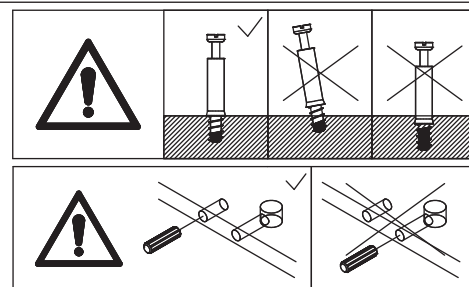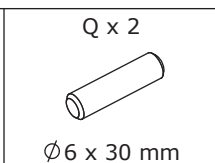      
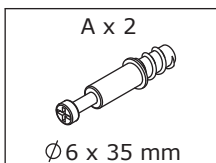 


Screw eccentric rod(A) and insert wooden dowel(Q) into panel 10 as shown.

 
 
7

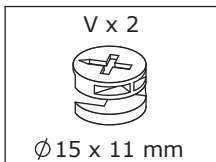

  
Attach panel 10 to panel 8, add cam lock(V) into panel 8 and turn clockwise to tighten as shown.

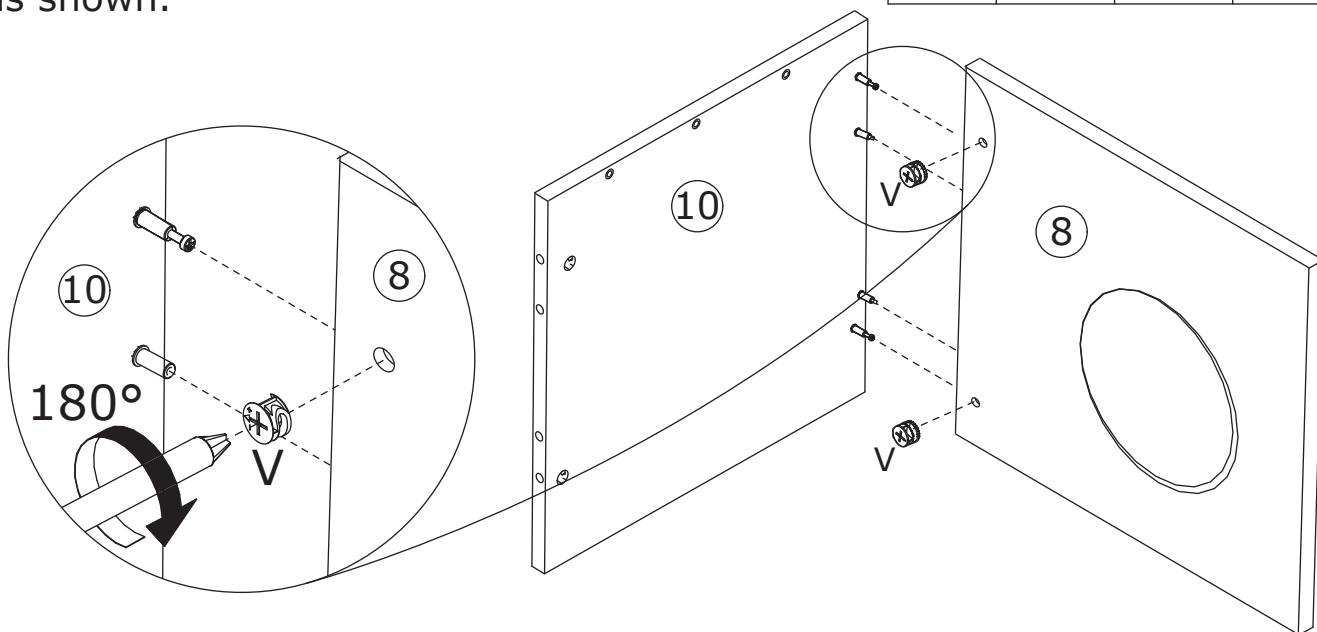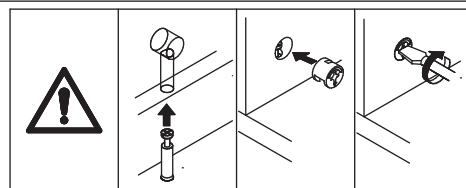

8

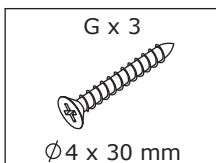  


 
Fix plate 11 to panel 10 with screw(G) as shown.

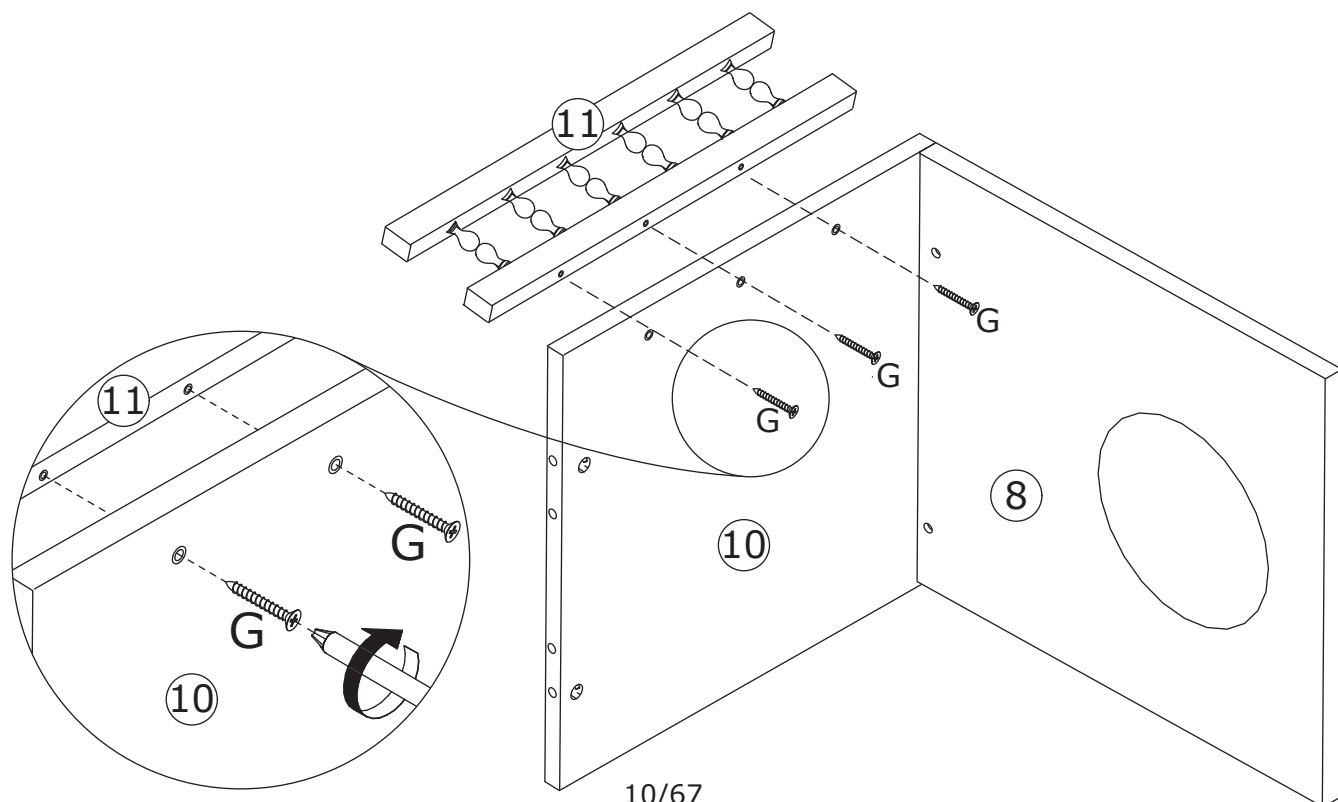



9

 
 
W x 4  
x3  
Ø3 x 12 mm

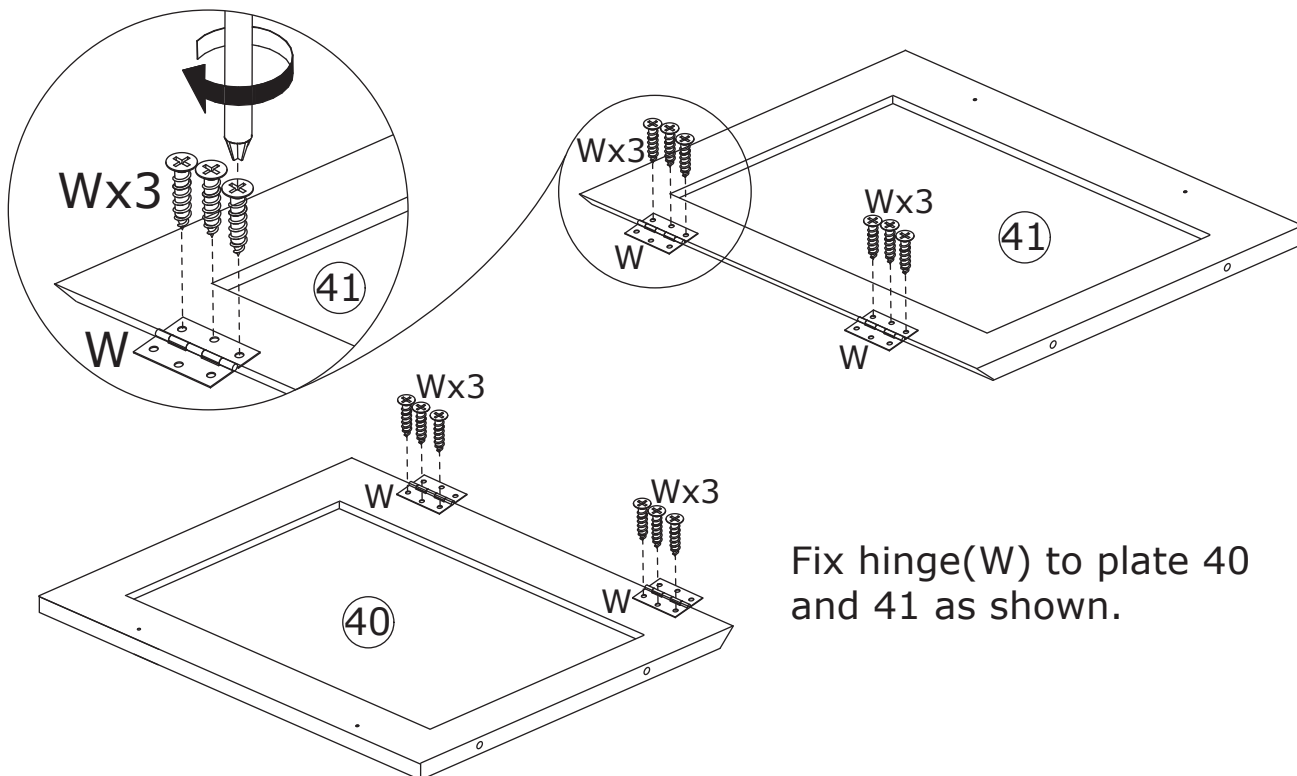

Fix hinge(W) to plate 40 and 41 as shown.



10

  G x 4  
Ø4 x 30 mm

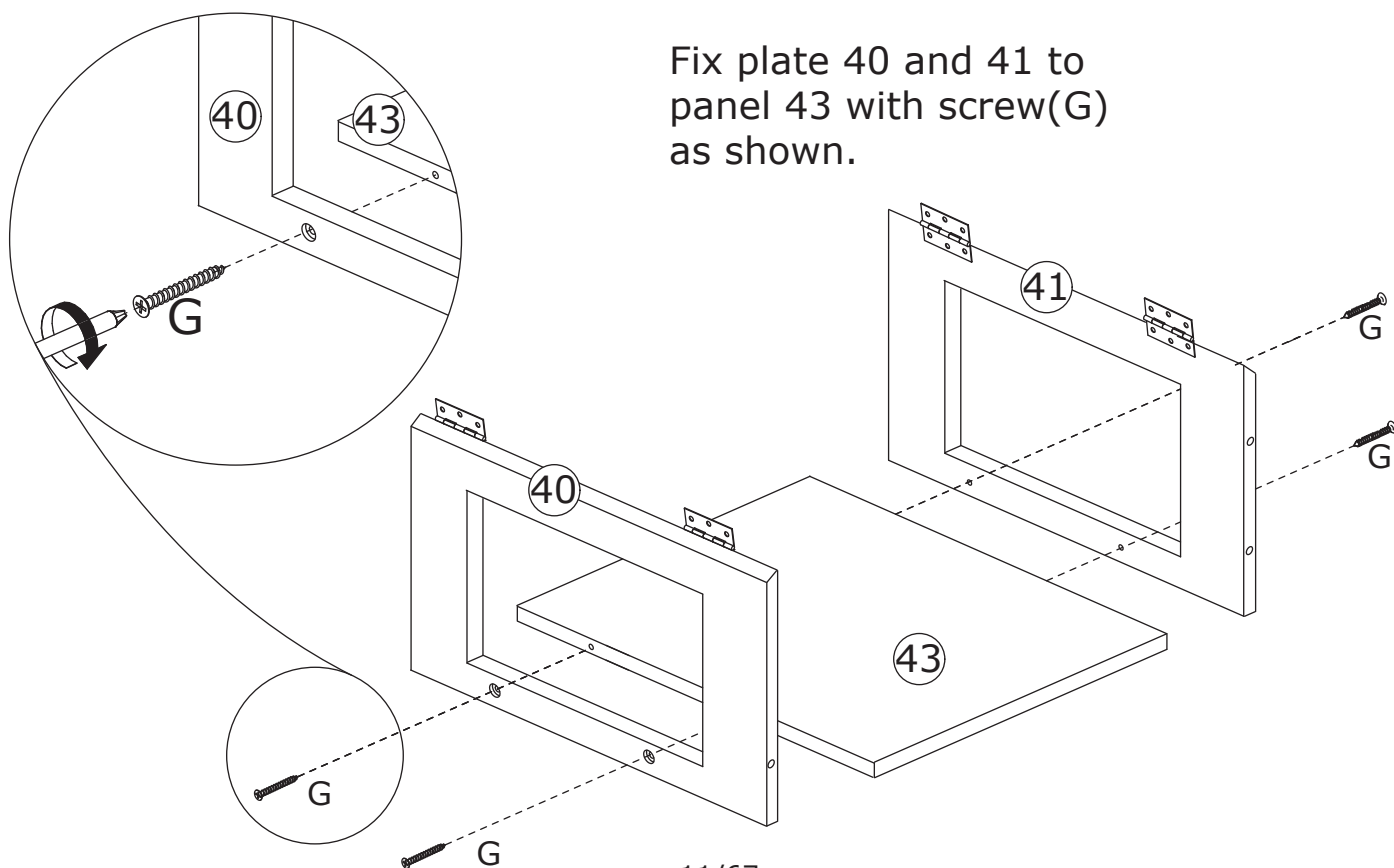


Fix plate 40 and 41 to panel 43 with screw(G) as shown.



# 11

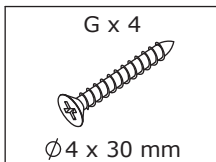  

 
Fix plate 42 to plate 43 and 41 with screw(G) as shown.

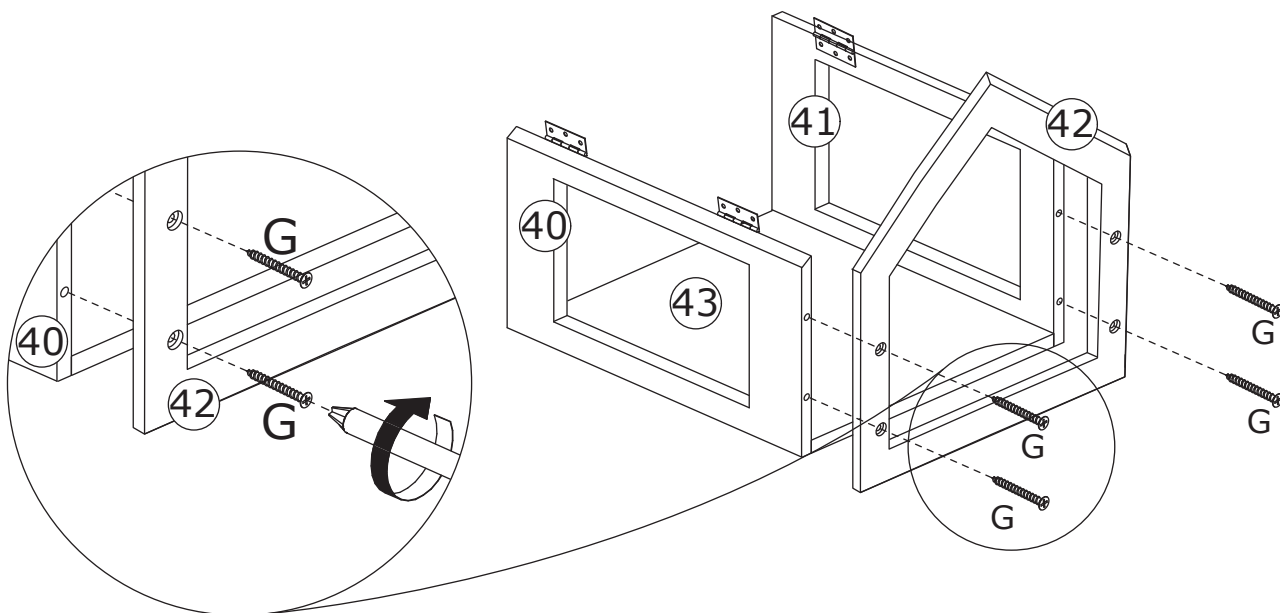


# 12

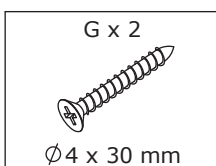  

 
Fix panel 45 to panel 44 with screw(G) as shown.

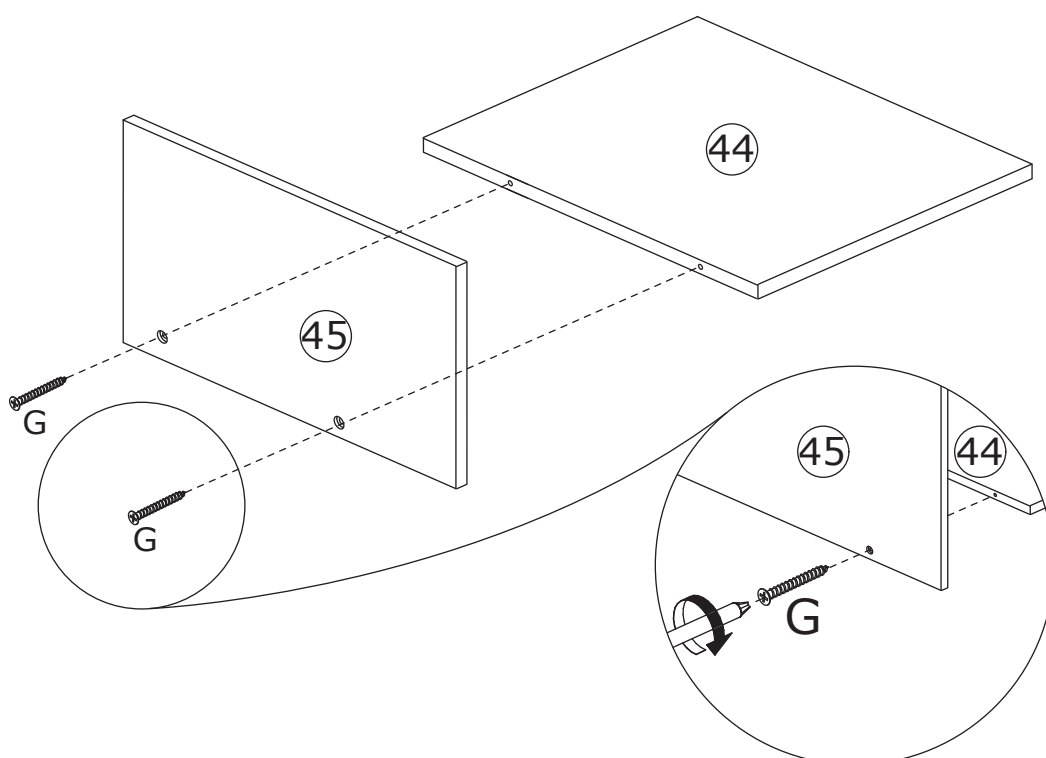


# 13

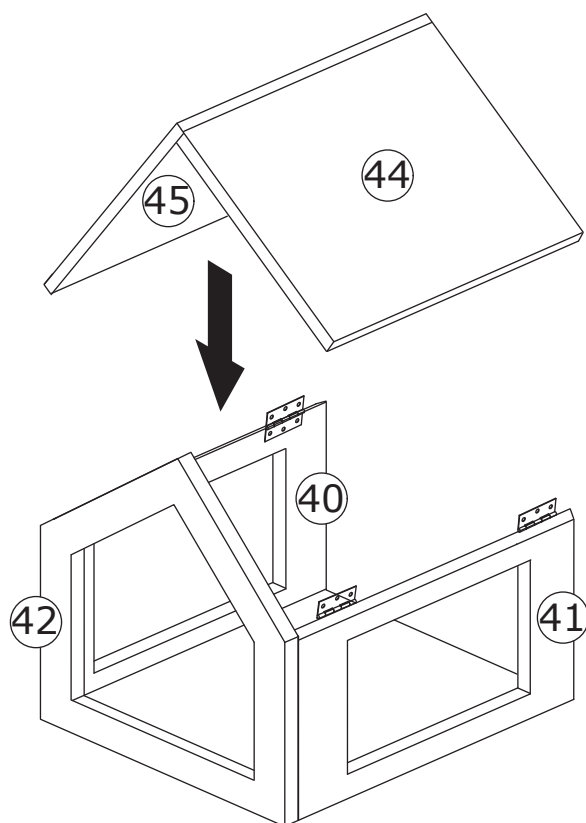 


# 14


 
W x 4  
 x3  
 Ø 3 x 12 mm




 
Fix panel 44 and 45 to the assembled hinges.

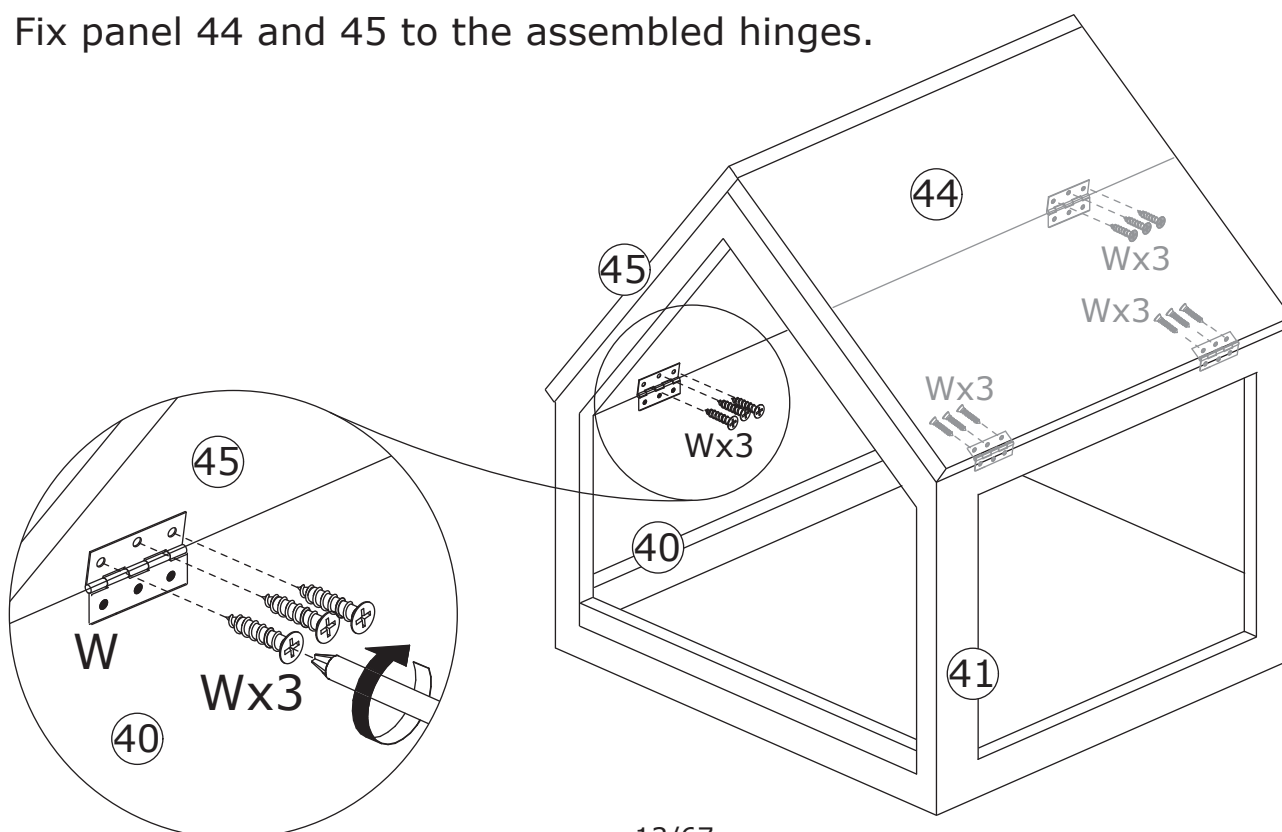





# 15

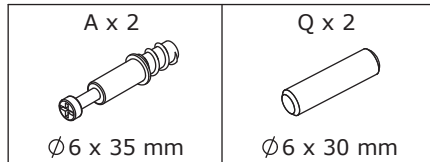  

  Screw eccentric rod(A) and insert wooden dowel(Q) into panel 18 as shown.

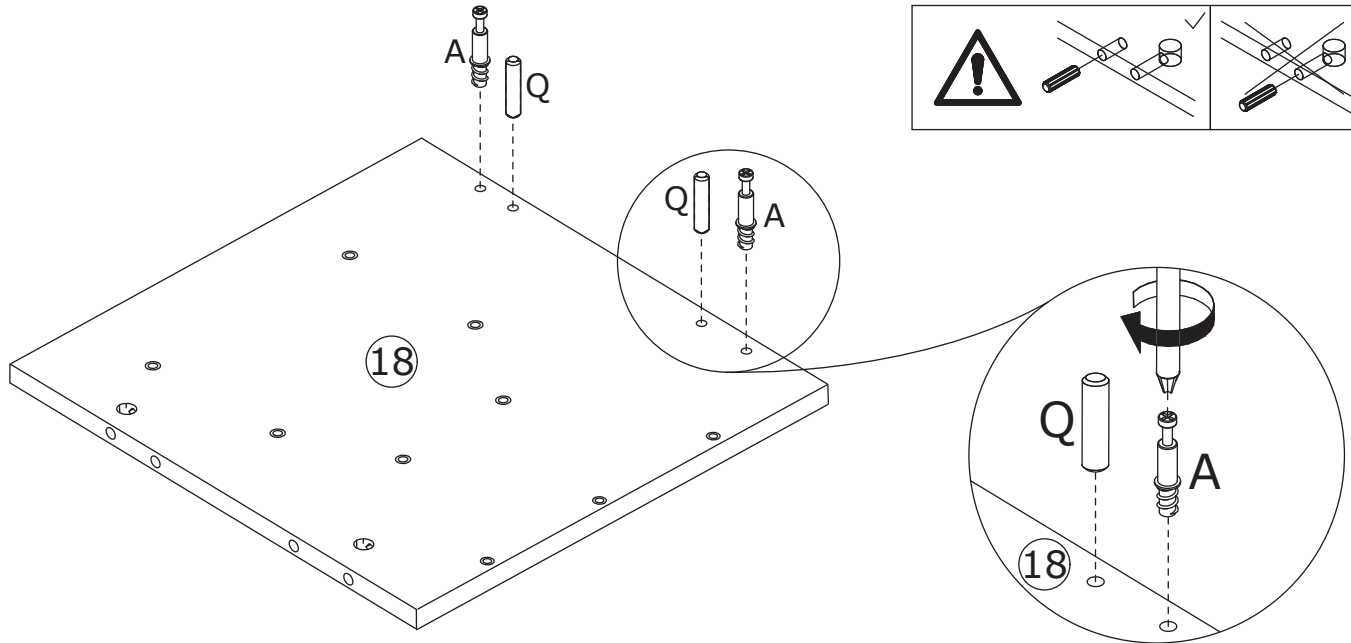
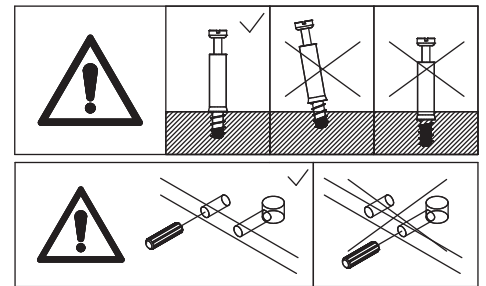


# 16

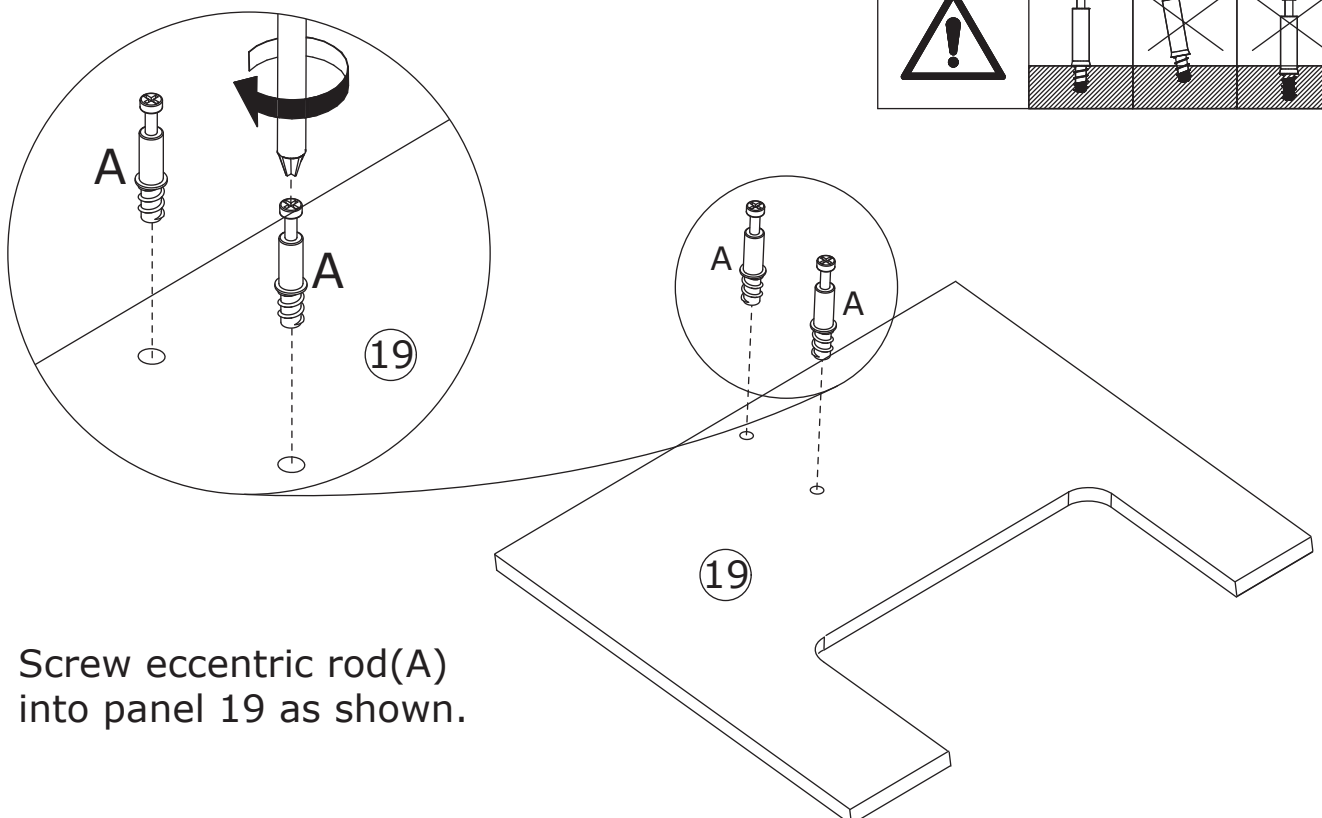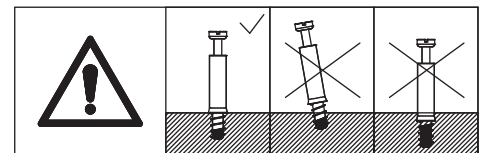  
 
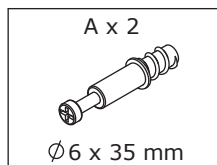 


Screw eccentric rod(A) into panel 19 as shown.




# 17

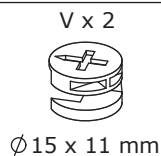  

   Attach panel 18 to panel 19, add cam lock(V) into panel 19 and turn clockwise to tighten as shown.

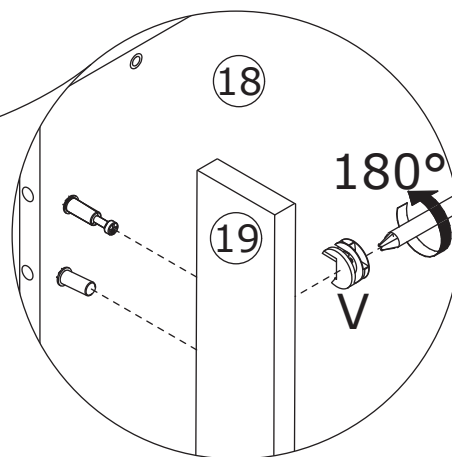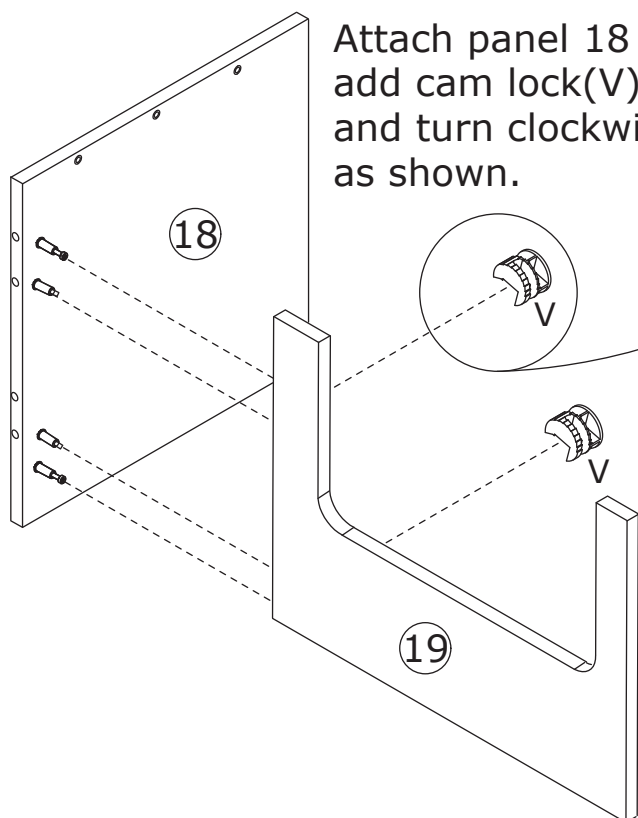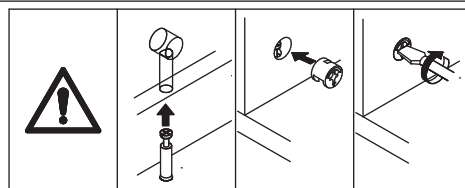


# 18

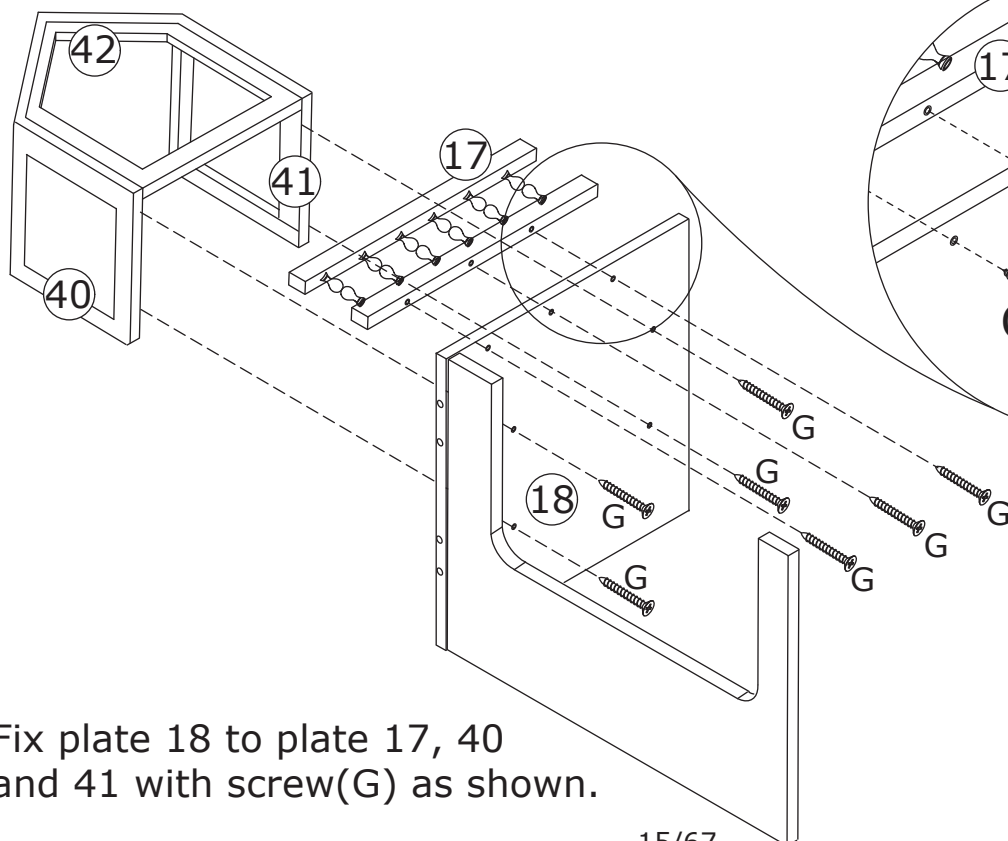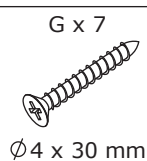   


Fix plate 18 to plate 17, 40 and 41 with screw(G) as shown.



# 19

 

 Fix pillar part 12 to panel 13 with screw(L) as shown.



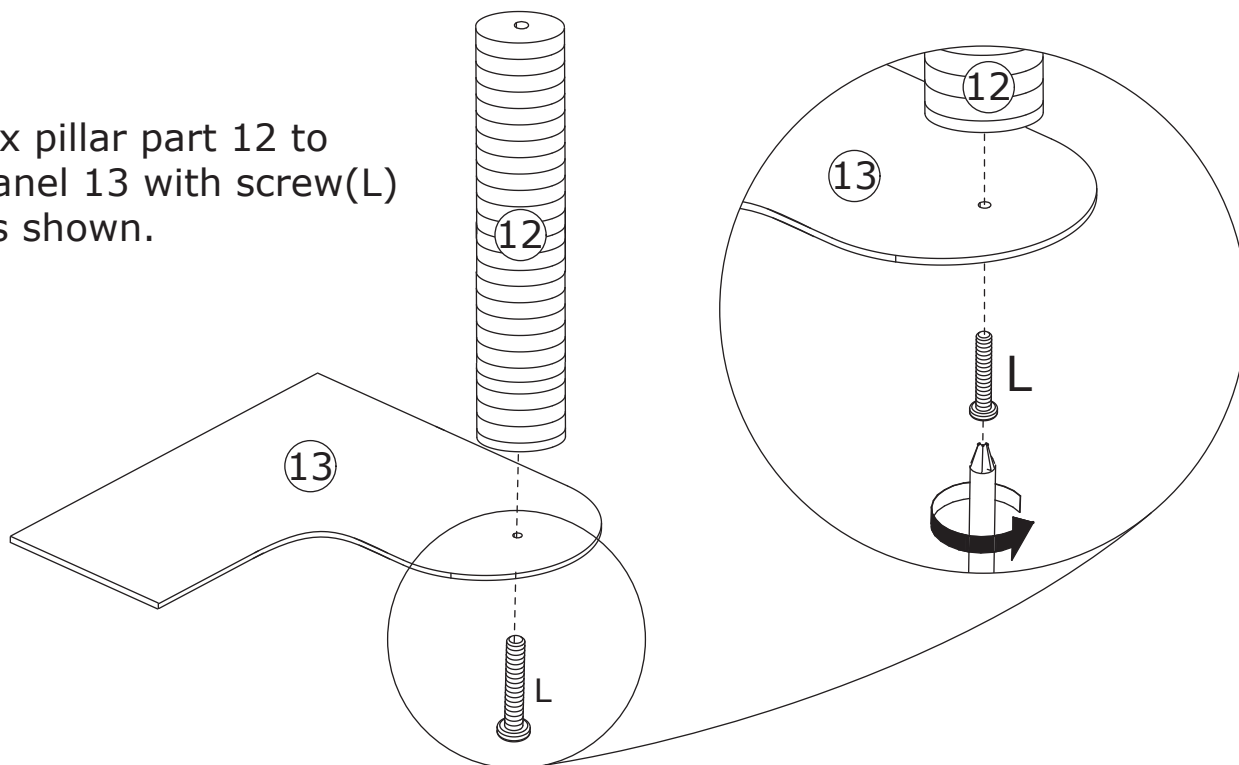


# 20


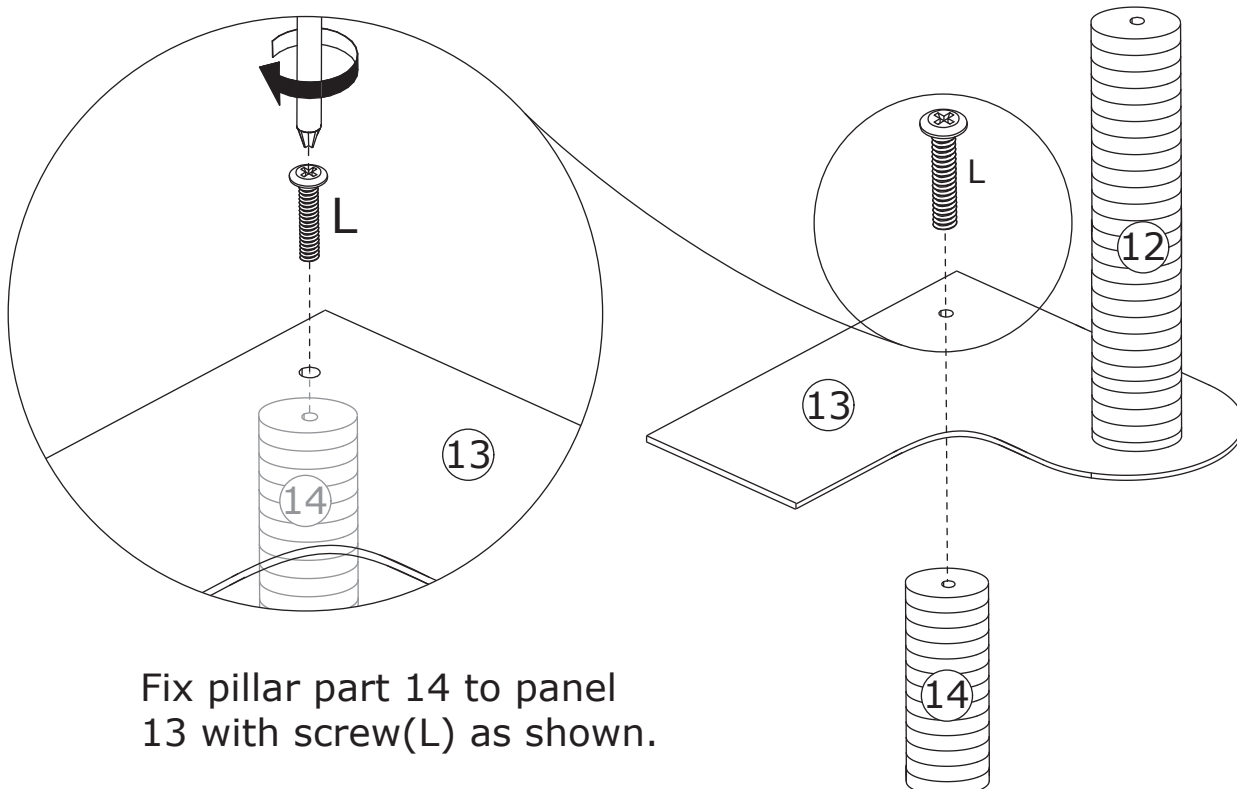 
 


      Fix pillar part 14 to panel 13 with screw(L) as shown.



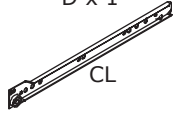
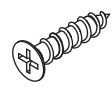
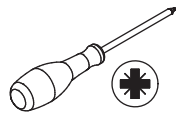
21

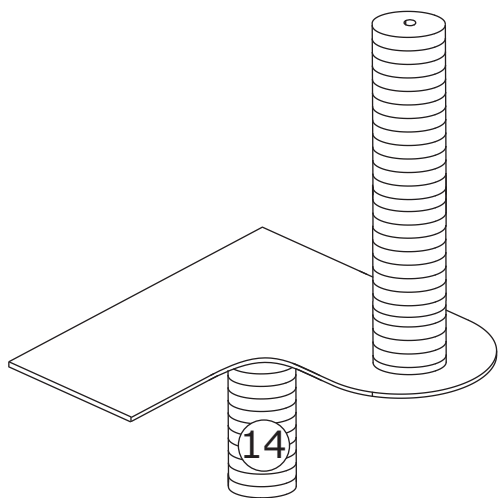
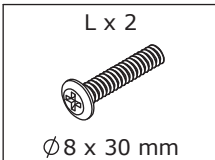


Fix pillar part 14 to panel 15 with screw(L) as shown.

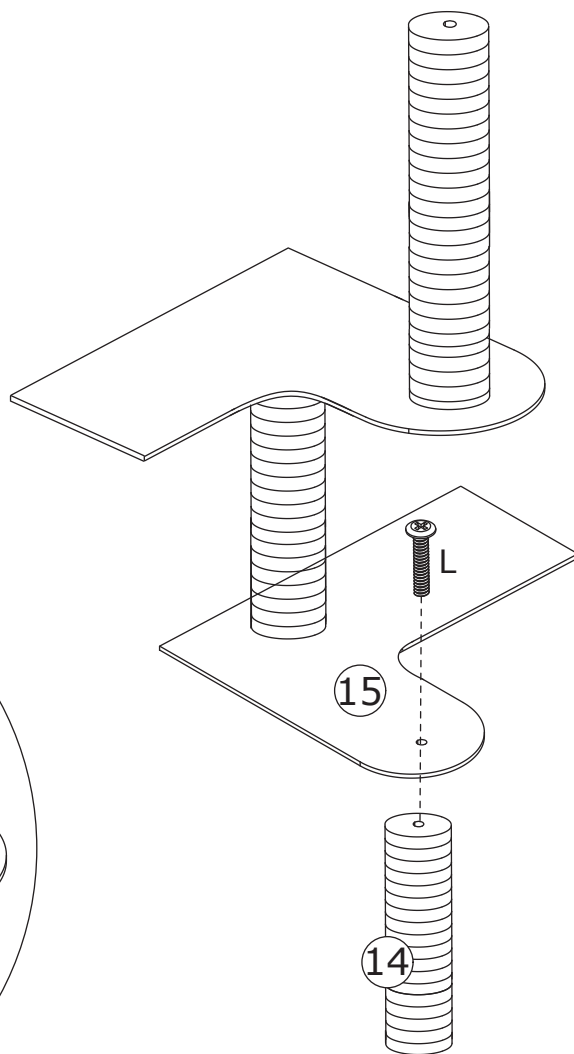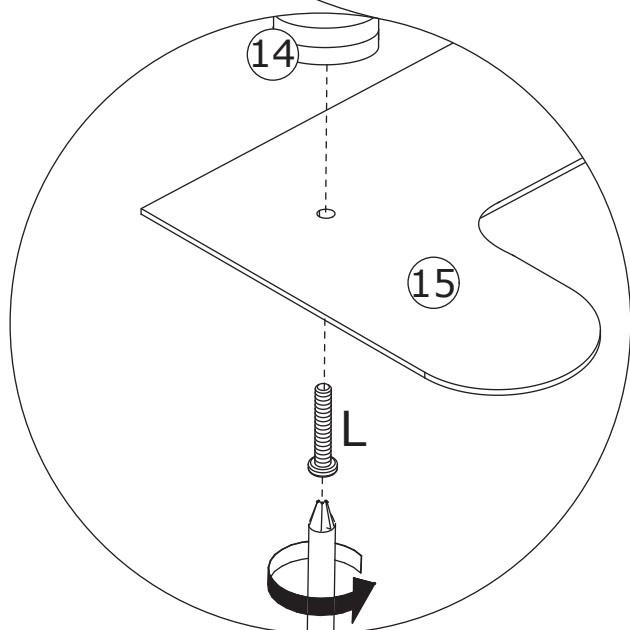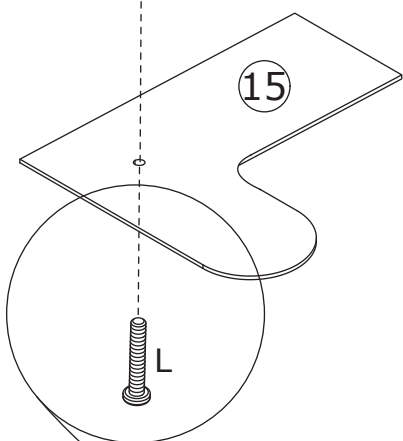

# 22




 
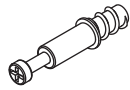 
<p>A x 7</p>  <p>Ø6 x 35 mm</p>	<p>C x 4</p>  <p>Ø8 x 30 mm</p>	<p>D x 1</p> <p>CL</p>  <p>L = 400 mm</p>	<p>E x 2</p>  <p>Ø3 x 12 mm</p>	
--	--	--	---	---

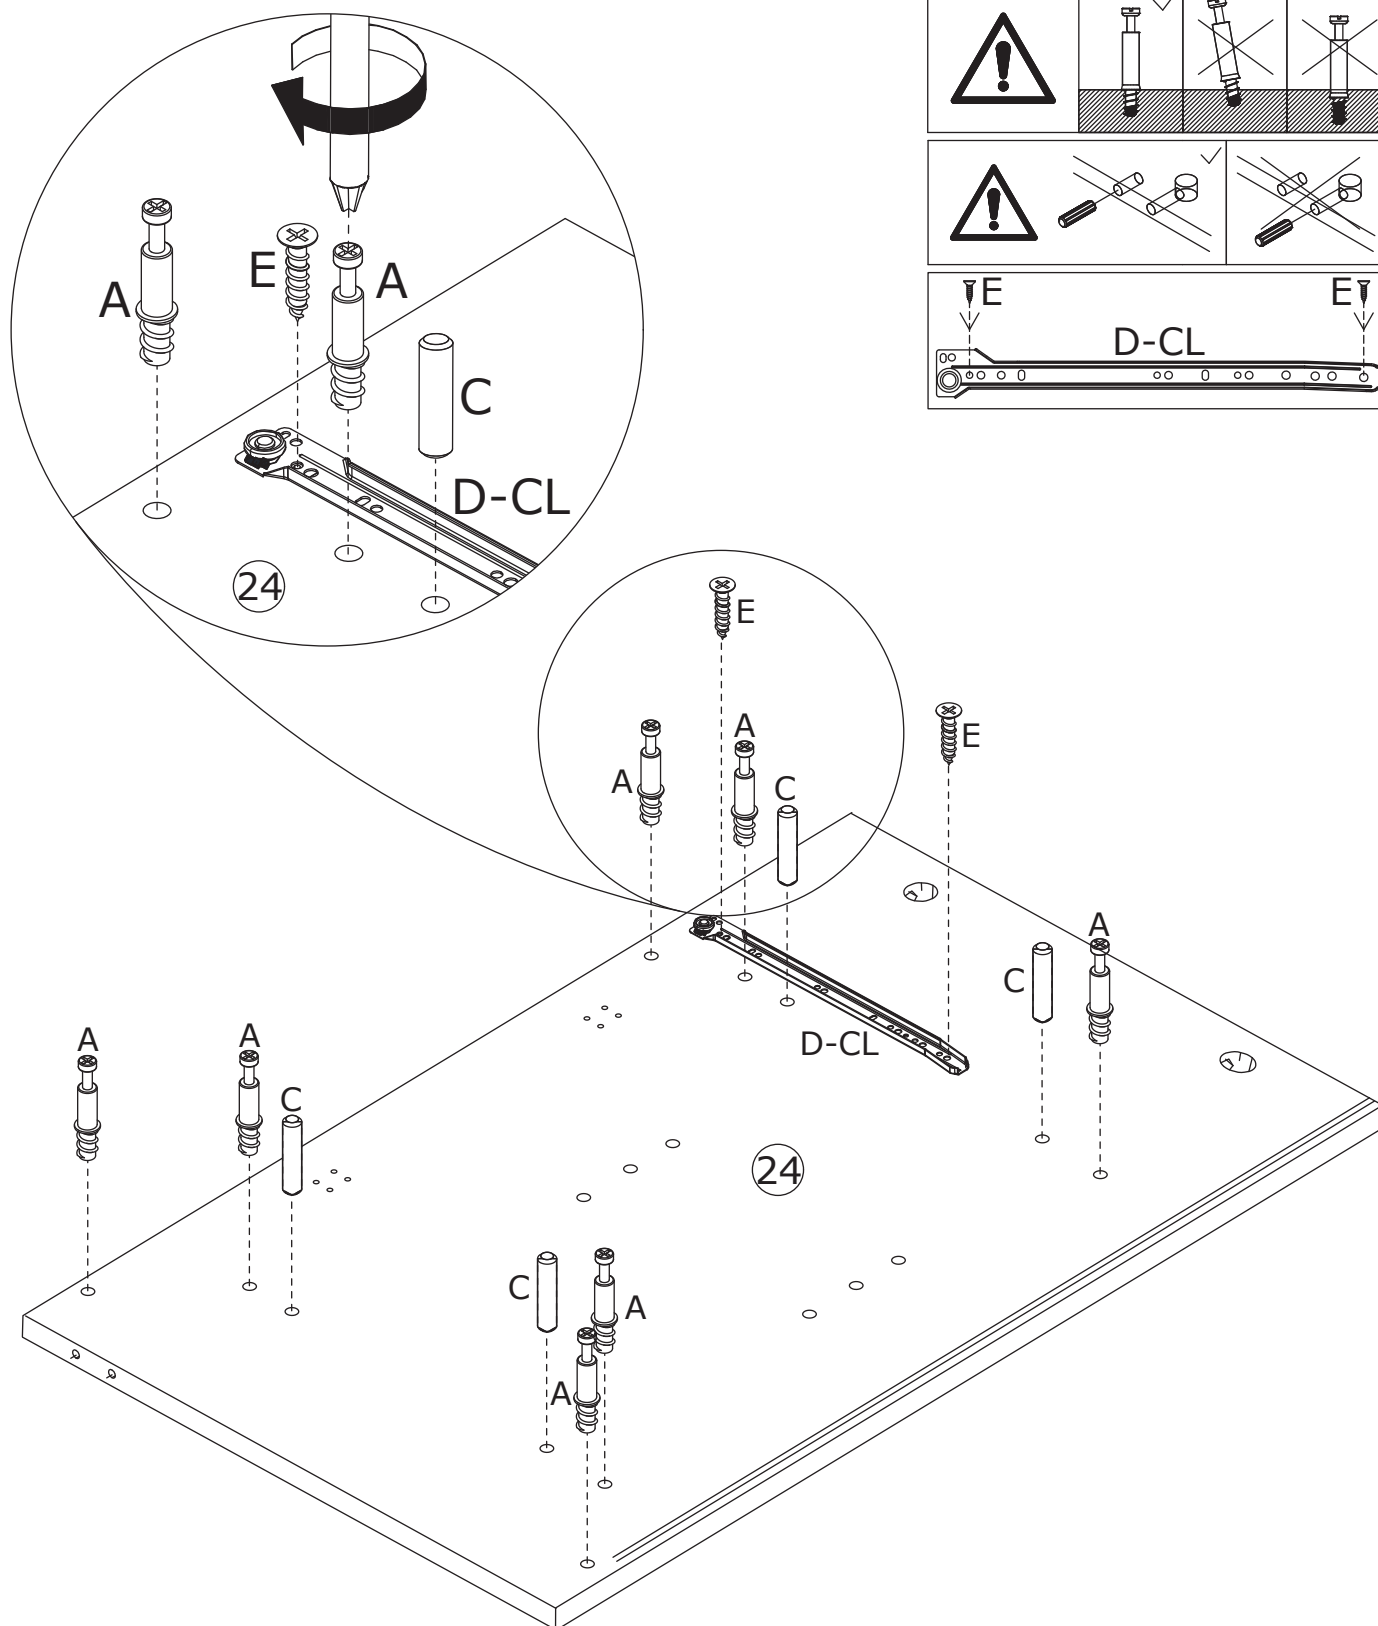
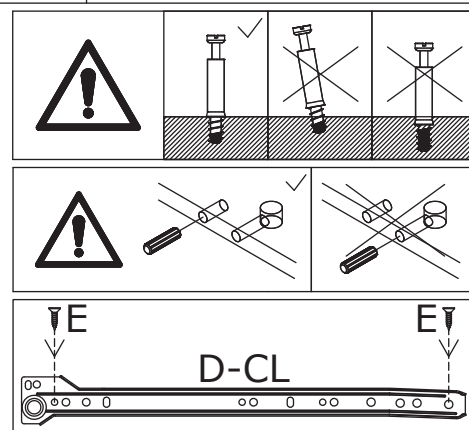


Screw eccentric rod(A) and insert **wooden dowel(C)** into panel 24 at first.  
Fix rail(CL) to panel 24 with screw(E) as shown.



# 23

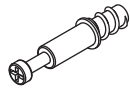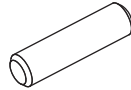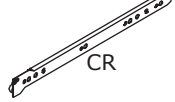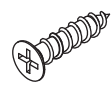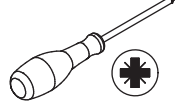
<p>A x 7</p>  <p>Ø6 x 35 mm</p>	<p>C x 4</p>  <p>Ø8 x 30 mm</p>	<p>D x 1</p> <p>CR</p>  <p>L = 400 mm</p>	<p>E x 2</p>  <p>Ø3 x 12 mm</p>	
--	--	--	---	---

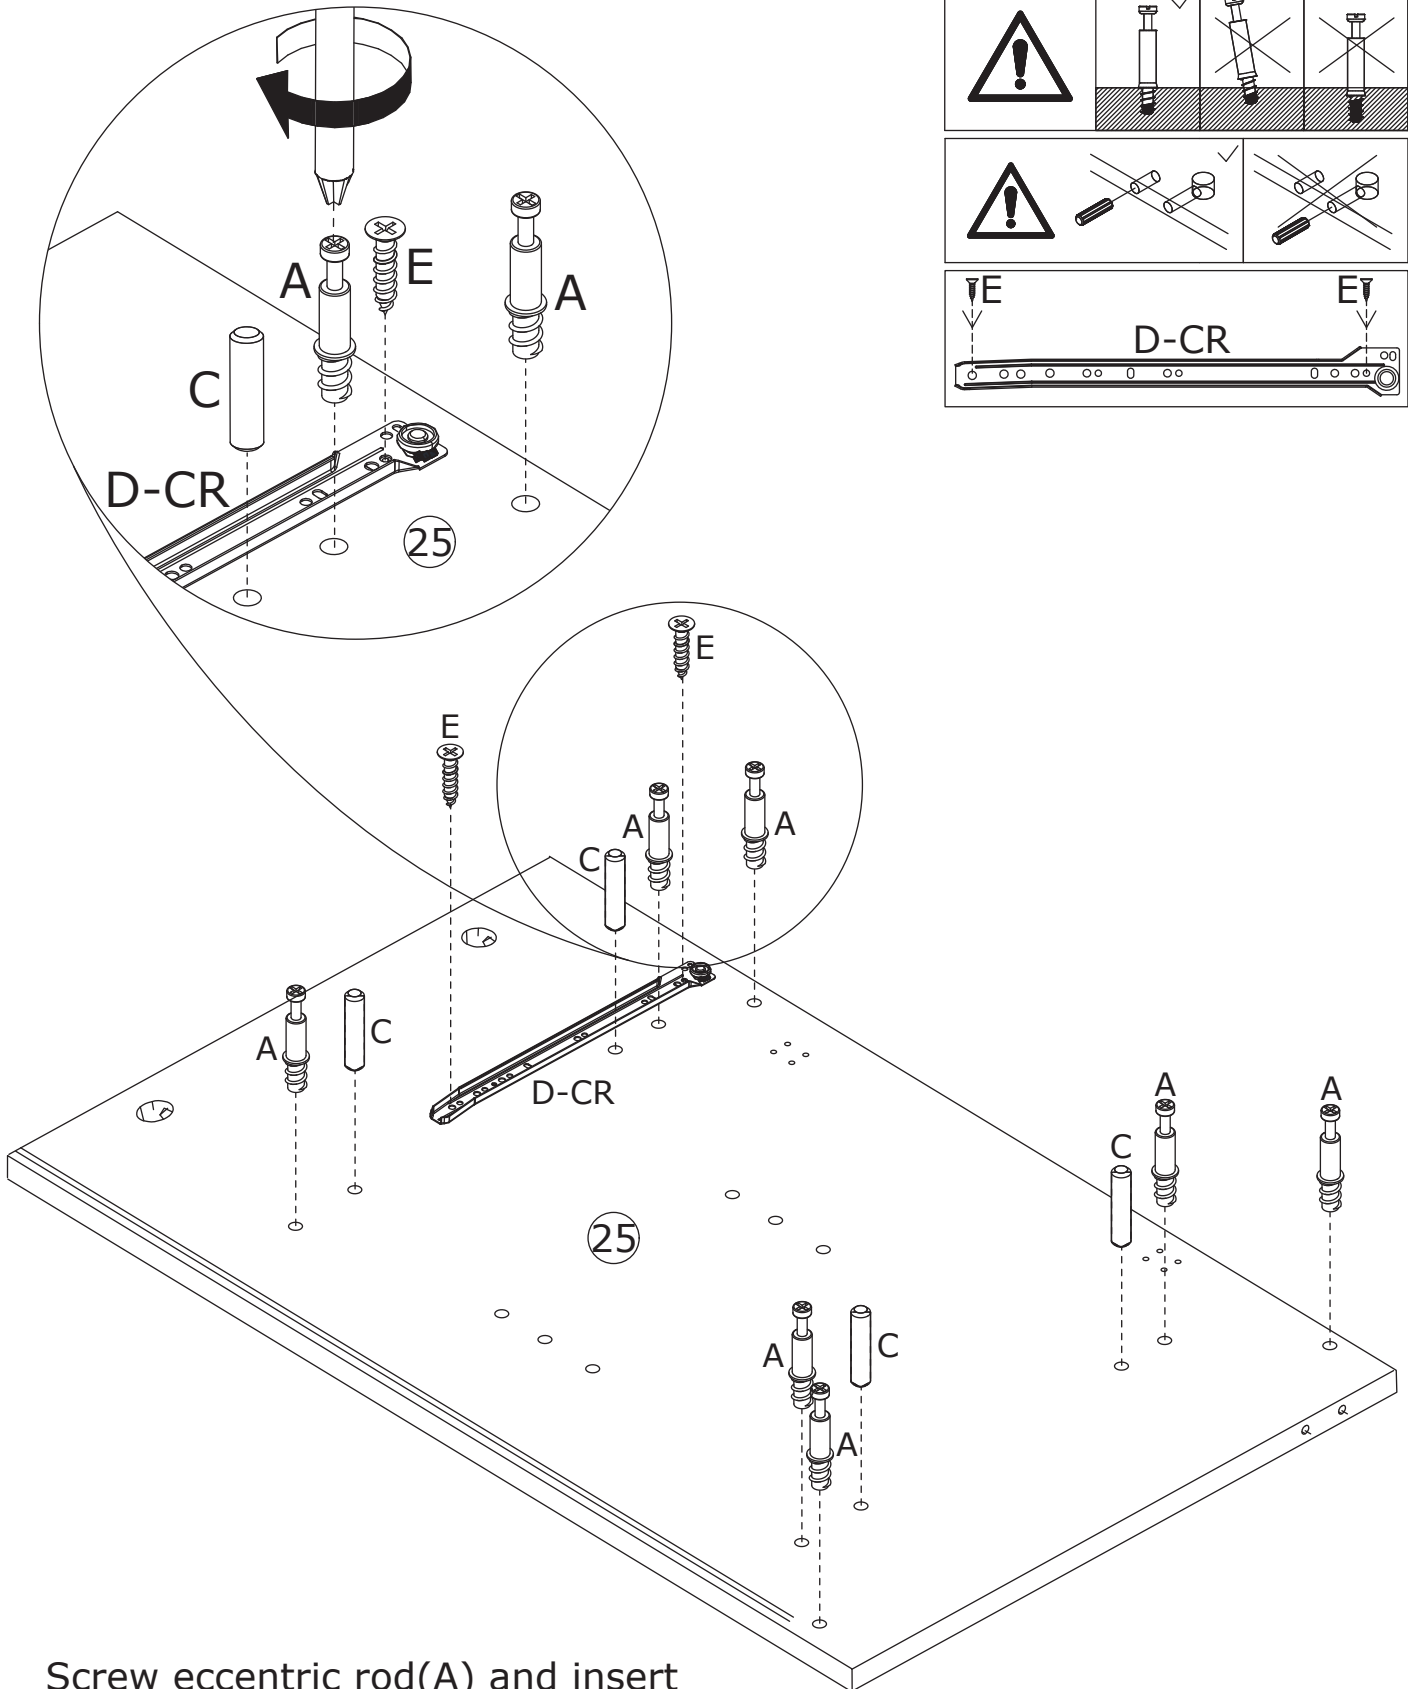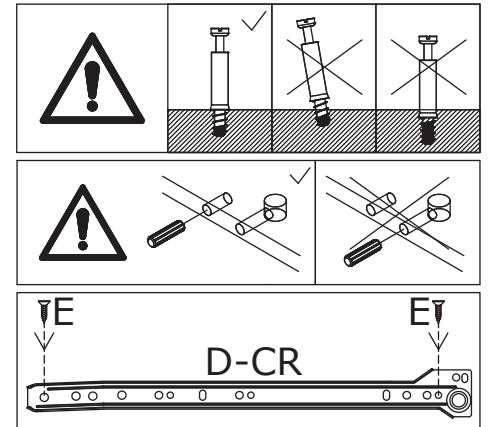  





Screw eccentric rod(A) and insert **wooden dowel(C)** into panel 25 at first. Fix rail(CR) to panel 25 with screw(E) as shown.

# 24

 A x 6




Ø6 x 35 mm

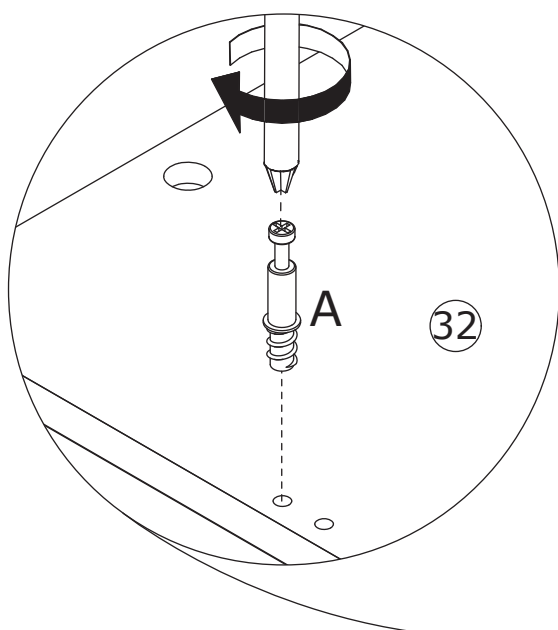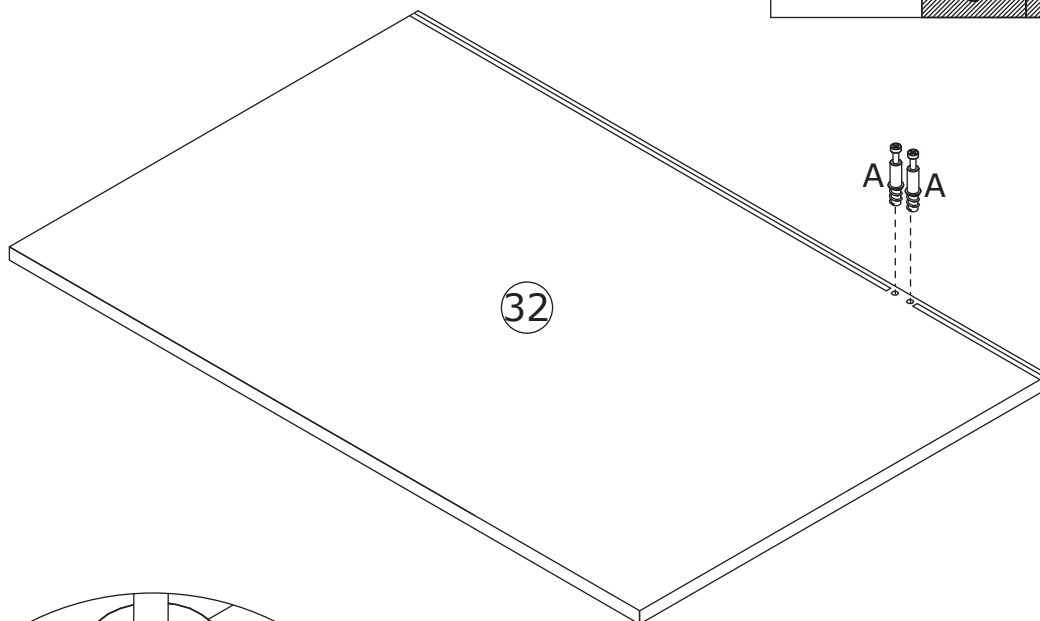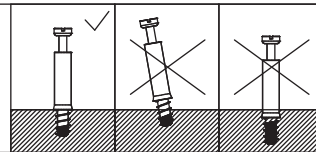    


180°

 Screw eccentric rod(A) into panel 32 at first.  
**Flip to back**, screw eccentric rod(A) into as well.



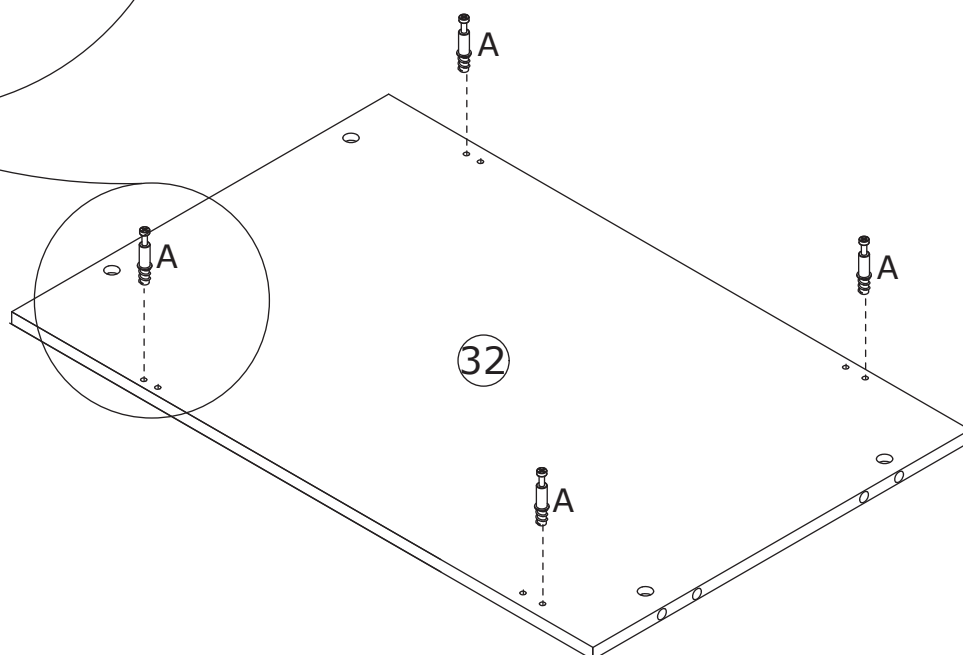


# 25

 
A x 6




Ø6 x 35 mm

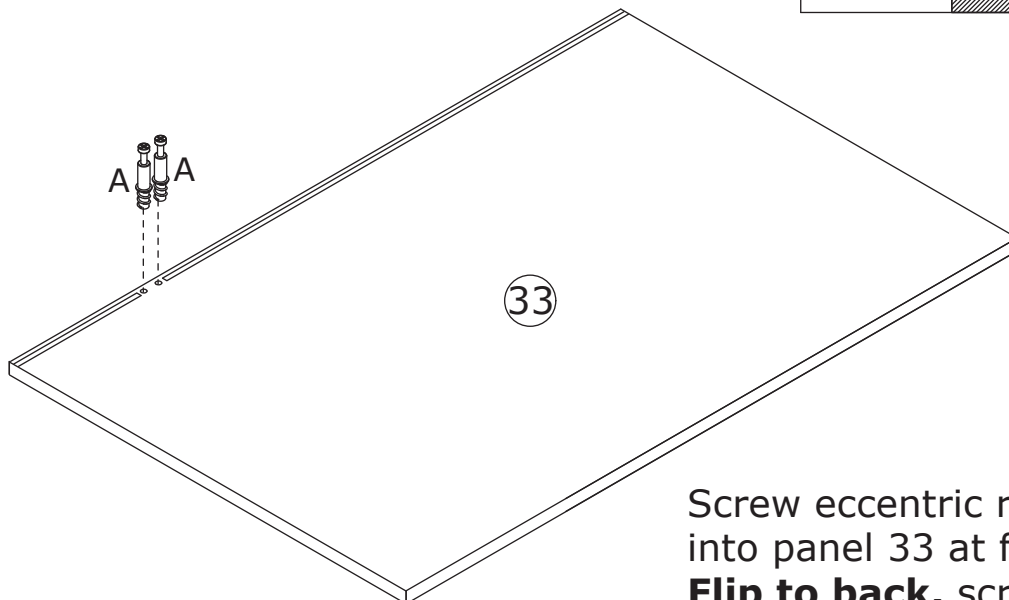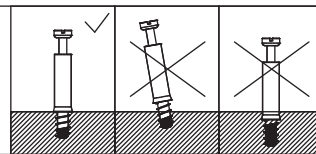   


 
Screw eccentric rod(A)  
into panel 33 at first.  
**Flip to back**, screw  
eccentric rod(A) into as well.

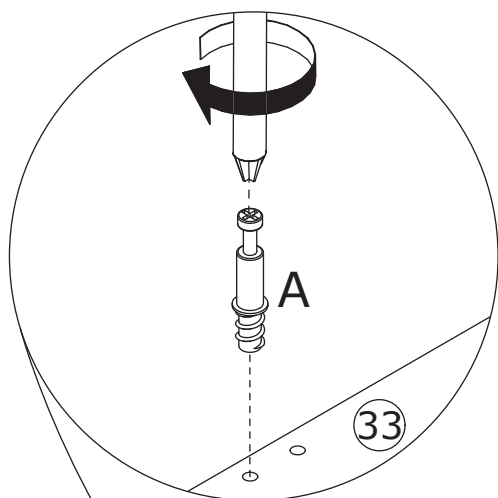




180°

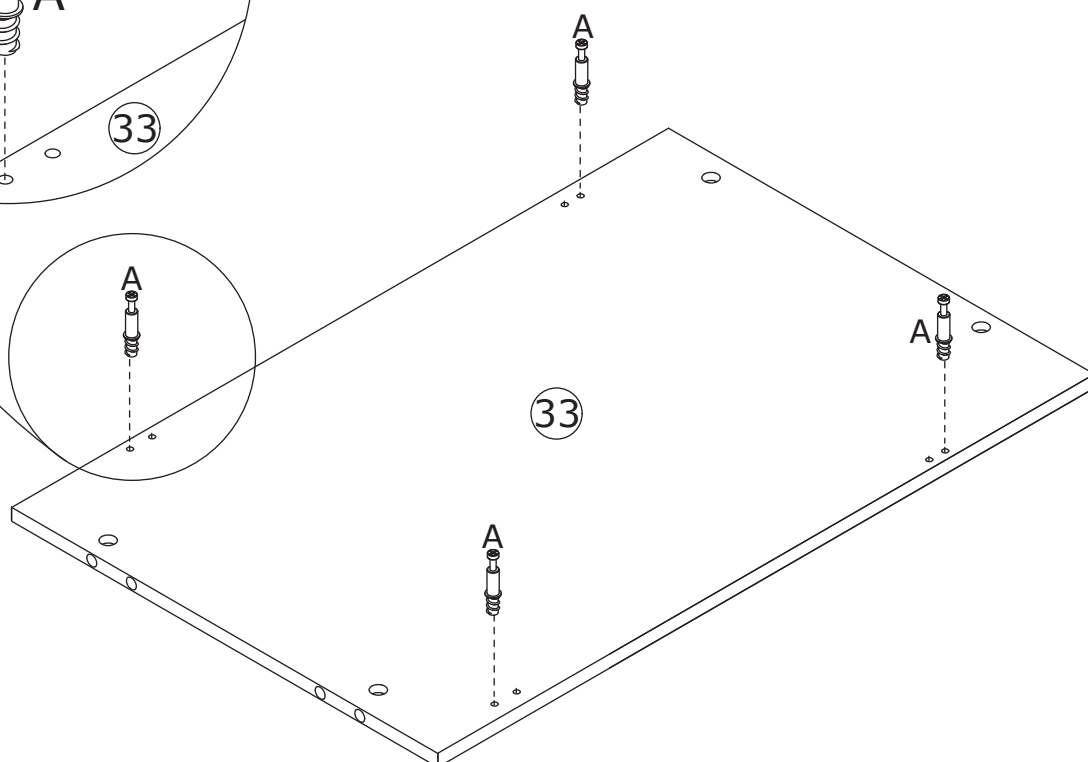 


# 26

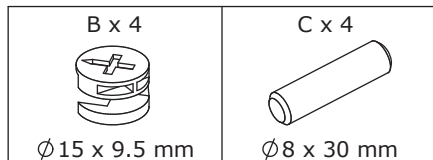  

 
 
 
Attach panel 35 to panel 32 using **wooden dowel(C)**, add **cam lock(B)** into panel 35 and turn clockwise to tighten as shown.

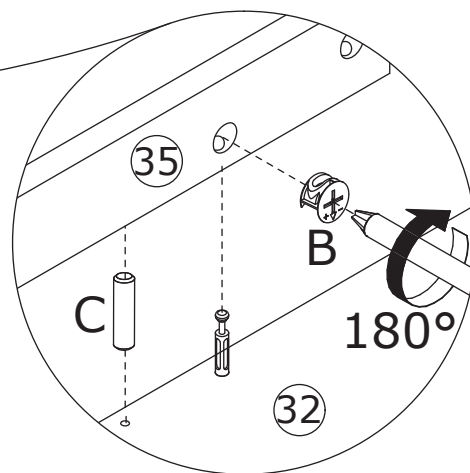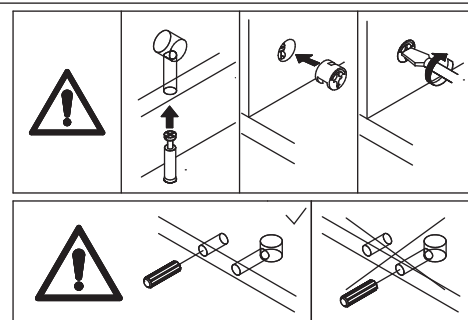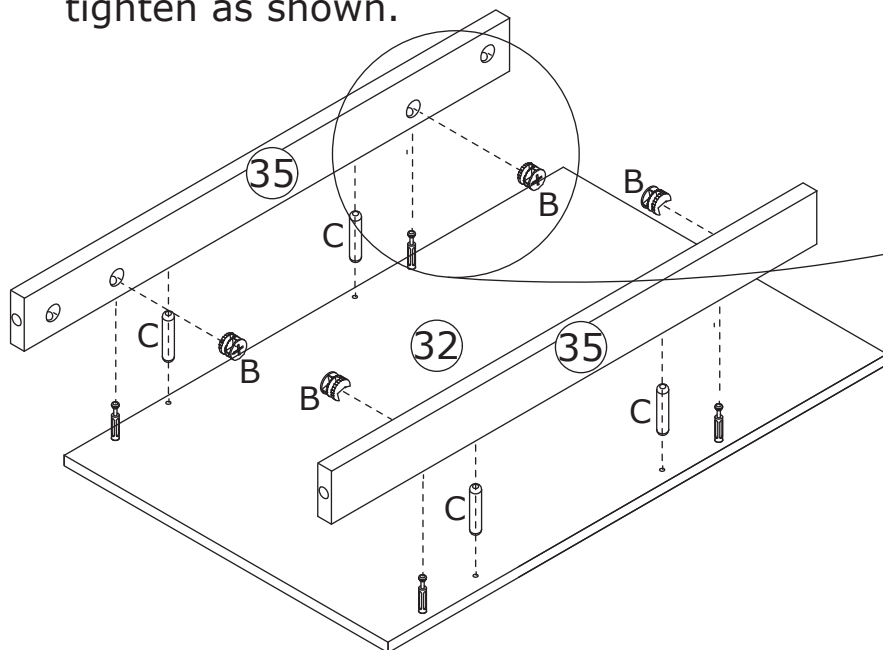



# 27

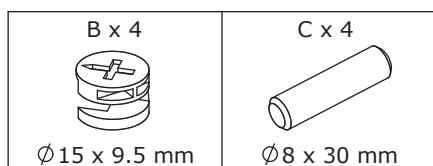 

 
 
 
Attach panel 34 to panel 34 using wooden dowel(C), add cam lock(B) into panel 34 and turn clockwise to tighten as shown.

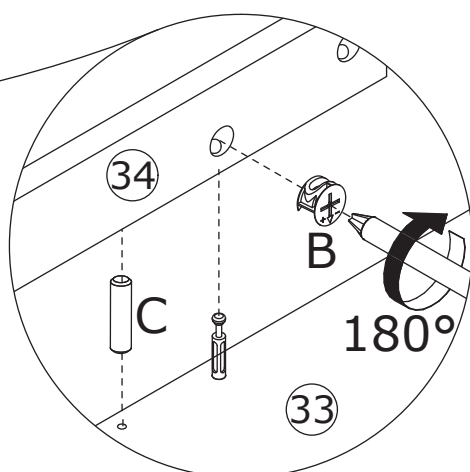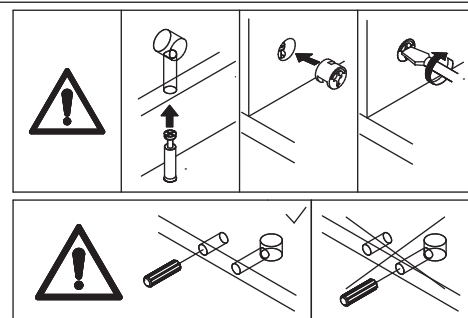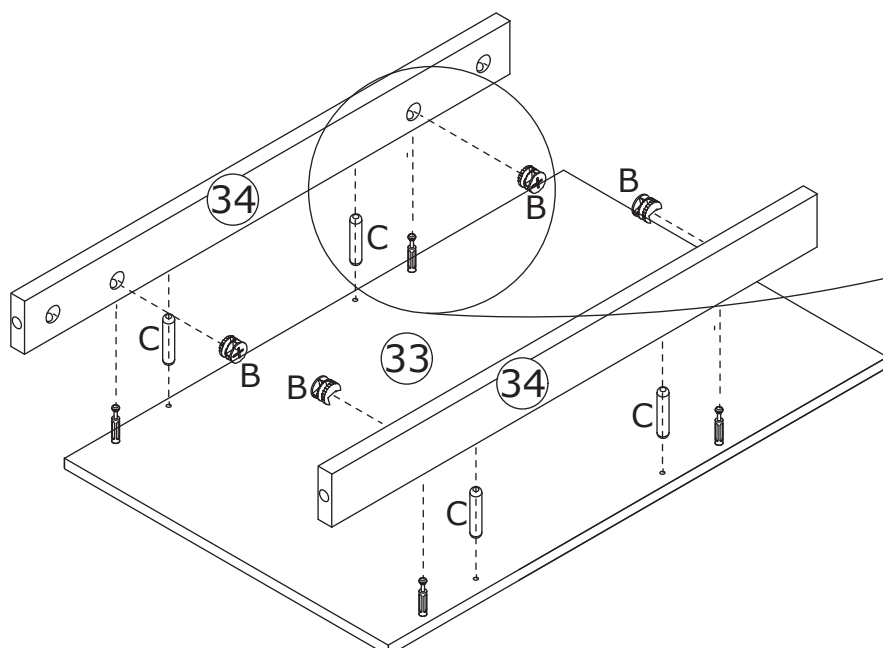



# 28

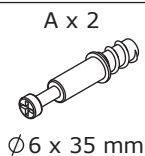  

 
 
 
Screw eccentric rod(A) and insert **wooden dowel(Q)** into panel 26 as shown.

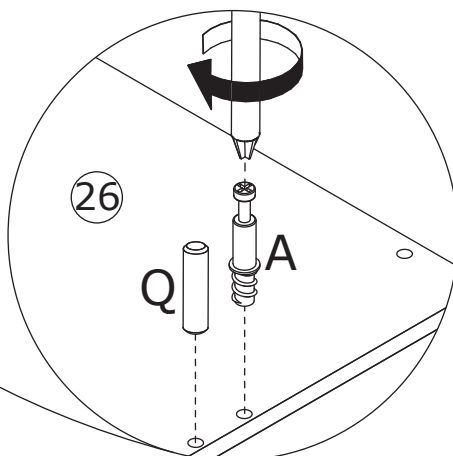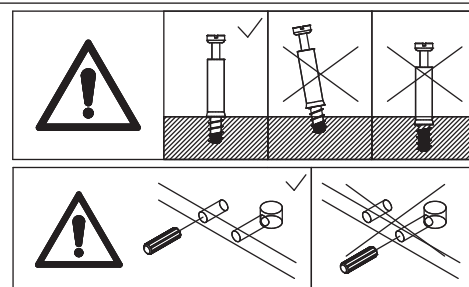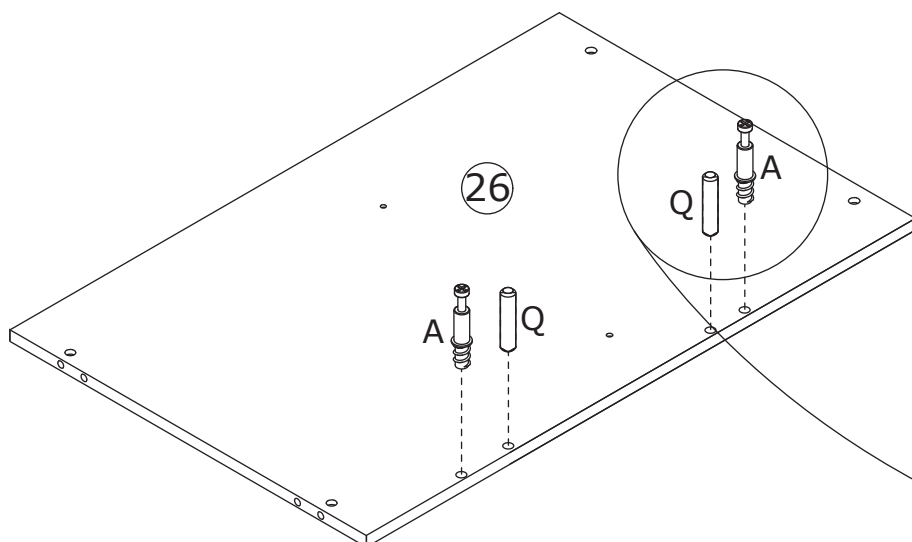



# 29

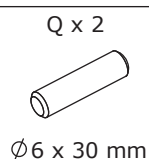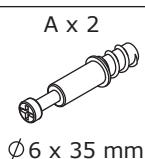  

 
 
 
Screw eccentric rod(A) and insert **wooden dowel(Q)** into panel 27 as shown.

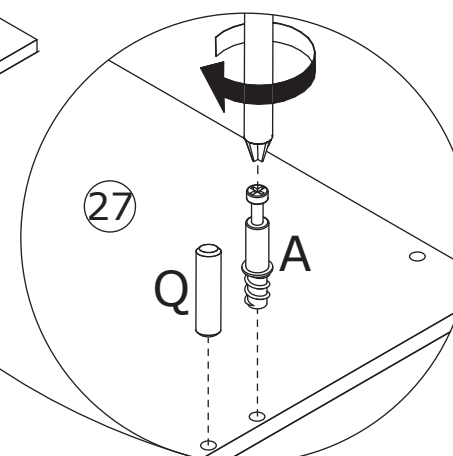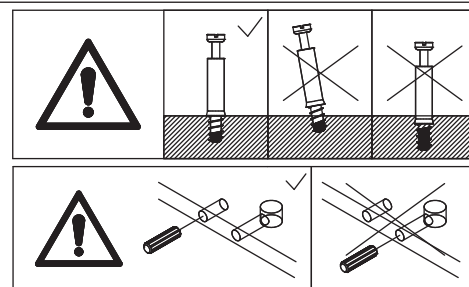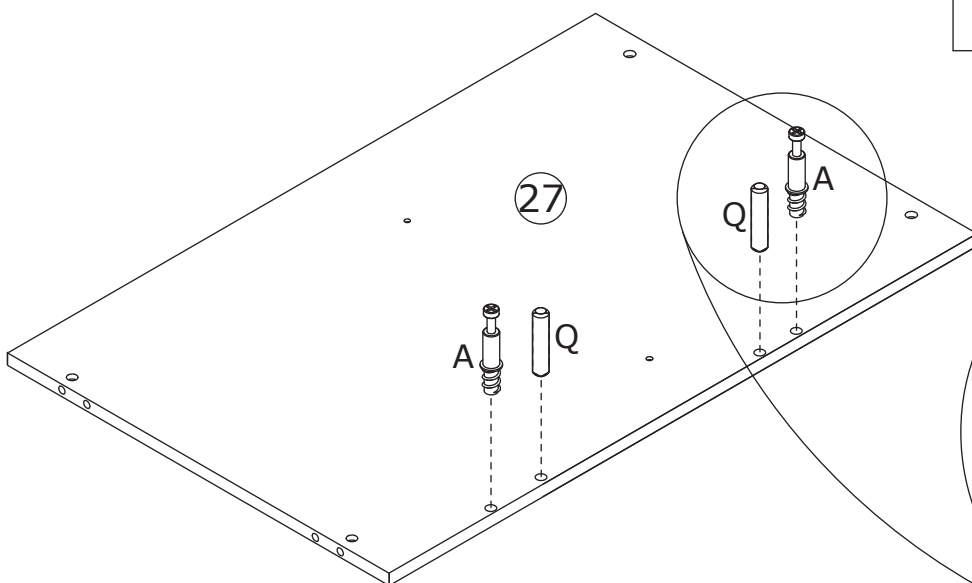



# 30

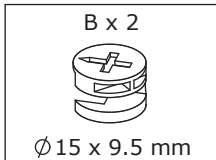  

 
 
 
Attach panel 16 to panel 26, add cam lock(B) into panel 16 and turn clockwise to tighten as shown.

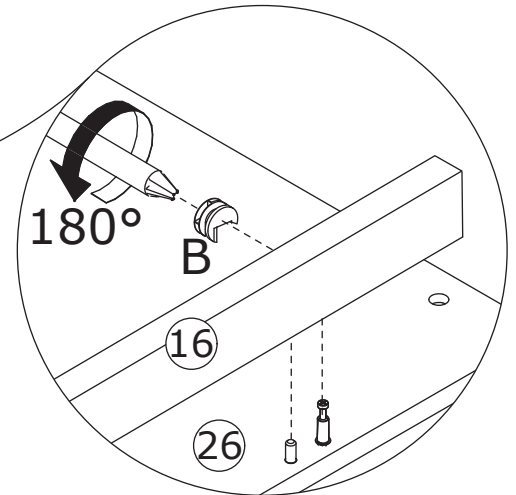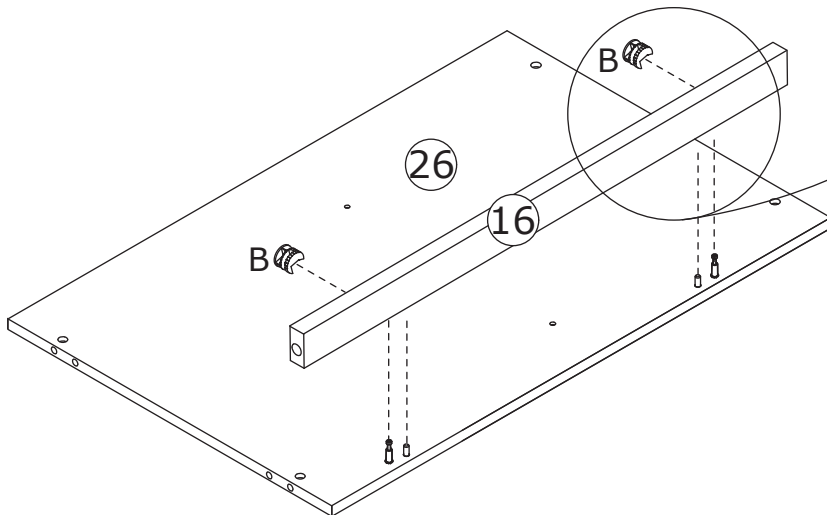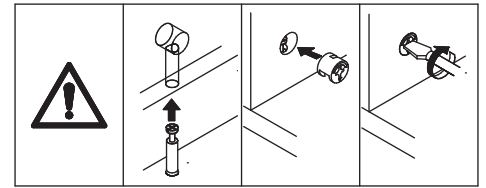

# 31

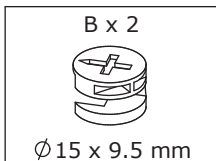  


   Attach panel 29 to panel 27, add cam lock(B) into panel 29 and turn clockwise to tighten as shown.

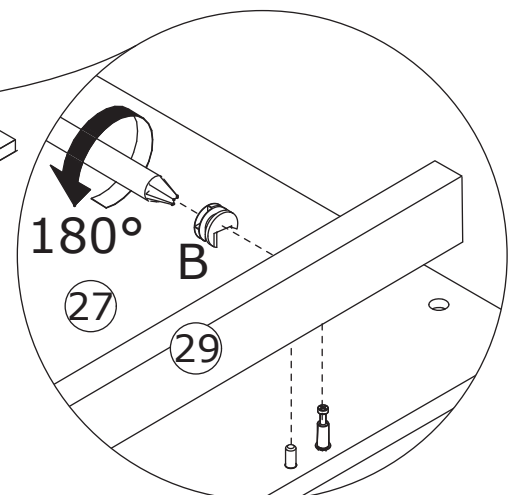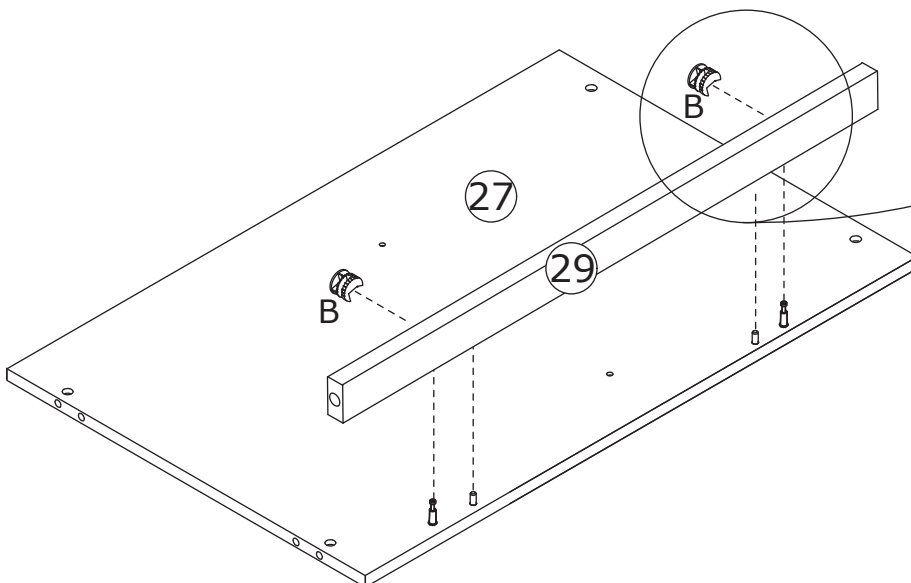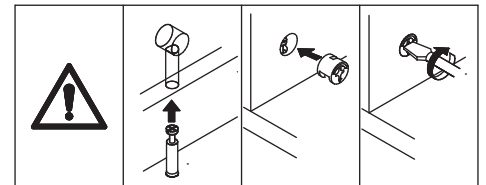

# 32

 C x 4







Ø8 x 30 mm



G x 4



    
Ø4 x 30 mm

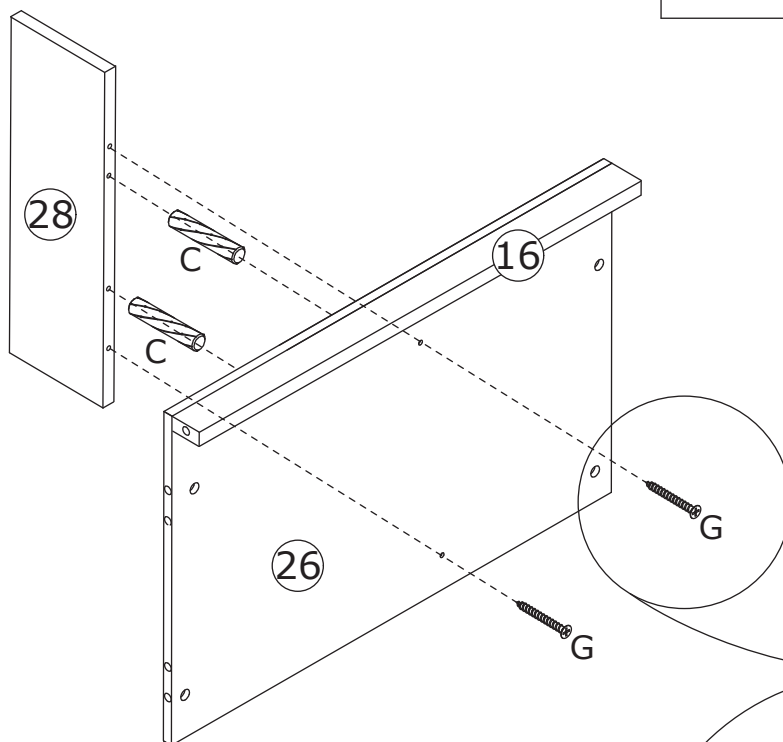




  Attach panel 28 to panel 26 and 27 respectively using **wooden dowel (C)**, and fix with screw (G) as shown.

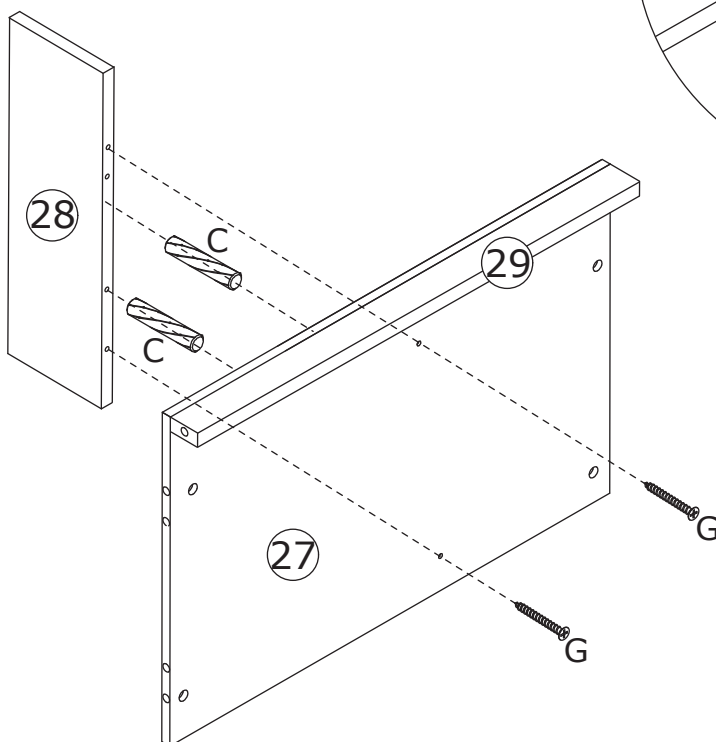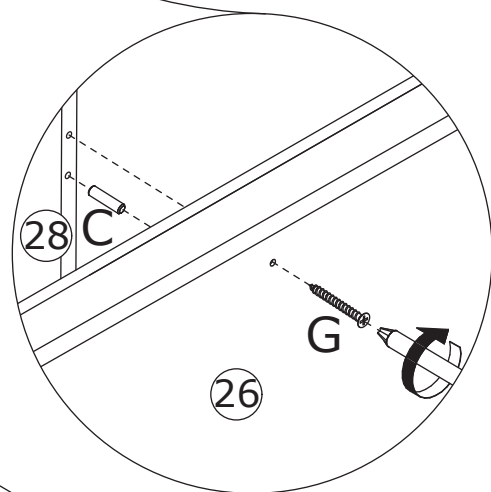


# 33

   B x 7  
  
 Ø 15 x 9.5 mm

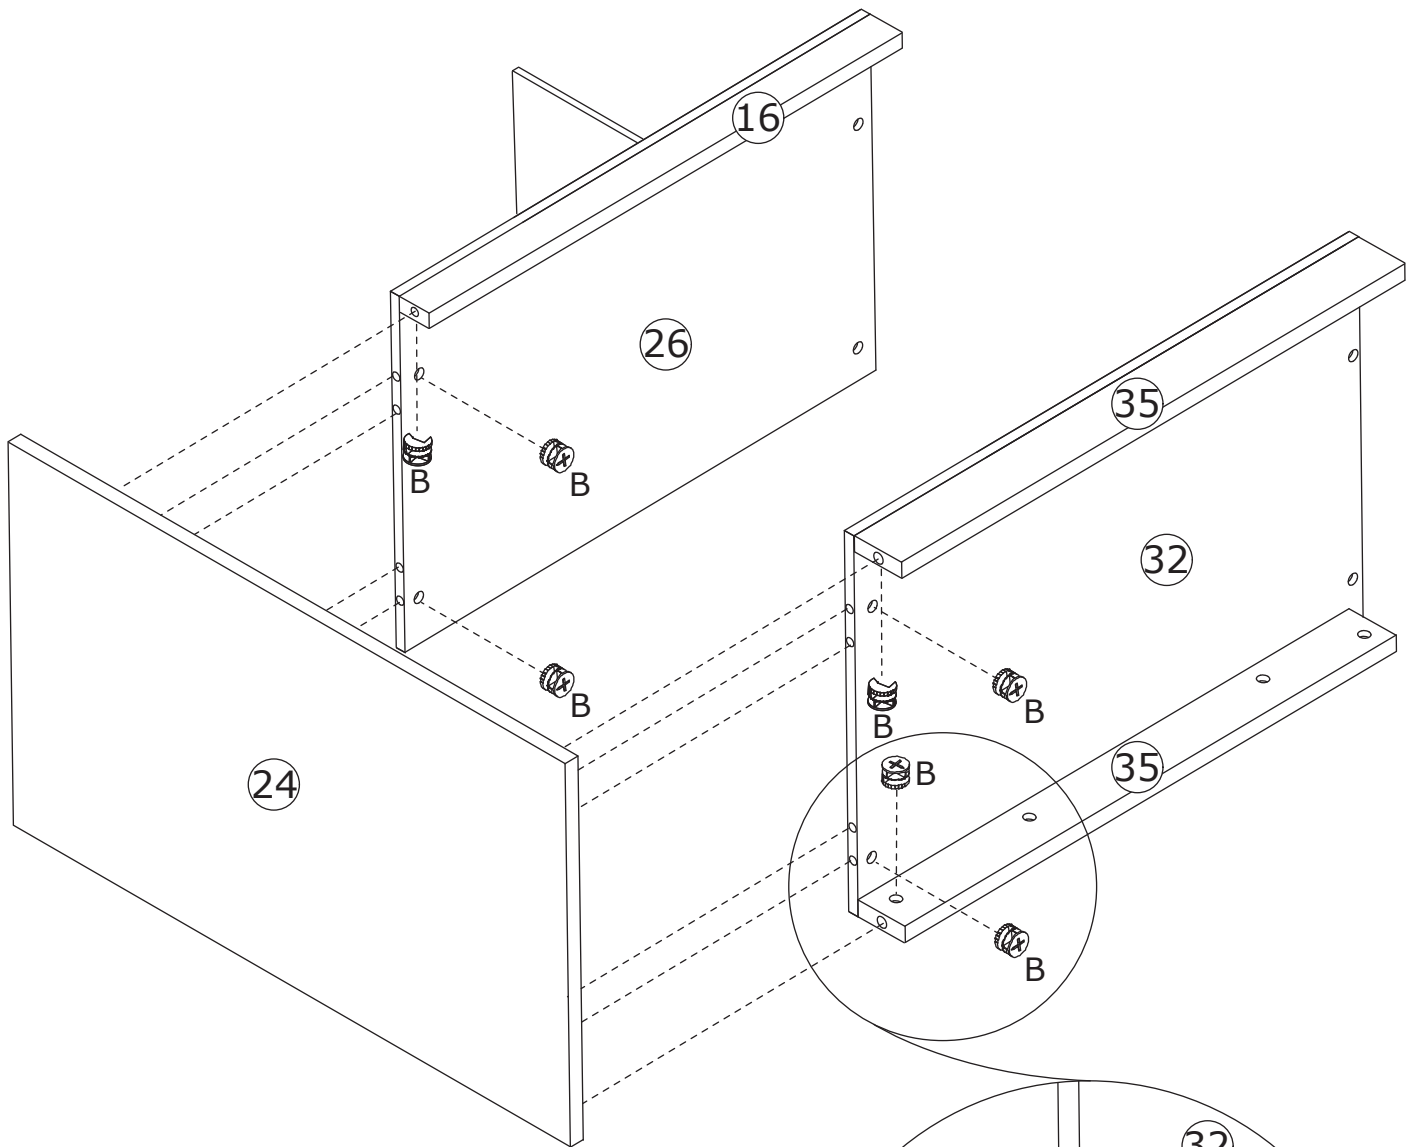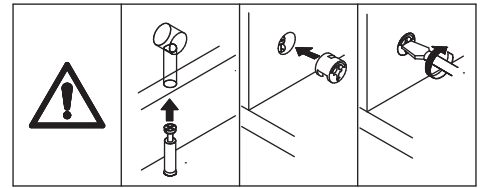

 Attach the two components to panel 24, add cam lock(B) into and turn clockwise to tighten as shown.



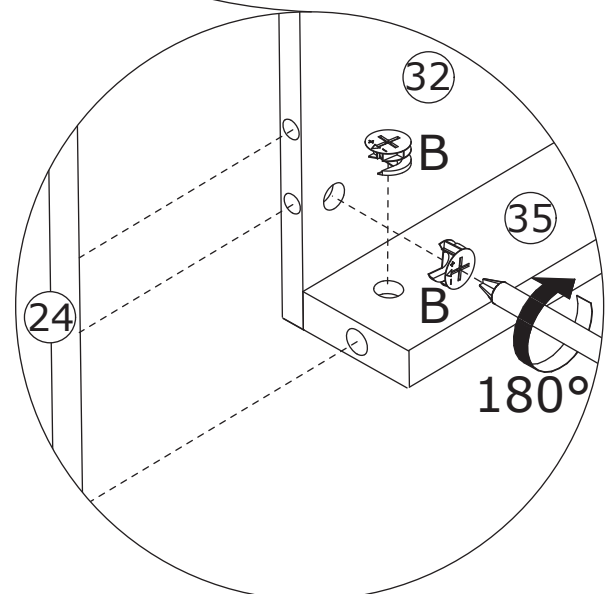




# 34

A x 14  
Ø6 x 35 mm

   C x 8  
Ø8 x 30 mm

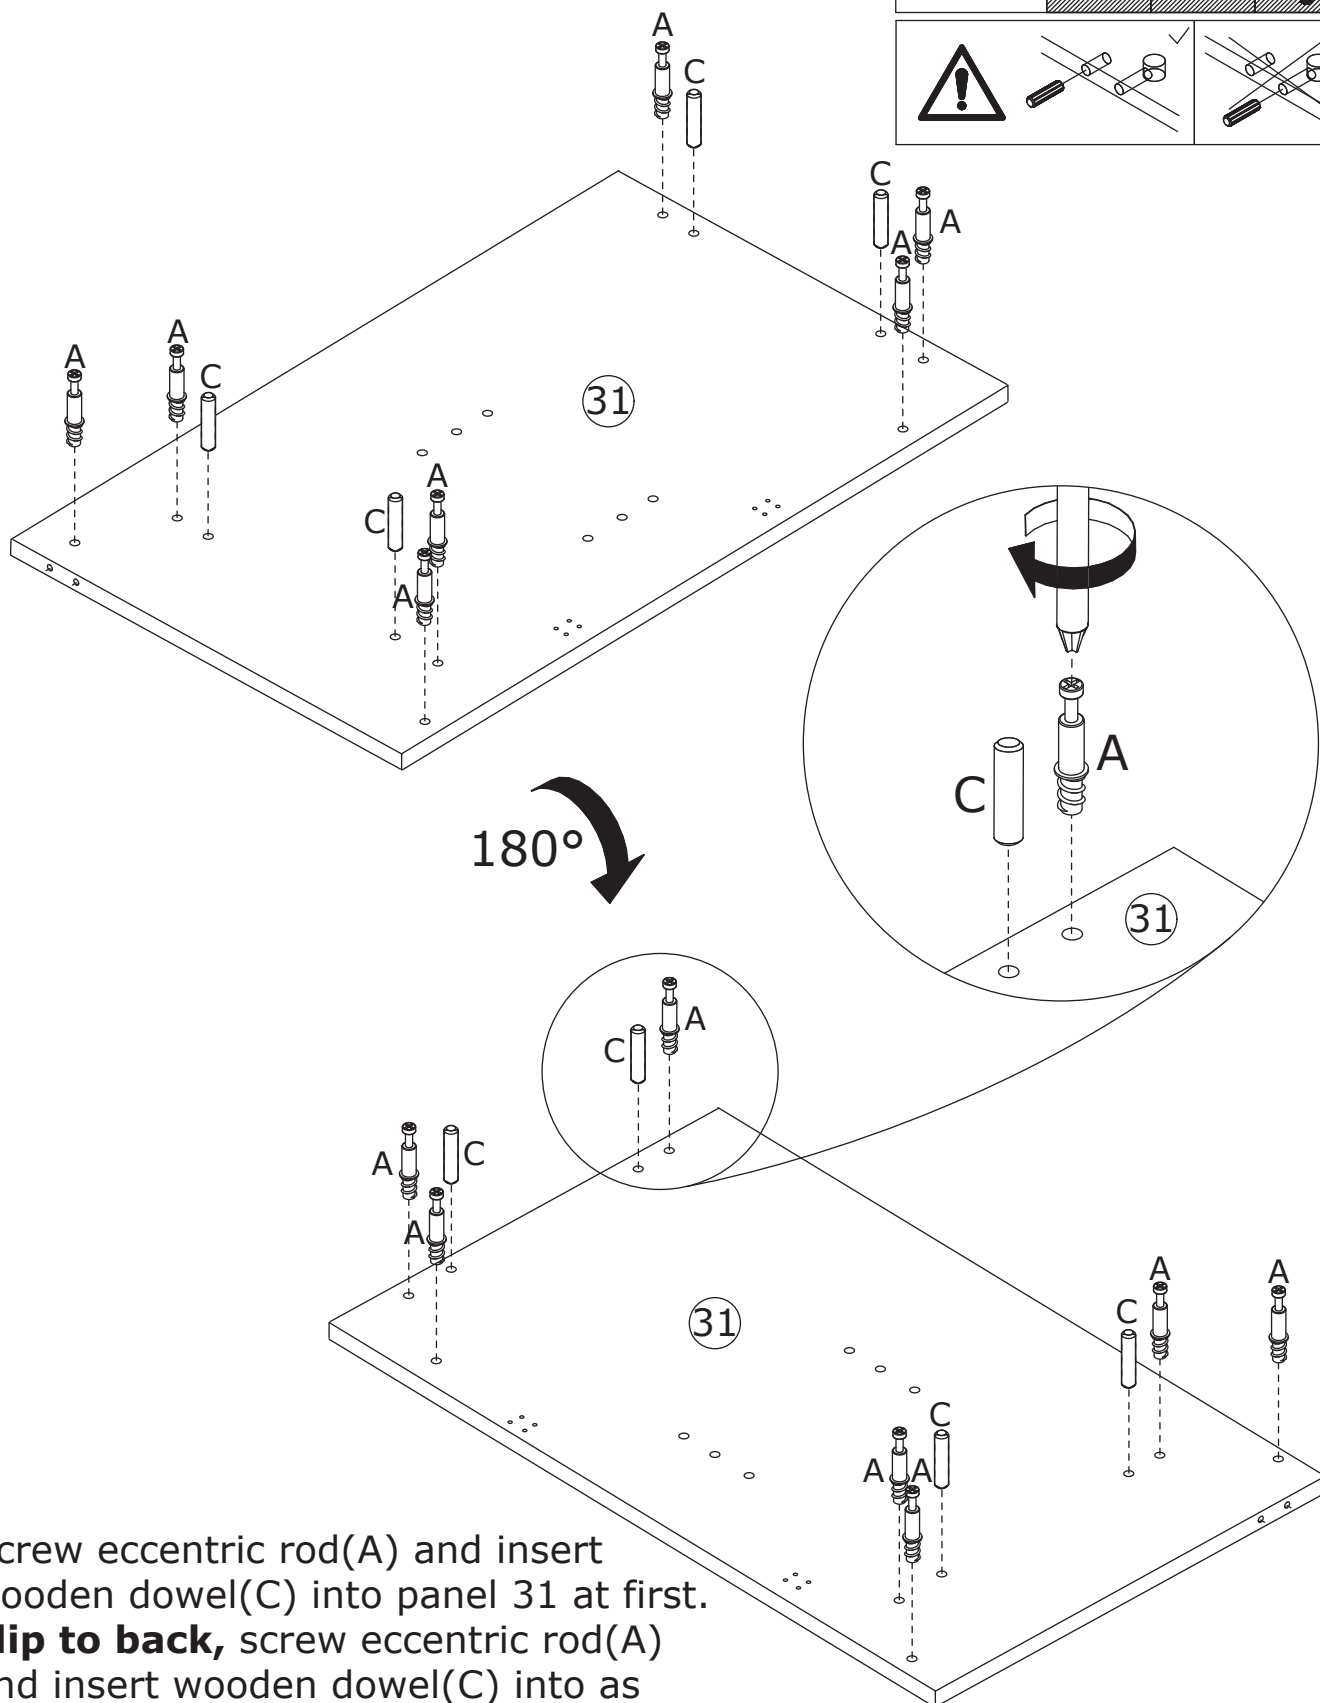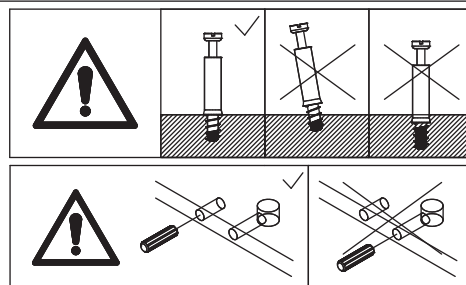



Screw eccentric rod(A) and insert wooden dowel(C) into panel 31 at first.  
**Flip to back**, screw eccentric rod(A) and insert wooden dowel(C) into as well.

# 35

  
B x 7






Ø 15 x 9.5 mm

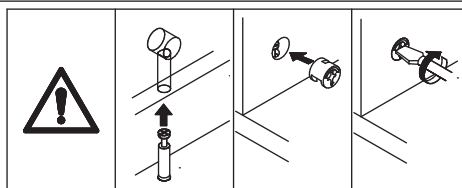

 
Attach panel 31 to panel 16, 26, 32 and 35,  
add cam lock(B) into and turn clockwise to  
tighten as shown.

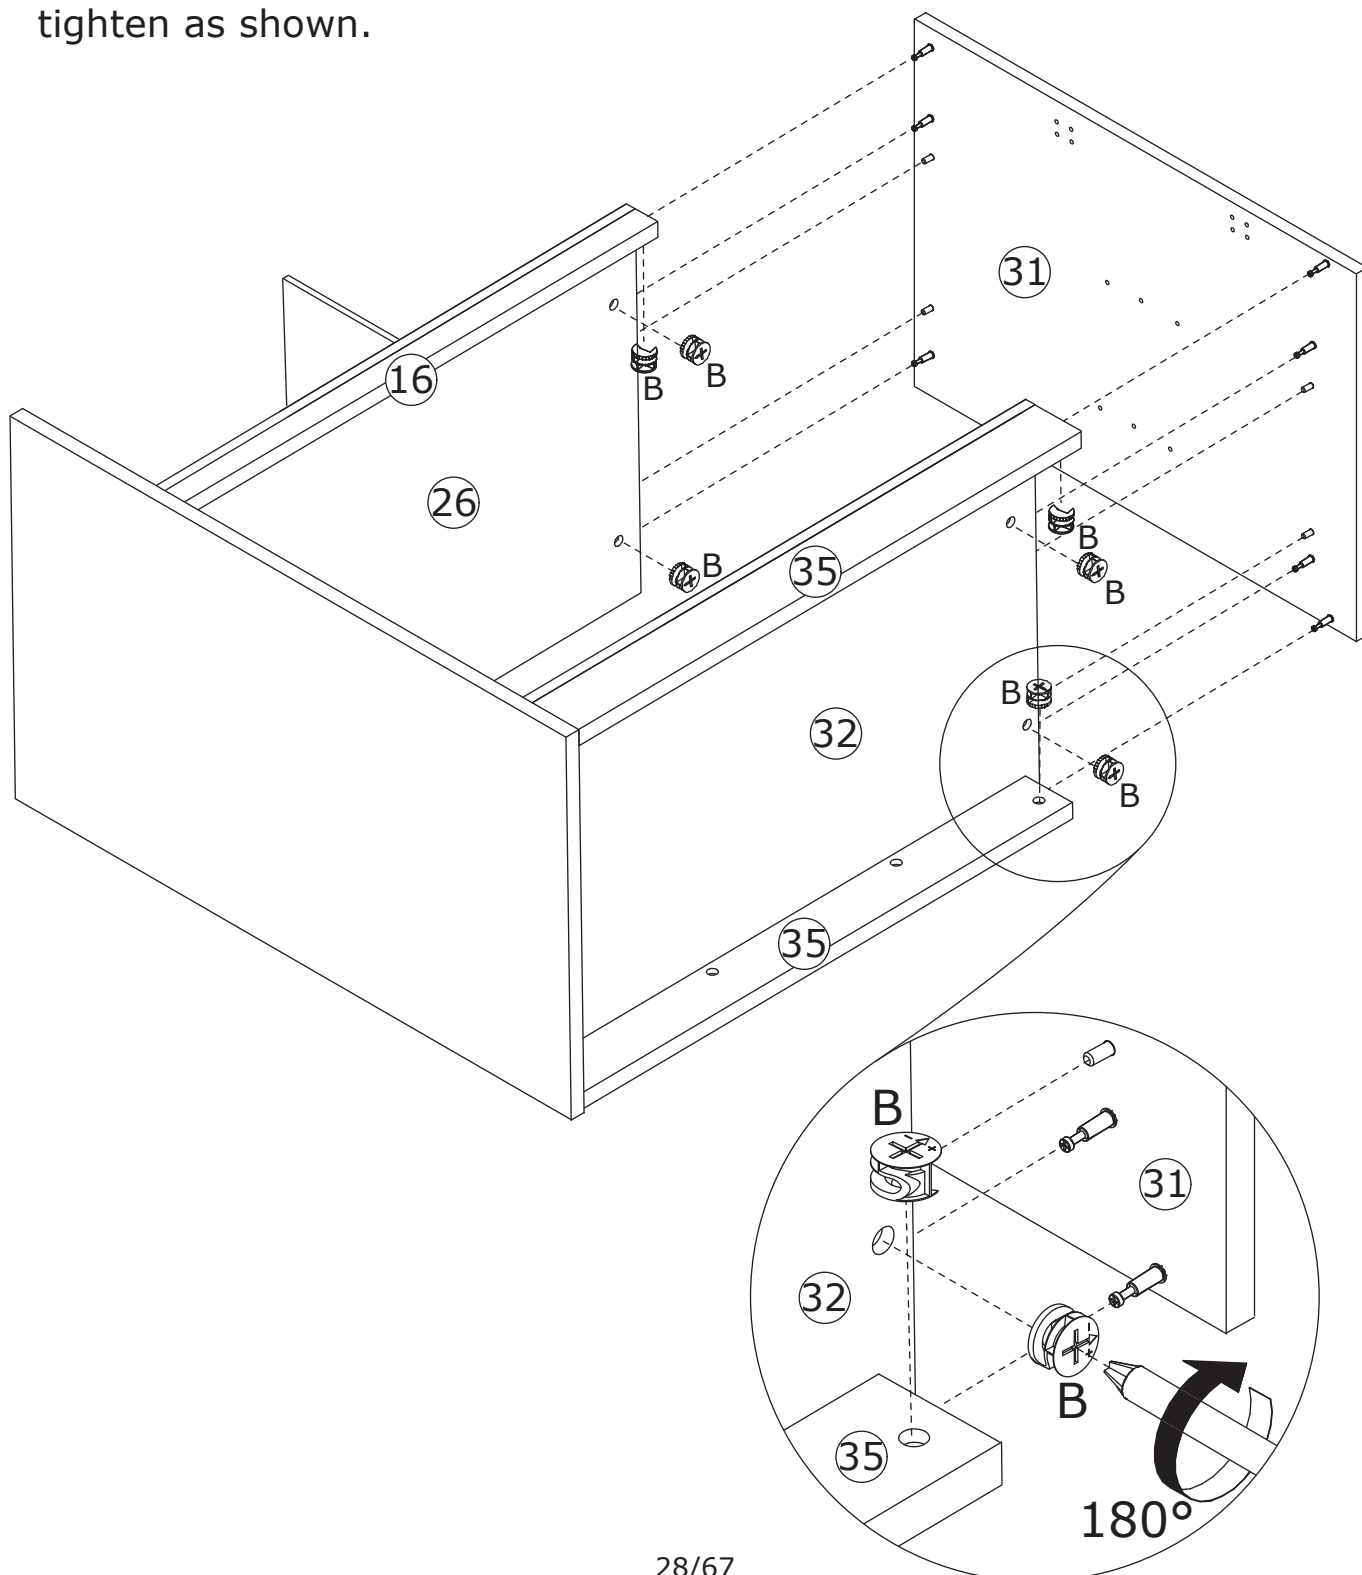

# 36

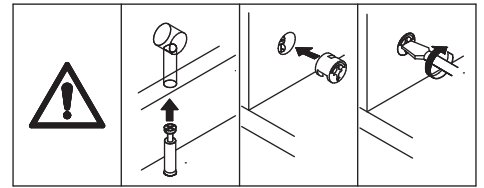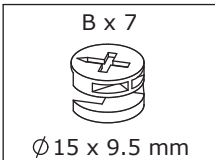   

 
Attach the two components(assembled in step 32)  
to panel 31, add cam lock(B) into and turn clockwise  
to tighten as shown.

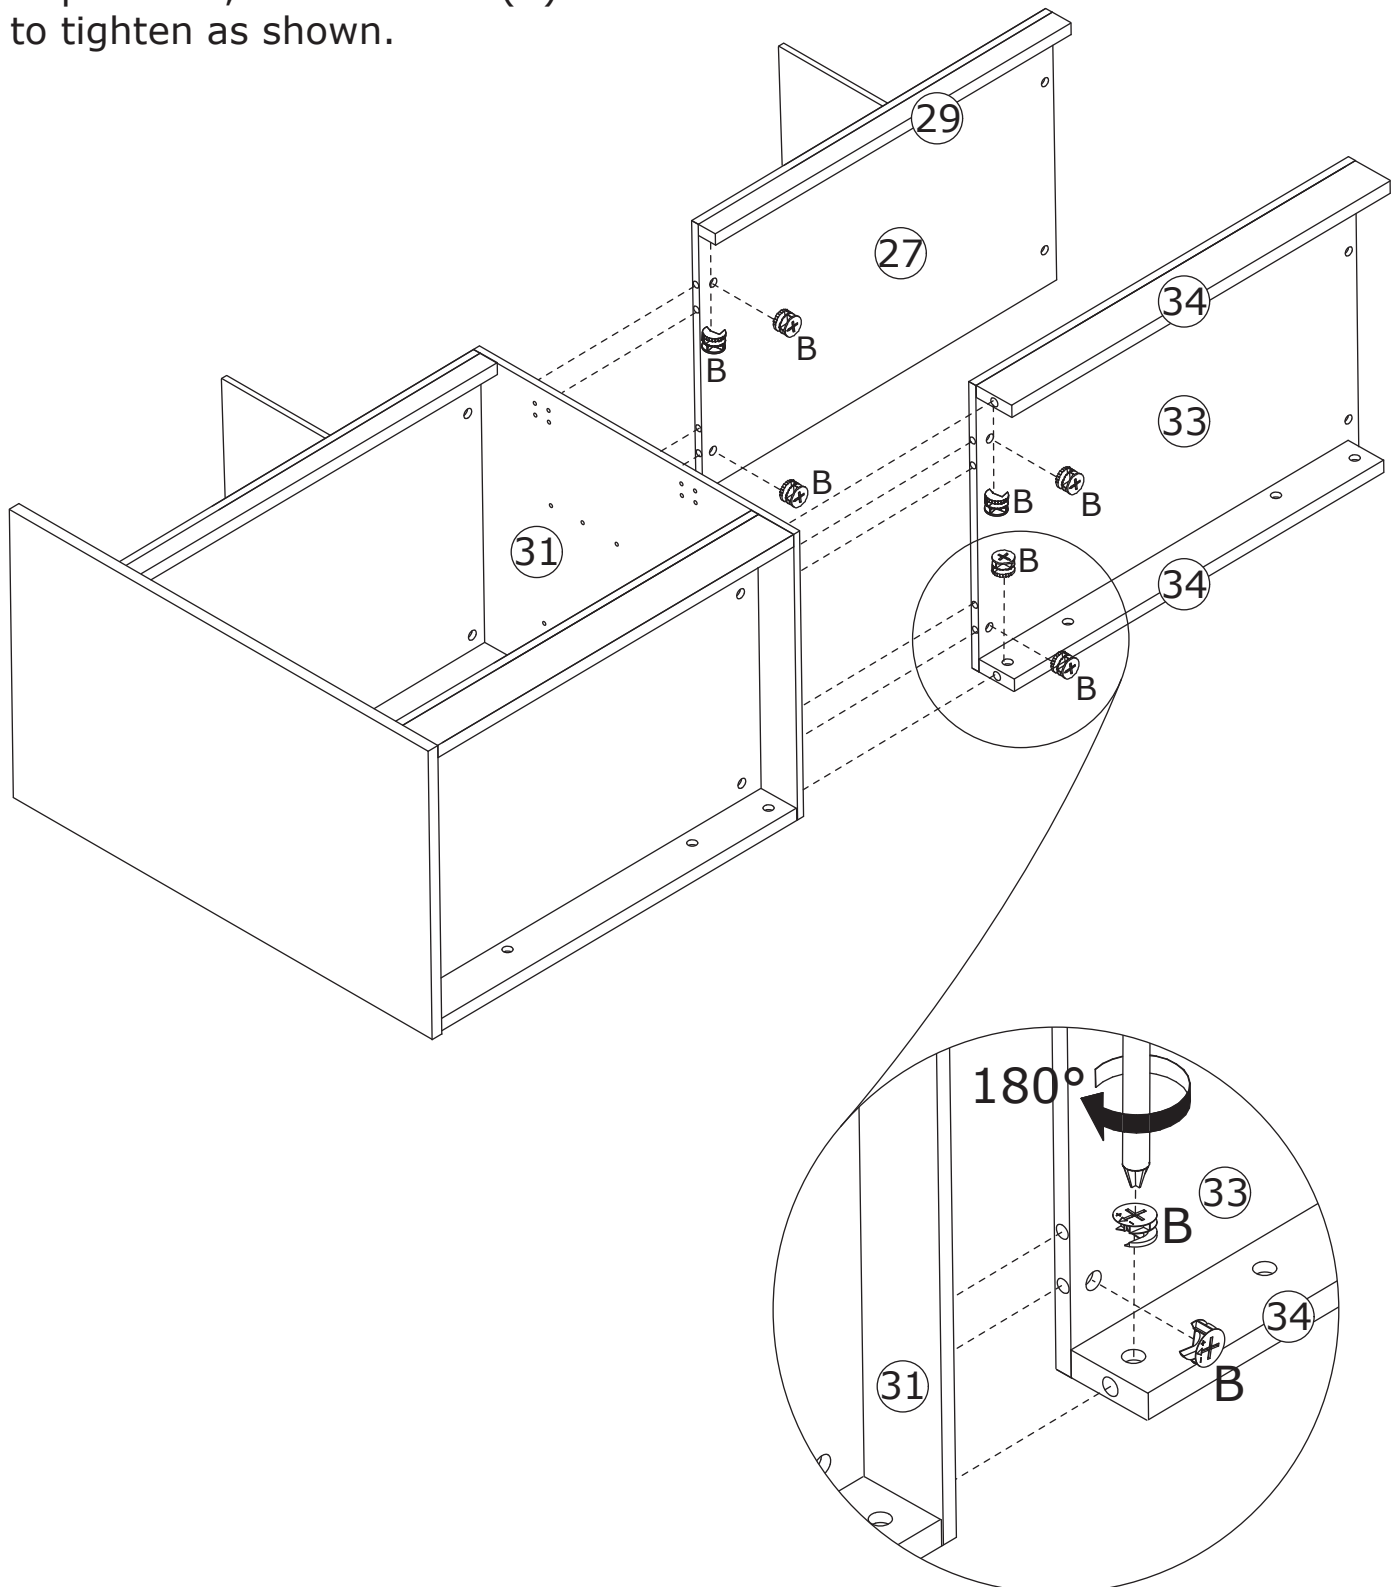


37



 
Ø15 x 9.5 mm



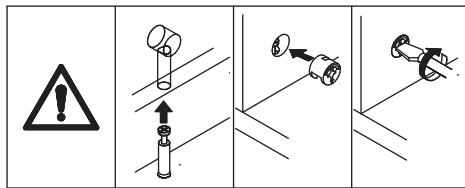


 Attach panel 25 to panel 29, 27, 33 and 34, add cam lock(B) into and turn clockwise to tighten as shown.

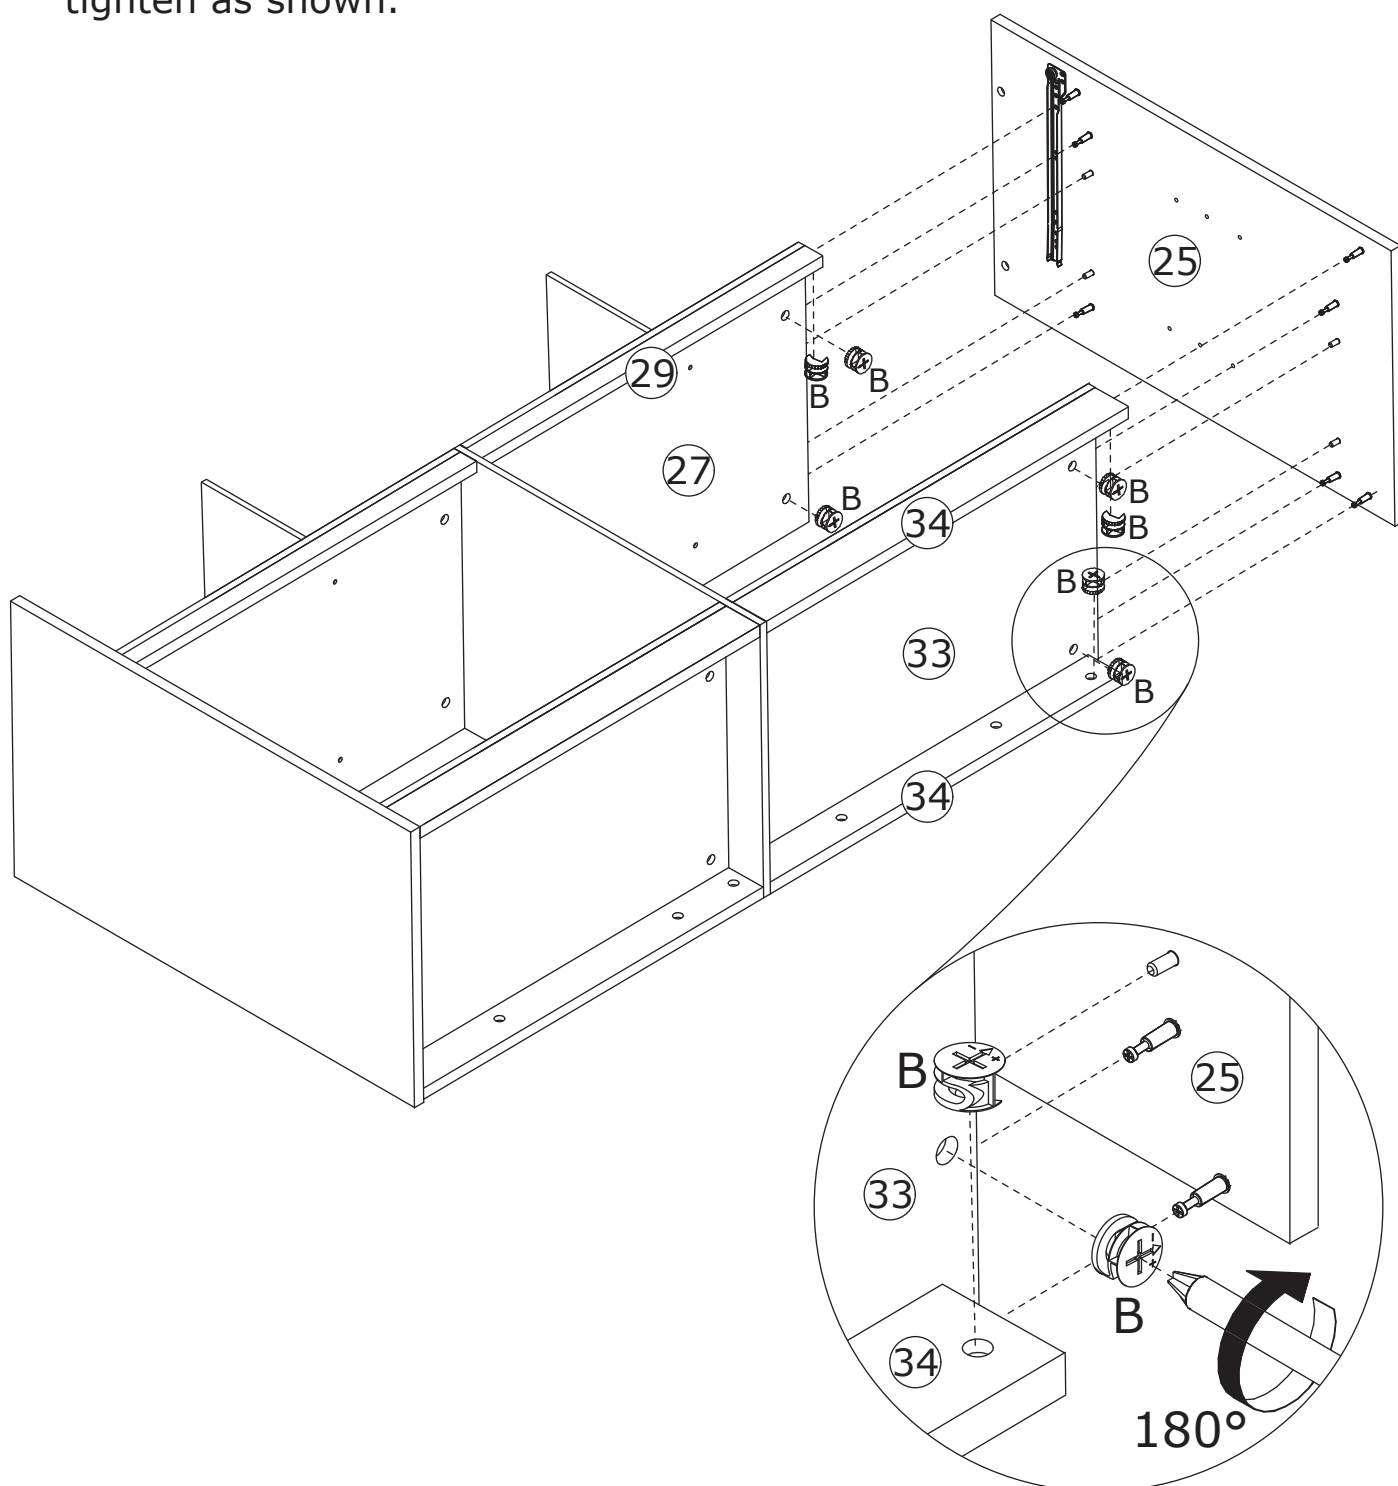


# 38

   V x 4  
  
 Ø 15 x 11 mm

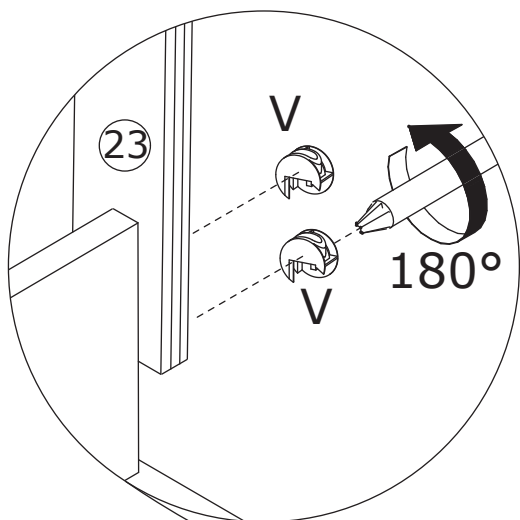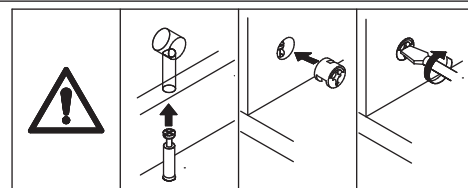


 
Attach panel 23 to panel 33 and 32, add **cam lock(V)** into and turn clockwise to tighten as shown.

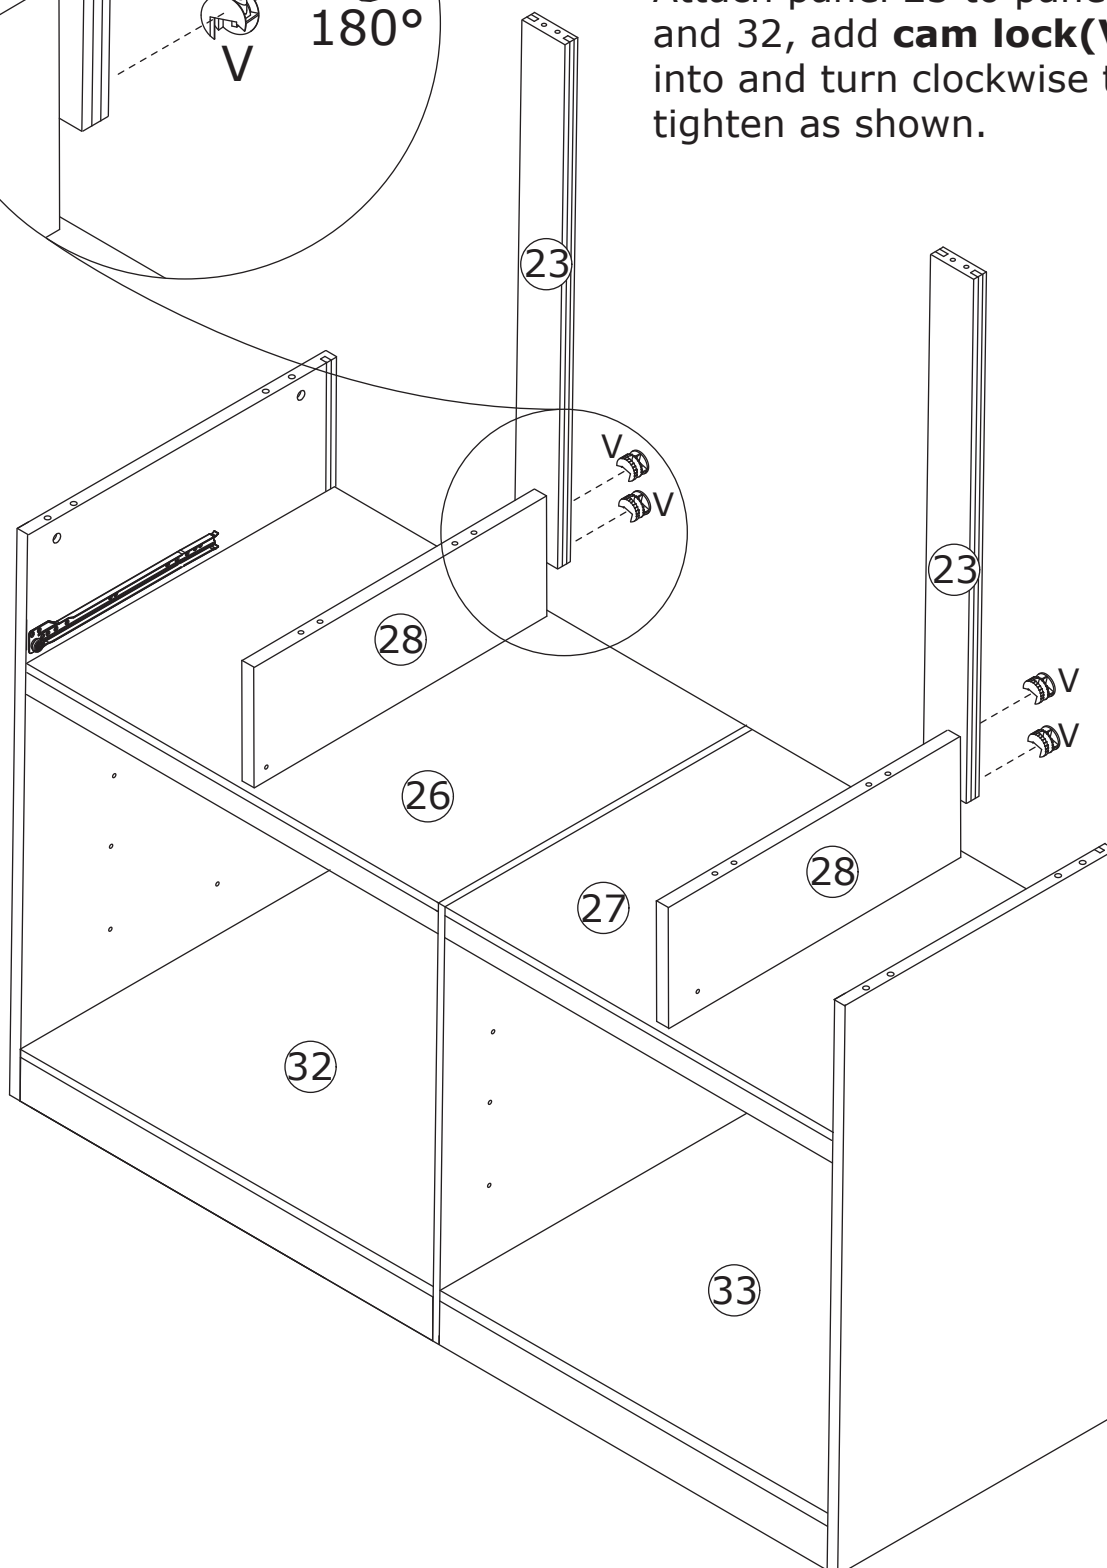






# 39

D x 2  
CL  
CR  
L = 400 mm

 
 
E x 8  
Ø3 x 12 mm

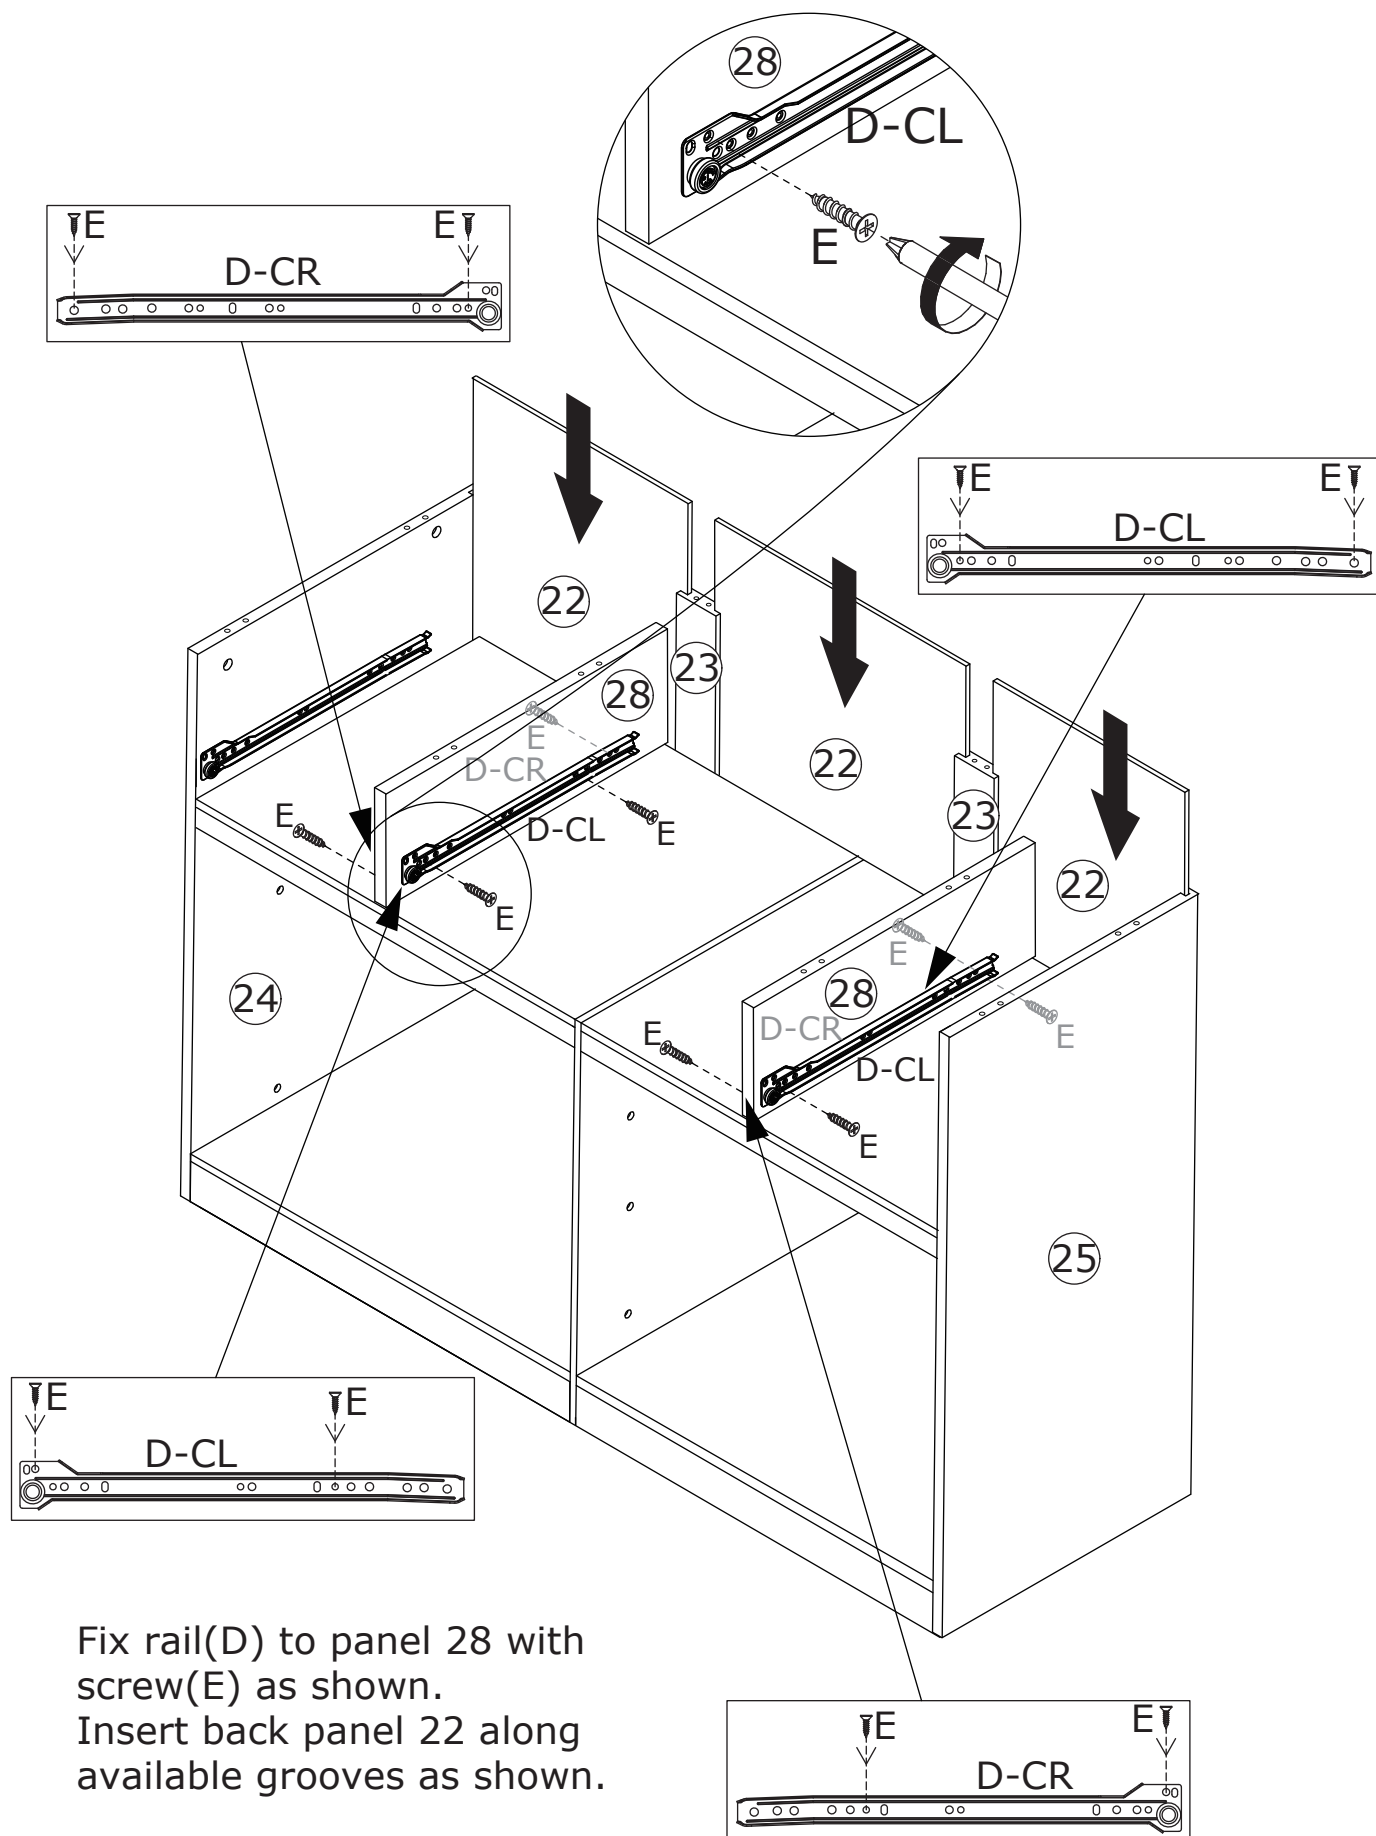

# 40

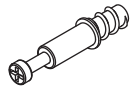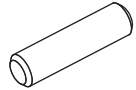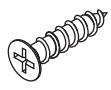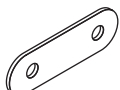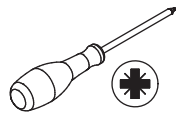  
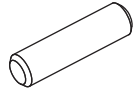
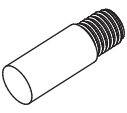

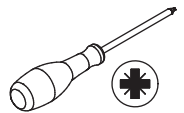
<p>A x 12</p>  <p>Ø6 x 35 mm</p>	<p>C x 3</p>  <p>Ø8 x 30 mm</p>	<p>E x 4</p>  <p>Ø3 x 12 mm</p>	<p>H x 2</p> 	
---	--	--	---	---

Screw eccentric rod(A) into panel 20 and 21 at first.

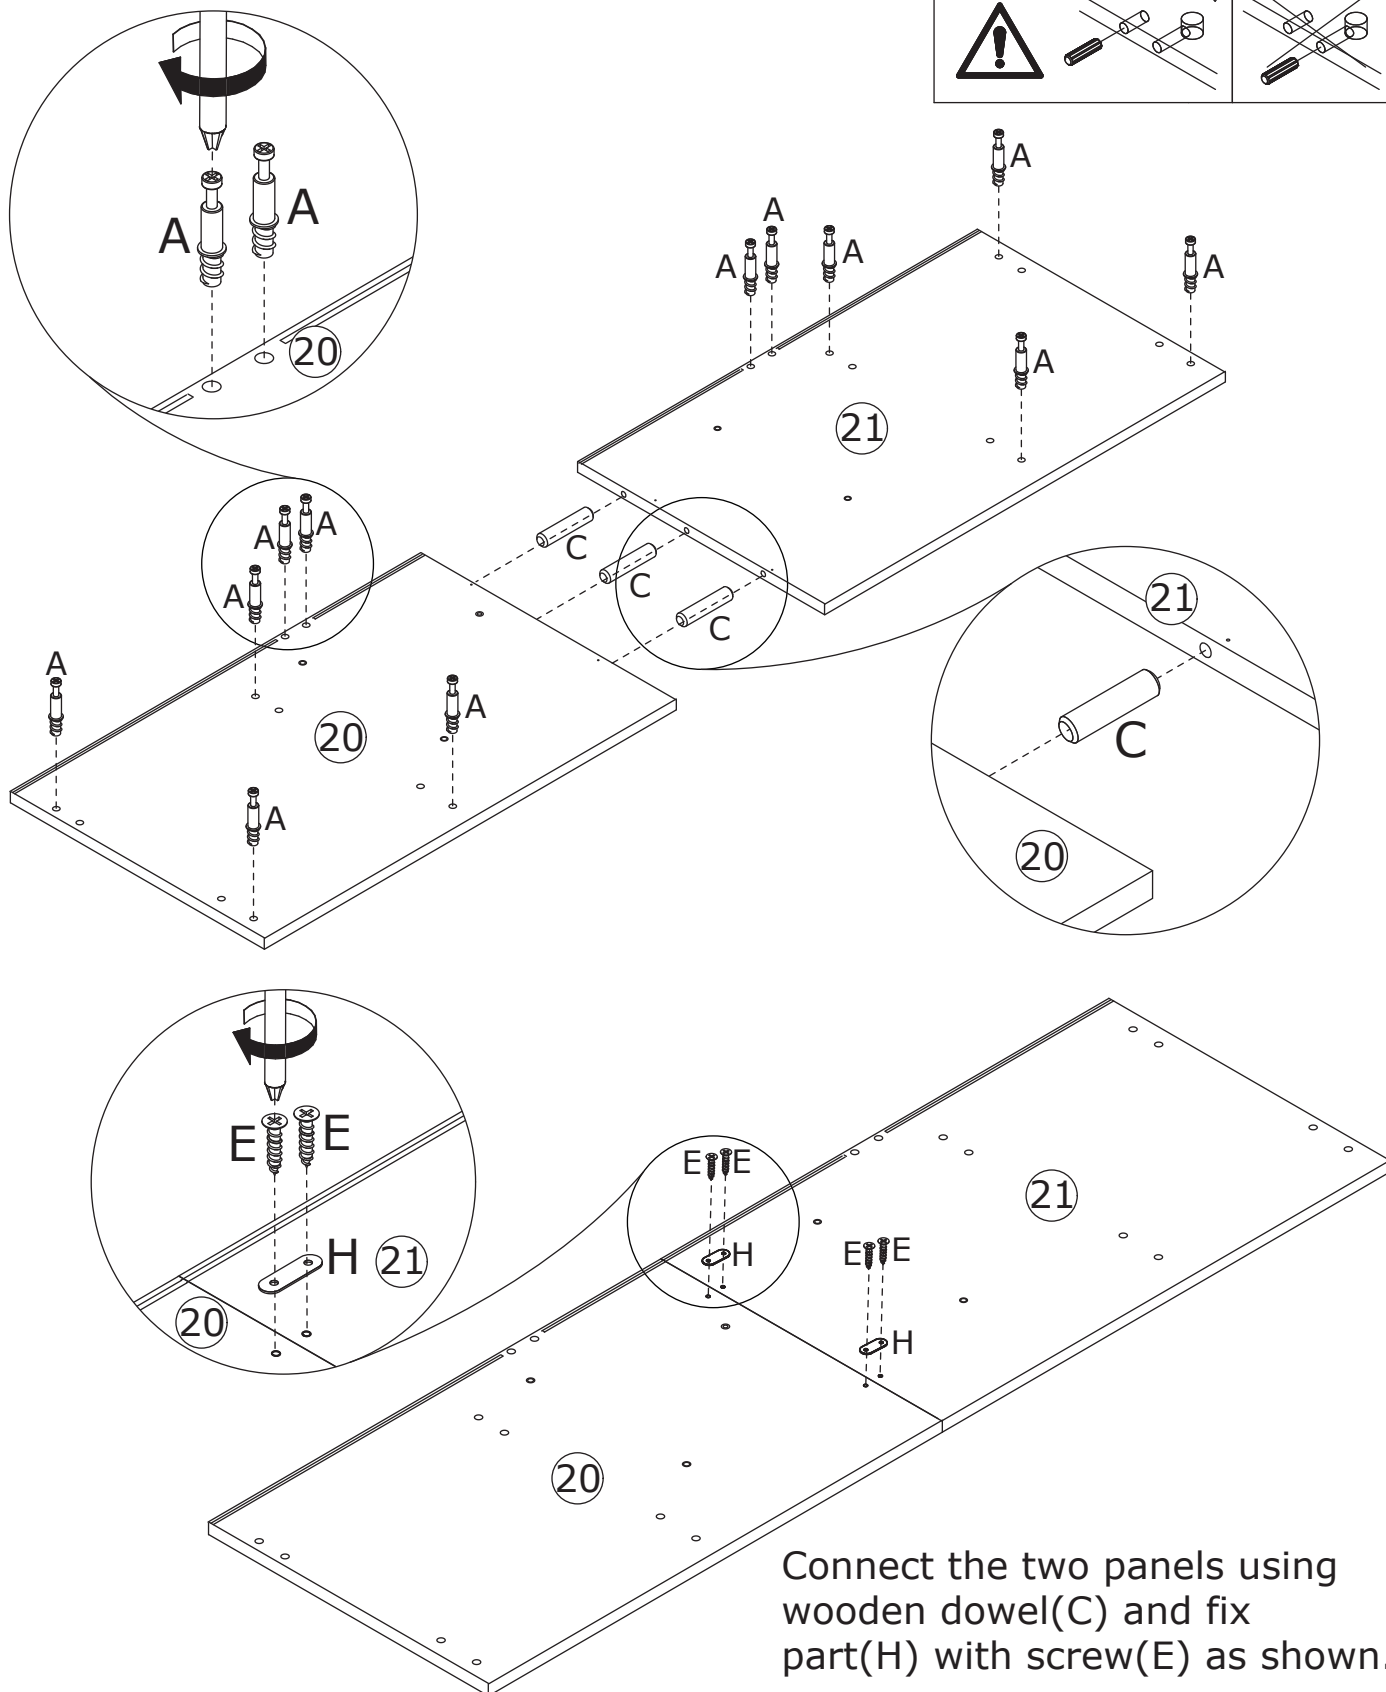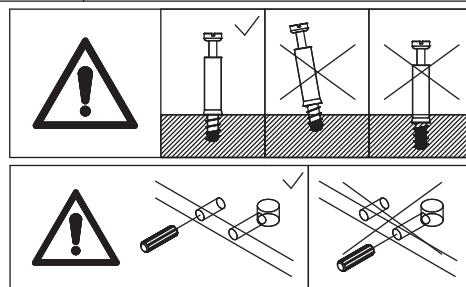

Connect the two panels using wooden dowel(C) and fix part(H) with screw(E) as shown.



# 41
  
<p>B x 8</p>  <p>Ø 15 x 9.5 mm</p>	<p>C x 8</p>  <p>Ø 8 x 30 mm</p>	<p>P x 8</p> 	<p>V x 4</p>  <p>Ø 15 x 11 mm</p>	
---	---	--	---	---

Insert wooden dowel(C) into panel 24, 28 and 25 at first.

Cover panel 20 and 21 to the top, add **cam lock(V)** into panel 23 and **cam lock(B)** into panel 24,28,25, then turn clockwise to tighten as shown.

Screw layer pin(P) into panel 24, 31 and 25.

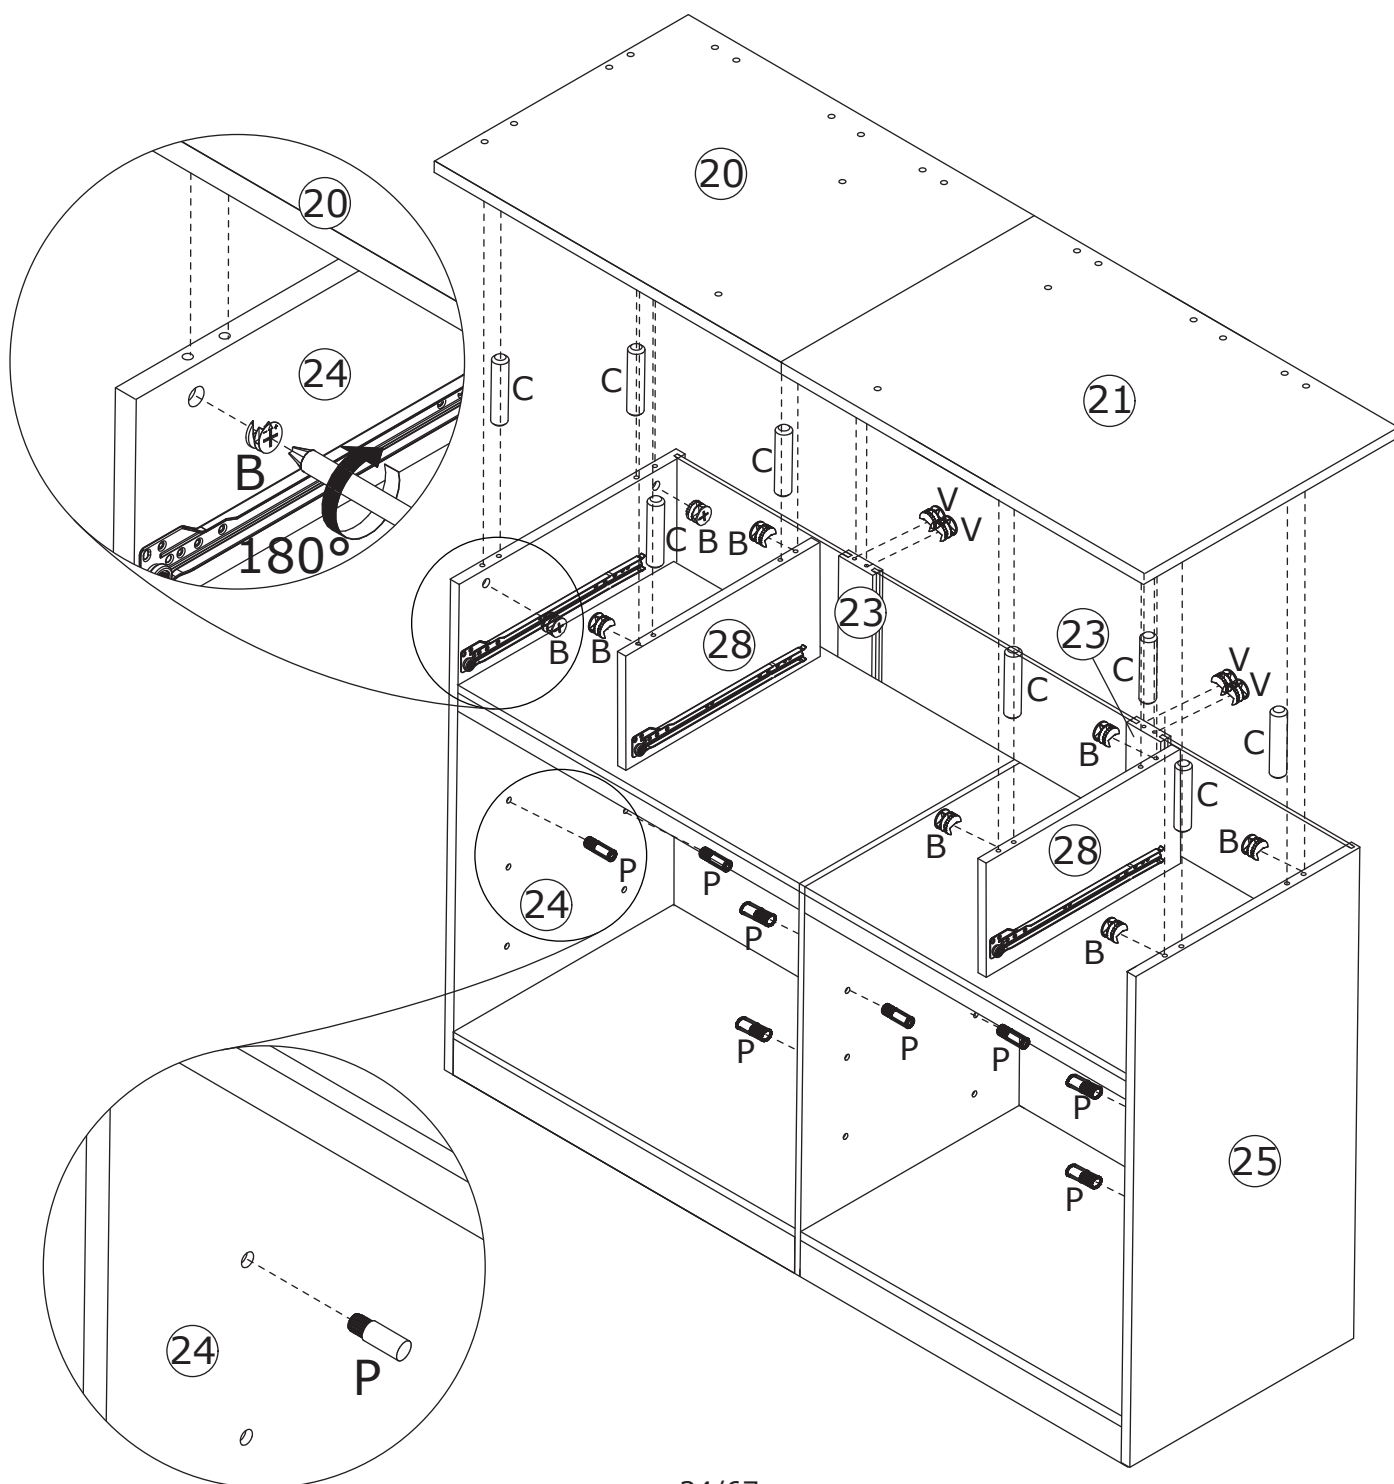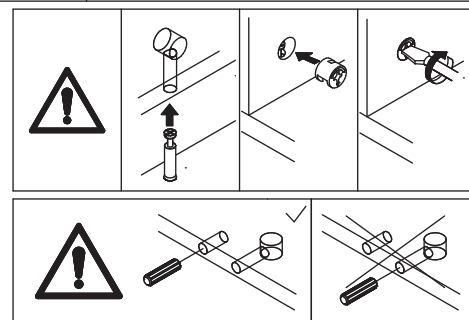







Pay attention to the difference between the middle parts of the two types of door hinges.

 - The curved door hinges(Y) are used on the door panel in the middle of the cabinet.
- And the full coverage door hinges(X) are used on the outermost door plates.



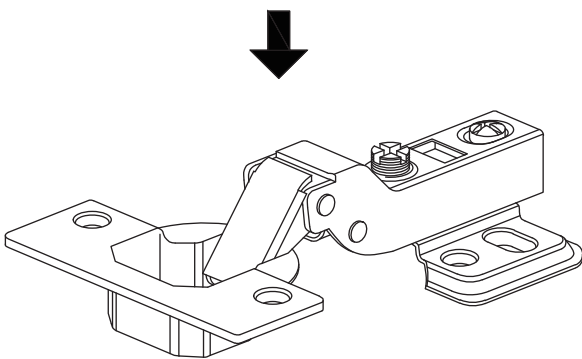


Y



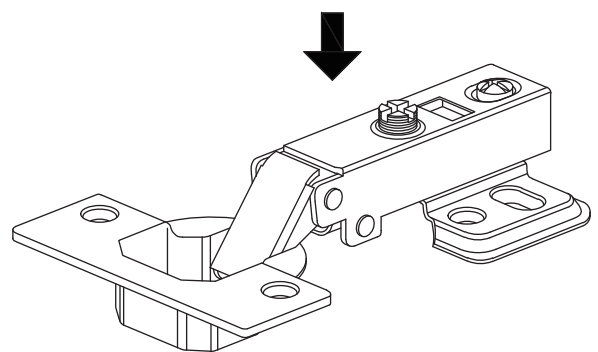 


X






# 43

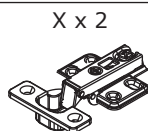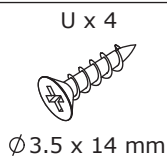   

   Fix hinge(X) to plate 36 with screw(U) as shown.

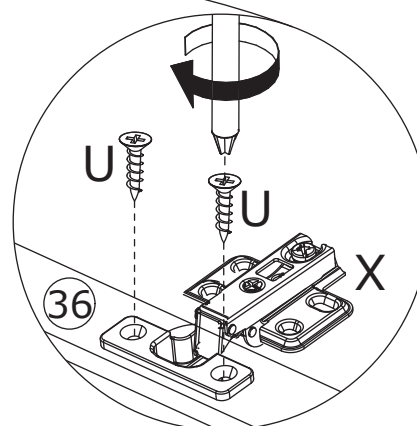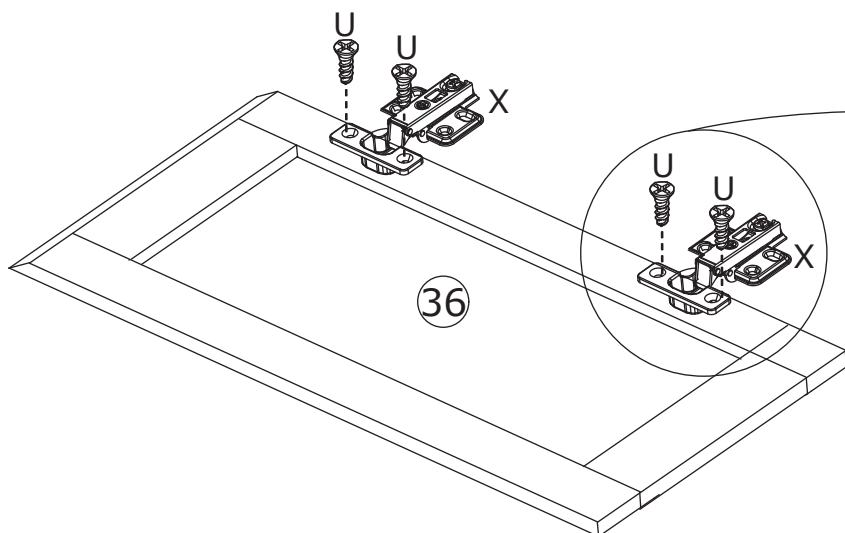
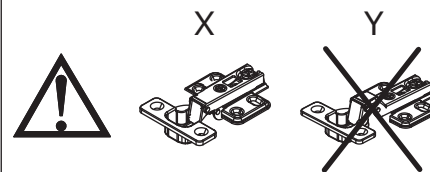


# 44

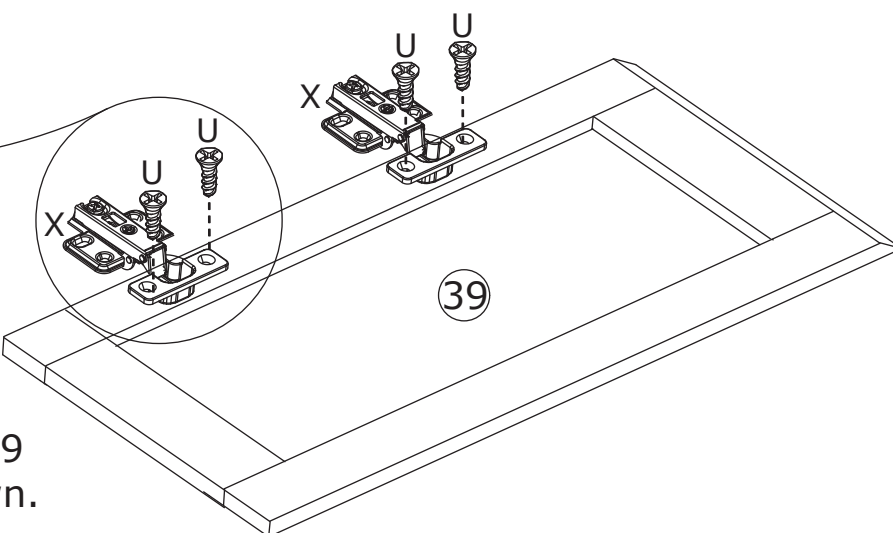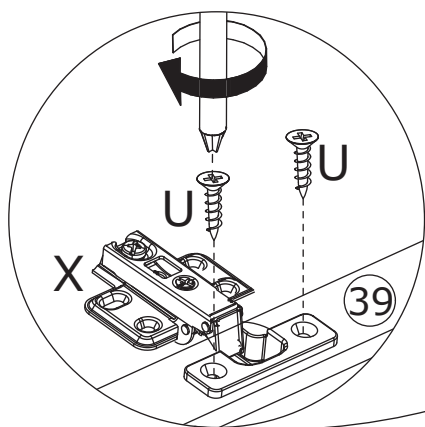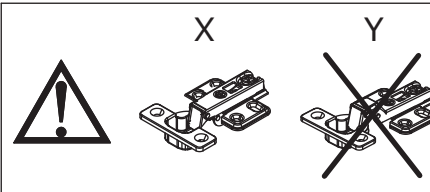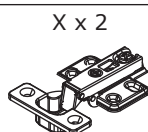    
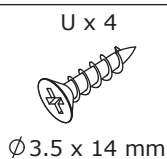 


Fix hinge(X) to plate 39 with screw(U) as shown.

# 45

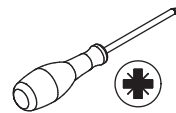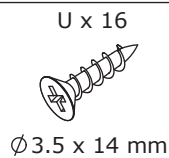 


  Assemble door 39 and 36 to panel 25 and 24 by fixing hinge with screw(U) as shown.


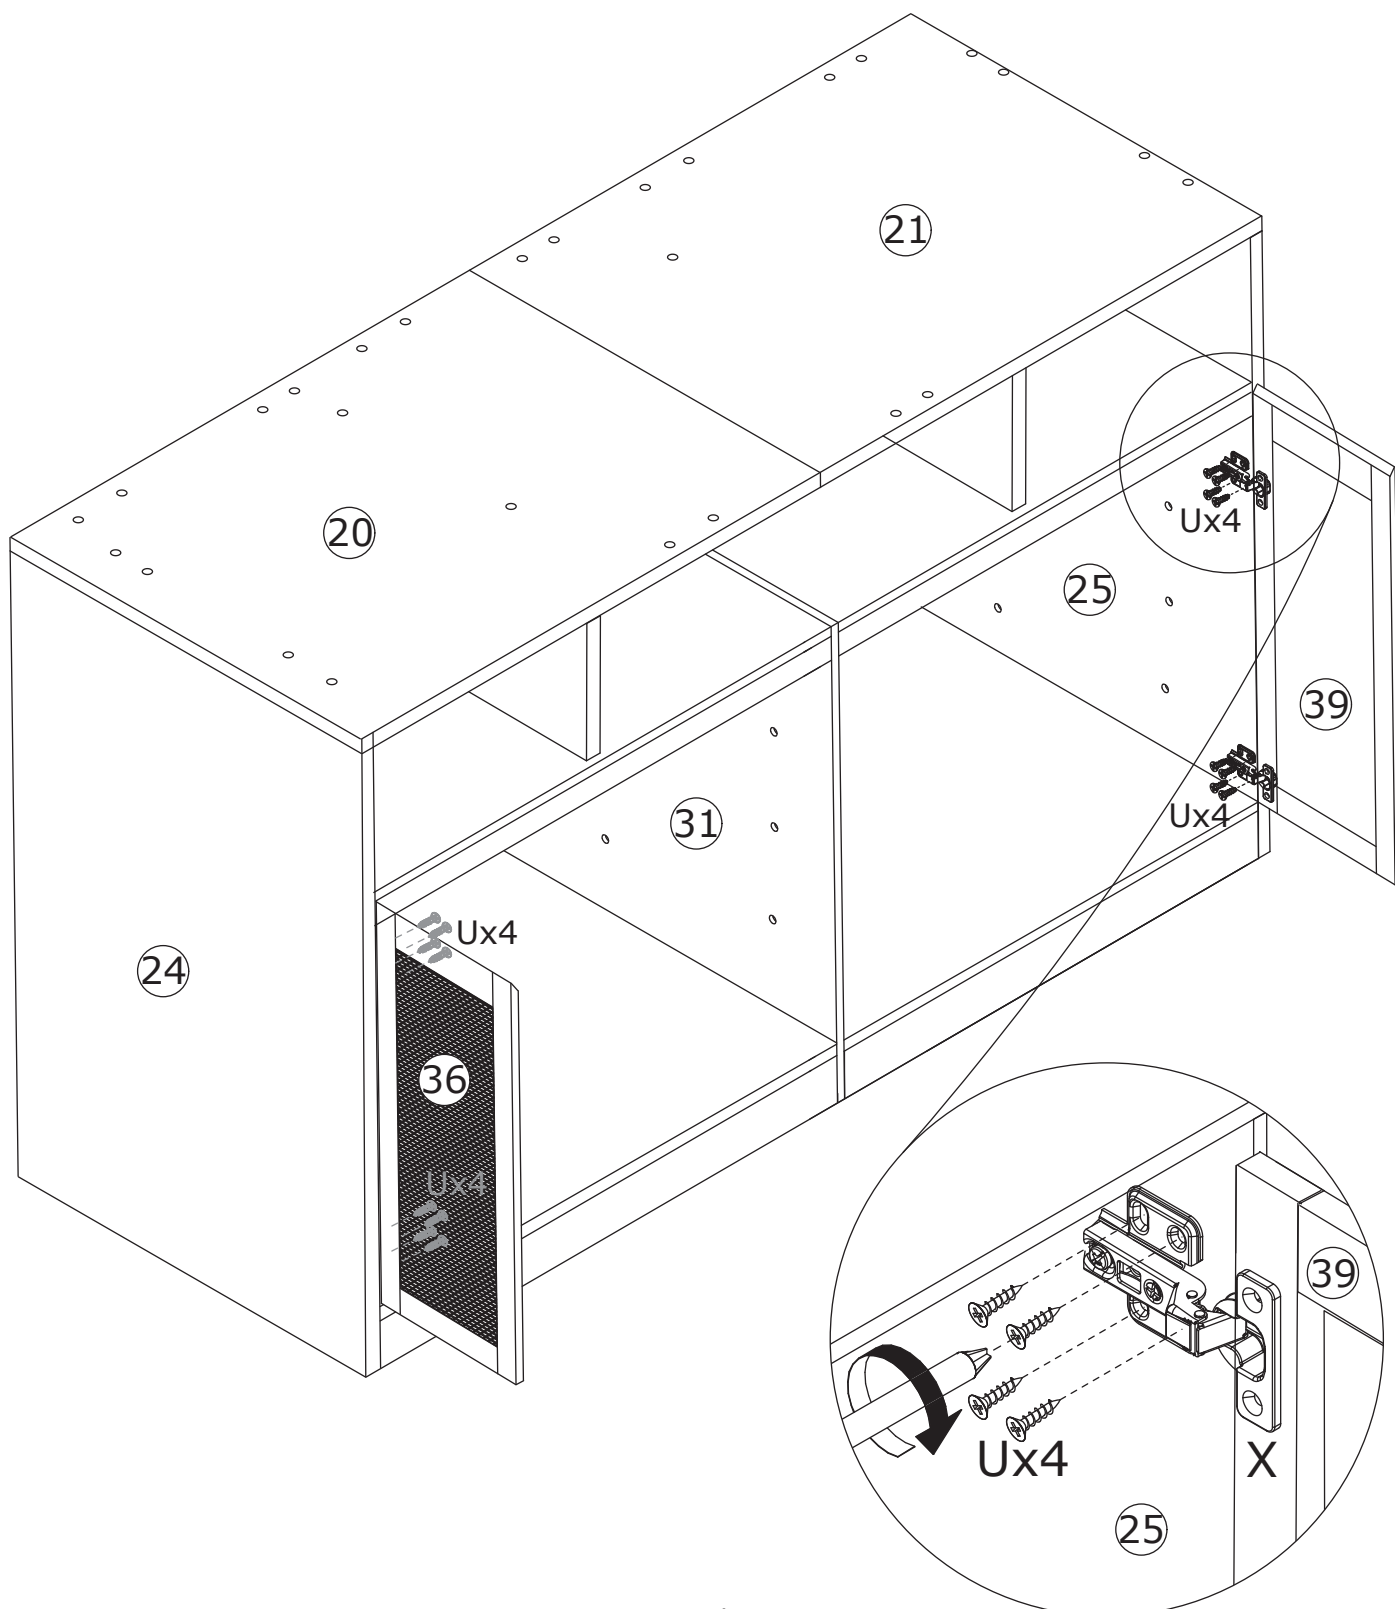
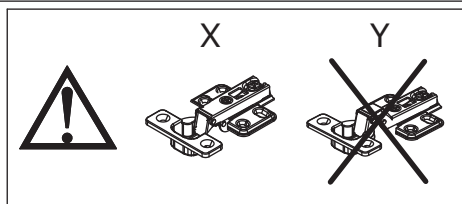


46

 Place shelf panel 30 on the layer pin.



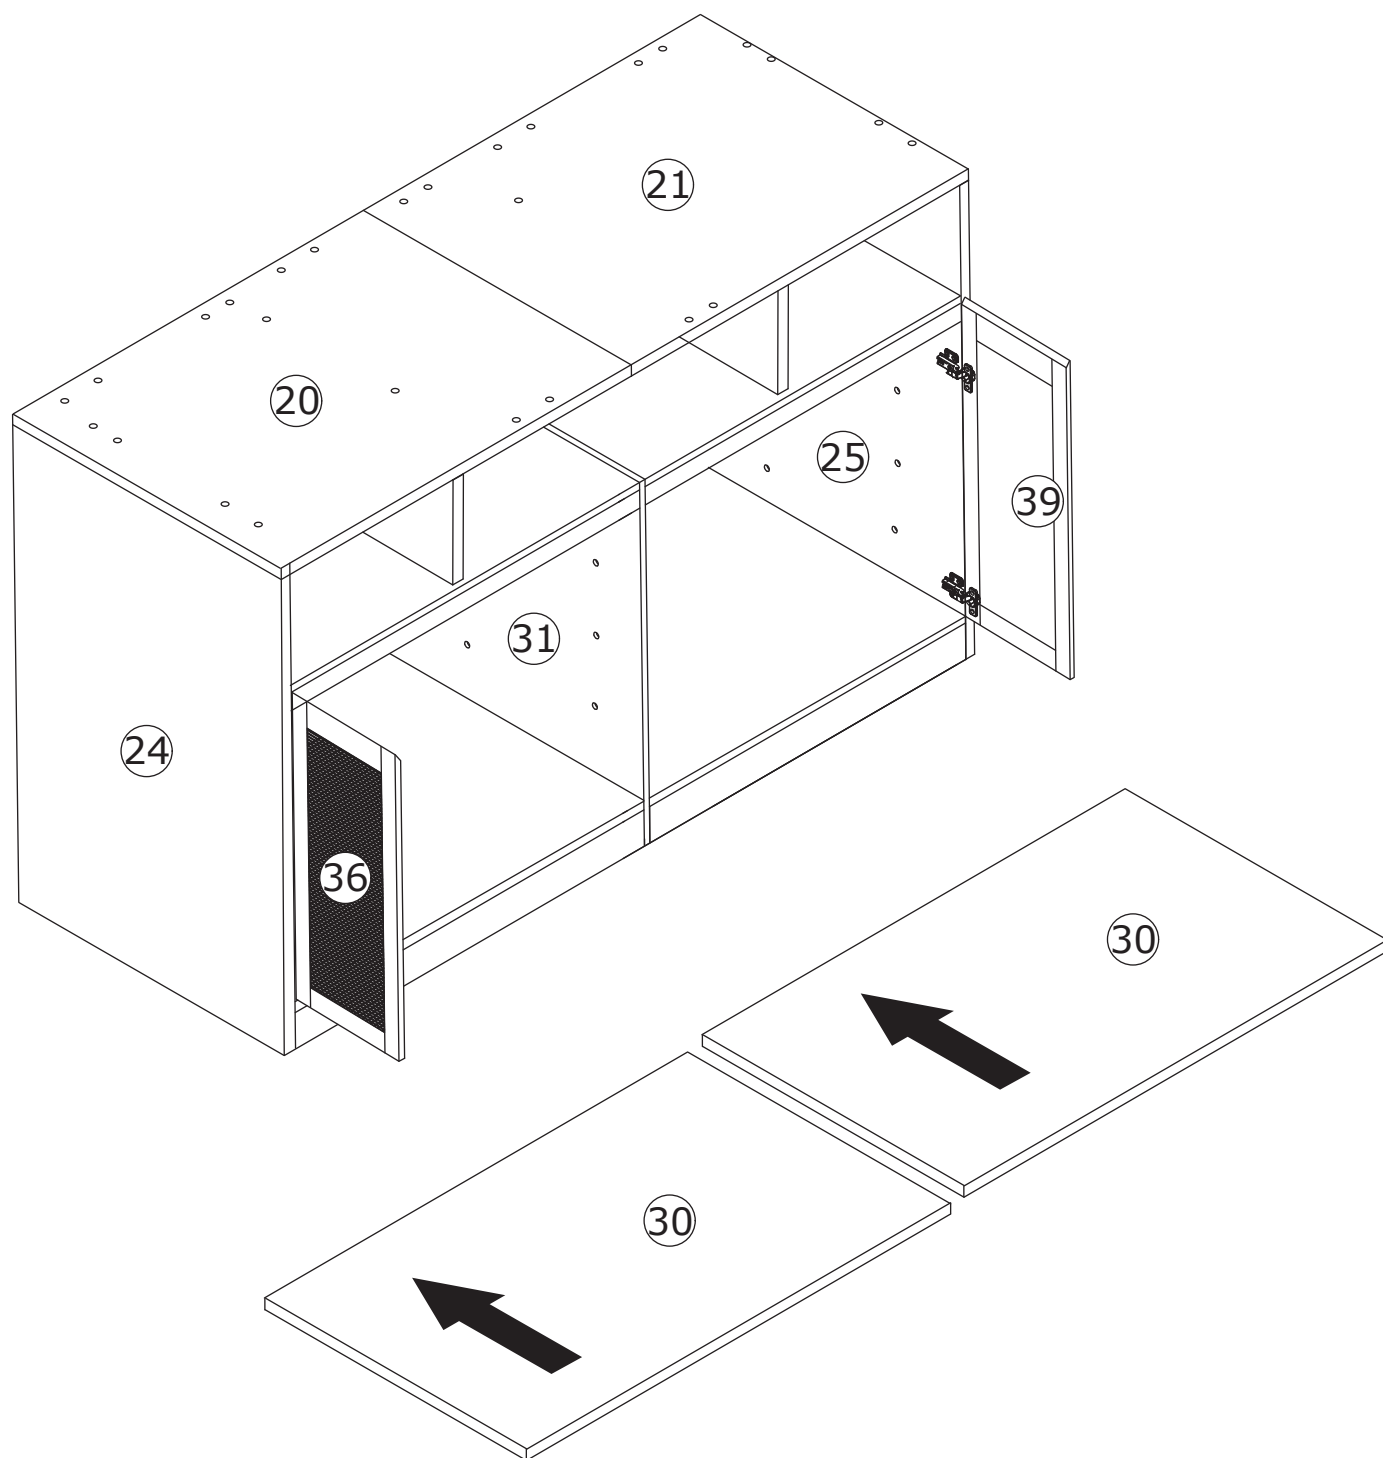


# 47

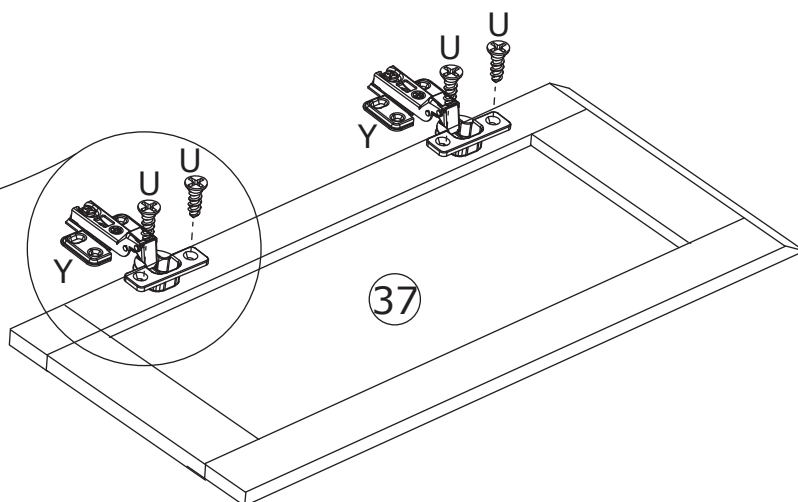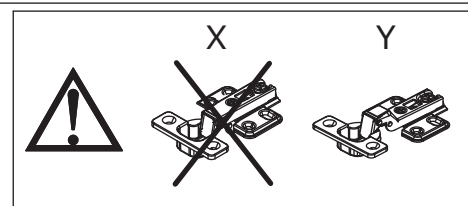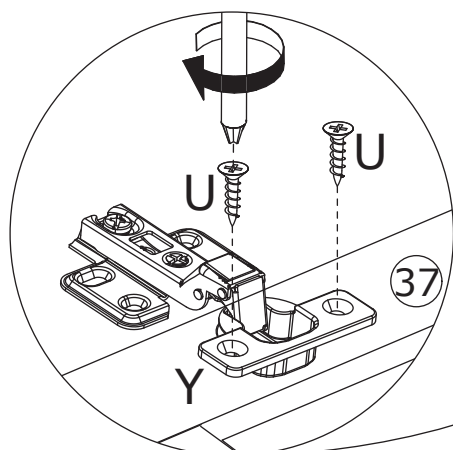   





Fix hinge(Y) to plate 37 with screw(U) as shown.

# 48

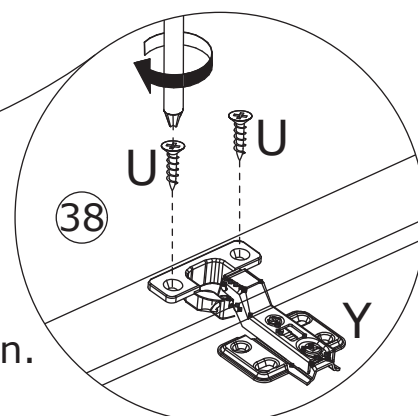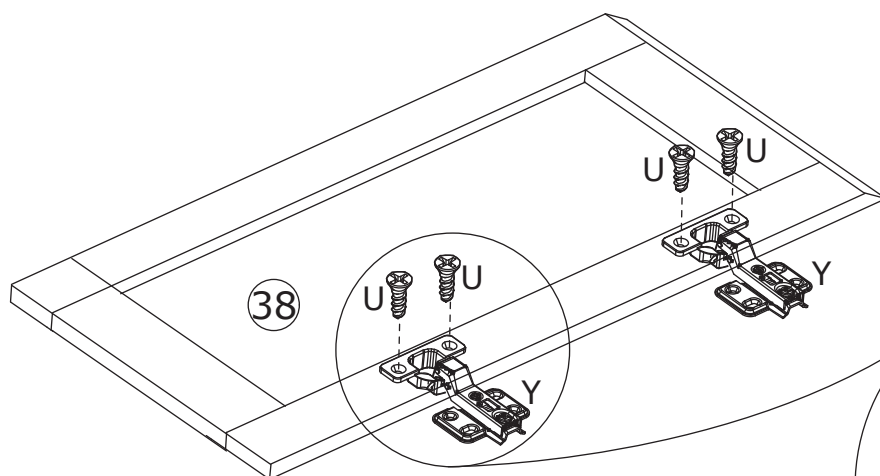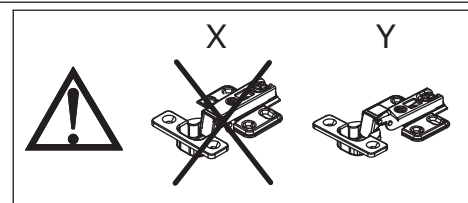   


Fix hinge(Y) to plate 38 with screw(U) as shown.





# 49

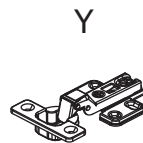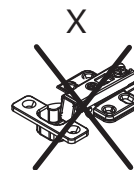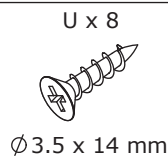    

 
Assemble door 37 to panel 31 by fixing hinge with screw(U) as shown.

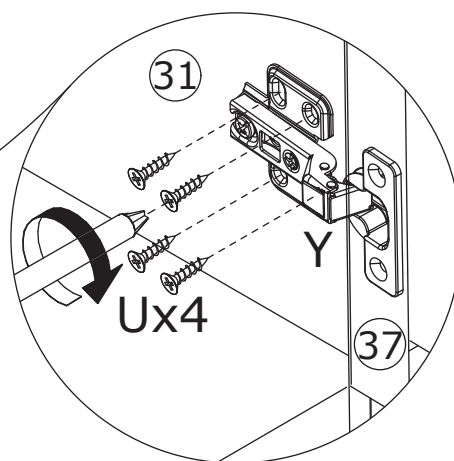

# 50

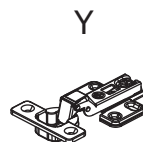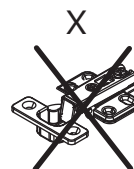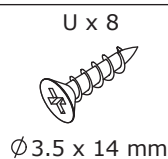    


 Assemble door 38 to panel 31 by fixing hinge with screw(U) as shown.

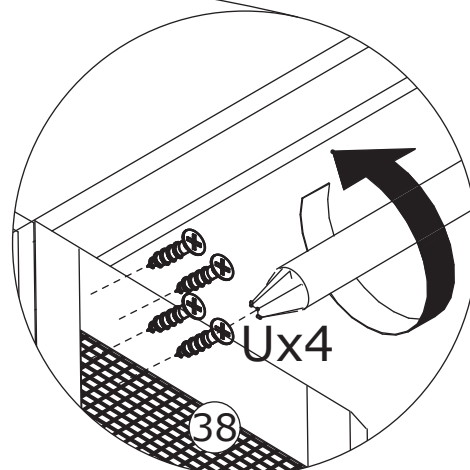


# 51

 A x 12

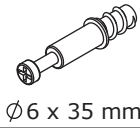


Ø6 x 35 mm

 C x 6





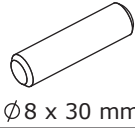


Ø8 x 30 mm

 
Q x 10



Ø6 x 30 mm

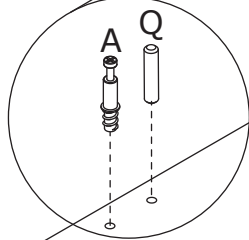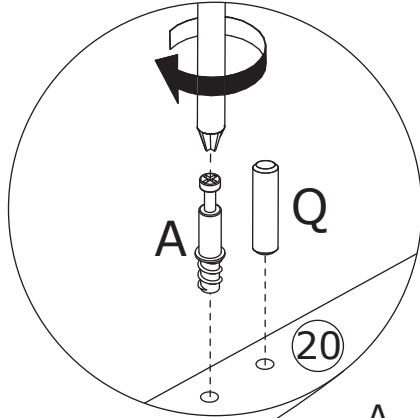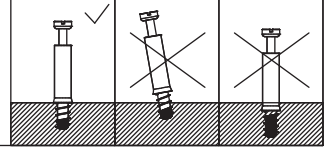    
 


 Screw eccentric rod(A) and insert wooden dowel(C&Q) into panel 20 and 21 at first.


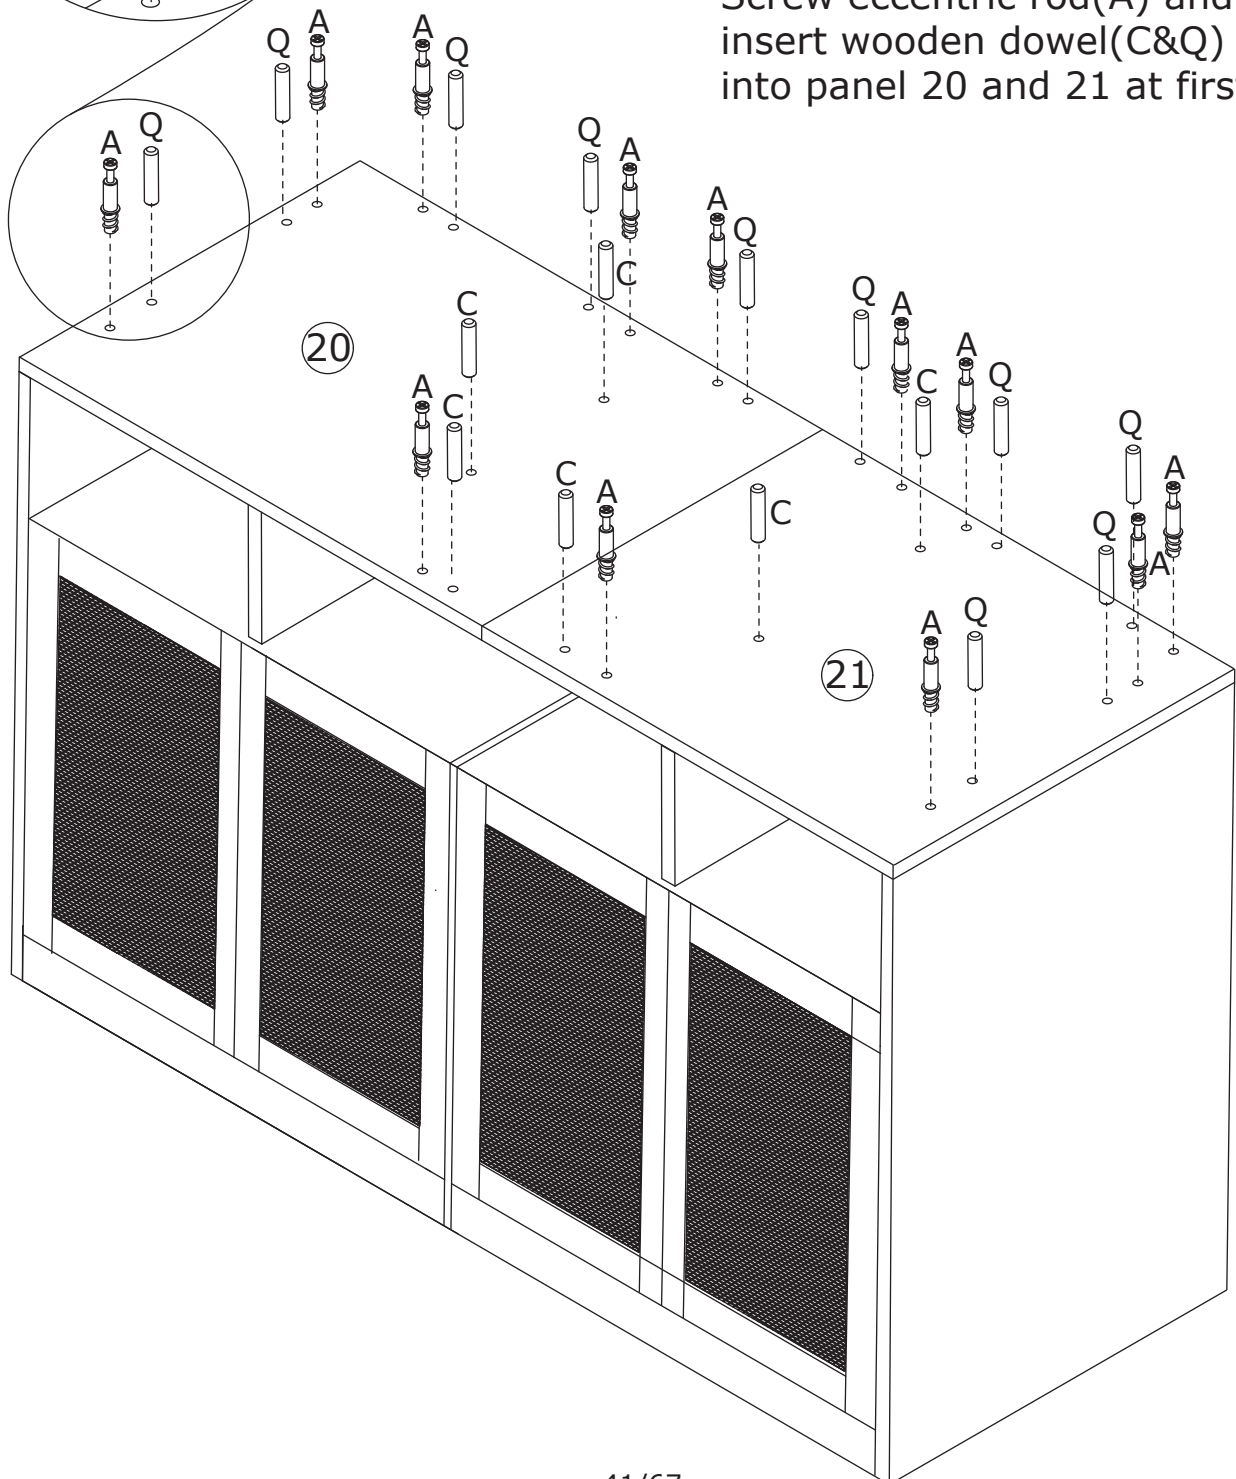




# 52

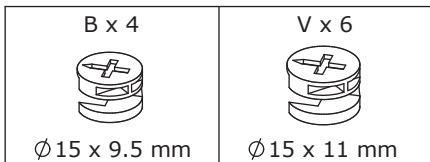  

  Attach panel 3, 5, 6, 7 and 4 to panel 20 and 21, add **cam lock(B)** into panel 3,4 and **cam lock(V)** into panel 5,6,7, then turn clockwise to tighten as shown.

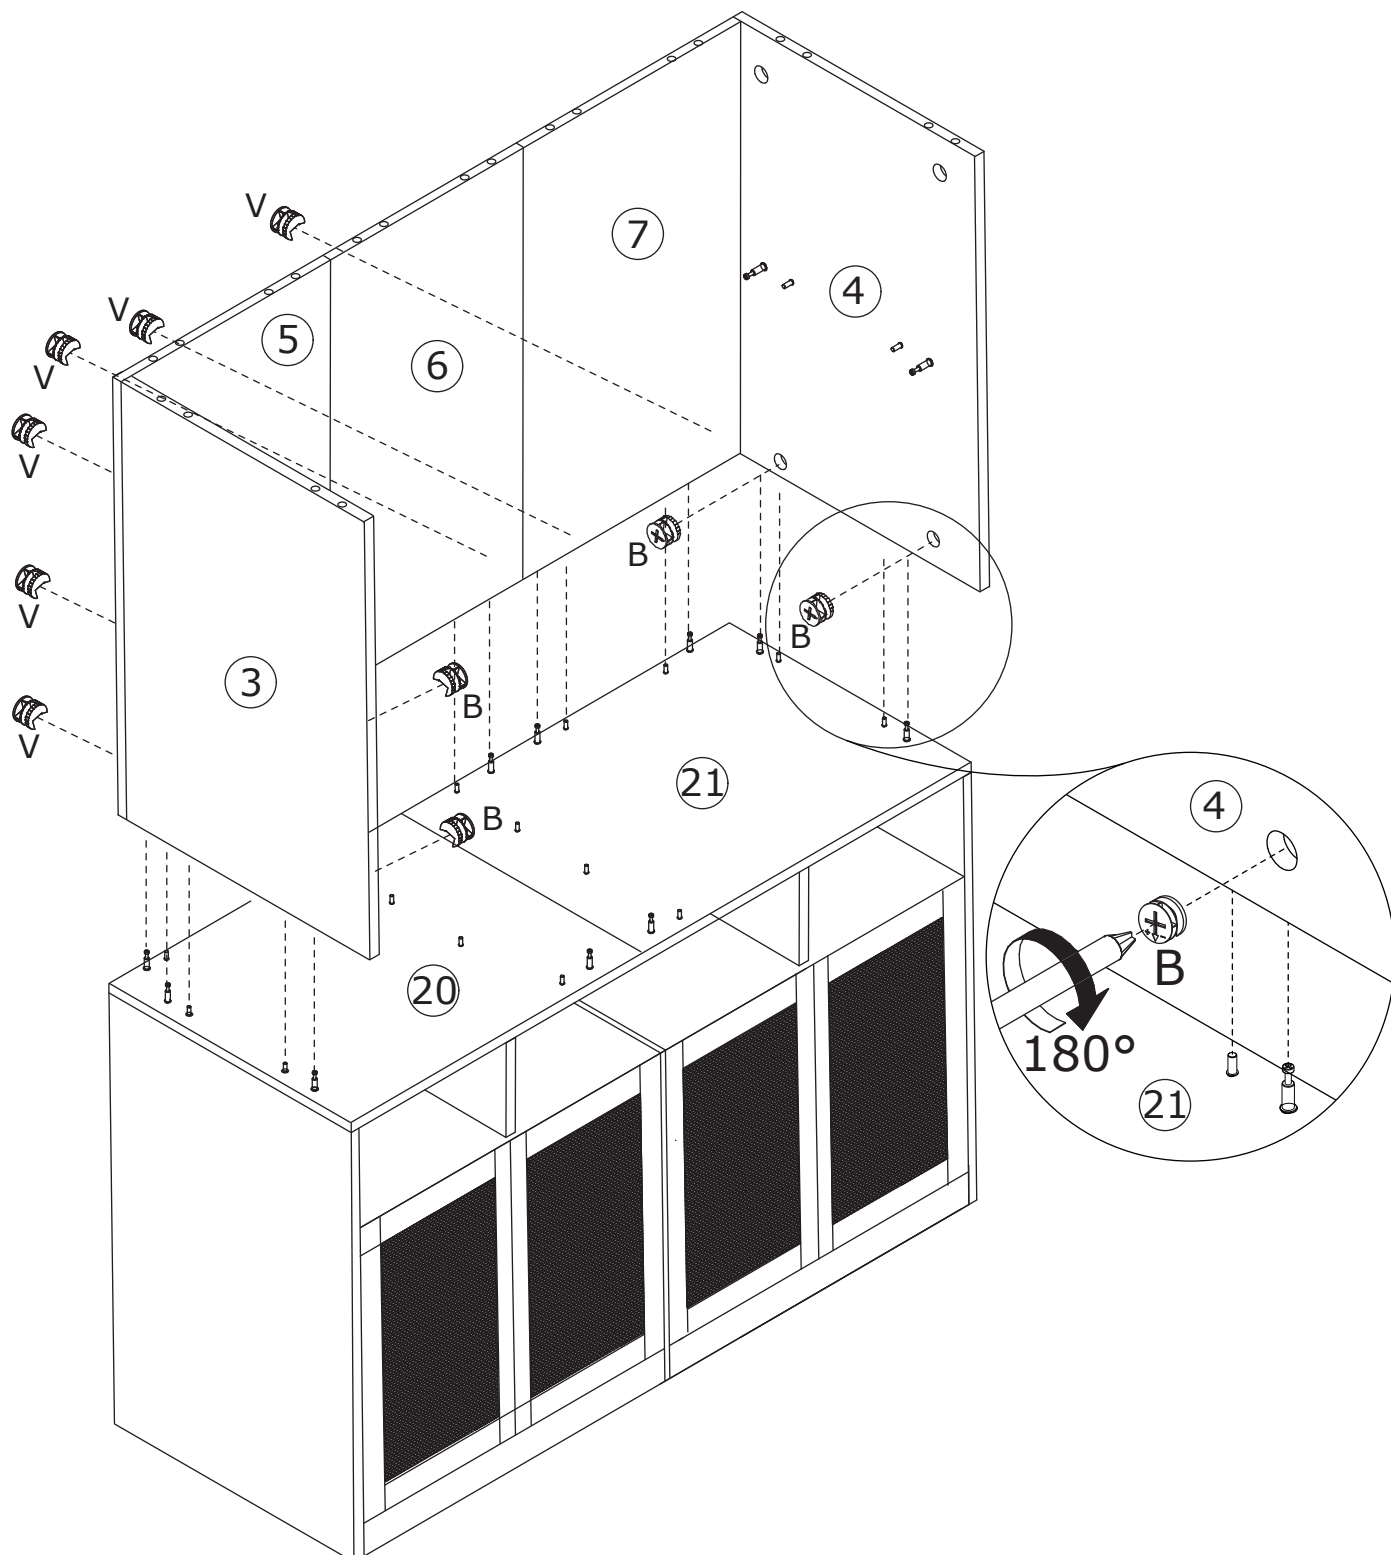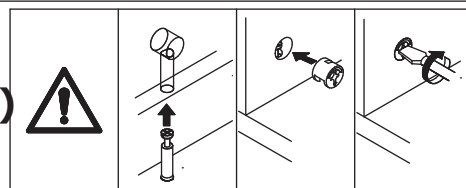





53



V x 2



  Ø 15 x 11 mm

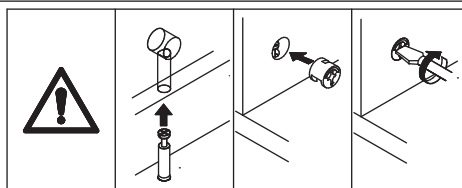

  Attach the component(assembled in step 8)  
to panel 3 and 20, add **cam lock(V)** into  
and turn clockwise to tighten as shown.

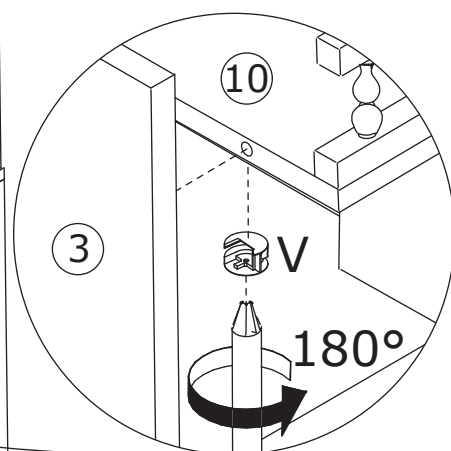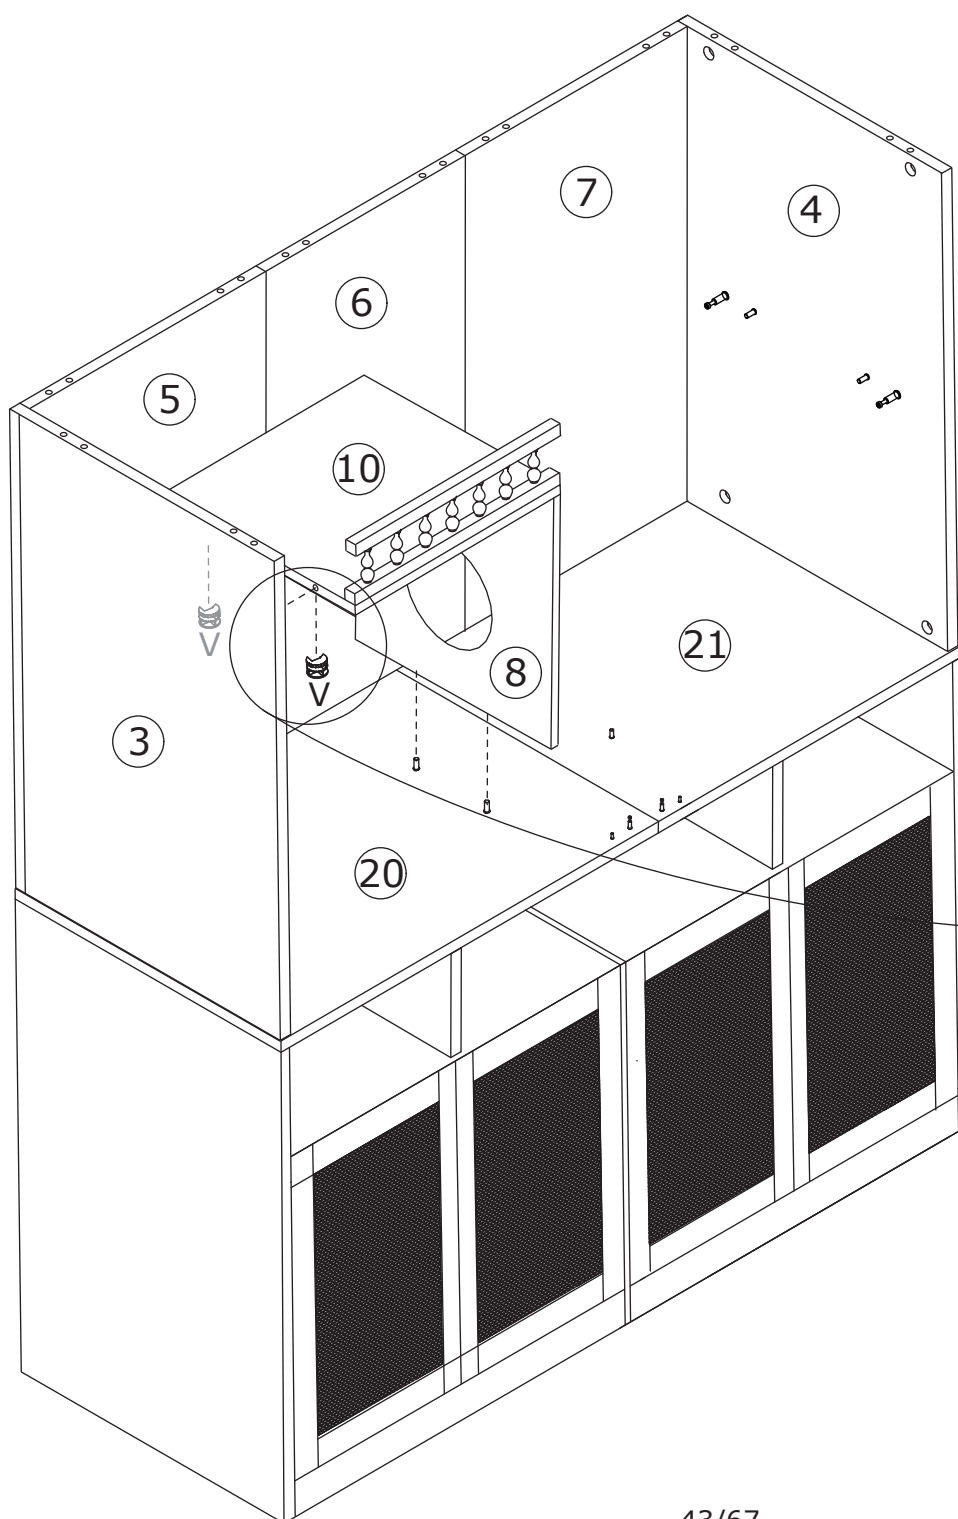


# 54

V x 2




Ø 15 x 11 mm

 
L x 1






Ø 8 x 30 mm

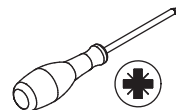

 Attach the component (assembled in step 21) to panel 10, add **cam lock(V)** into and turn clockwise to tighten as shown.

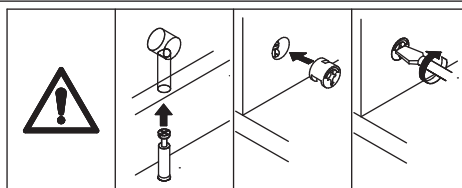

   Fix pillar part 14 to panel 21 with screw(L) as shown.




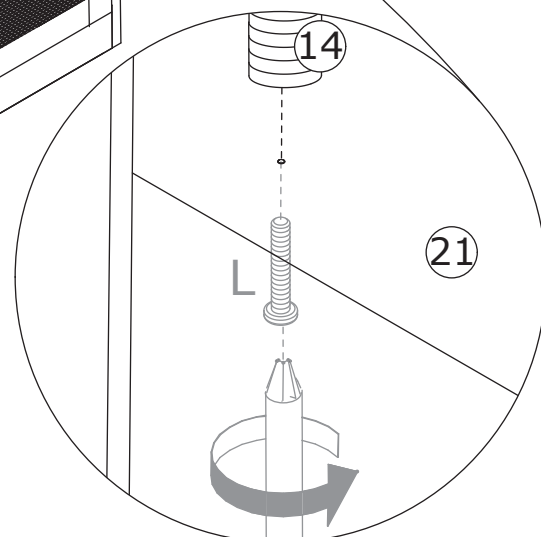
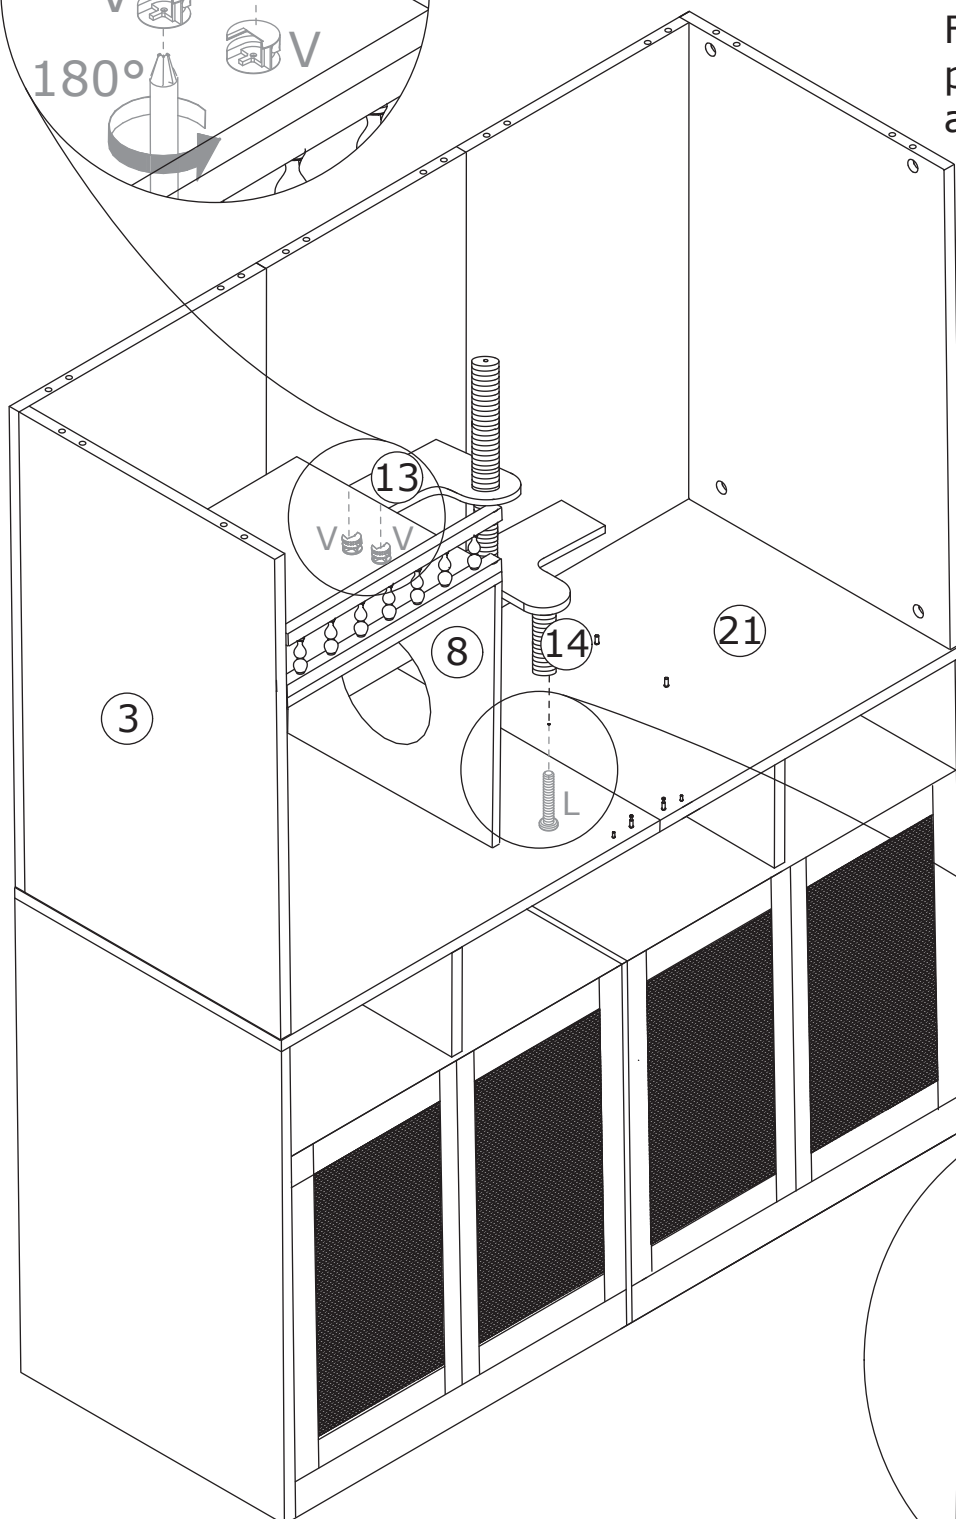
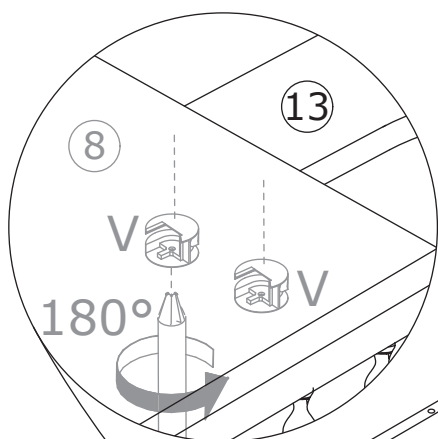


# 55

V x 4



      
Ø 15 x 11 mm

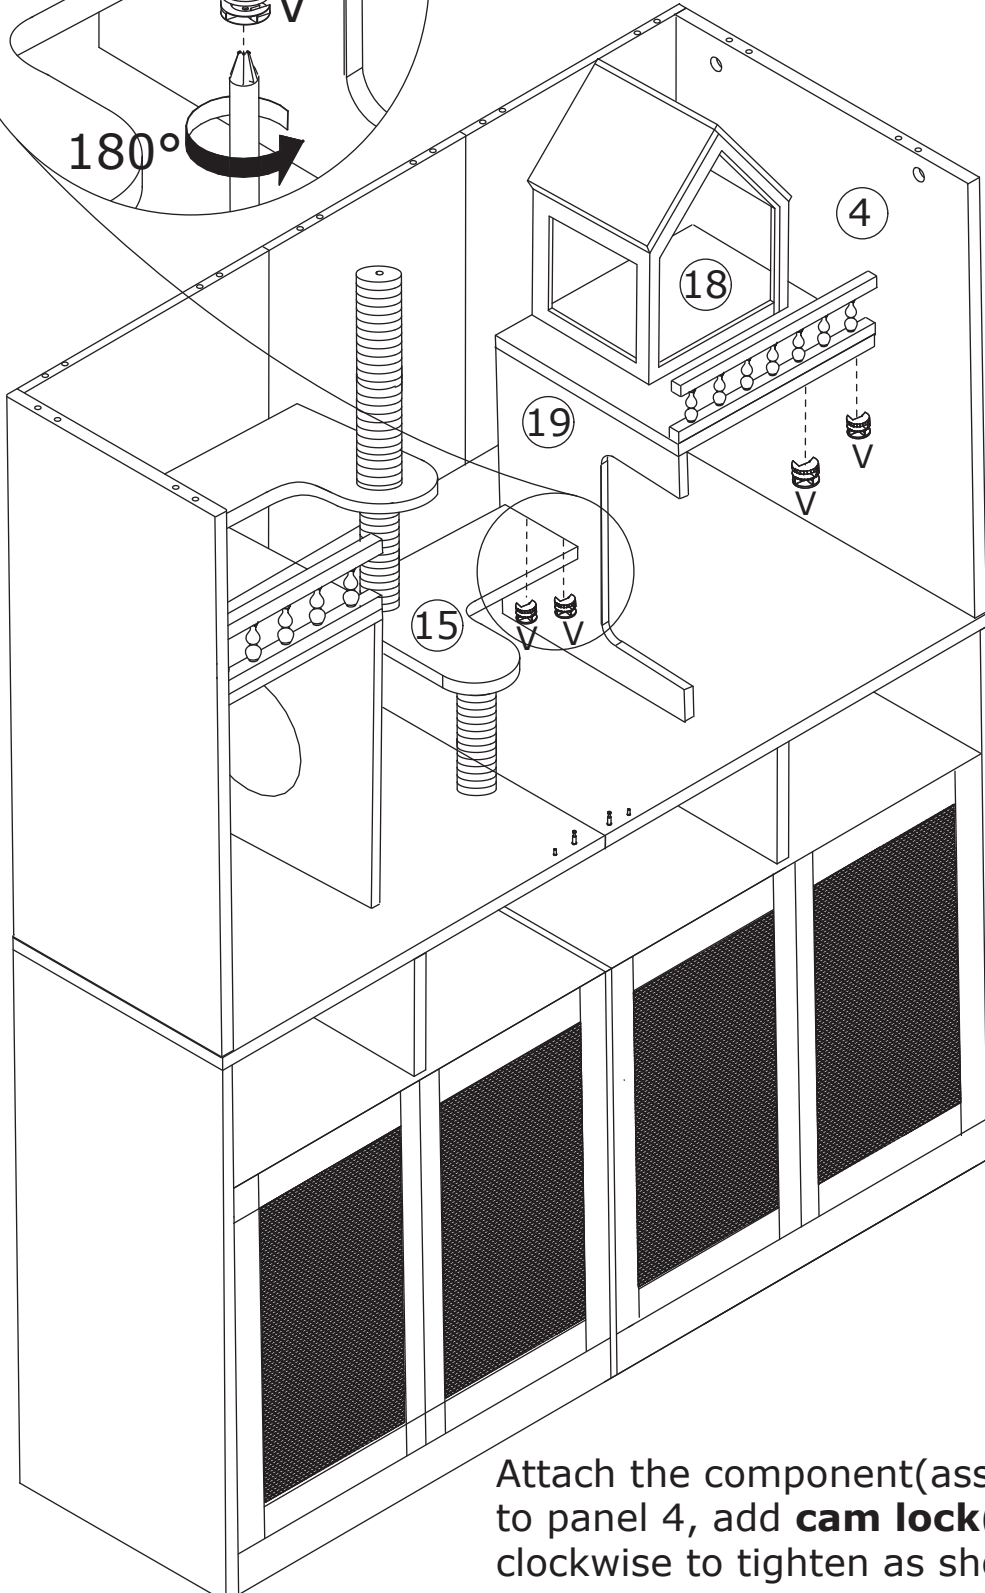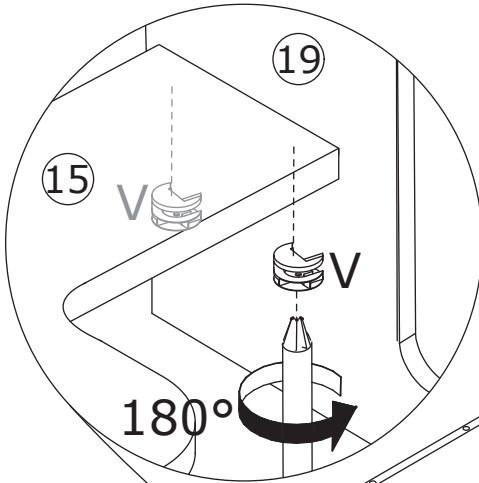


Attach the component(assembled in step 18) to panel 4, add **cam lock(V)** into and turn clockwise to tighten as shown.

56


 
M x 2



N x 2

 

Ø3.5 x 14 mm

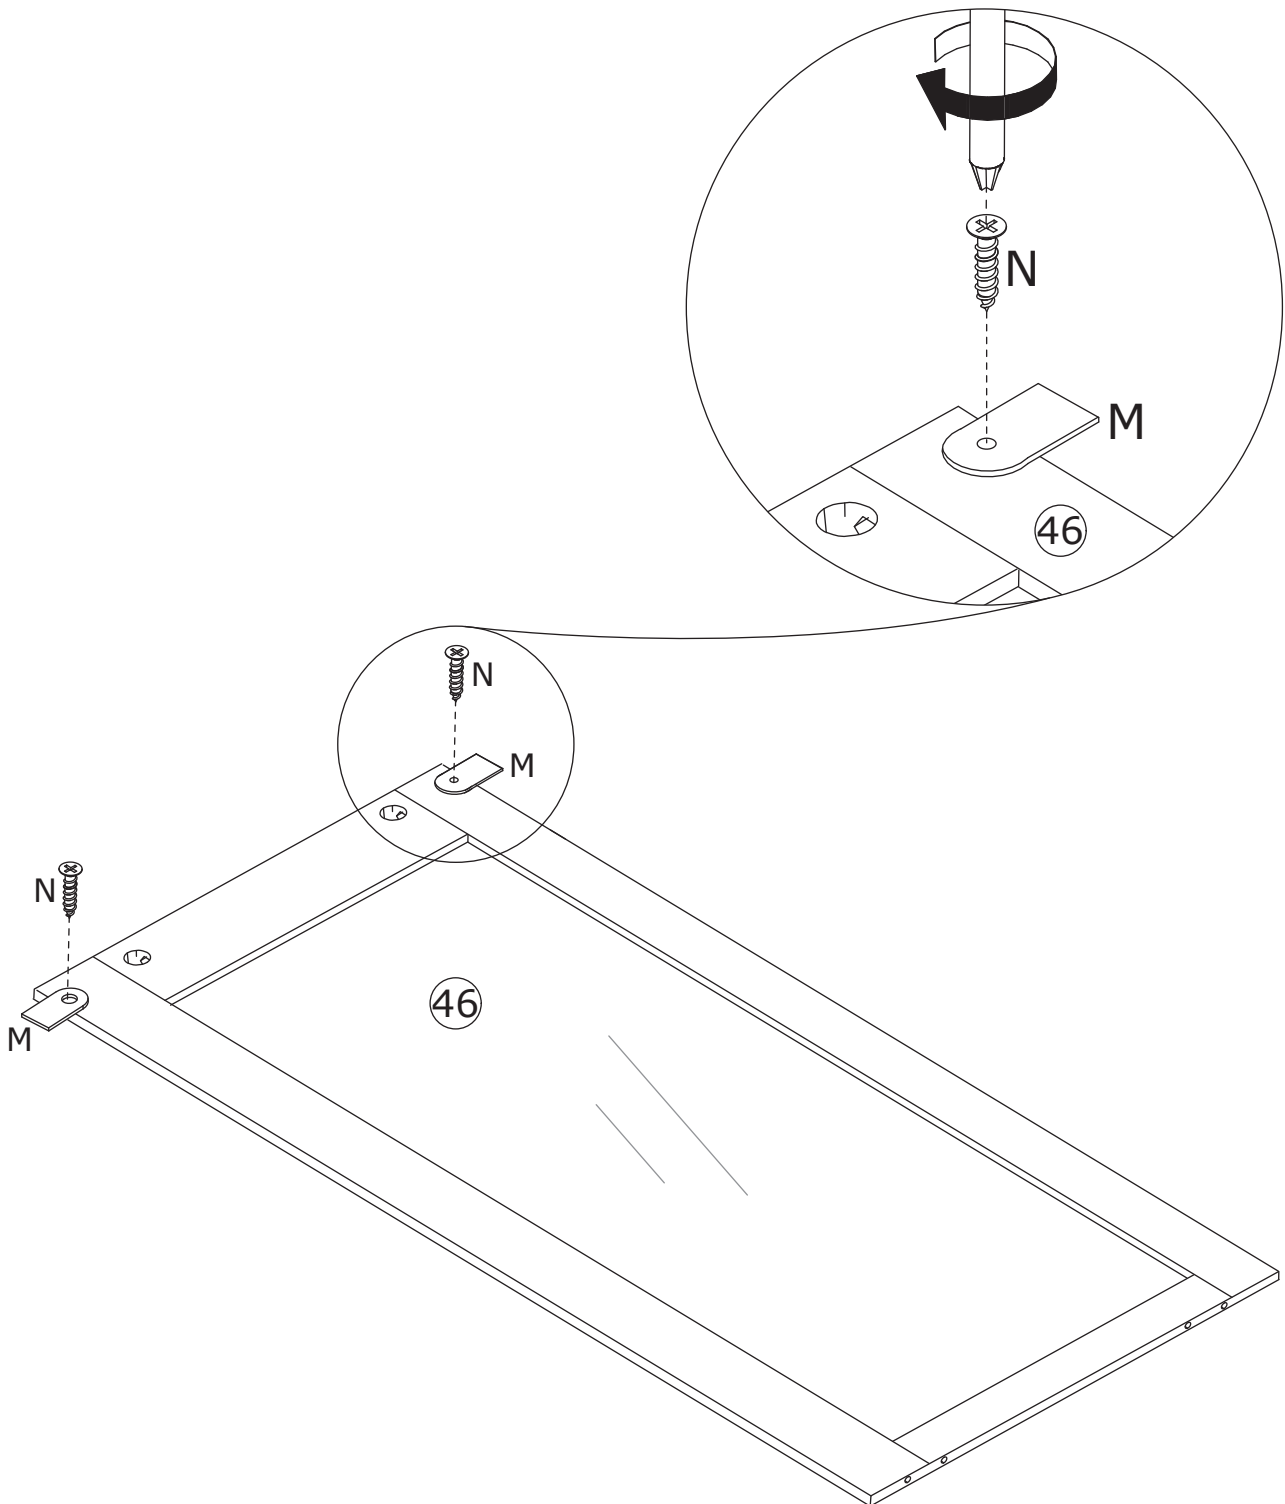  





Fix part(M) to plate 46 with screw(N) as shown.

# 57

    B x 2





Ø 15 x 9.5 mm

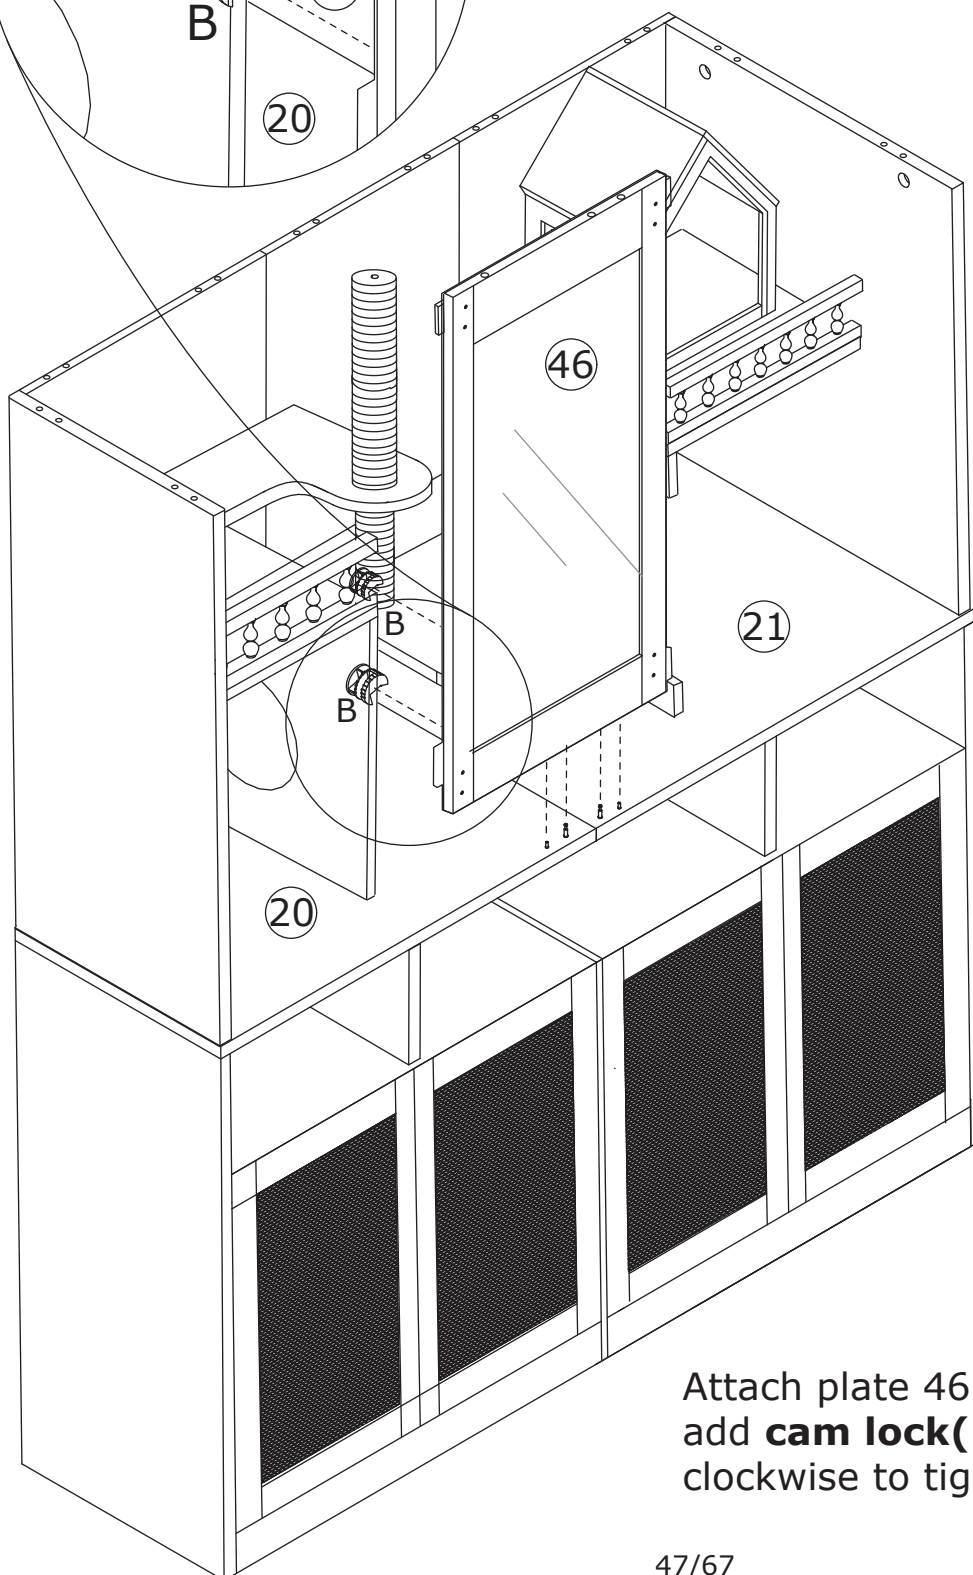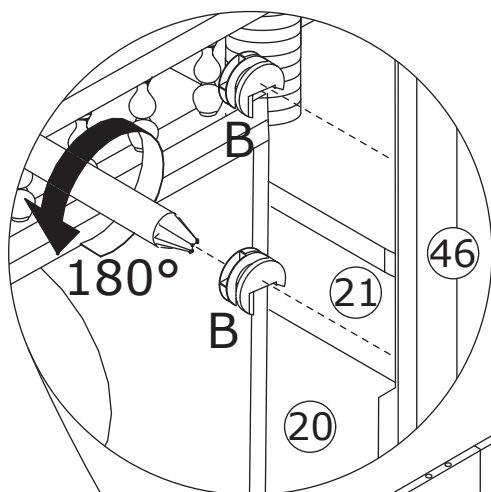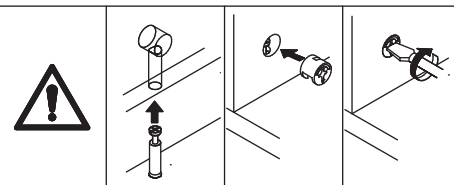



Attach plate 46 to panel 20 and 21, add **cam lock(B)** into and turn clockwise to tighten as shown.


# 58

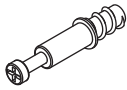A x 12  
  
 Ø6 x 35 mm

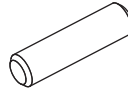C x 3  
  
 Ø8 x 30 mm

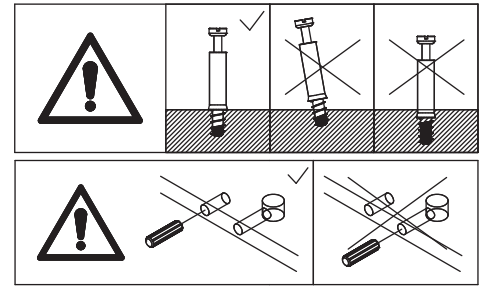  

 Screw eccentric rod(A) into panel 1 and 2 at first.  
 Connect the two panels using wooden dowel(C) as shown.

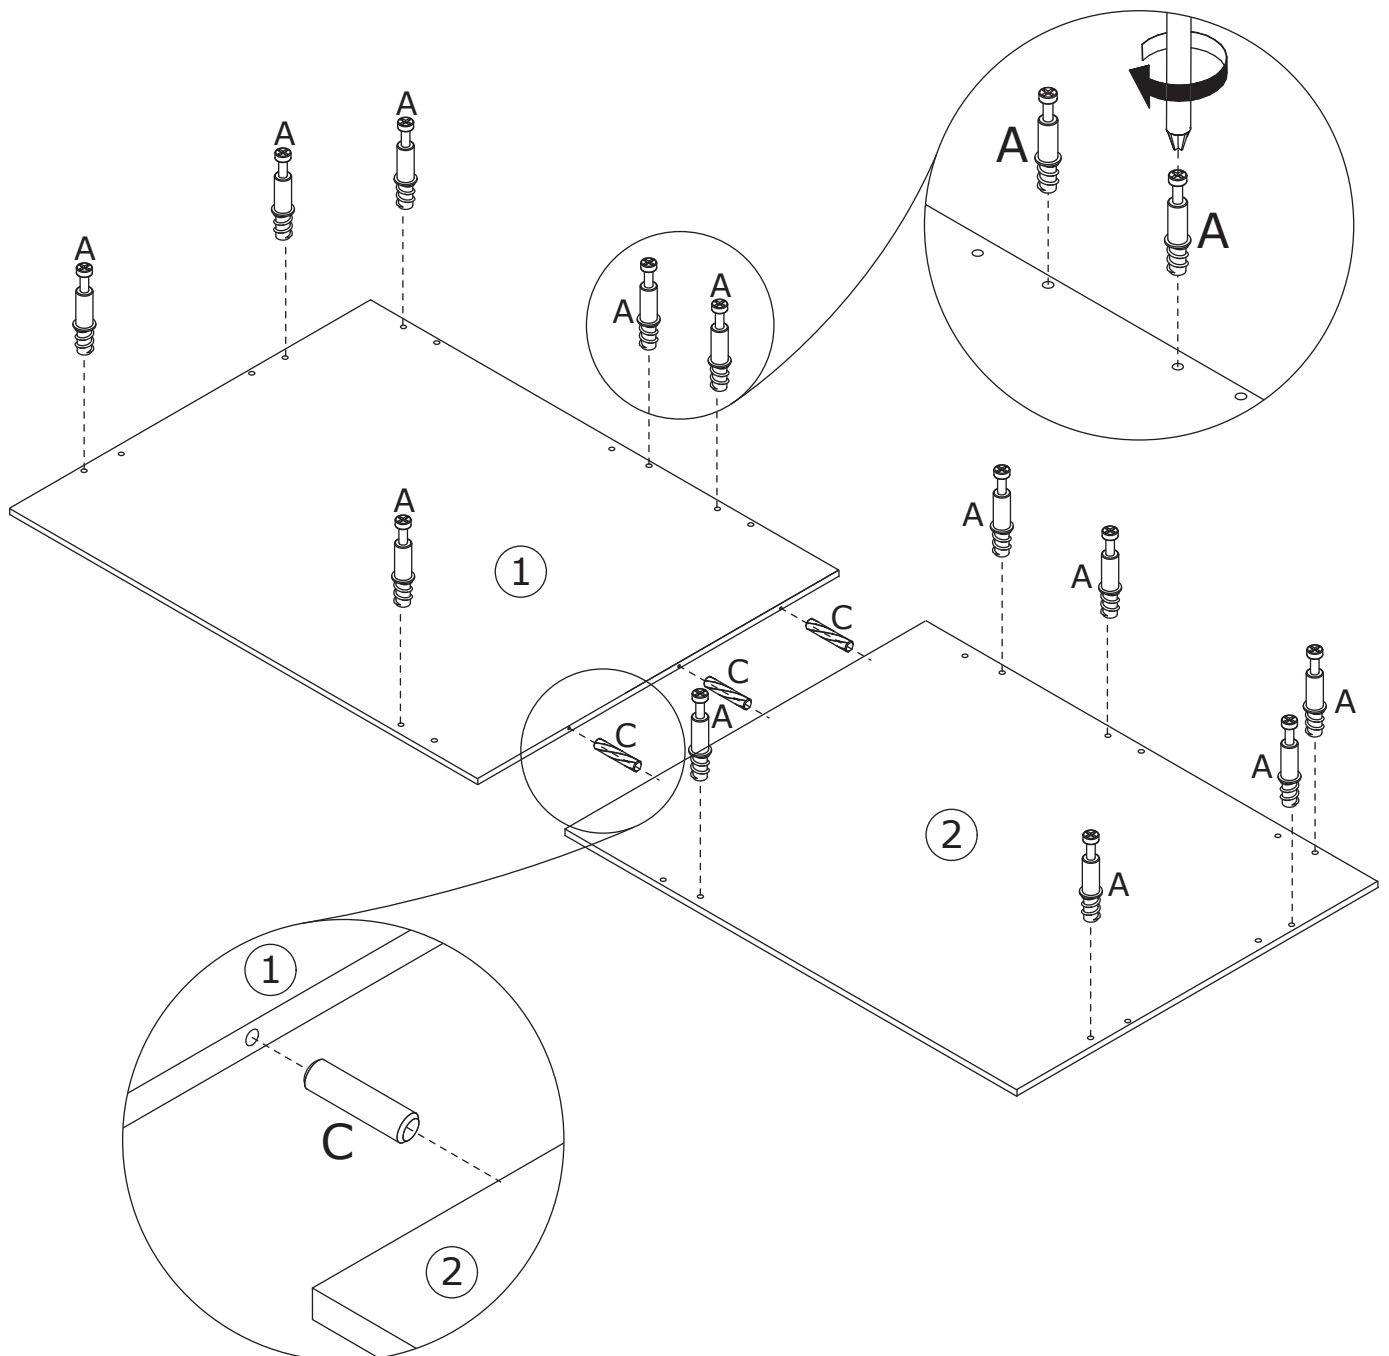




# 59

B x 6




Ø 15 x 9.5 mm

 C x 6



Ø 8 x 30 mm

 Q x 6




Ø 6 x 30 mm

V x 6






 Ø 15 x 11 mm




Insert **wooden dowel(C)** into panel 3, 46 and 4; **wooden dowel(Q)** into panel 5, 6 and 7 at first.

   Cover panel 1 and 2 to the top, add **cam lock(V)** into panel 5,6,7 and **cam lock(B)** into panel 3,46,4, then turn clockwise to tighten as shown.

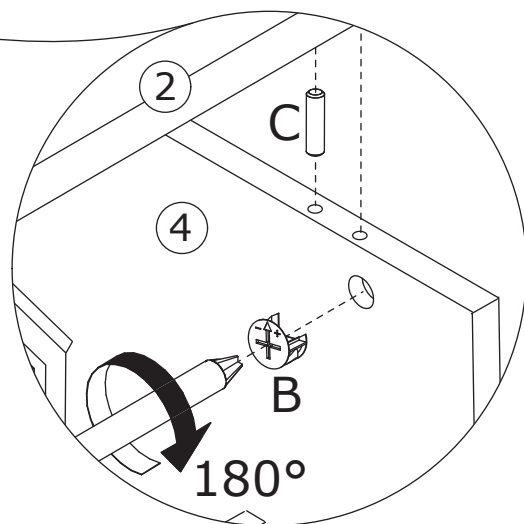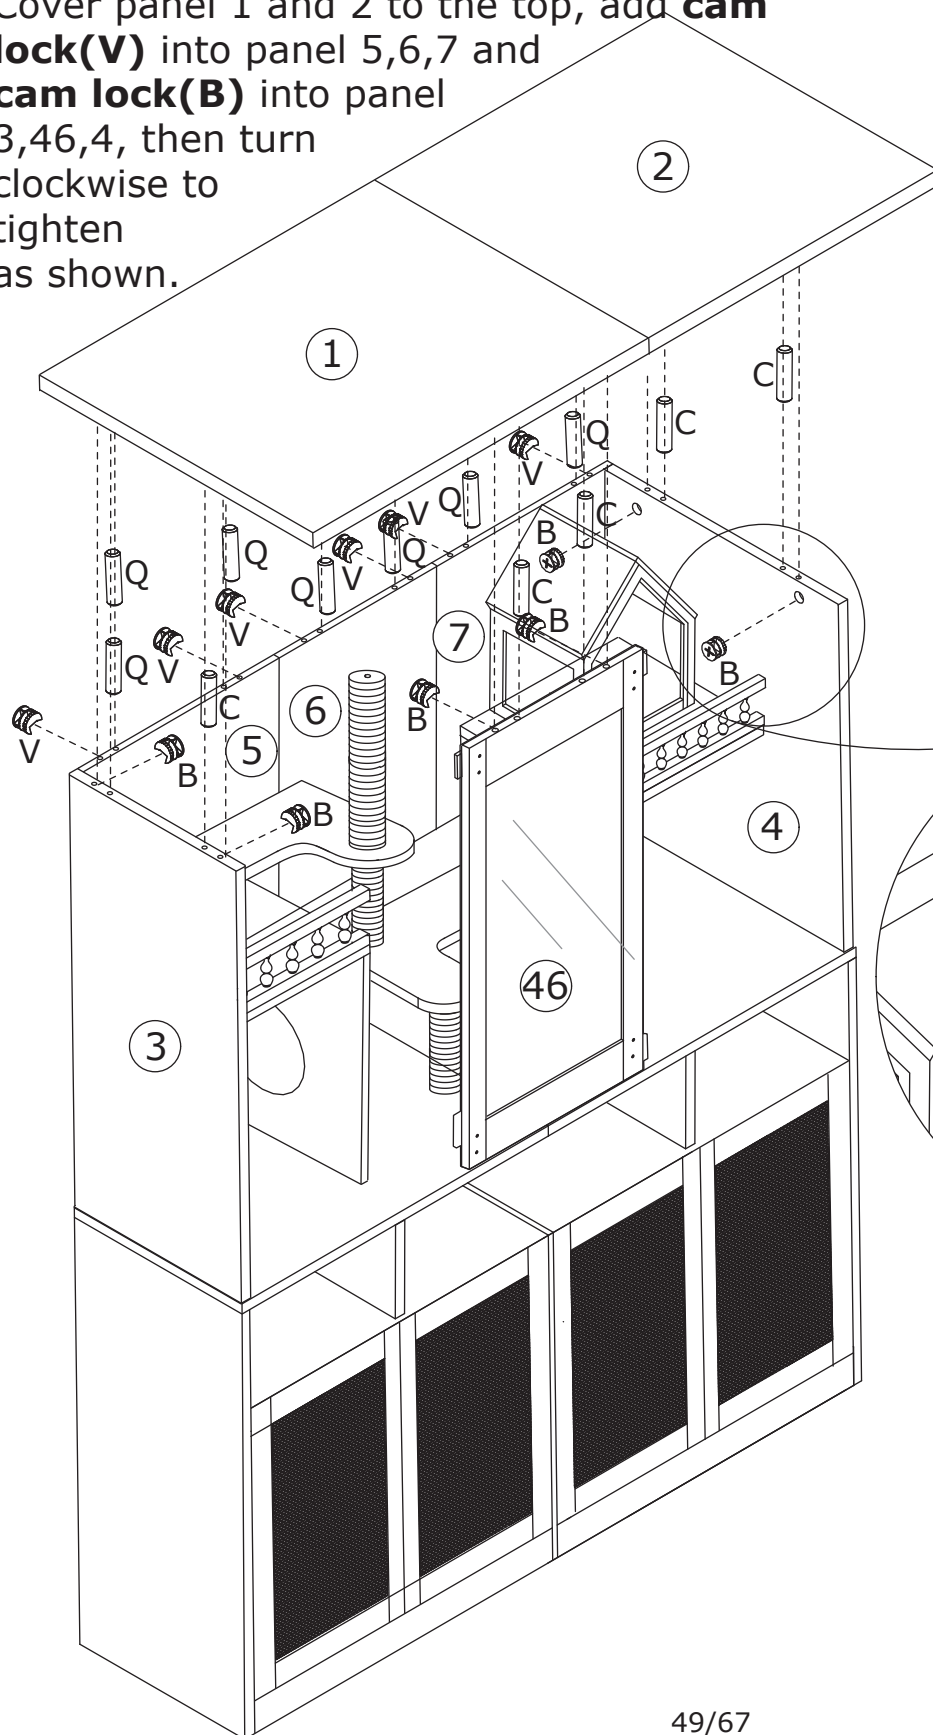
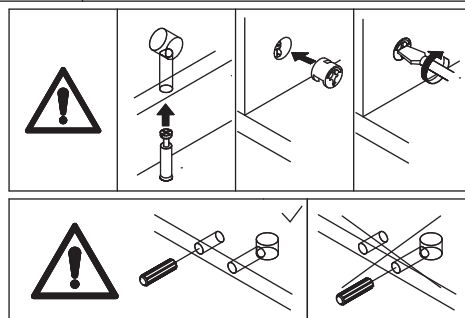


60

 L x 1






Ø8 x 30 mm

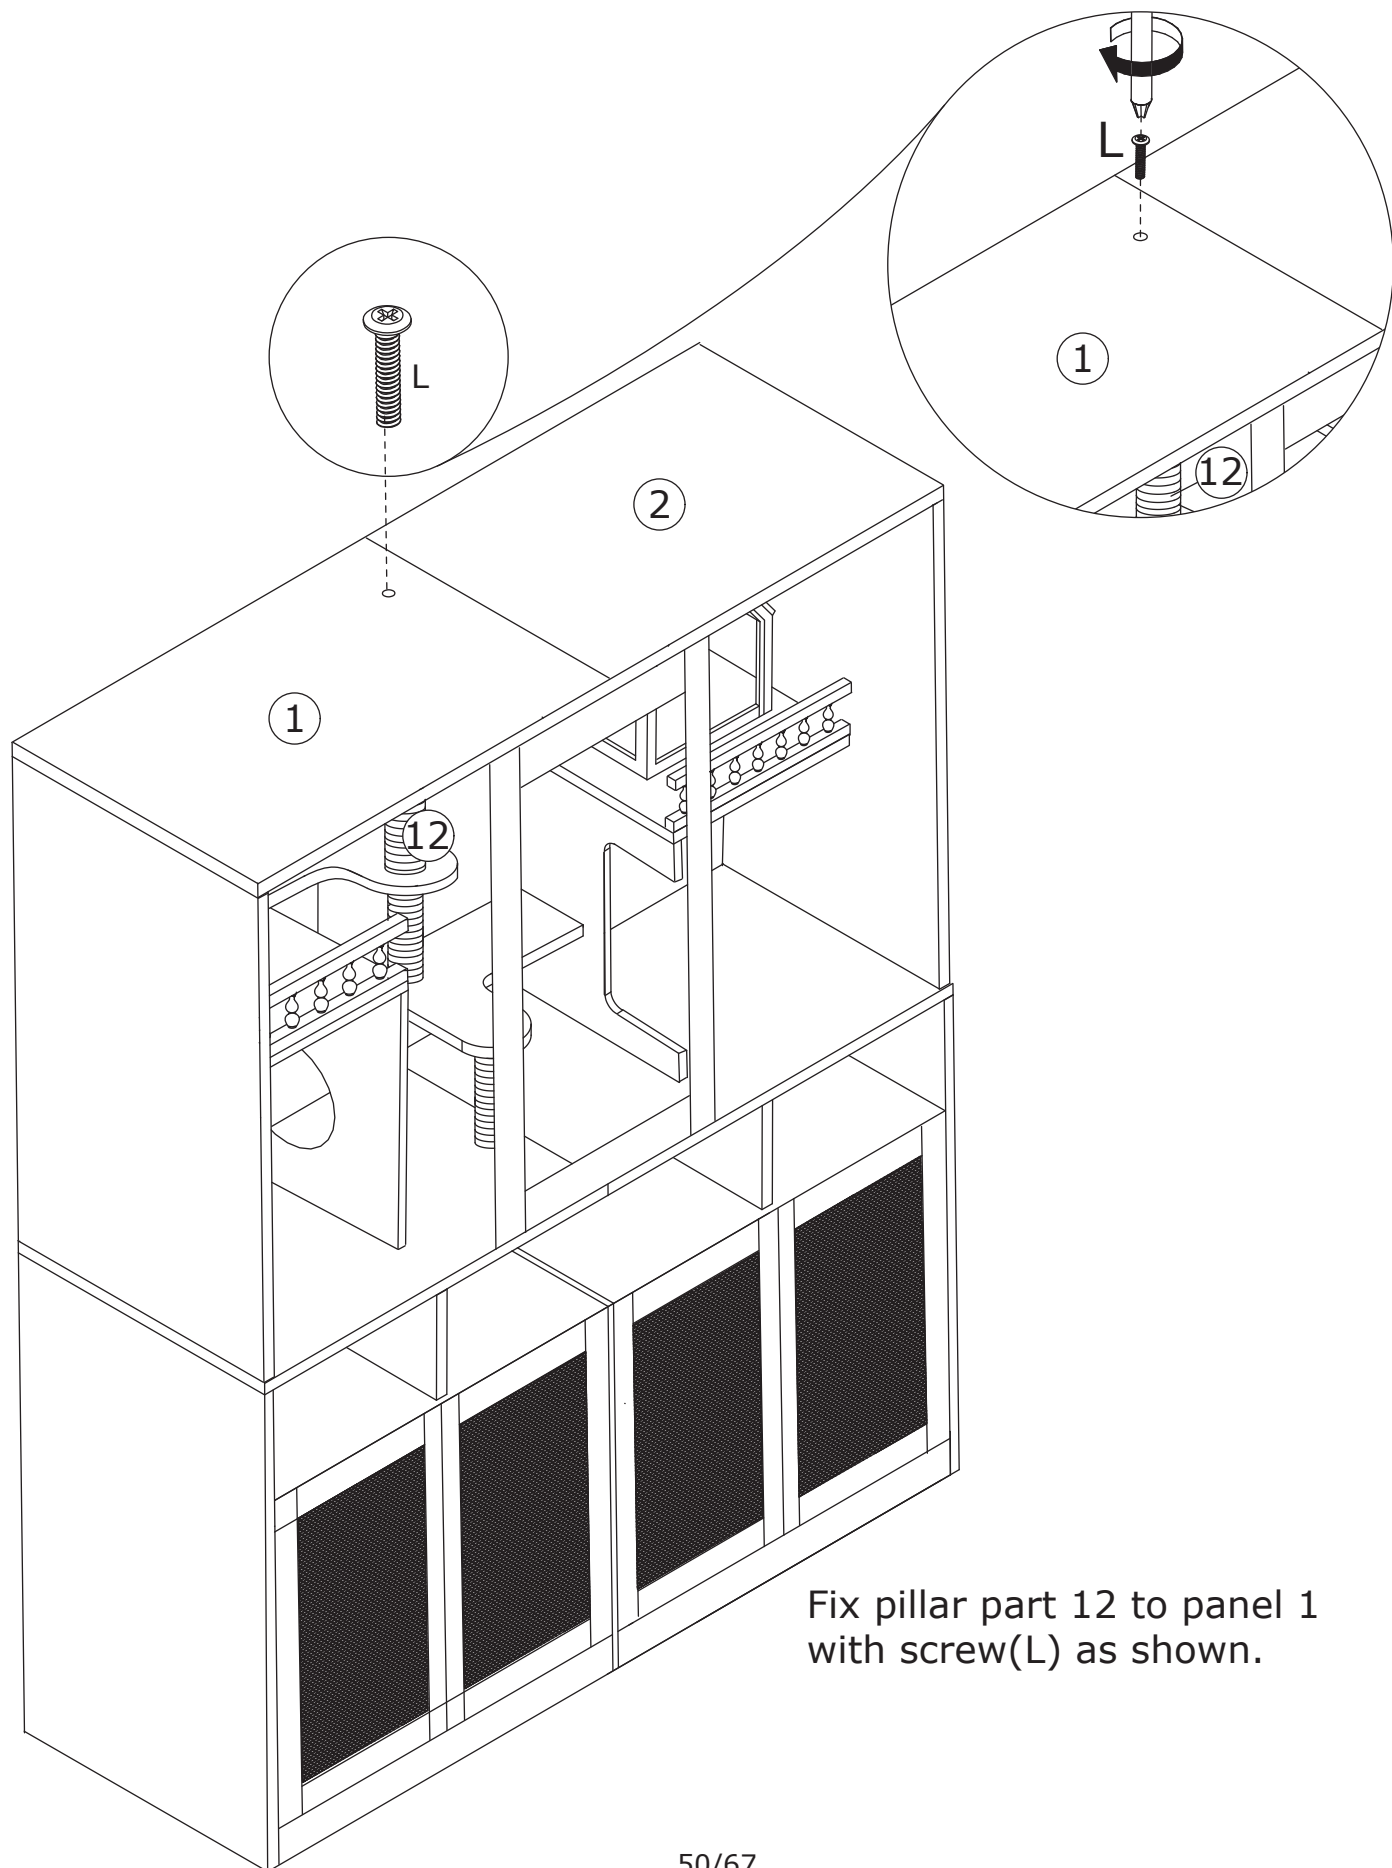  

Fix pillar part 12 to panel 1 with screw(L) as shown.





# 61

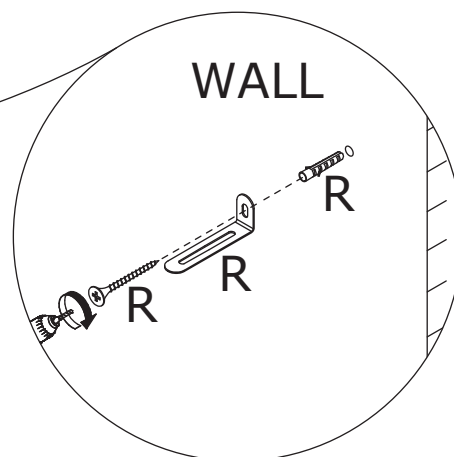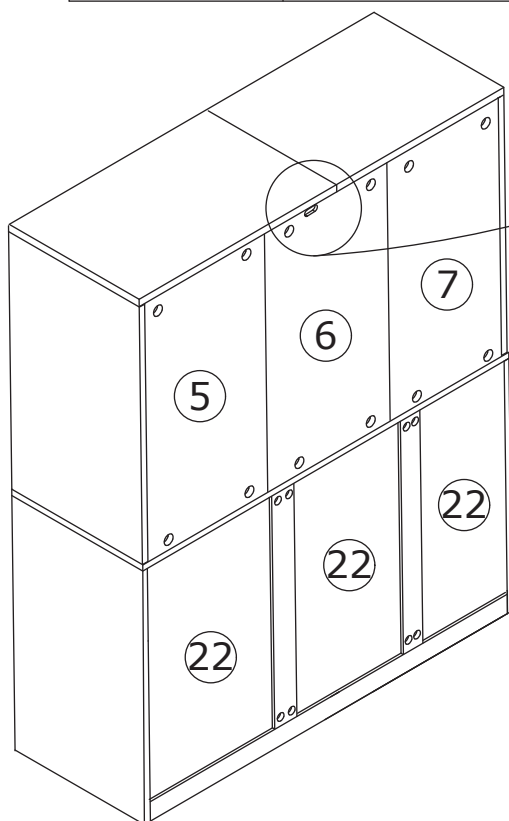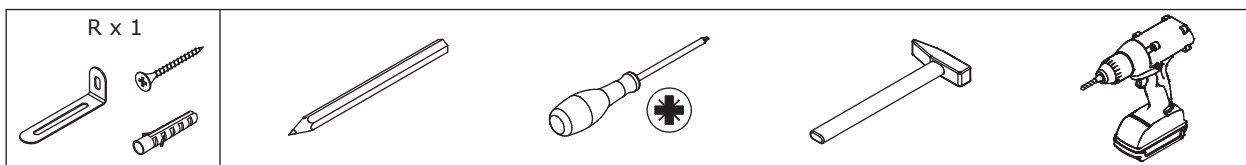   



Install anti-tipping device as shown.

# 62


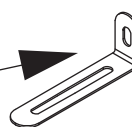 
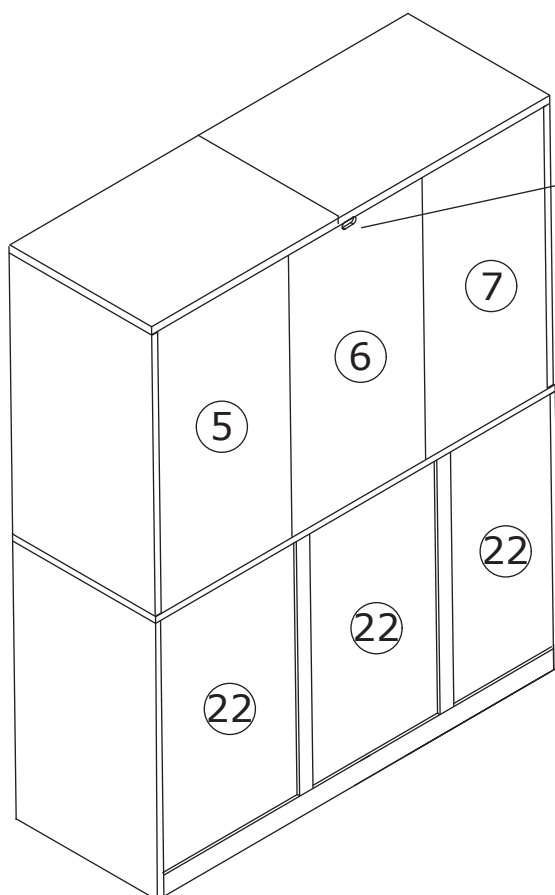 


# 63

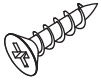N x 1  
  
 Ø 3.5 x 14 mm

 


   Fix part(R) to the unit  
 with screw(N) as shown.

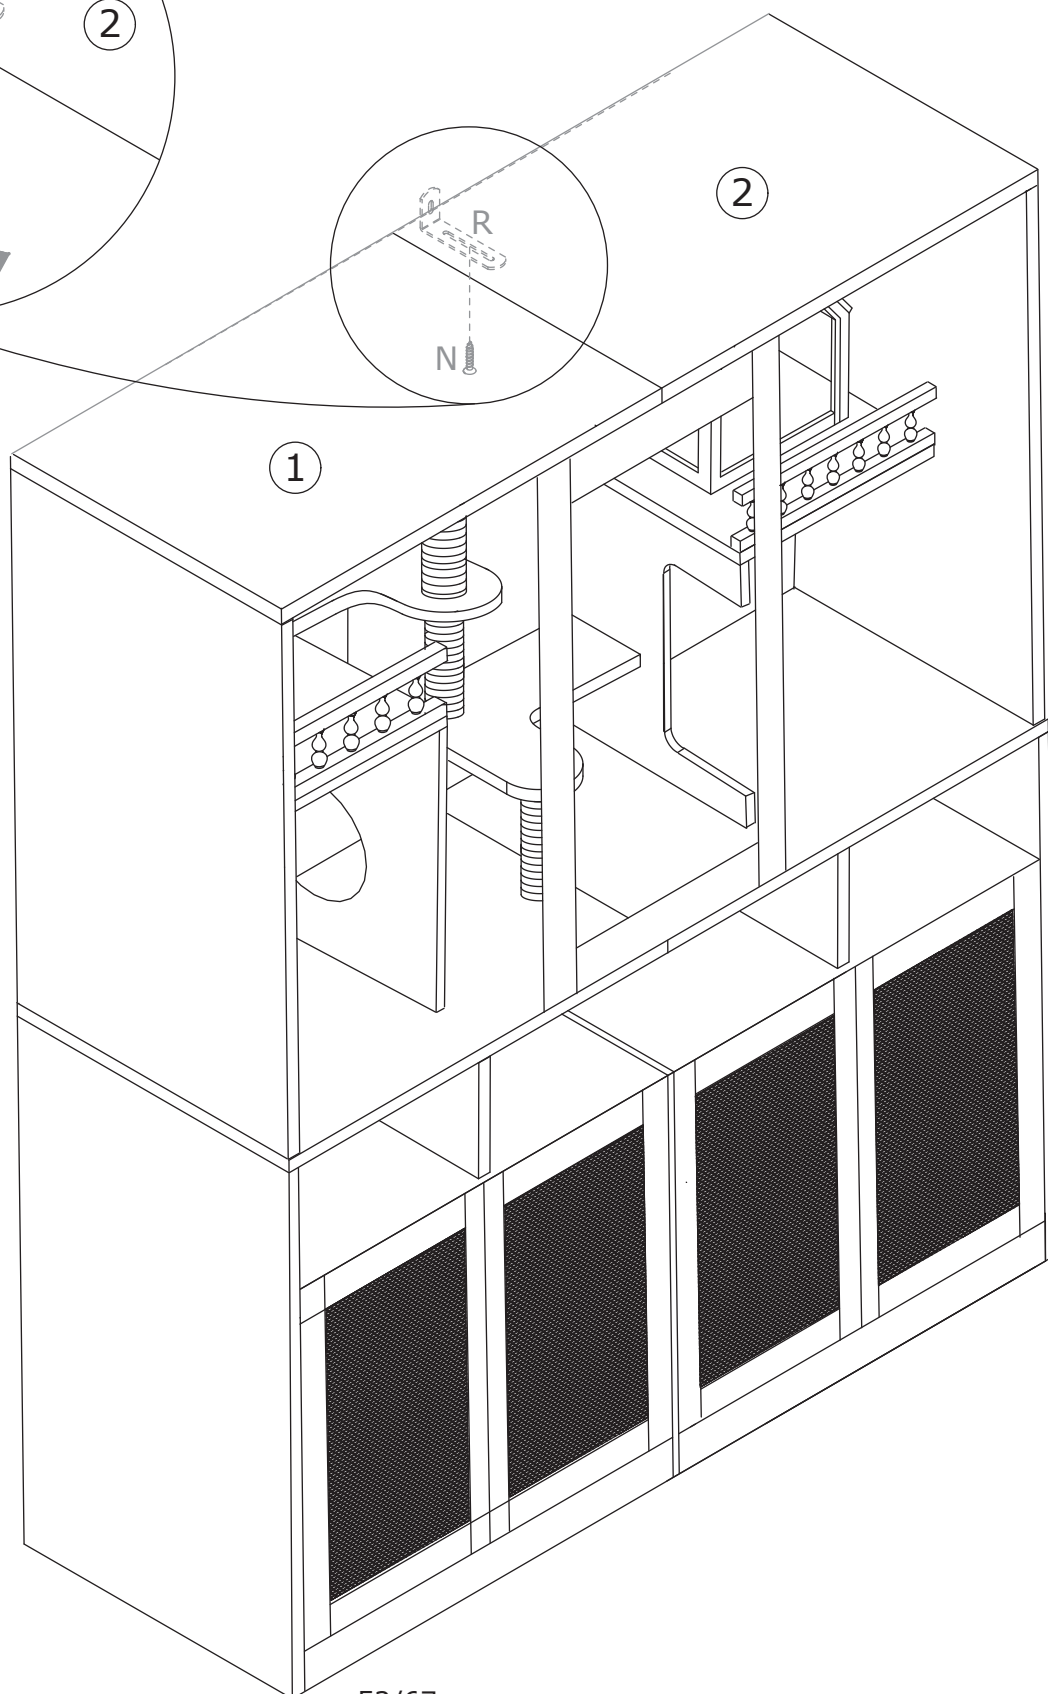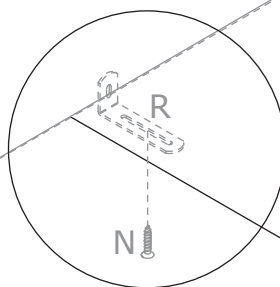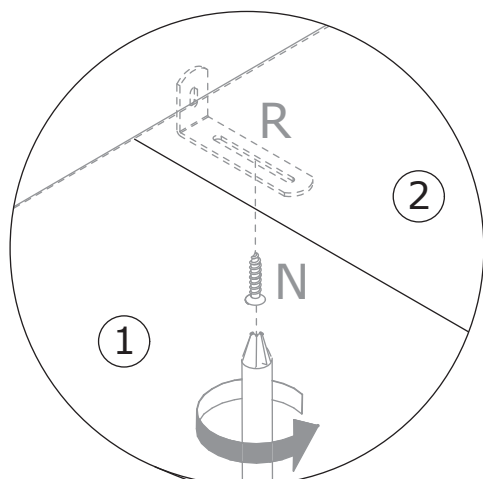


# 64

 
J x 2







K x 2

 

U x 12

 


Ø 3.5 x 14 mm

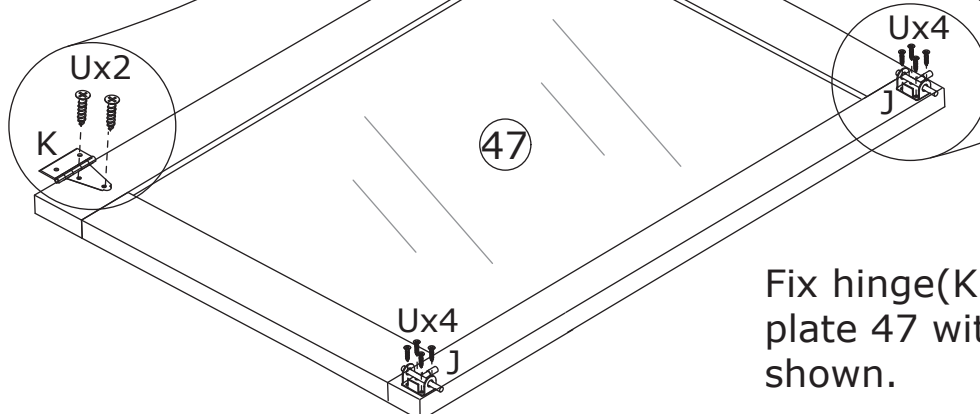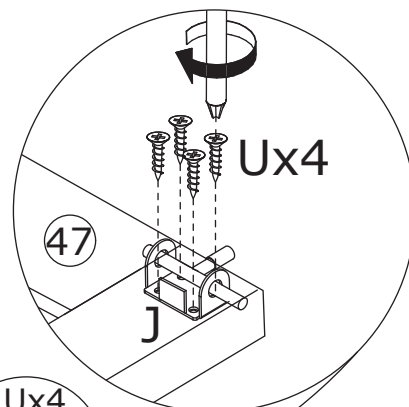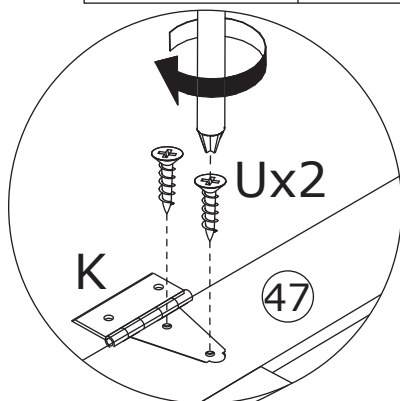    


Fix hinge(K) and bolt(J) to plate 47 with screw(U) as shown.

# 65

 
J x 2







K x 2

 

U x 12

 


Ø 3.5 x 14 mm

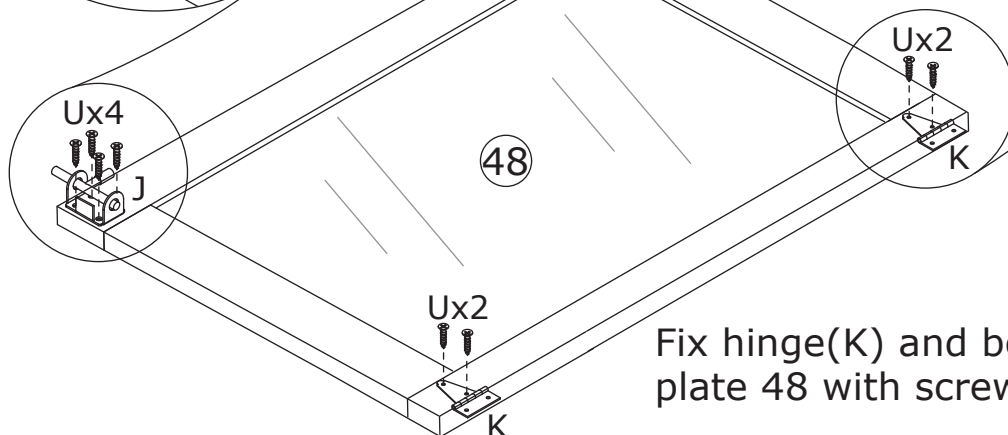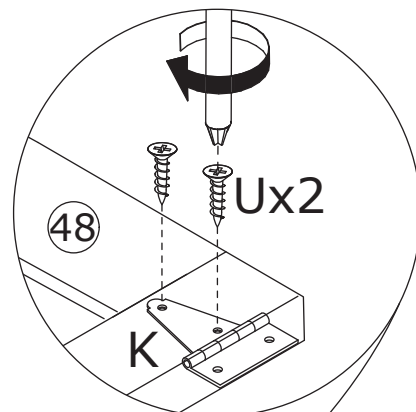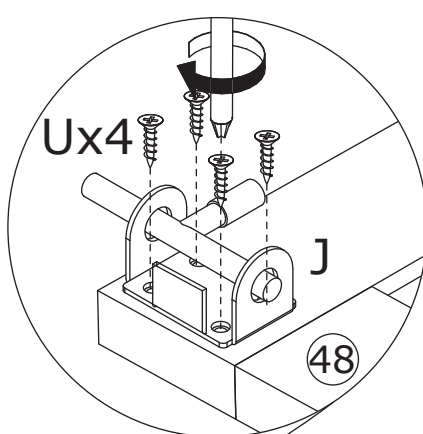    


Fix hinge(K) and bolt(J) to plate 48 with screw(U) as shown.

66

 
U x 8



Ø 3.5 x 14 mm

 

 Assemble door 47 and 48 to panel 3 and 4 by fixing hinge with screw(U) as shown.

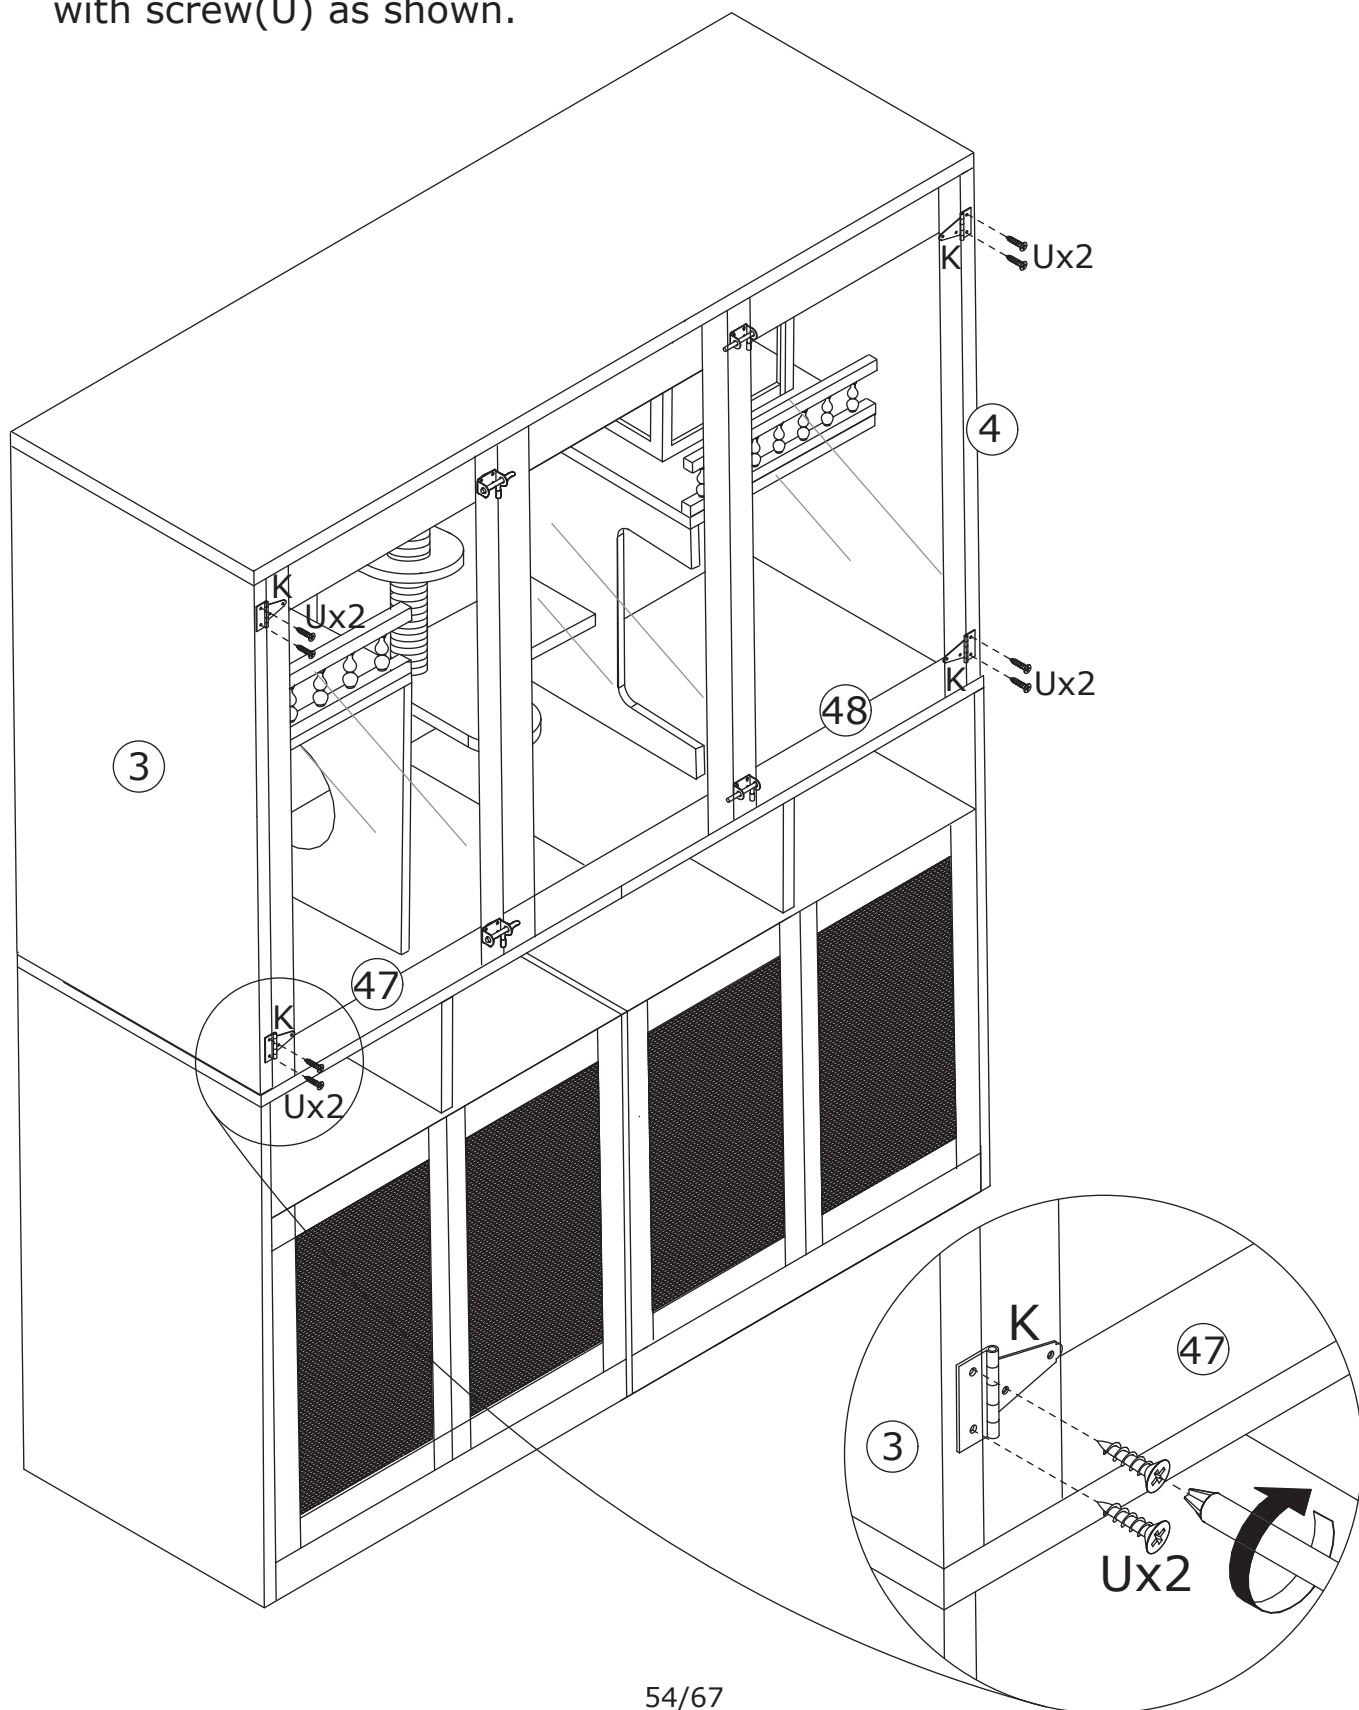


# 67


J x 4




 
U x 8



Ø3.5 x 14 mm

 


  Fix bolt(J) to plate 46  
with screw(U) as shown.



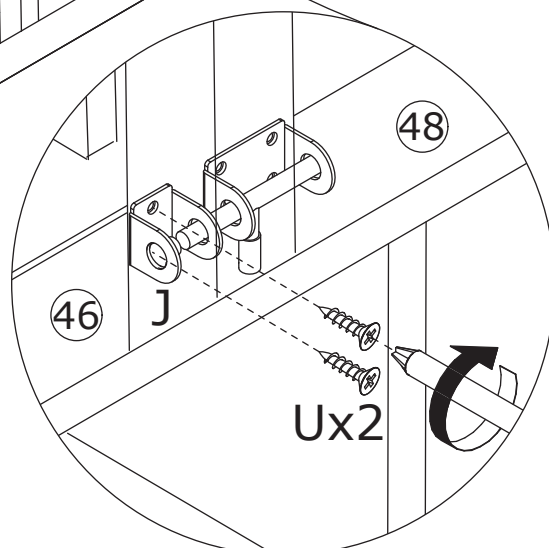
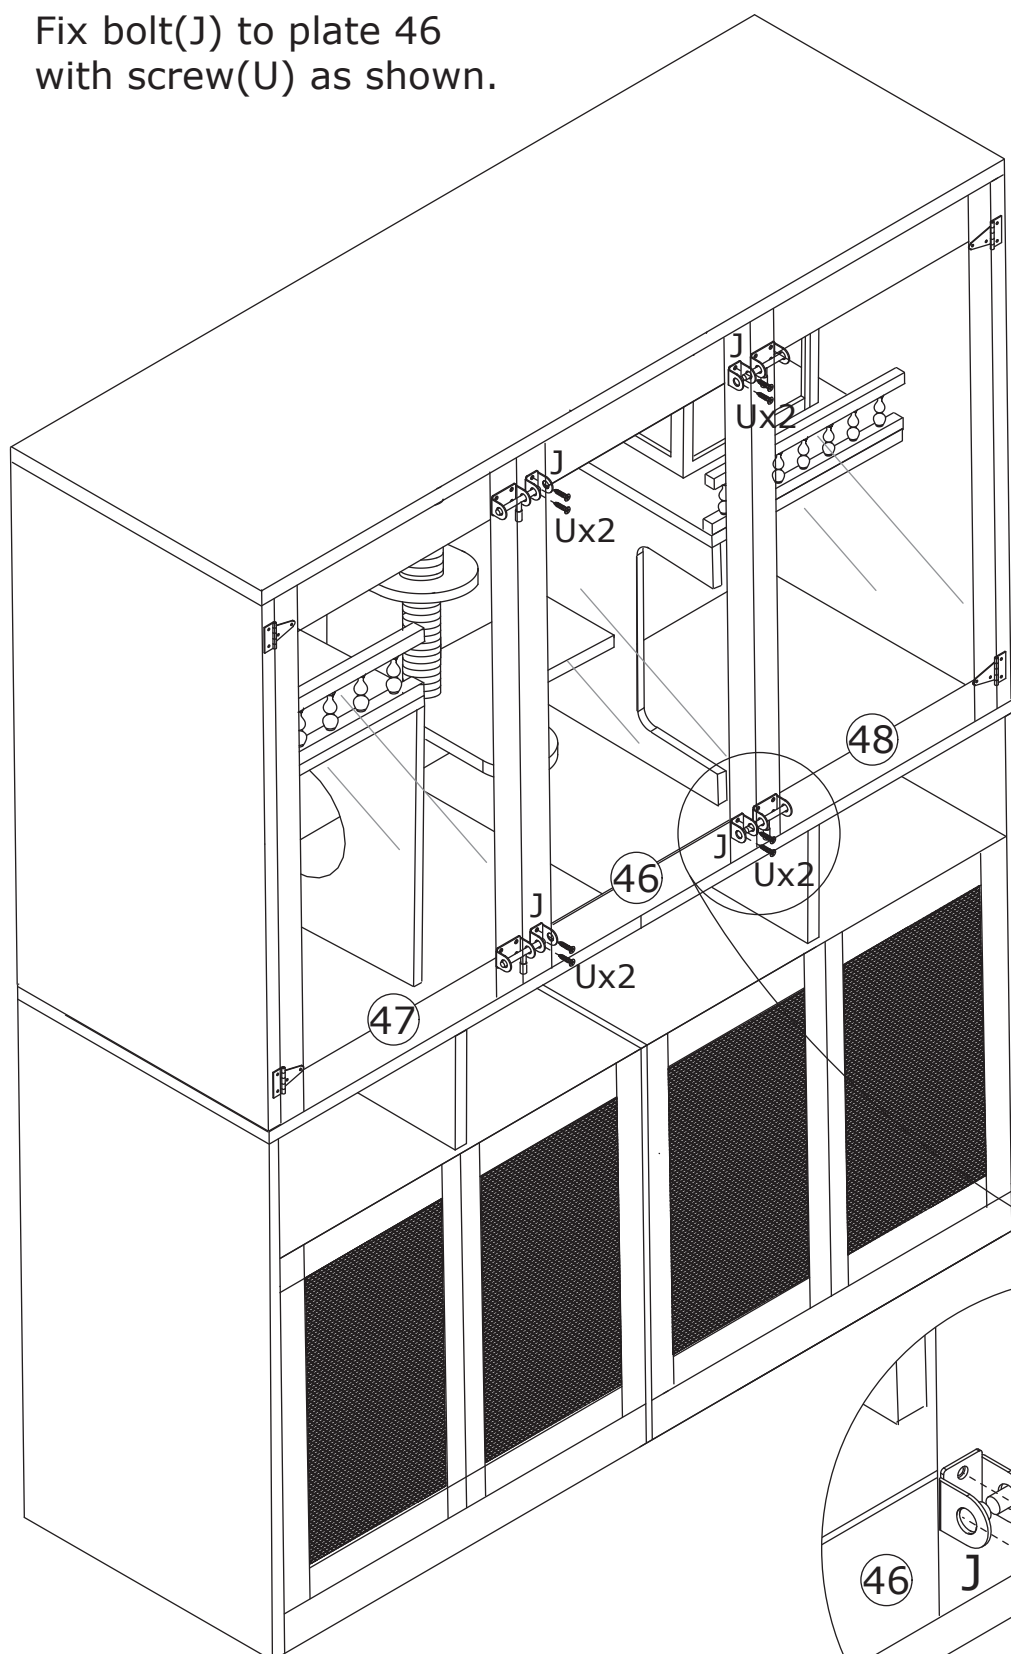


# 68

 A x 4



Ø6 x 35 mm

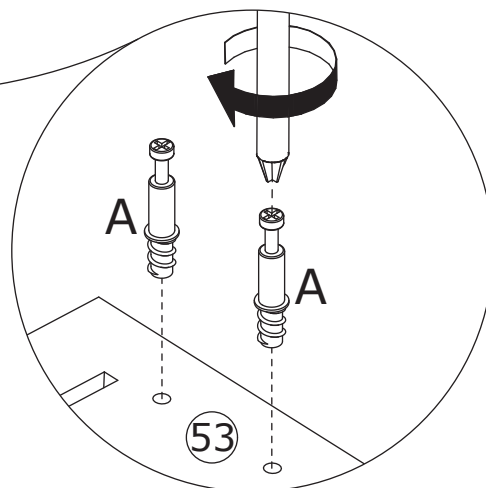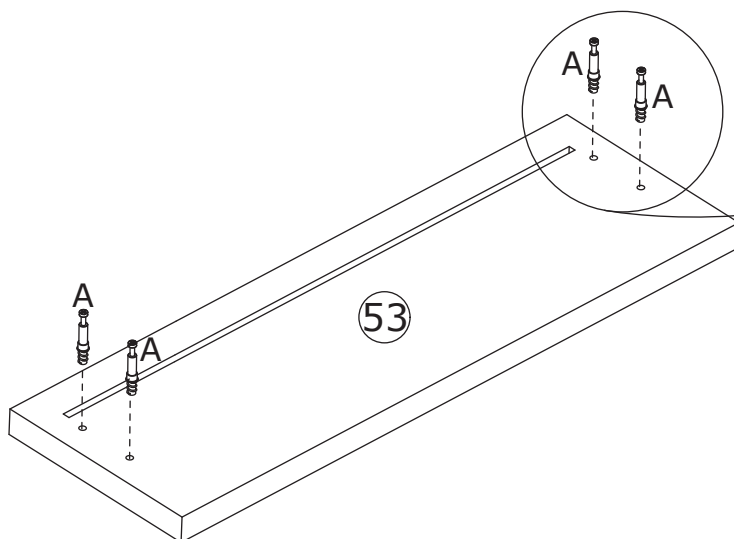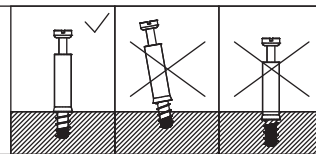    





Screw eccentric rod(A) into panel 53 at first.

# 69

    V x 4



Ø15 x 11 mm

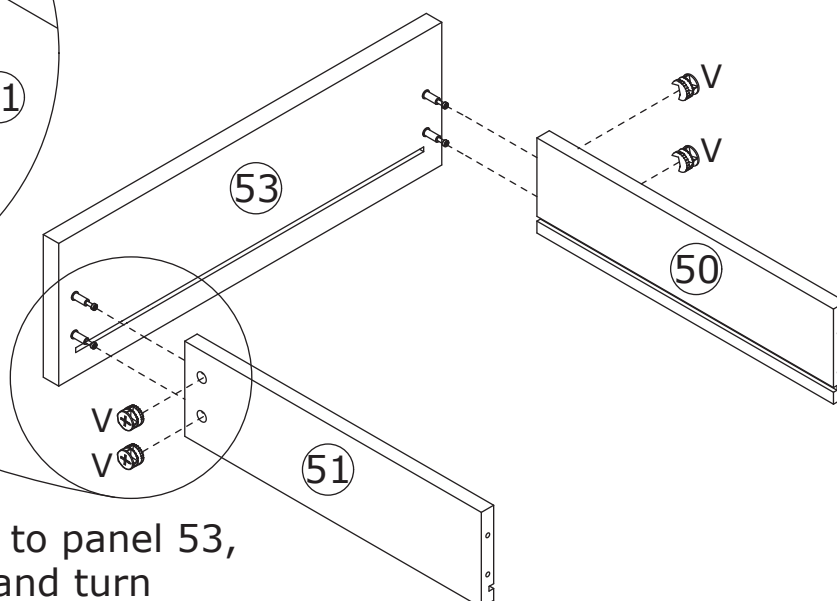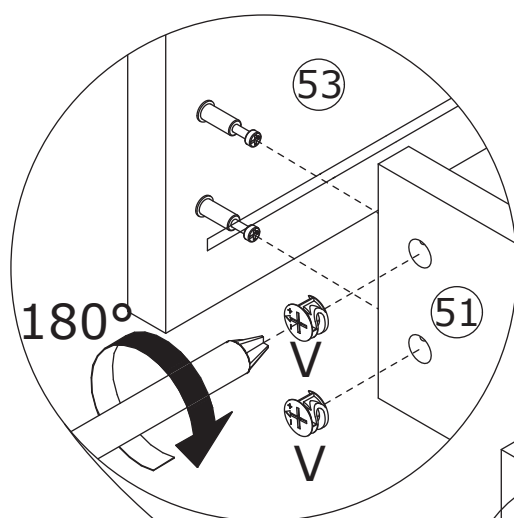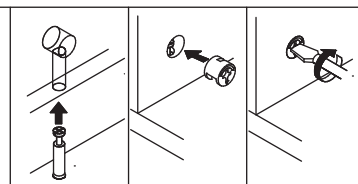


Attach panel 50 and 51 to panel 53,  
add **cam lock(V)** into and turn  
clockwise to tighten as shown.







# 70

 A x 4



Ø6 x 35 mm

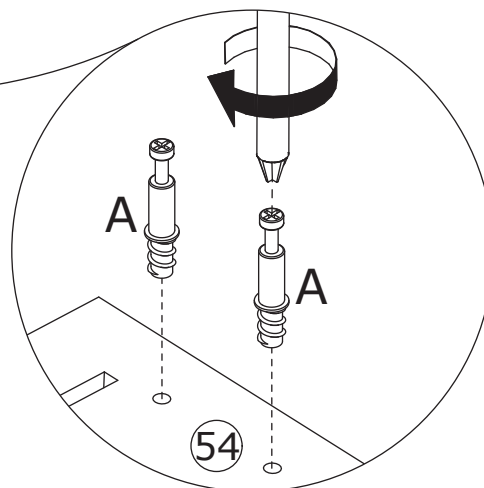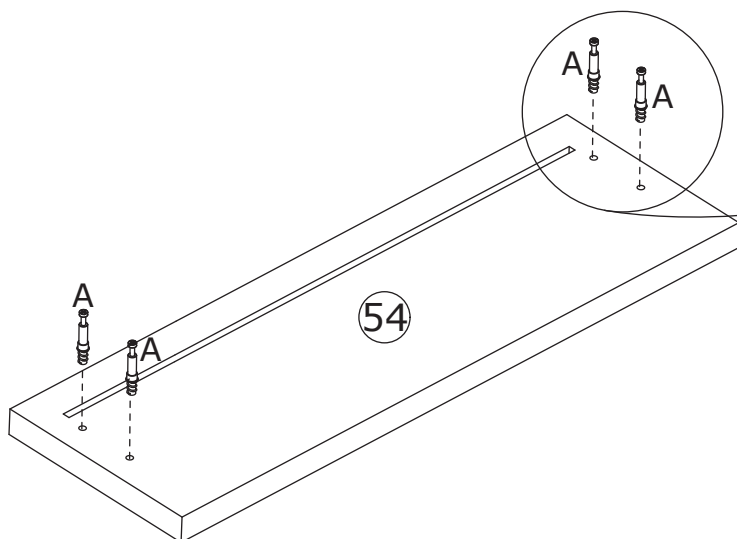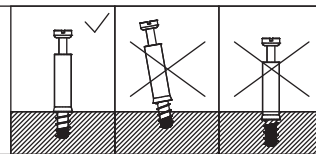    




Screw eccentric rod(A) into panel 54 at first.

# 71

   V x 4




Ø15 x 11 mm

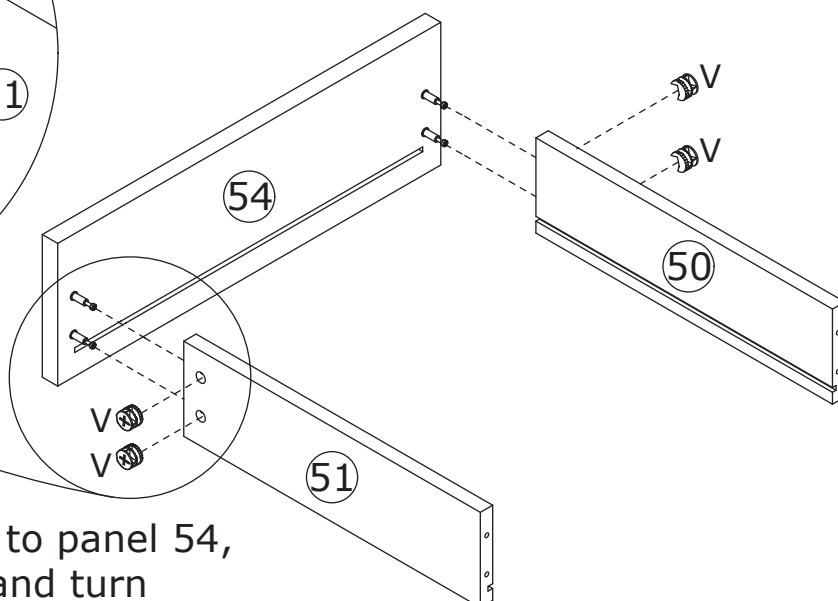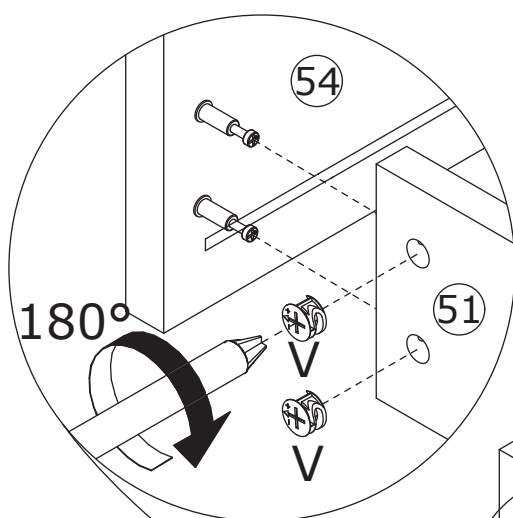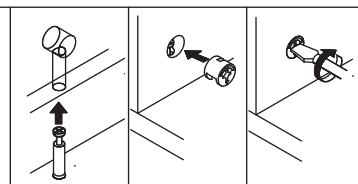


Attach panel 50 and 51 to panel 54,  
add **cam lock(V)** into and turn  
clockwise to tighten as shown.

 72

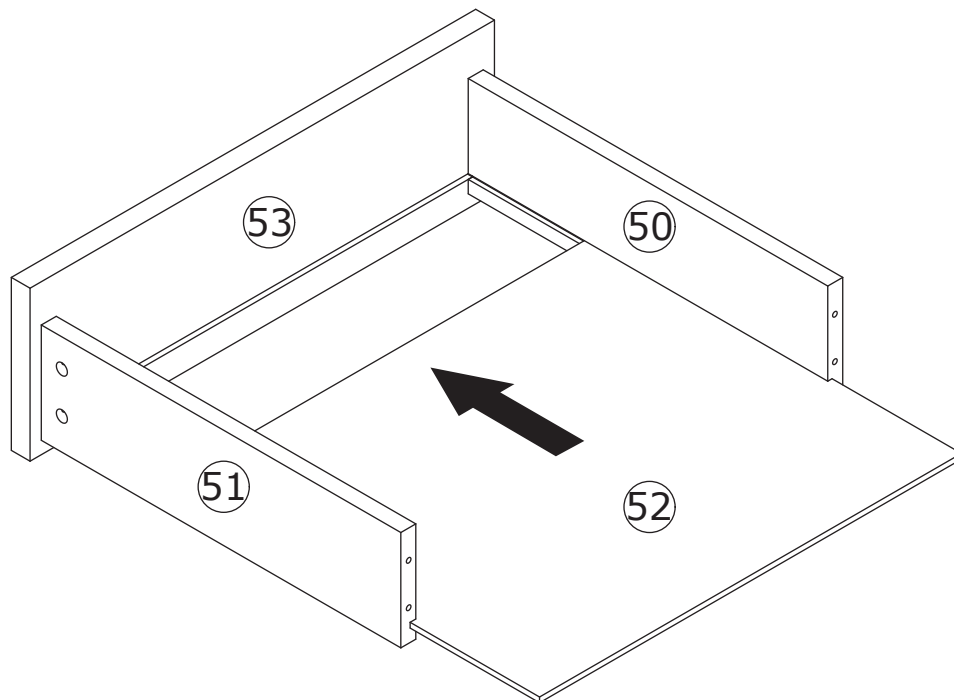

Insert bottom panel 52 along available grooves as shown.


 
73

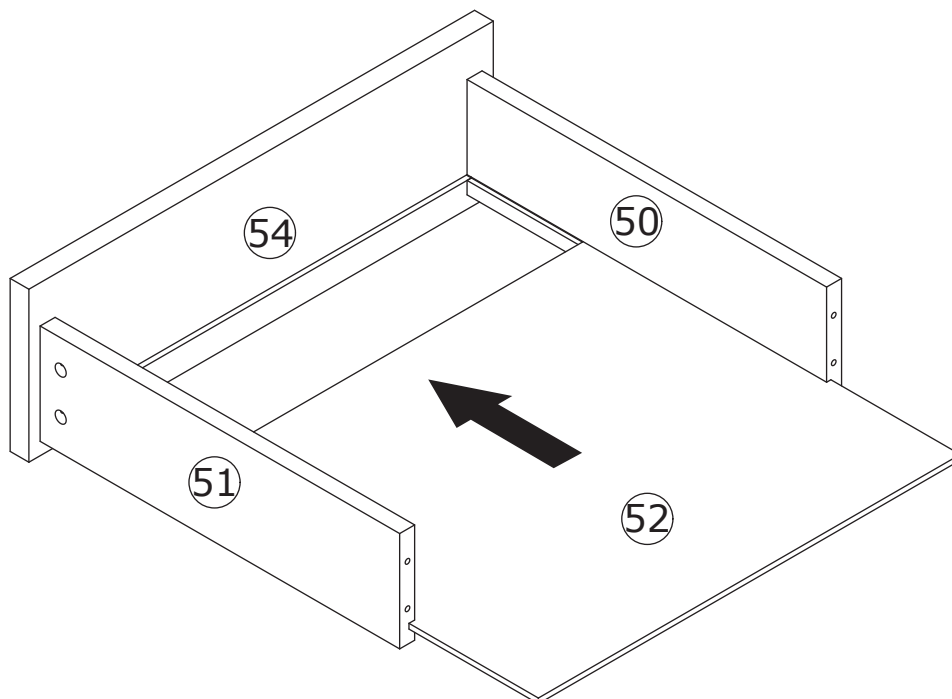


Insert bottom panel 52 along available grooves as shown.





# 74

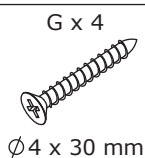  

 
Fix panel 49 to panel 50  
and 51 with screw(G) as shown.

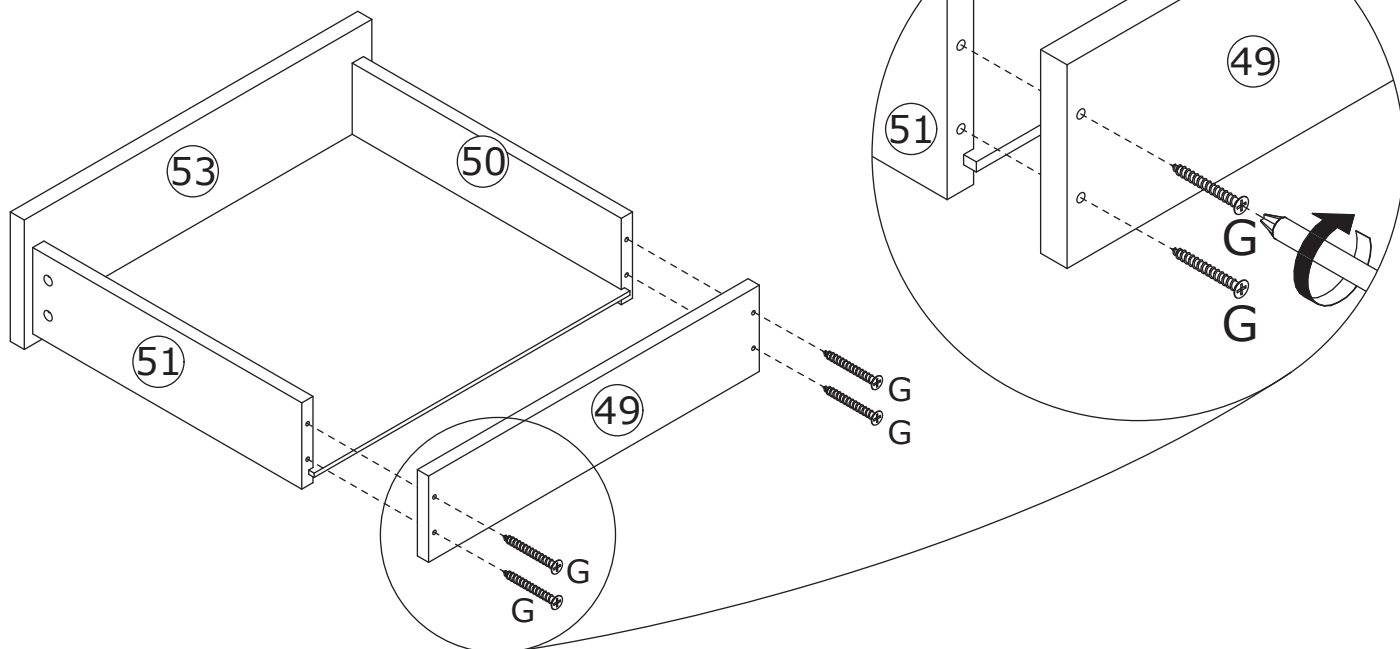




# 75

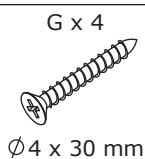  



 
Fix panel 49 to panel 50  
and 51 with screw(G) as shown.

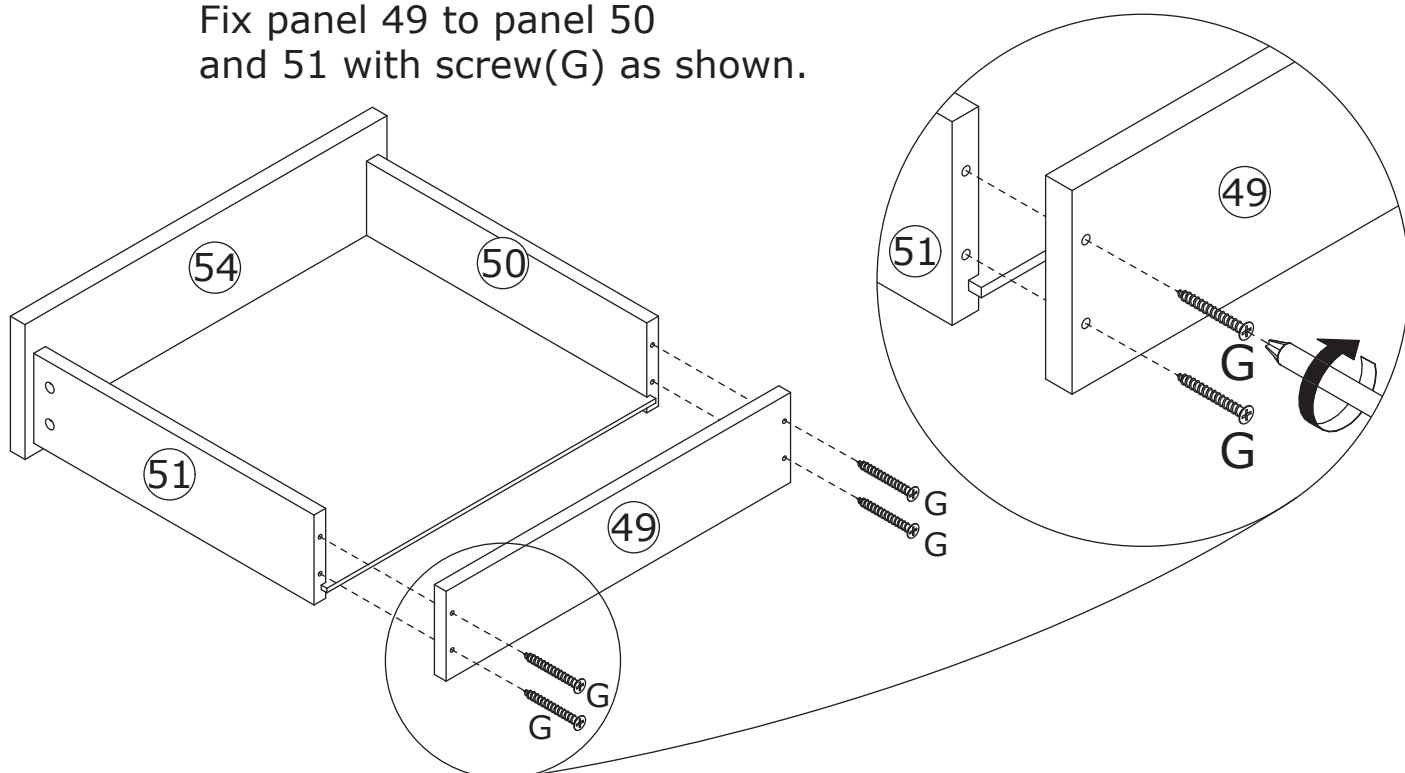





# 76

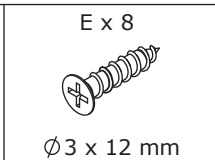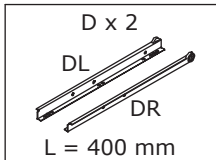   

   Fix rail(DL) and (DR) to panel 50 and 51 with screw(E) as shown.

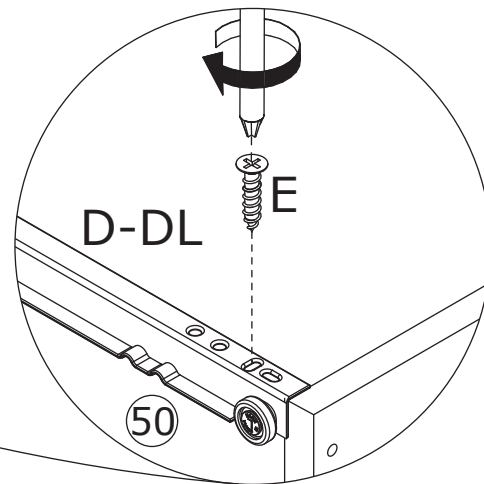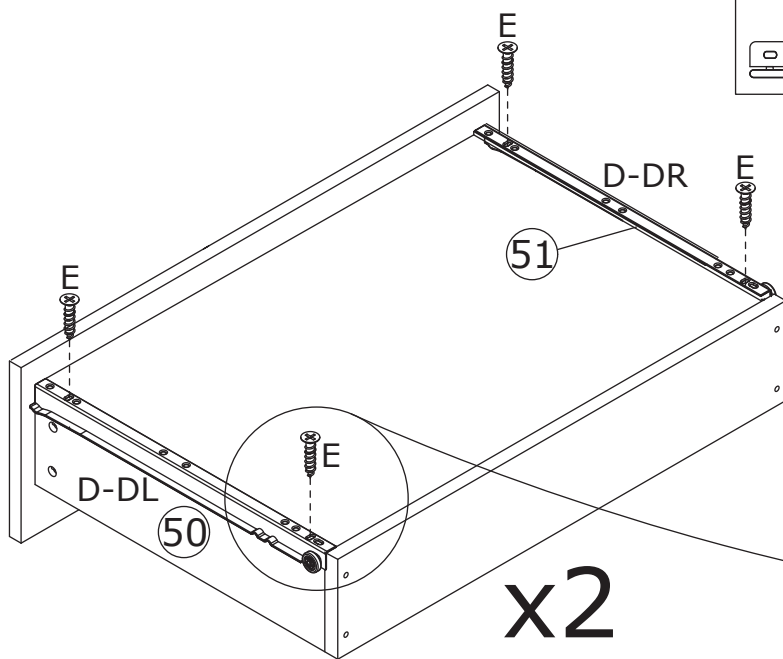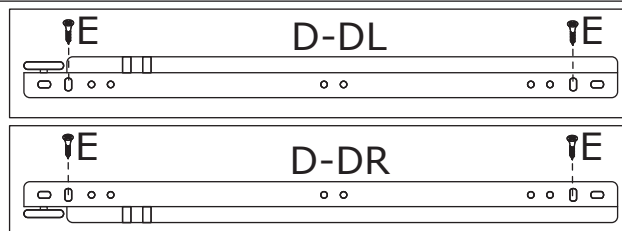


# 77

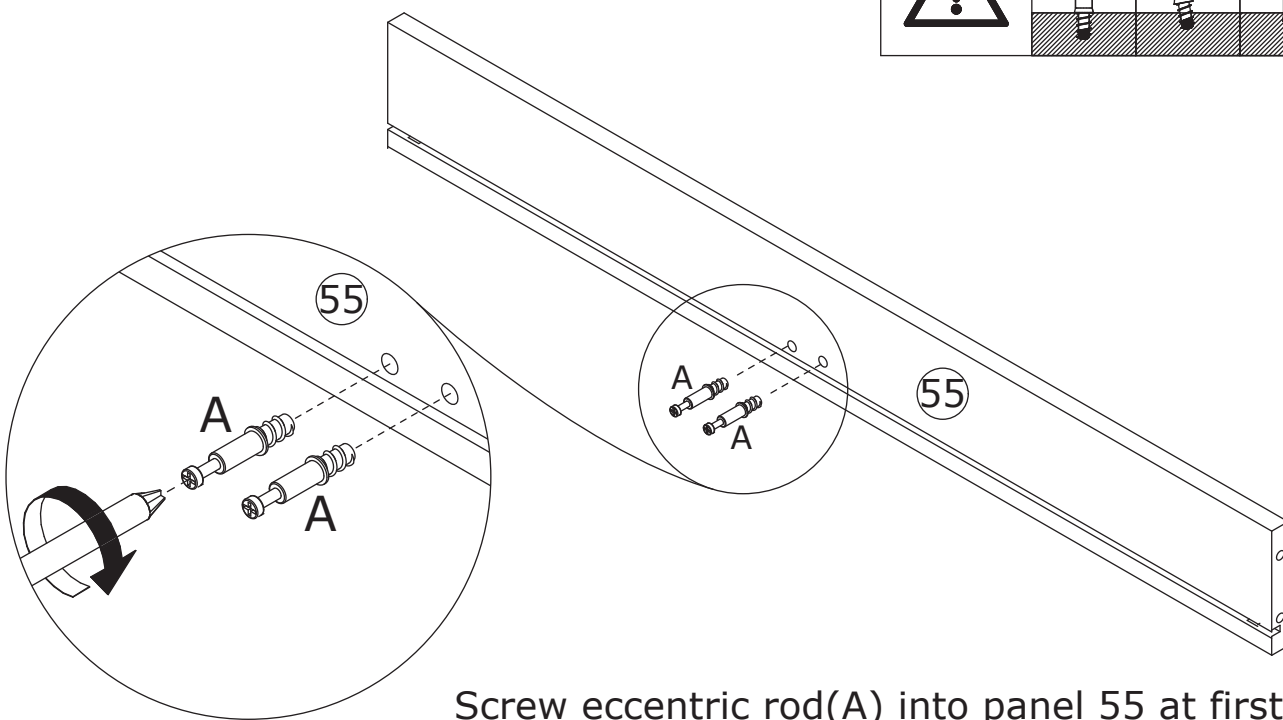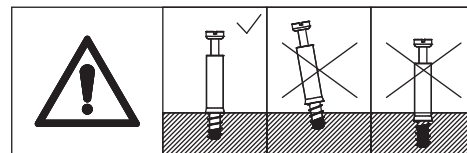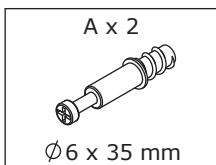    

Screw eccentric rod(A) into panel 55 at first.


# 78

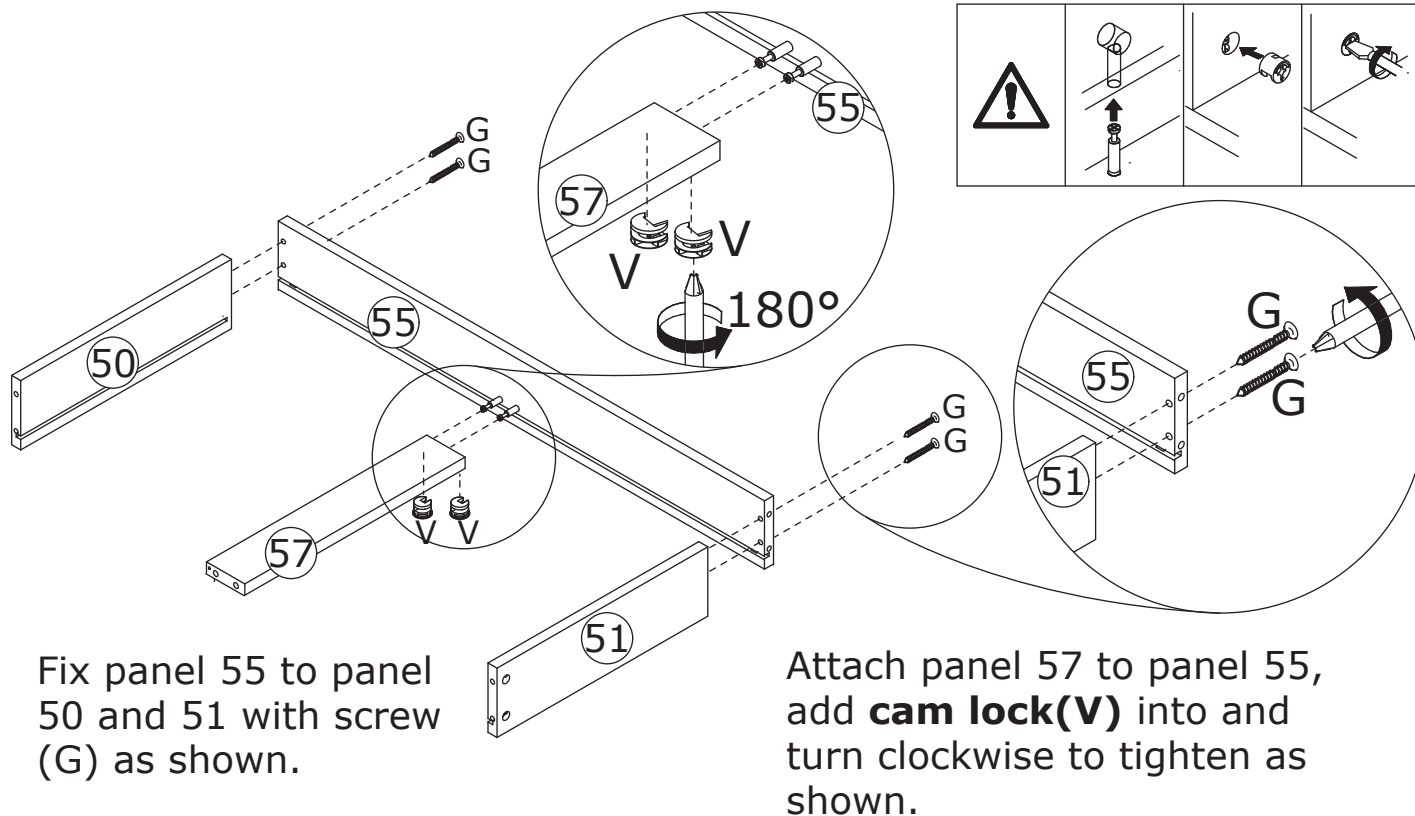 



# 79




 
Insert bottom panel 56 along available grooves as shown.

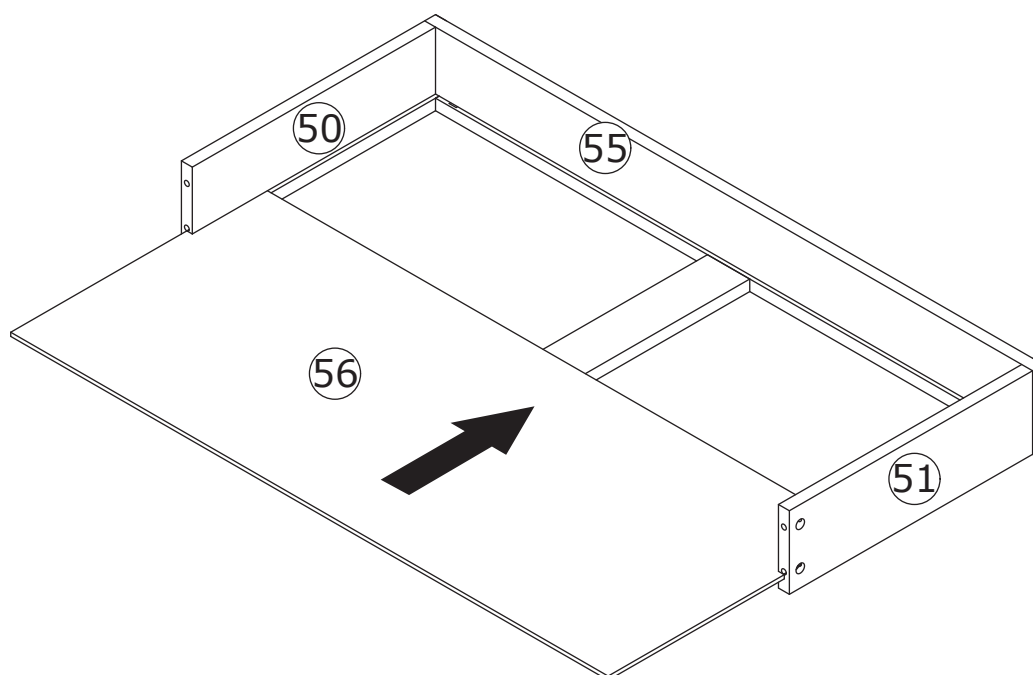



# 80

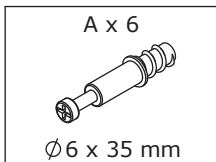  

 
 
Screw eccentric rod(A) into panel 58 at first.

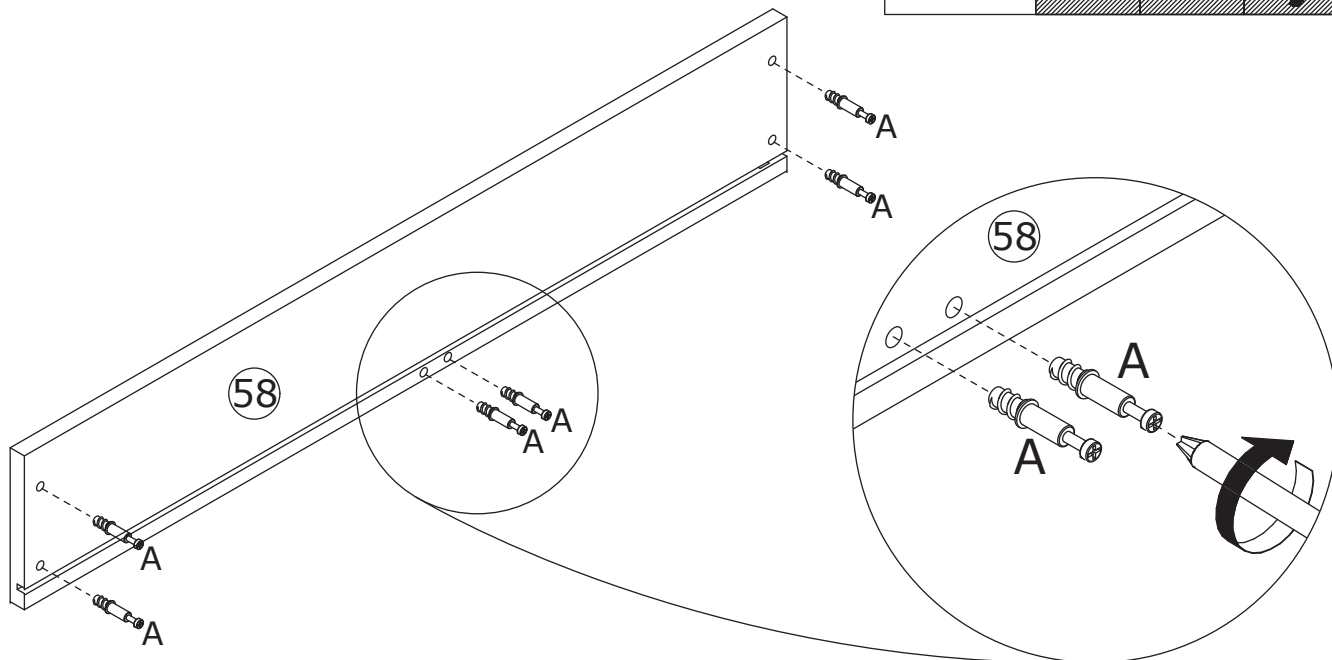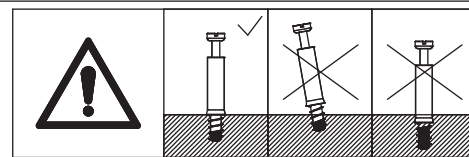





# 81

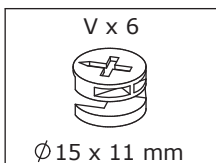  

  
Attach panel 58 to panel 50, 57 and 51, add **cam lock(V)** into and turn clockwise to tighten as shown.

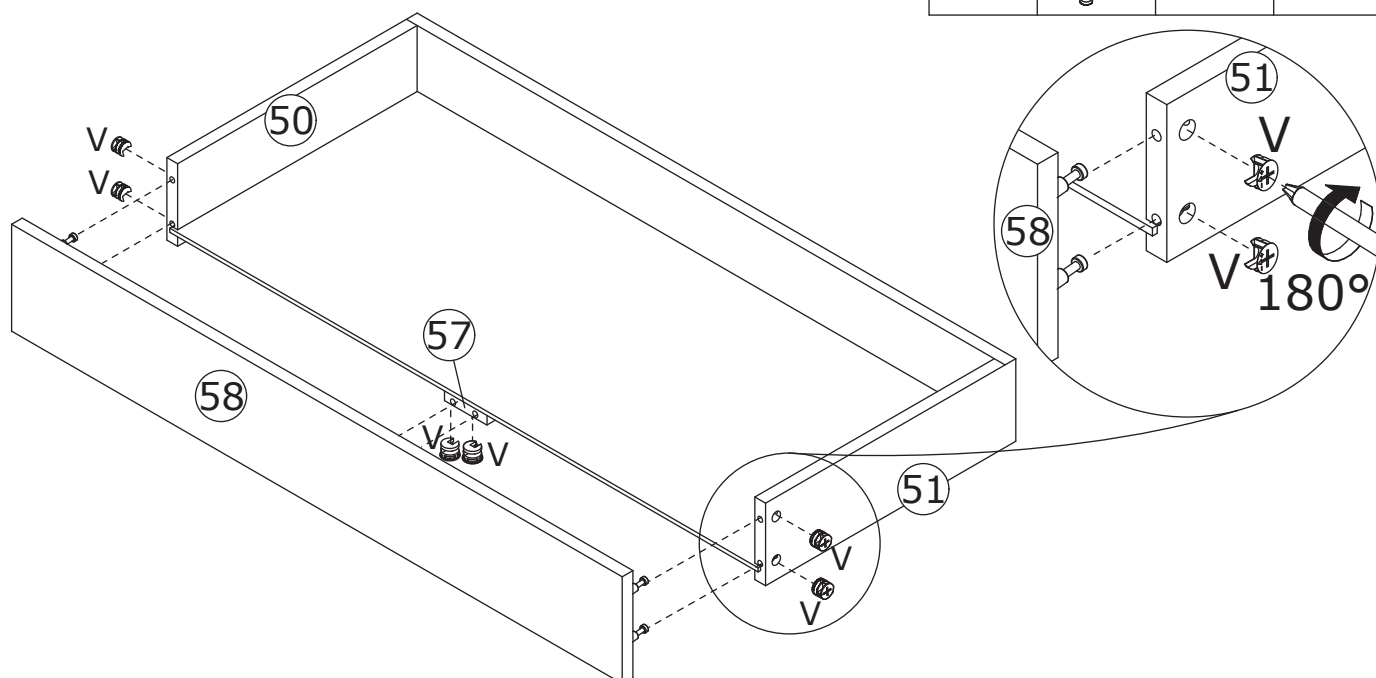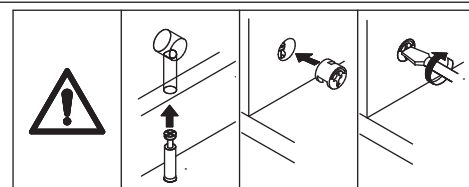


# 82

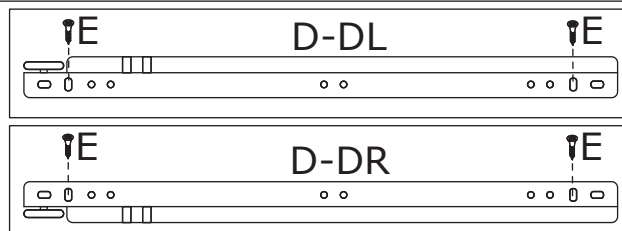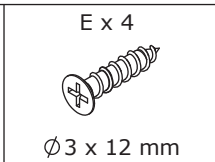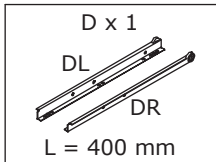    

  
Fix rail(DL) and (DR) to panel 50 and 51 with screw(E) as shown.

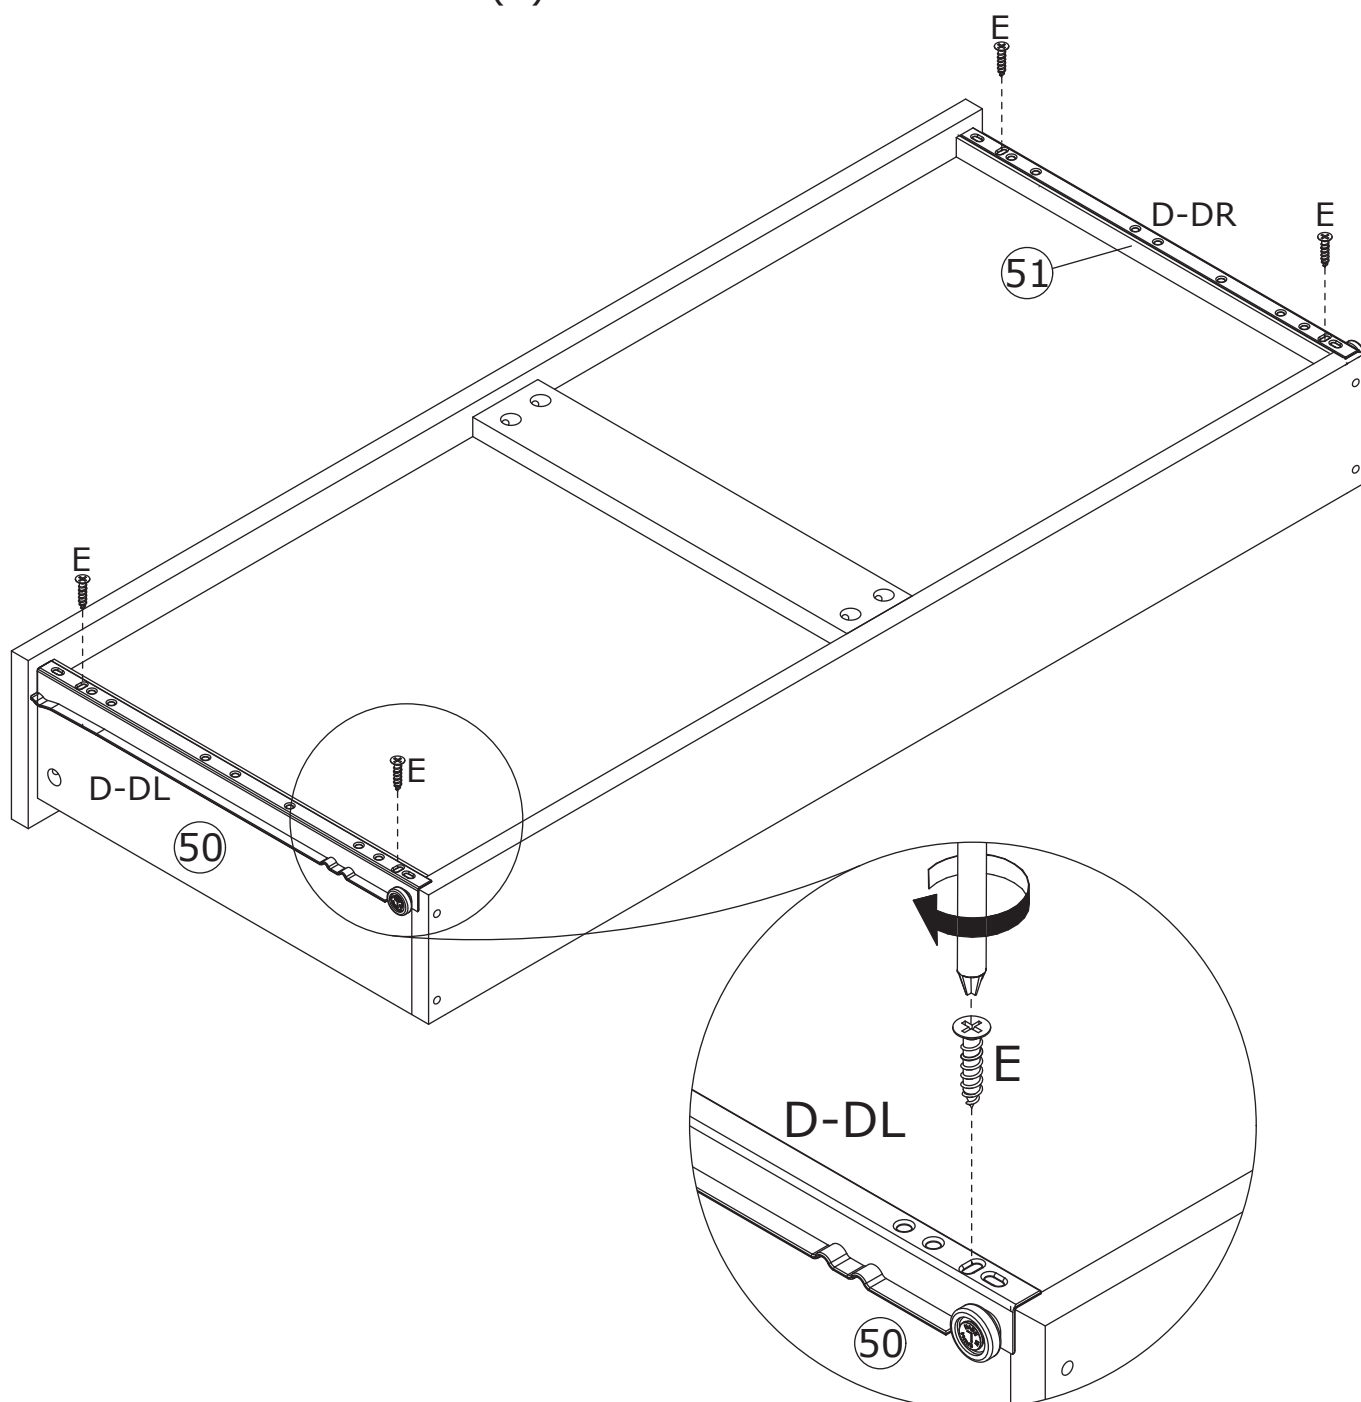

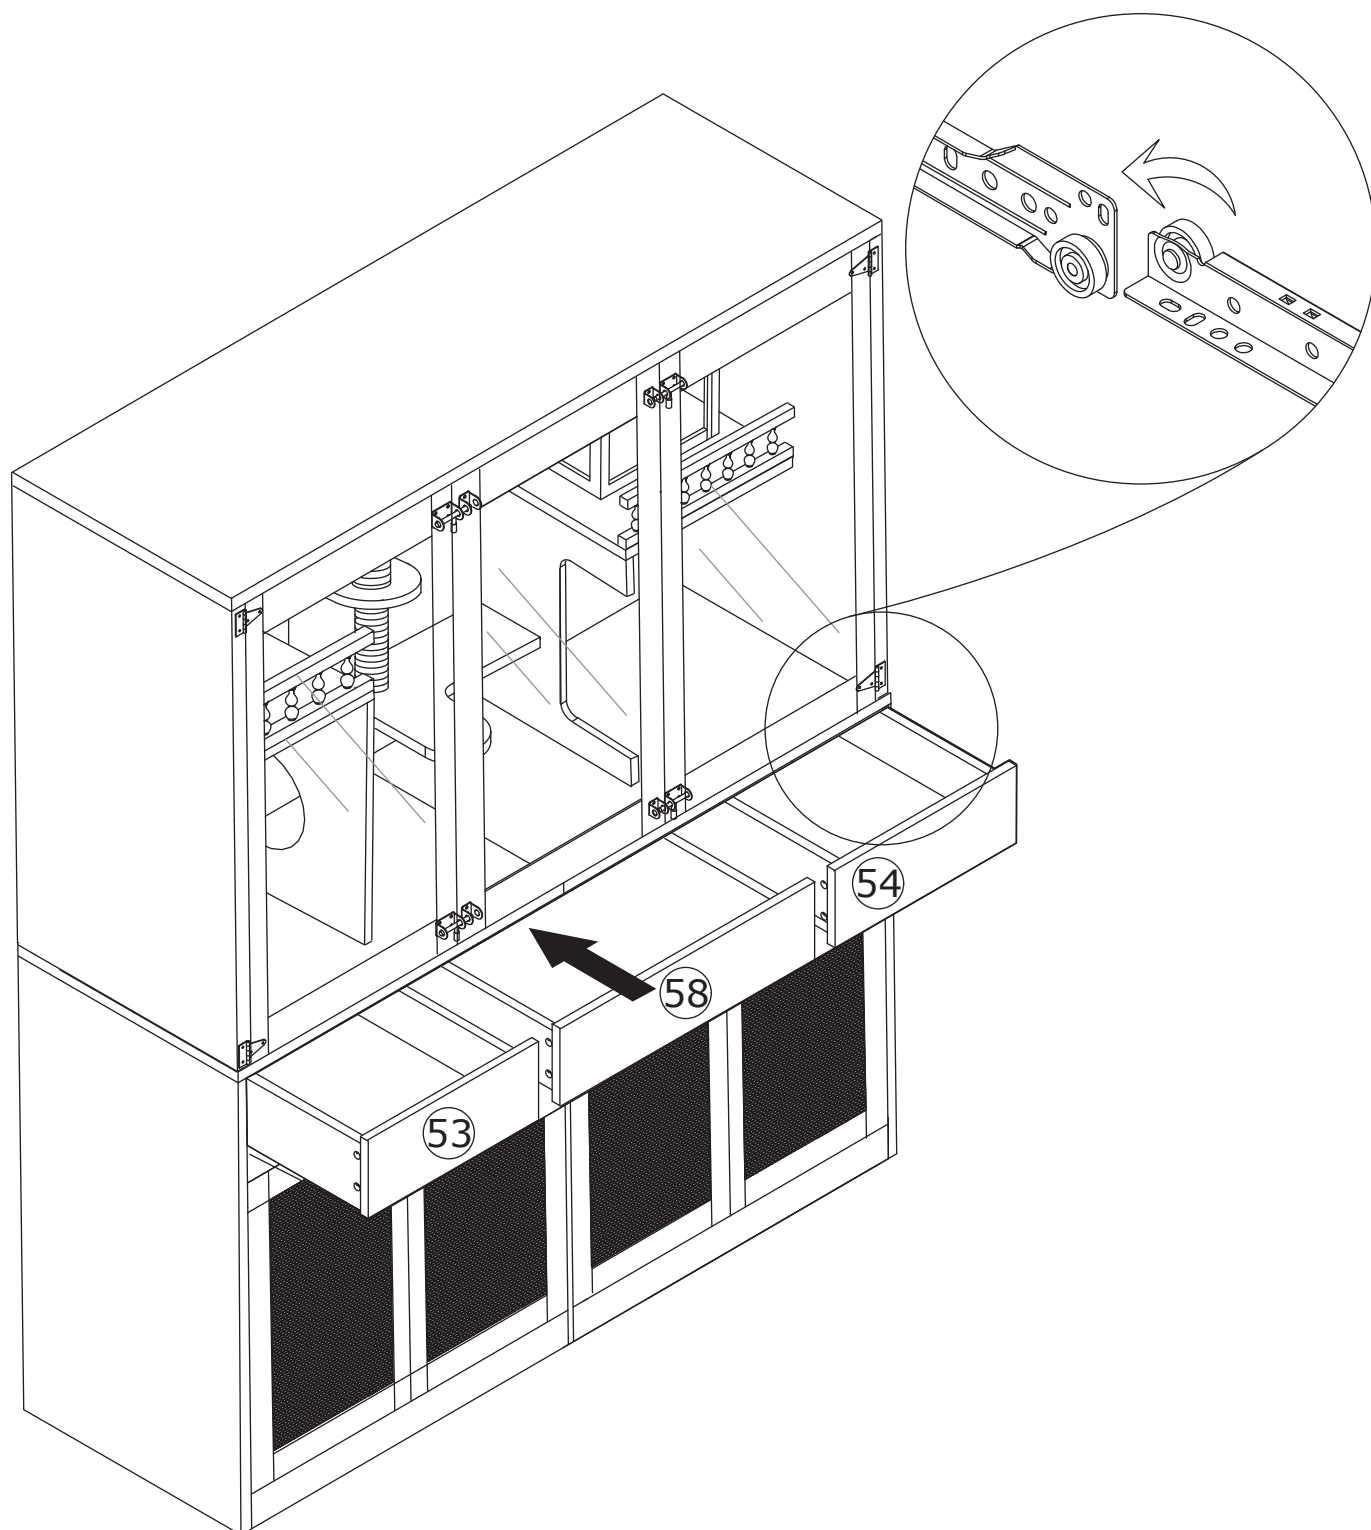




# 84

 E x 12




Ø3 x 12 mm

   F x 12

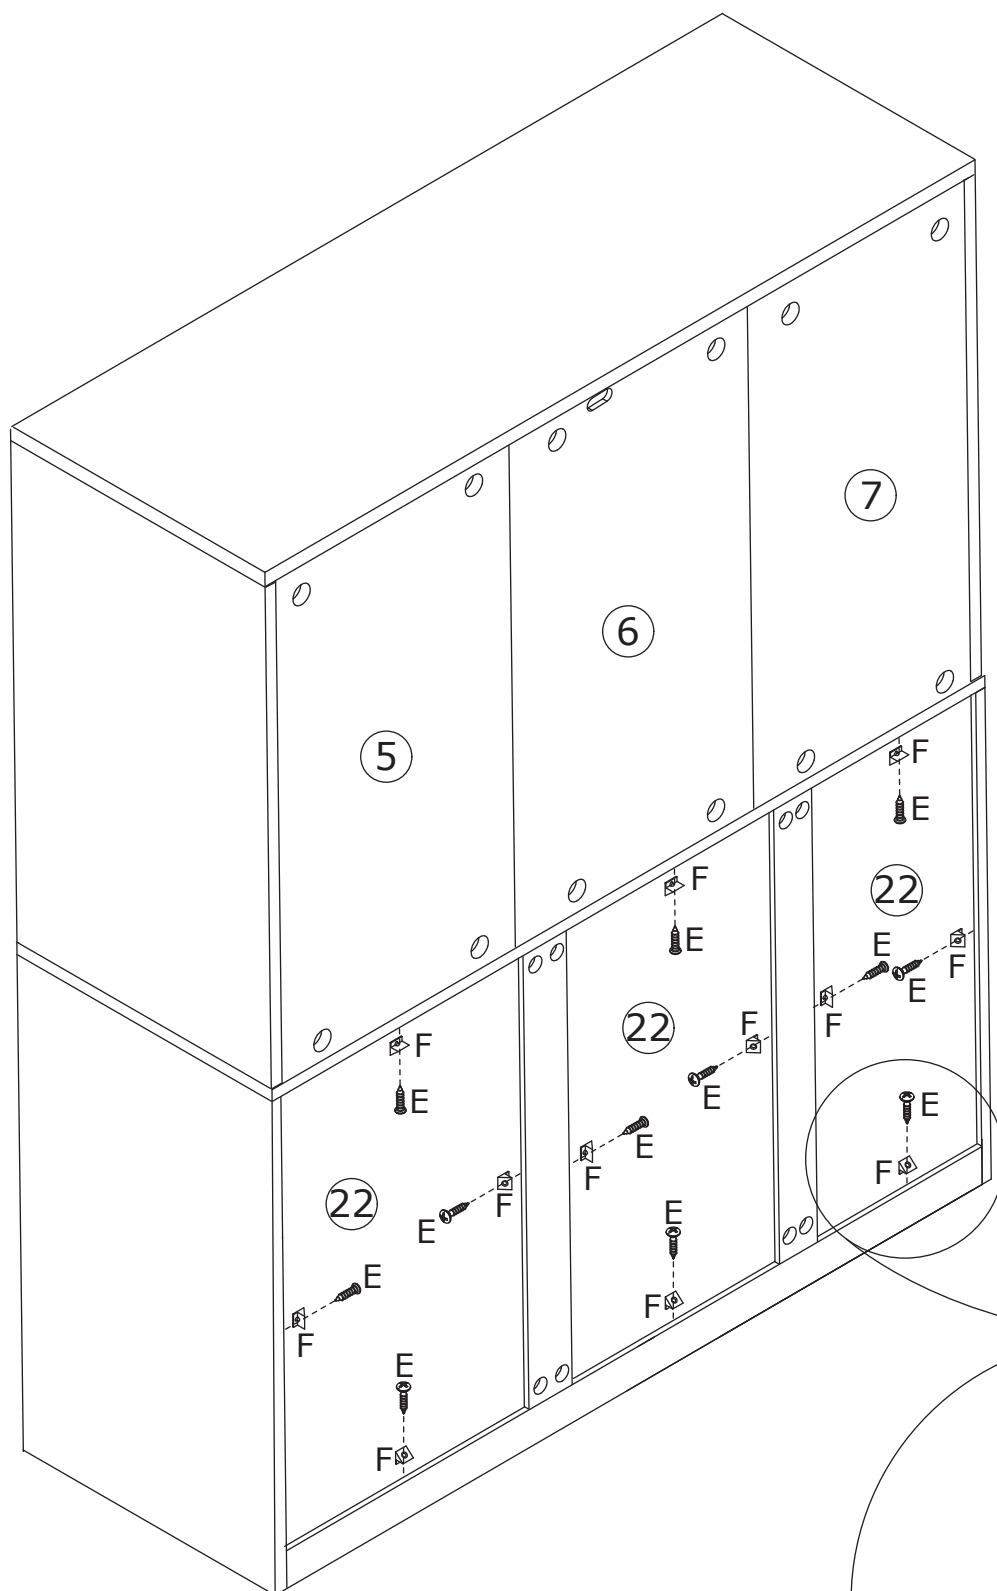

 Insert buckle(F) into back slots and fix with screw(E) as shown.






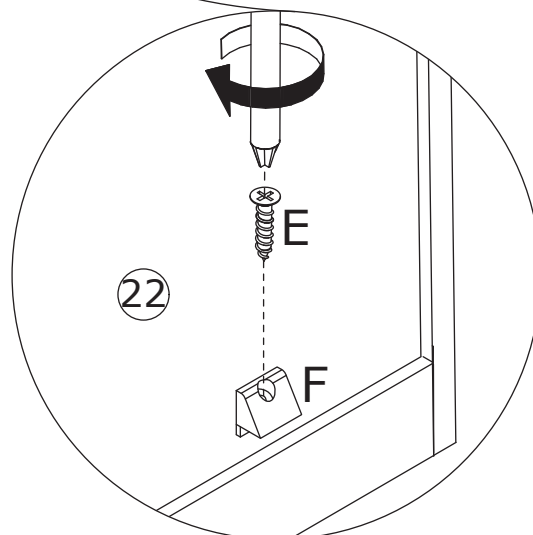


85


S x 6



       T x 118

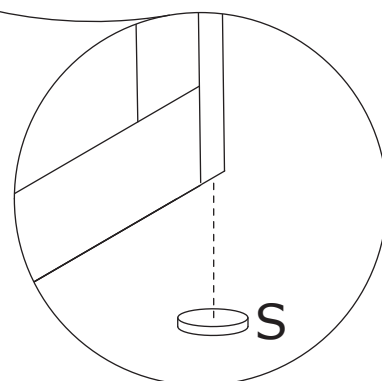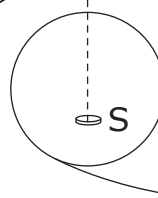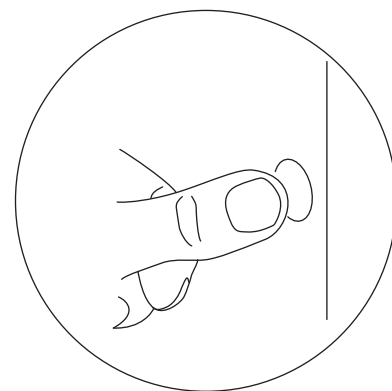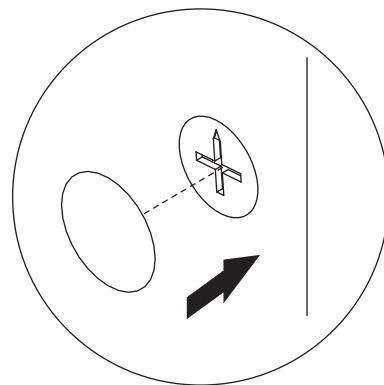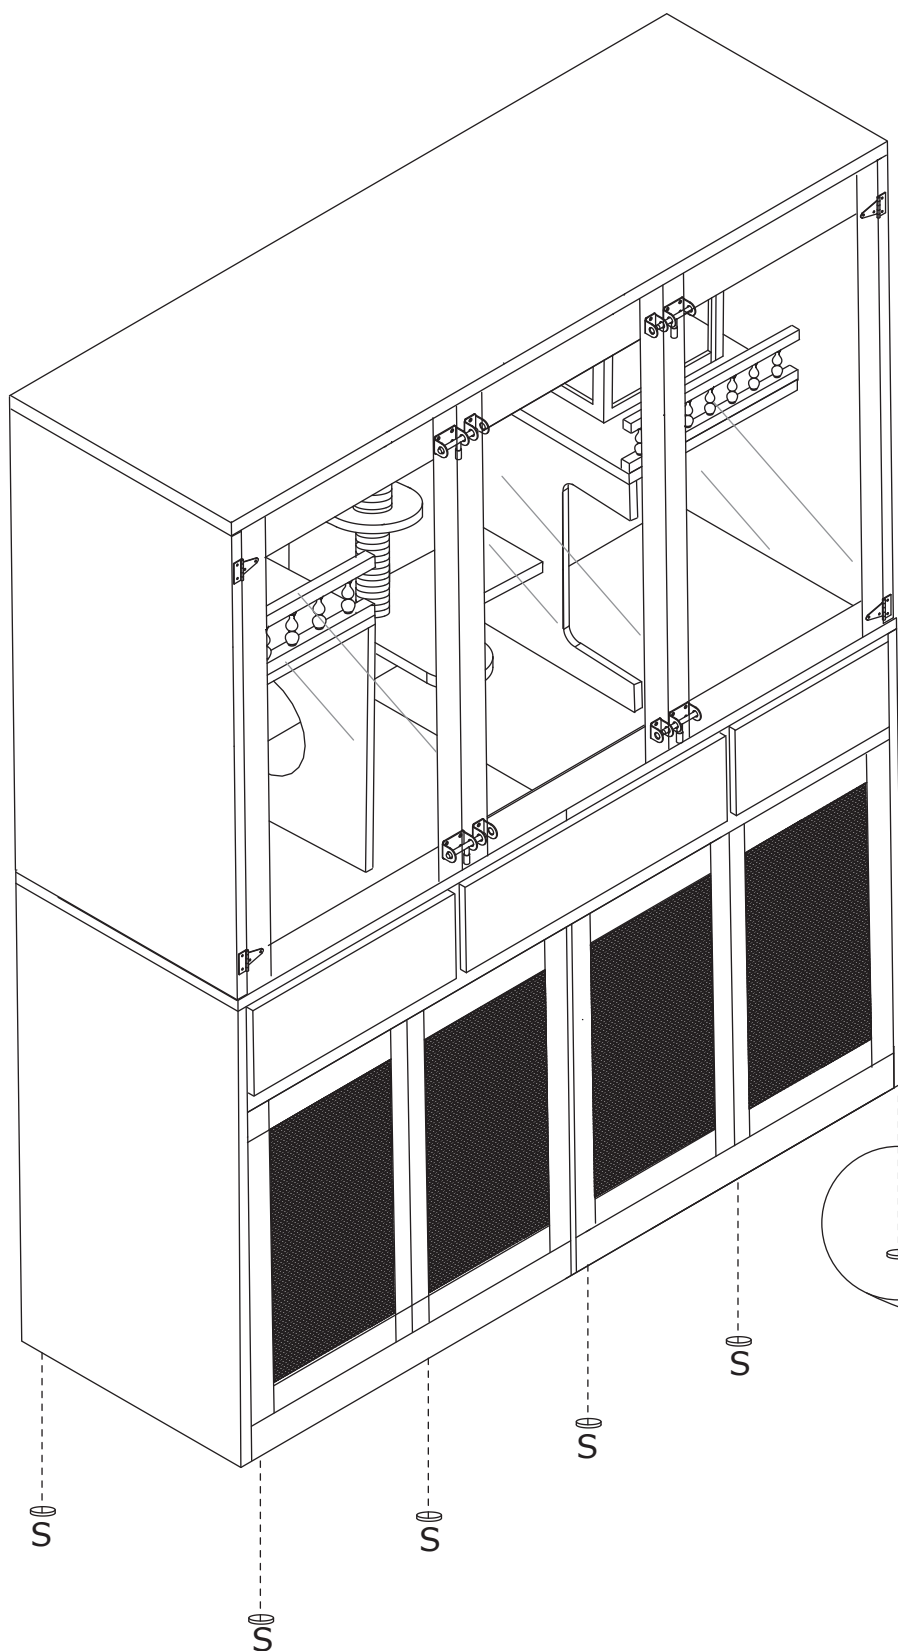







If doors are still not aligned if the hinges are properly correctly, please watch the video.

[Hinge adjustment video number 1:, <https://www.youtube.com/watch?v=FKGoPsgsb6M>]

[Hinge adjustment video number 2:, <https://www.youtube.com/watch?v=747vm8CJS3I>]

  [Hinge adjustment video number 3:, <https://www.youtube.com/watch?v=X1ImHtTLUoU>]

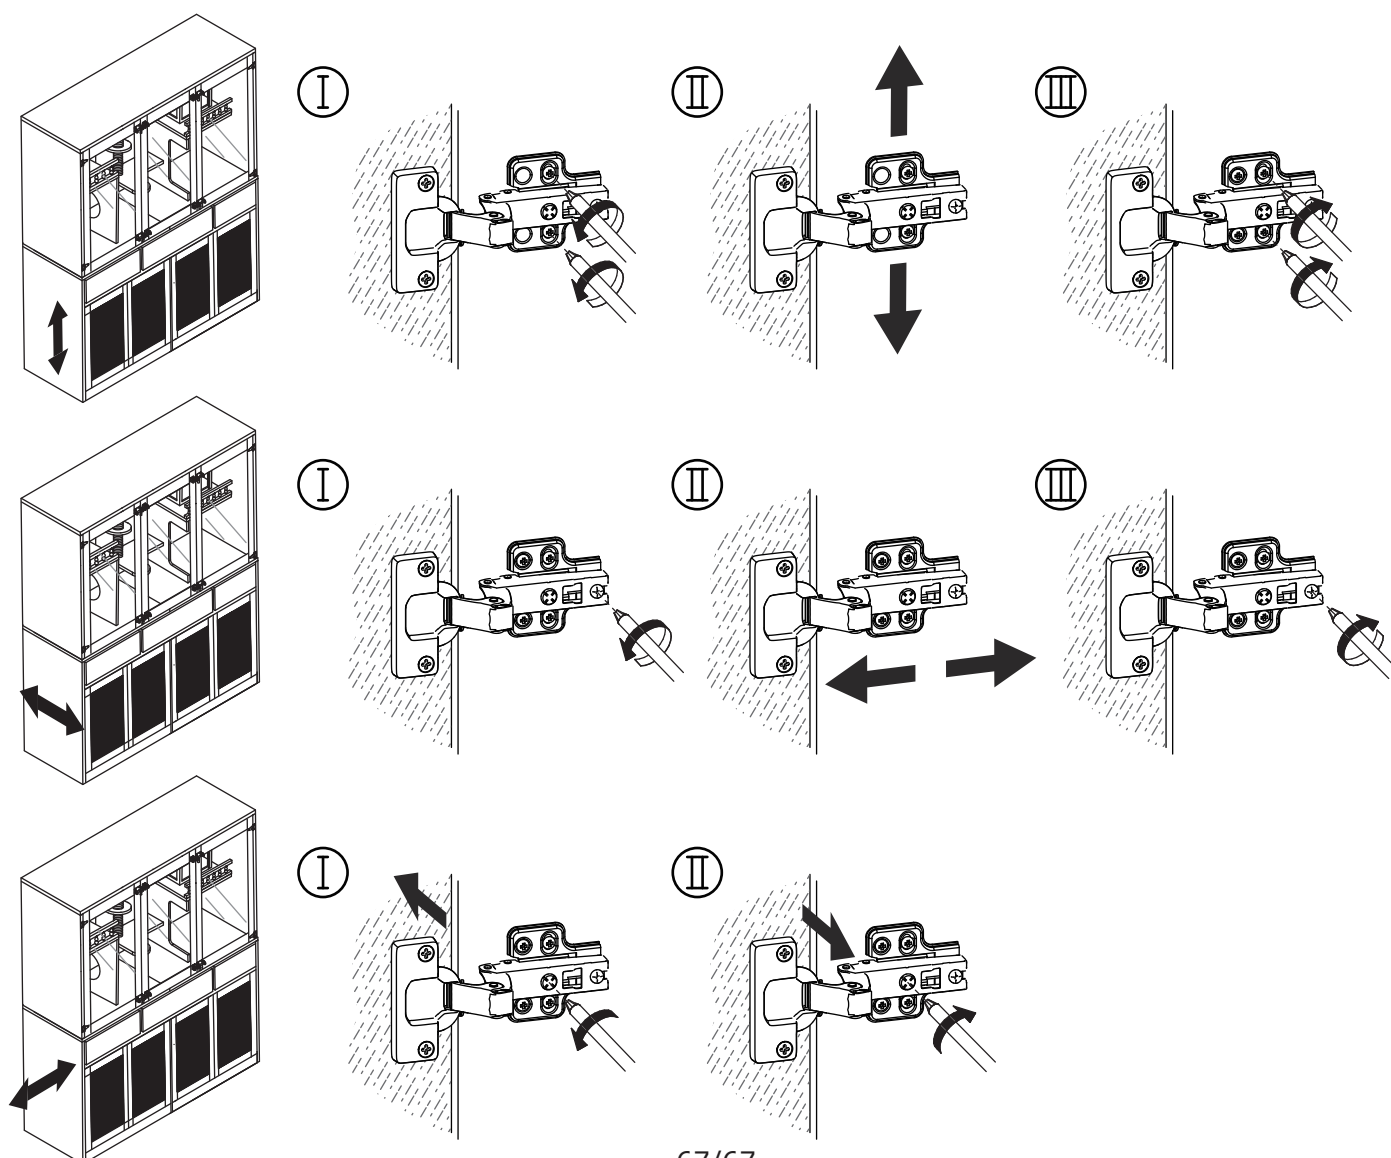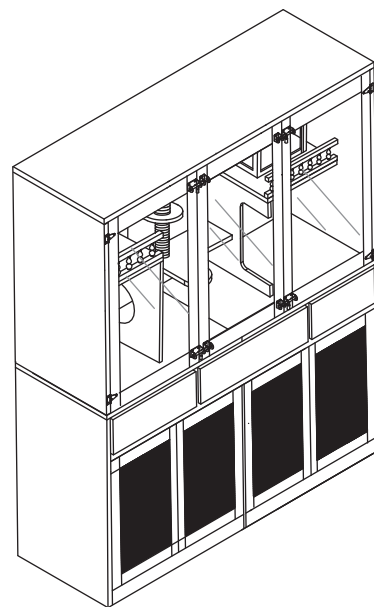

# WARRANTY

## WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

## Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

## Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

## The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

# RETURNS

## CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

### PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

### DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

### DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.  
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

### AFTER-SALES CONTACT



feedbackstation@163.com



(303)800-6387