

Installing the Wall Control



Before you begin, **TURN OFF THE ELECTRICITY** (at the main circuit panel or fuse box). If you feel unsure of this procedure, have a qualified electrician install this unit.

Disconnect the power and remove the existing wall plate and switch. Set all knobs on the dual slide wall-mounted control in the OFF position. Installation of this control requires that a three-conductor cable with ground wire be run between the control wall box and the ceiling fan outlet box. Make wire connections and secure with wire nuts supplied (see figure A).

Connect **BLACK(LIVE)** wire from A.C. power supply to **BLACK/WHITE** wire "AC IN L" from the wall-mounted control. Connect **BLACK** wire from the ceiling fan to **BLACK "TO MOTOR L"** from the wall-mounted control. Connect **BLUE** wire from the ceiling fan to **BLUE** wire "FOR LIGHT" from the wall-mounted control. Make sure to use wire nuts on all connections.

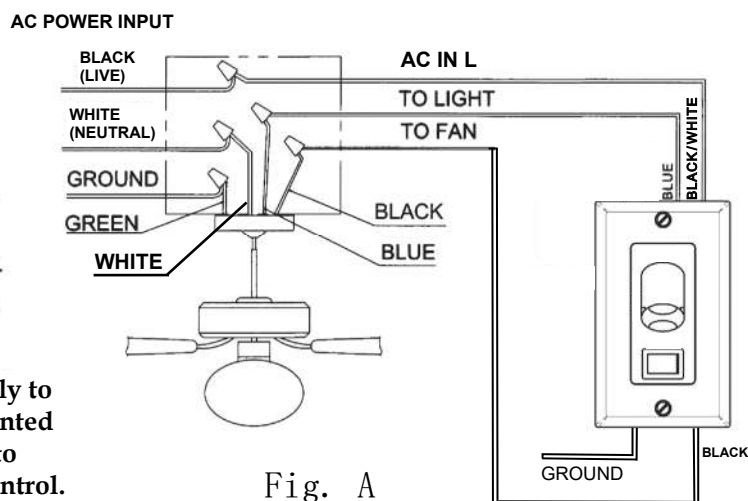


Fig. A

Push the Control Unit into the switch box and secure it with the two screws at each end of the unit (this procedure is the same as if you were to put the original wall switch back into the wall). Now attach the face plate to the Wall Control. (see figure B).

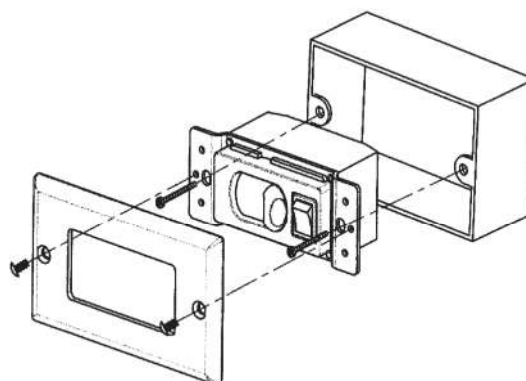


Fig. B

Speed Control (see figure C)

- L** Position - low fan speed
- M** Position - medium fan speed
- H** Position - high fan speed
- O** Position-fan off

Light Control

.Toggle Switch-on/off

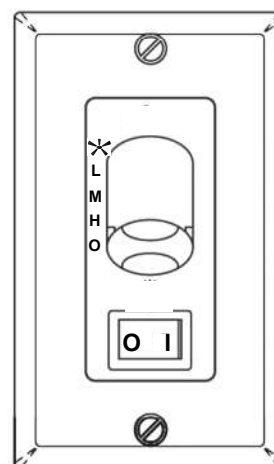


Fig. C