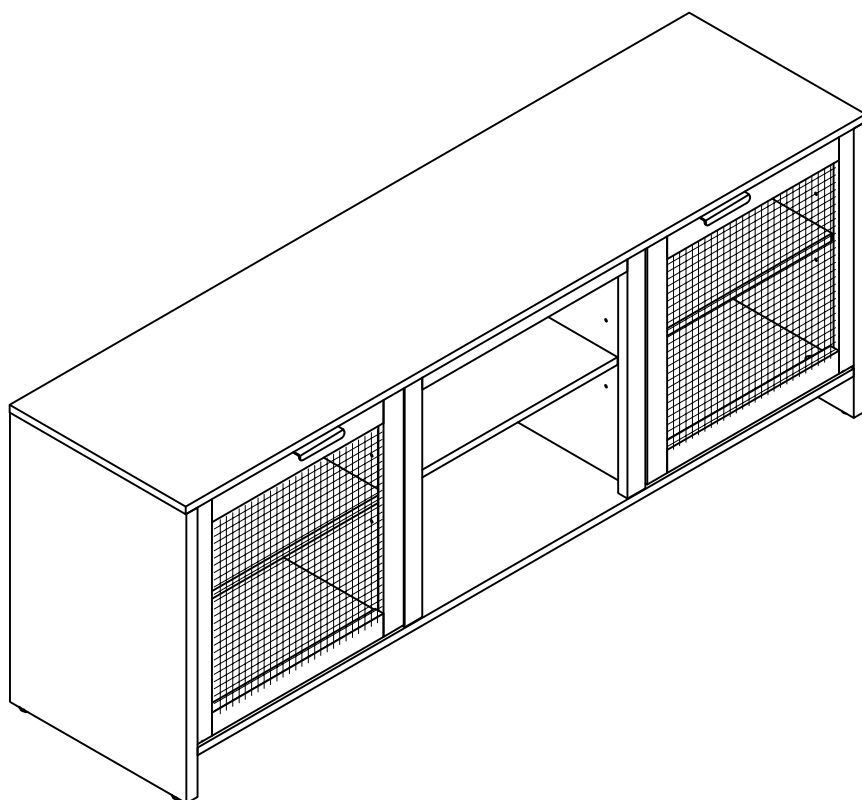 
















CROSLEY

FURNITURE







TV Stand For 65° TV
CF101760



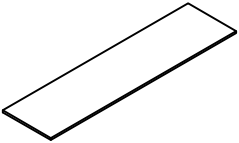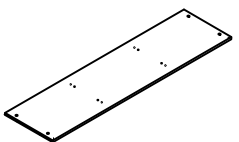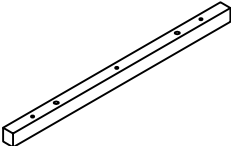              PARTS LIST


A 	B 	C 	D 	E 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Left Partition Panel 1 PC	Right Partition Panel 1 PC
F 	G 	H 	I 	J 
Bottom Panel 1 PC	Left Door 1 PC	Right Door 1 PC	Middle Adjustable Shelf 1 PC	Adjustable Shelf 2 PCS
K 	L 	M 	N 	O 
Middle Back Panel 1 PC	Back Panel 2 PCS	Top Rail 1 PC	Support Leg 2 PCS	Cover 3 PCS

      HARDWARE LIST

#1 	#2 	#3 	#4  7*38mm	#5  8*30mm
Handle 2 PCS	Cam Bolt 12 PCS (Extra 1)	Cam Lock 12 PCS (Extra 1)	Tapping Bolt 4 PCS (Extra 1)	Wood Dowel 18 PCS (Extra 1)
#6 	#7  6*3*15mm	#8  6*3*15mm	#9  8*4*31mm	#10 
Magnet 2 PCS	Round Head Screw 4 PCS (Extra 1)	Short Screw 4 PCS (Extra 1)	Long Screw 3 PCS (Extra 1)	Shelf Holder 12 PCS (Extra 1)
#11 	#12  8*3*12mm	#13 	#14  M2	#15  M4
Binding Post 3 SETS (Extra 1)	Screw 28 PCS (Extra 1)	Cam Sticker 12 PCS (Extra 1)	Small Allen Wrench 1 PC	Allen Wrench 1 PC

ADDITIONAL TOOLS (Not Provided)

 
Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

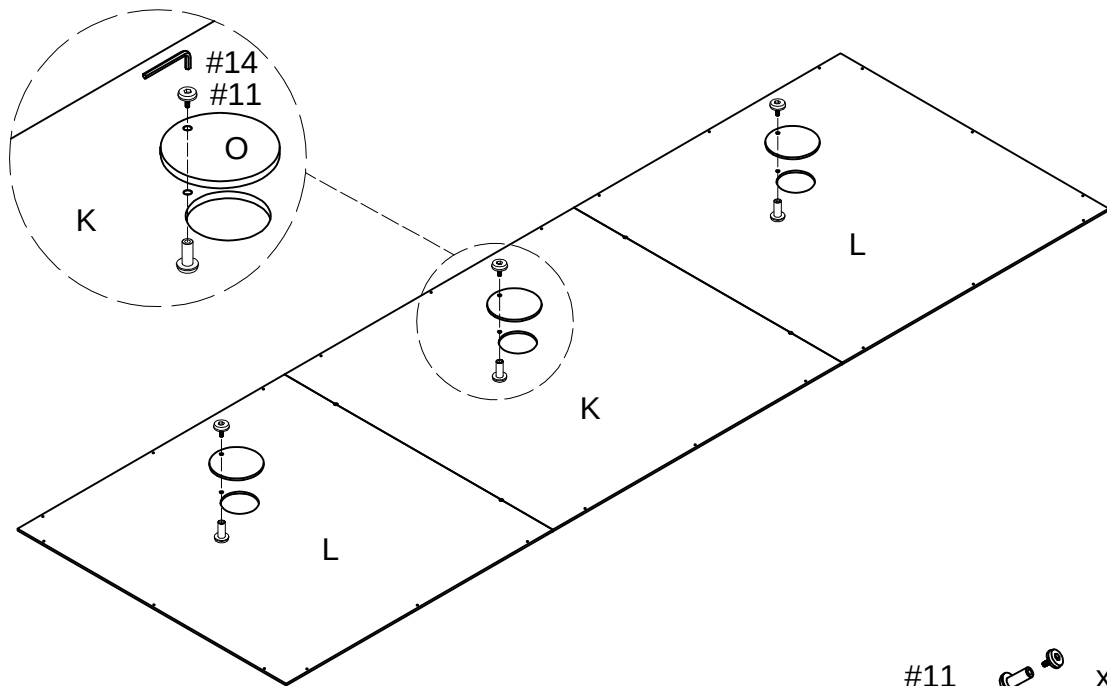 Step 1. Attach covers (part O) to back panels (parts K & L) using binding posts (part #11) and small allen wrench (part #14).




#11  x 3

#14  x 1

Step 2. Insert cam bolts (part #2) into pre-drilled holes of panels (parts A, B & C) using phillips head screwdriver. Attach top rail (part M) to top panel (part A) using wood dowels (part #5), long screws (part #9) and phillips head screwdriver. Attach magnets (part #6) to top panel (part A) using round head screws (part #7) and phillips head screwdriver.

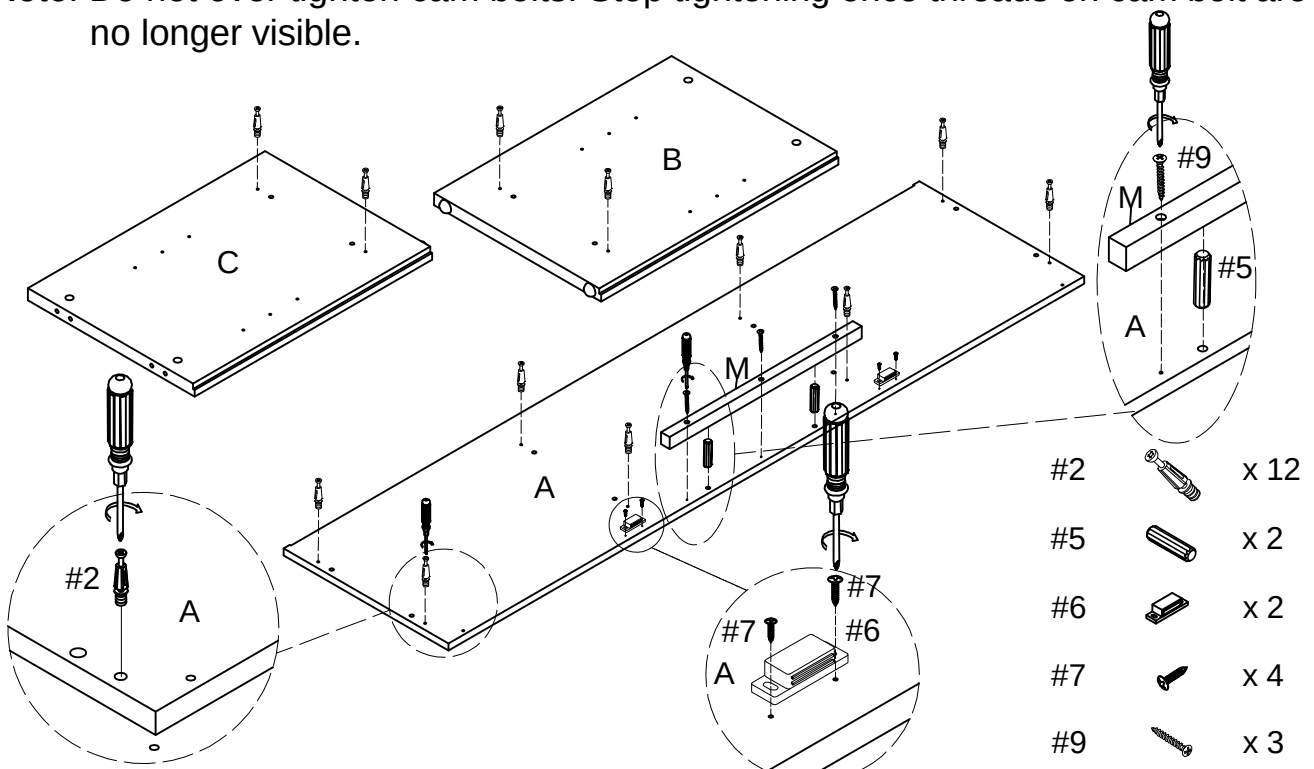 Note: Do not over tighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.



#2  x 12

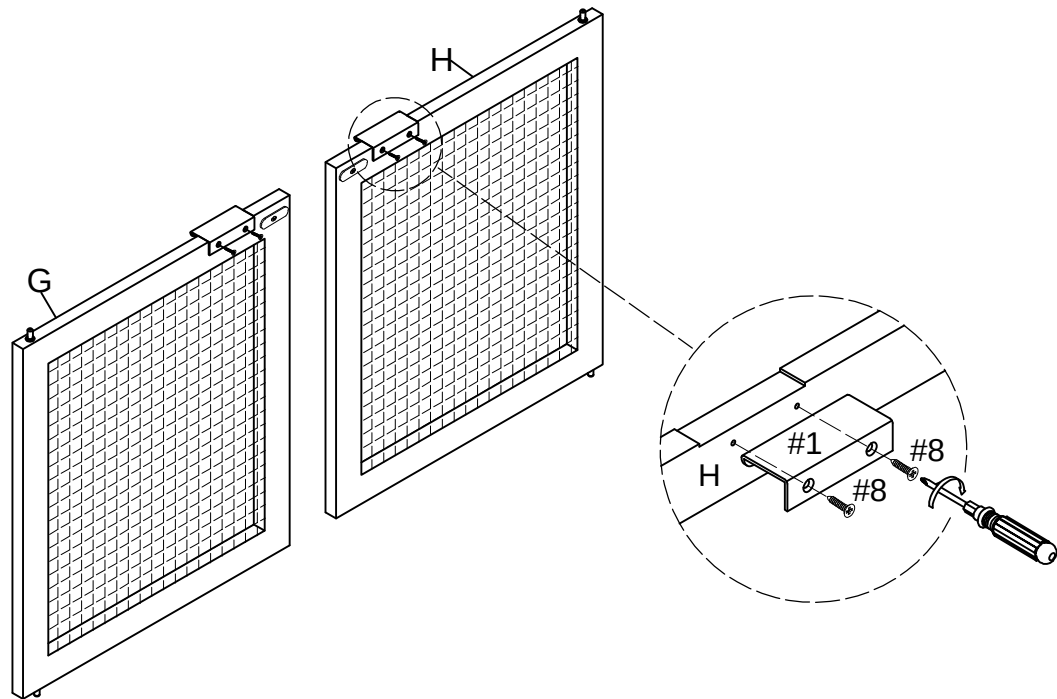 
#5  x 2

#6  x 2

#7  x 4

#9  x 3


Step 3. Attach handles (part #1) to doors (parts G & H) using short screws (part #8) and phillips head screwdriver.



#1		x 2
#8		x 4


Step 4. Attach panels (parts B, C, D & E) to bottom panel (part F) using cam locks (part #3), tapping bolts (part #4), wood dowels (part #5), allen wrench (part #15) and phillips head screwdriver.

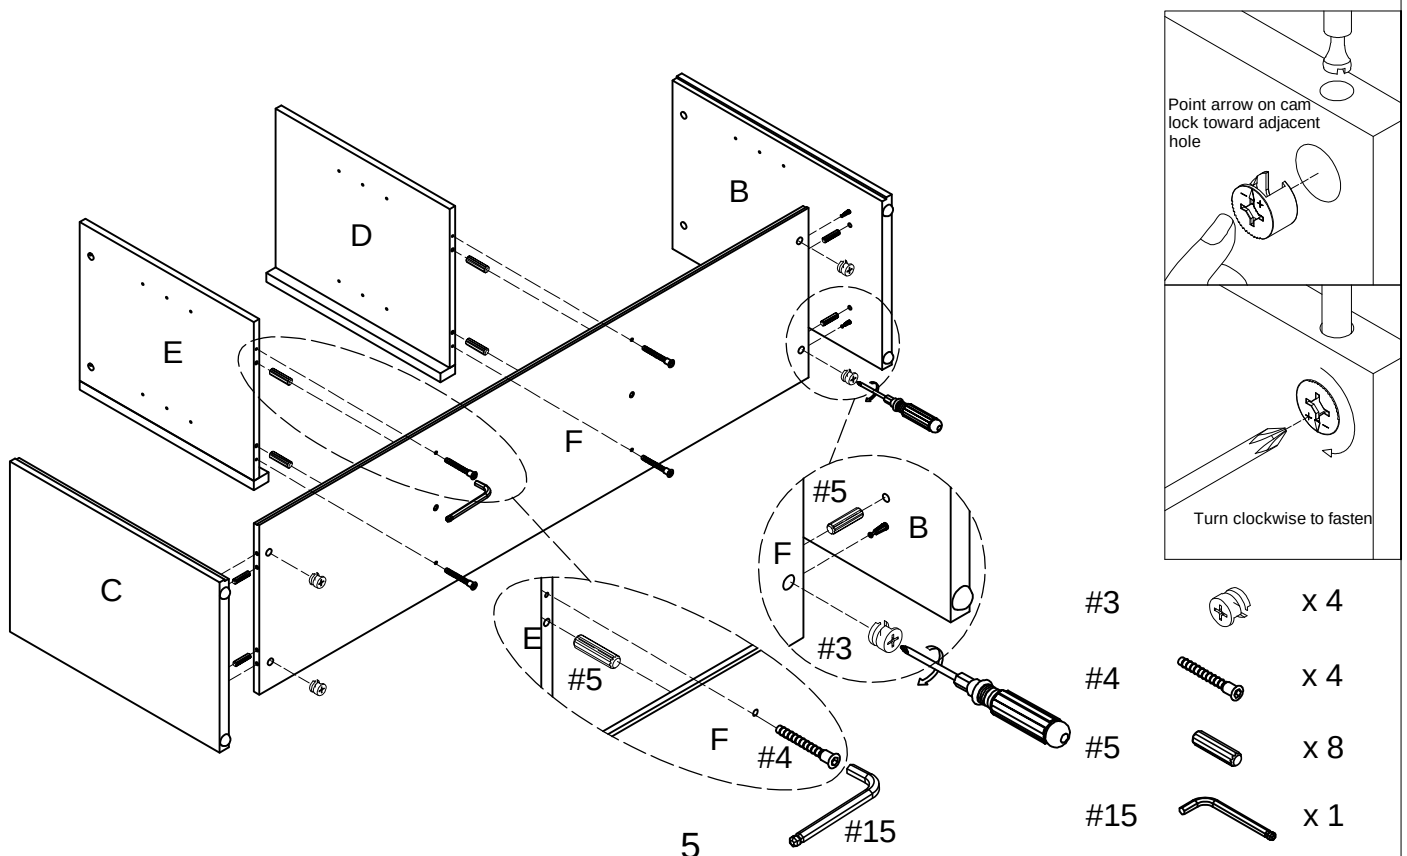 Note: Cam locks must rotate a full 180°. See pictured insert.





#3		x 4
#4		x 4
#5		x 8
#15		x 1

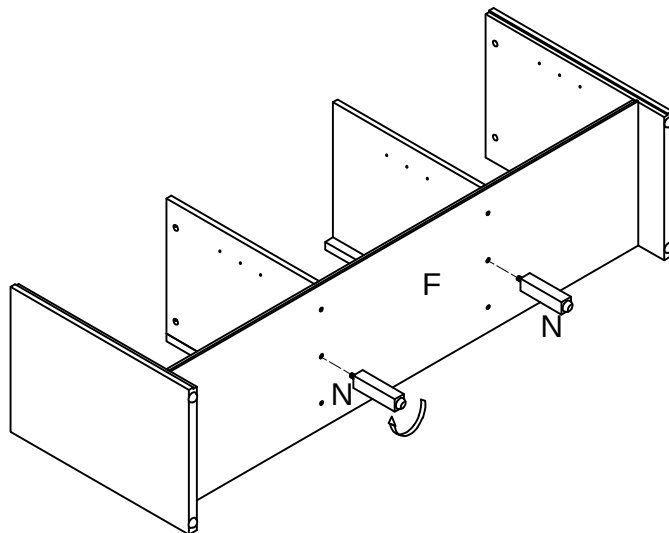 Step 5. Attach support legs (part N) to bottom panel (part F) .




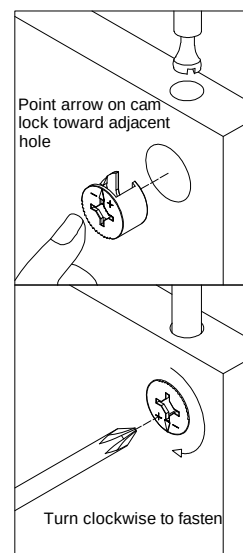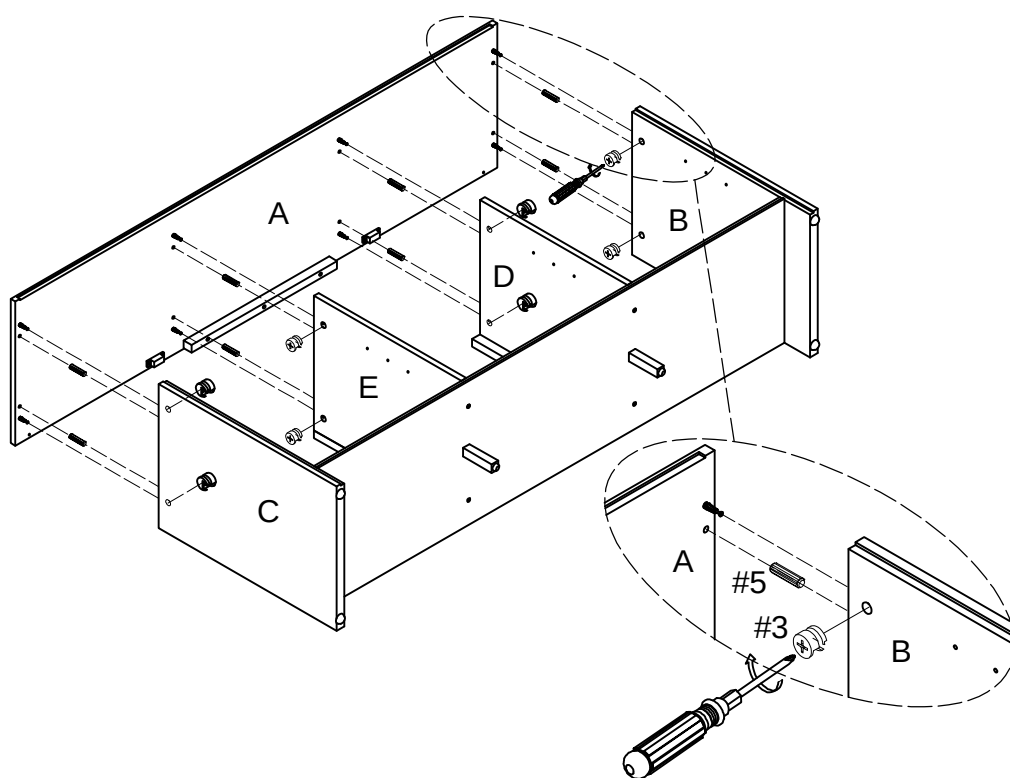  Step 6. Attach top panel (part A) to assembled unit (parts B, C, D & E) using cam locks (part #3), wood dowels (part #5) and phillips head screwdriver.
Note: Cam locks must rotate a full 180°. See pictured insert.




#3 x 8
#5 x 8

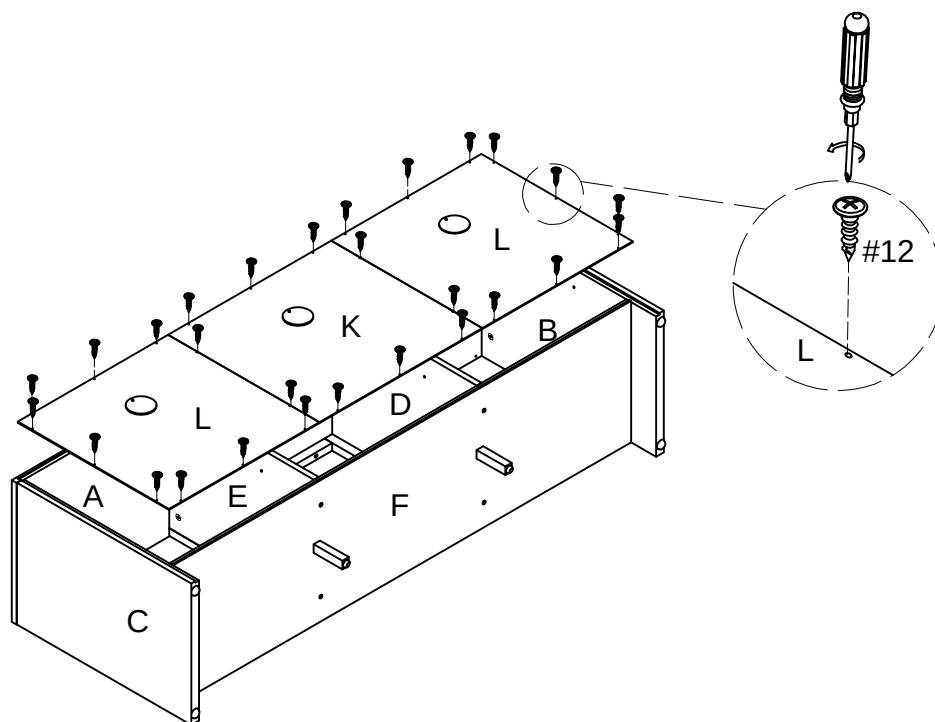 Step 7. Attach back panels (parts K & L) to assembled unit (parts A, B, C, D, E & F) using screws (part #12) and phillips head screwdriver.




#12  x 28

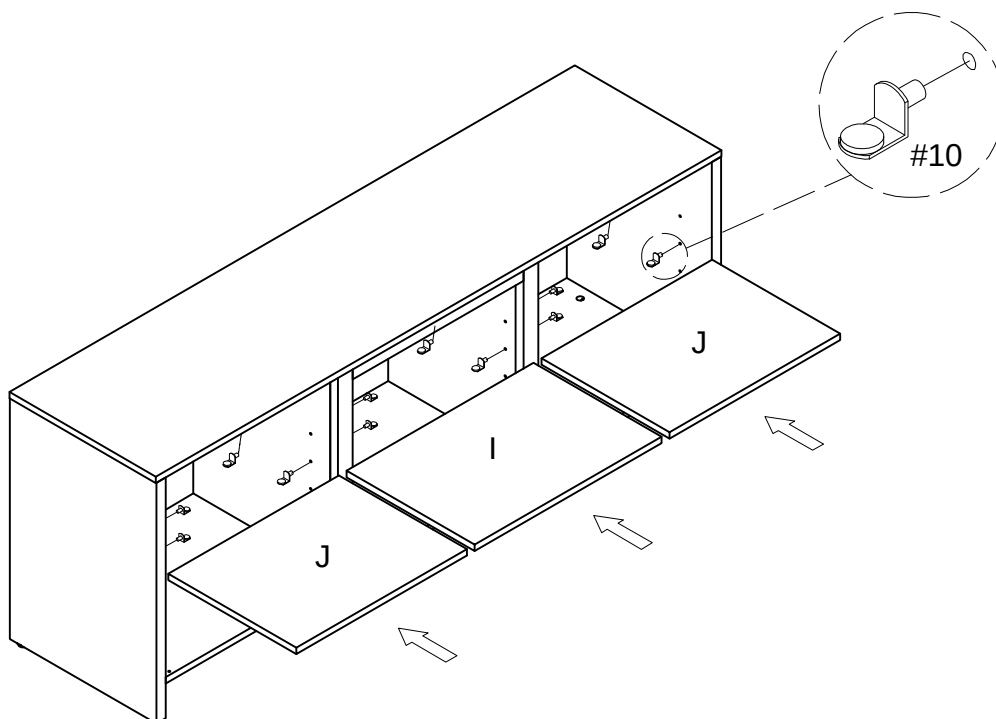 Step 8. Carefully turn unit upright. Place shelf holders (part #10) into desired position and then slide adjustable shelves (parts I & J) into place.




#10  x 12

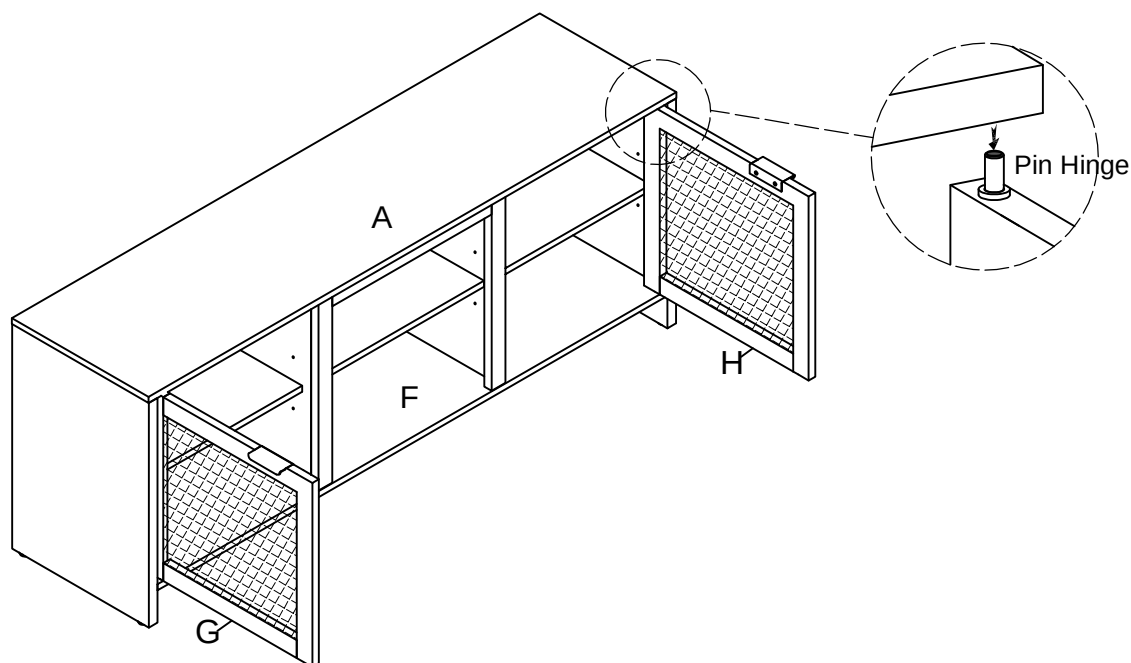 Step 9. Attach doors (parts G & H) by placing bottom pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part F). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of top panel (part A).
 Note: Be sure top and bottom pin hinges are fully extended to secure doors in place.



Step 10. Using cam stickers (part #13) cover all cam locks (part #3). If you would like to add an electric fireplace (*Not Included), please follow step 11.

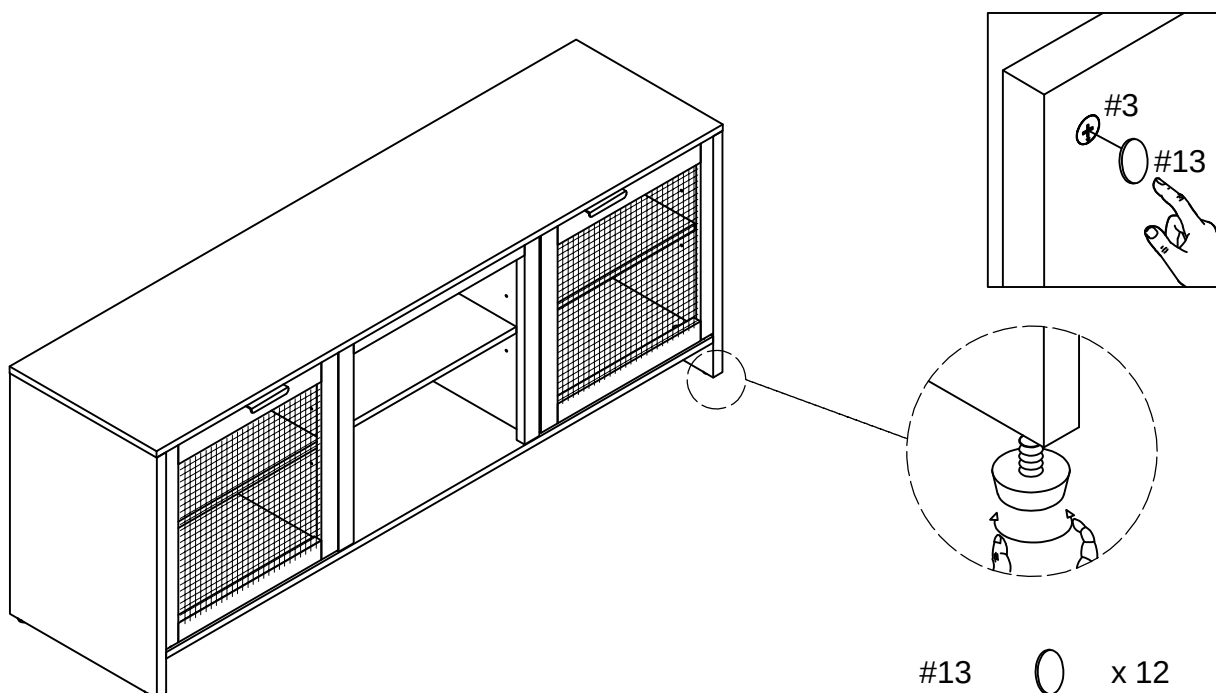 Note: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.



Step 11. Fireplace Assembly: Remove middle adjustable shelf (part I) and middle back panel (part K). Install electric fireplace (*Not Included) into the unit following the assembly instructions of the electric fireplace.

