


# Instruction Manual

Please save this manual for future reference.

<b>Product Name:</b>	7.1in. Dia. Solar Hanging Accent Light with Scroll Design
----------------------	---

Thank you for purchasing this product. This product has been manufactured with the highest standards of safety and quality.

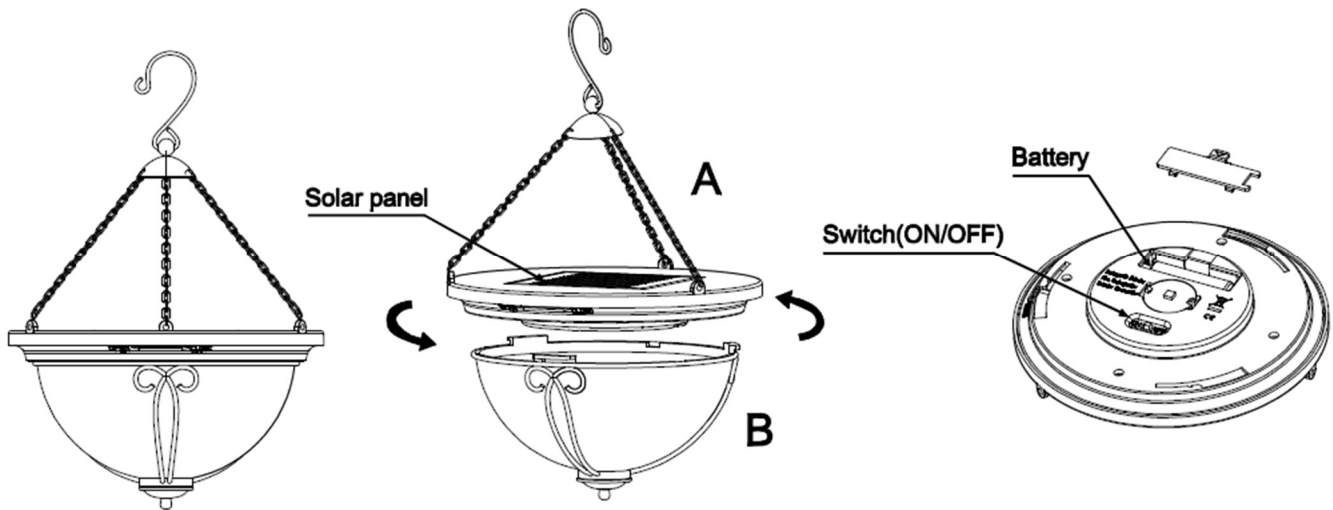

## **Instructions:**

- “On/Off” switch is inside the solar panel disk.
- Remove the solar panel lid from the light globe by turning top counter clockwise. Turn the solar panel lid upside down, and turn the switch to “On”.
- The battery is located above the on/off switch. To replace (not required for initial use), unclip the panel and replace with new rechargeable battery with identical specifications.
- Battery type: 1 x AA Ni-MH 600mAh 1.2 V (included)
- For best results, allow to charge in direct sunlight for a minimum of 8 hours.

# Instruction Manual

Please save this manual for future reference.

<b>Product Name:</b>	7.1in. Dia. Solar Hanging Accent Light with Scroll Design
----------------------	---

## ***Trouble Shooting Tips:***

If your solar light does not turn on at night, it may be caused by the following:

1. Check to see if the switch is in the “OFF” position.  
**Resolution:** Push the switch to the “ON” position and allow the solar light to be charged for at least 8 hours in direct sunlight.
2. Battery may not be fully charged.  
**Resolution:** Make sure the solar light is placed in an area where the solar panel receives the maximum amount of full direct sunlight every day.
3. The solar light may be located too close to other light sources (such as porch light or street lantern).  
**Resolution:** Relocate away from external light source.
4. The rechargeable battery may need to be replaced.  
**Resolution:** Replace with batteries of identical specification.

