


## **Extendable TV Stand**

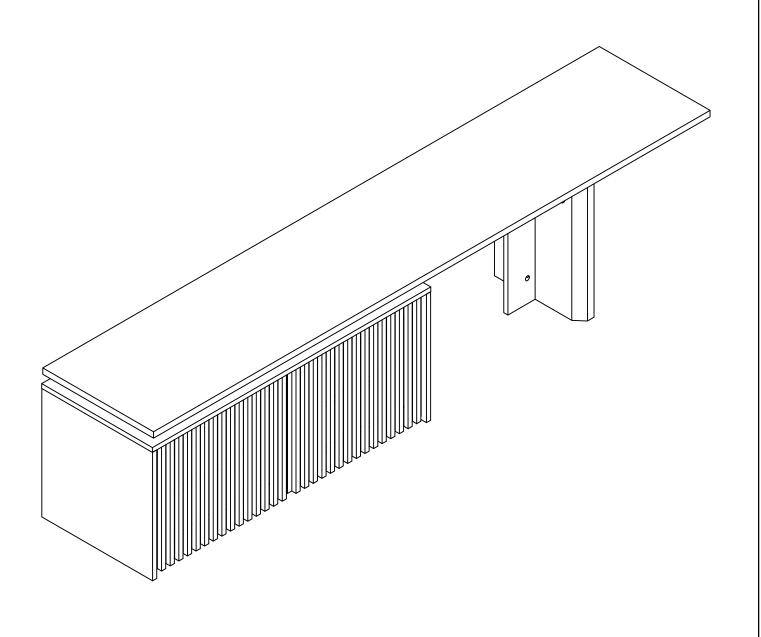

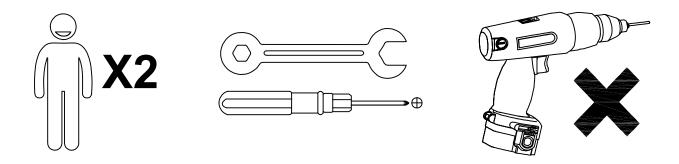

We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

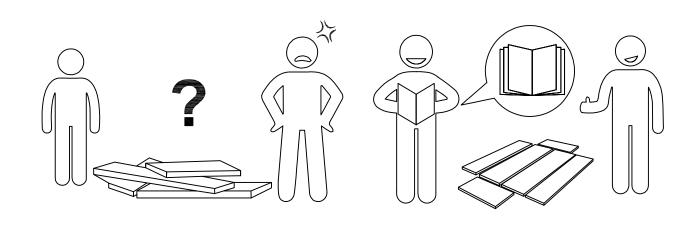

### **Warm Tips**

- 1. Carefully read these instructions and keep them for future reference.
- 2. Check the parts list and confirm everything's there before starting assembly.
- 3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
- 4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.




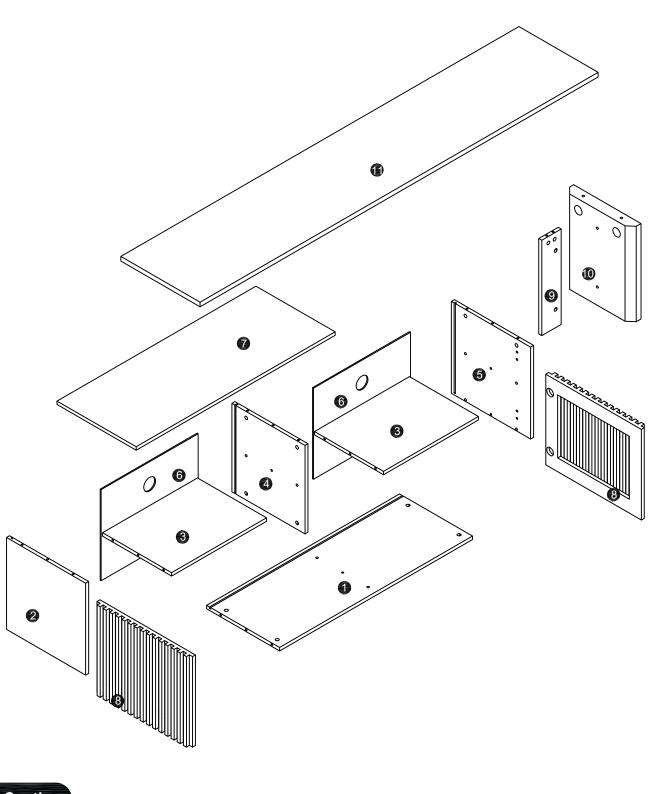

**A** Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

## **Parts List**

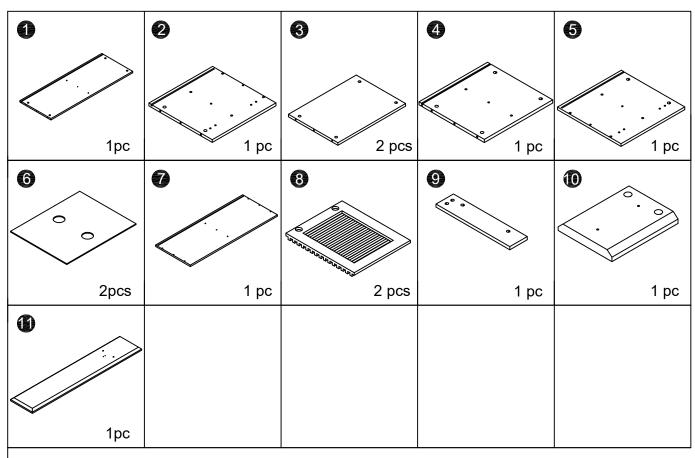


## **Hardware List**


_		_	_	_	
Α	В	С	D	Е	F
		ß			
M6X35MM	Ø8x30mm		Ø3.5x14mm	14X12X10MM	4*10mm
24 pcs	10 pcs	1 pc	32 pcs	8pcs	8 pcs
G	Н	I	J	K	L
	8MM	M8x75mm		Screwdriver	
2 pcs	2 pcs	2 pcs	4 pcs	1 pc	24 pcs
M	N	K			
		Ø8x40mm			
2 pc	4 pc	1 pc			P-

#### **Installation of Cams and Pins**


Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

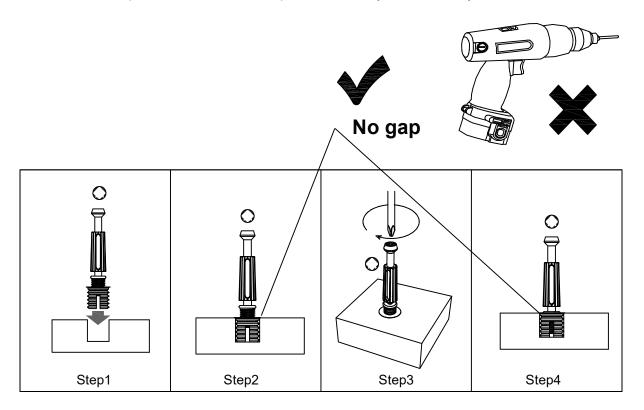



Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

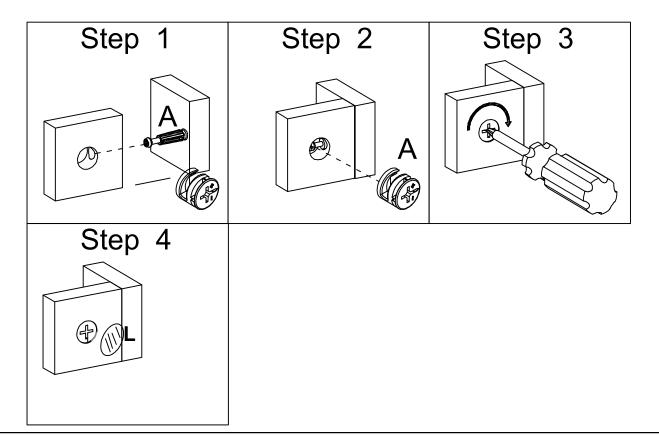




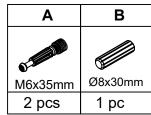

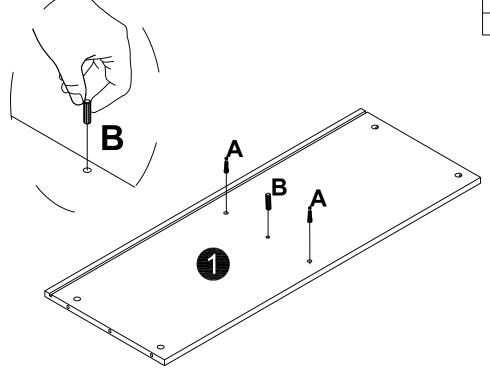


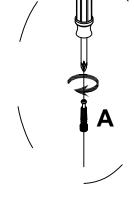




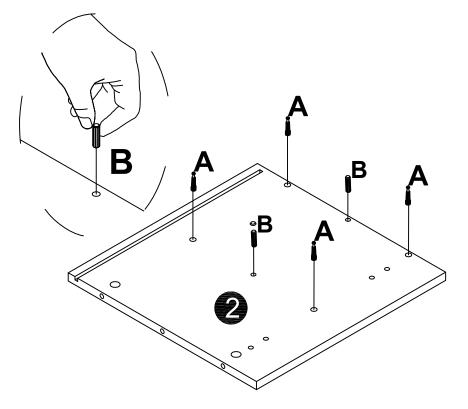


Α	В	
M6x35mm	Ø8x30mm	
4 pcs	2 pcs	

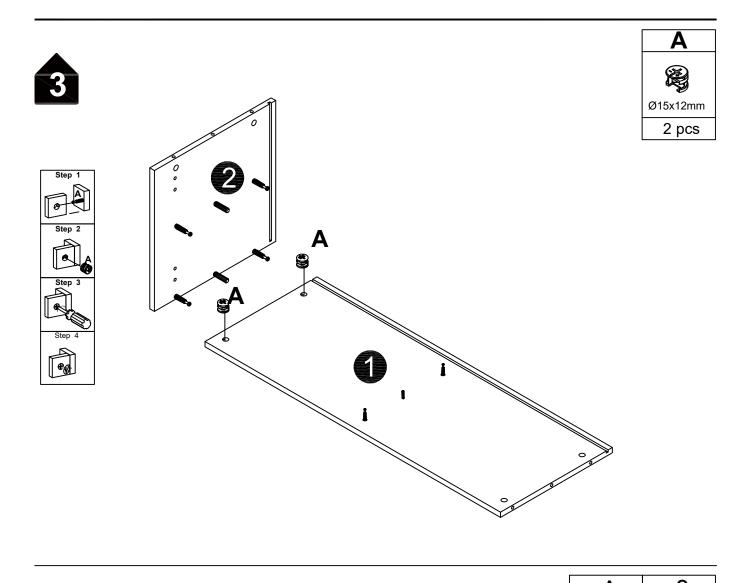

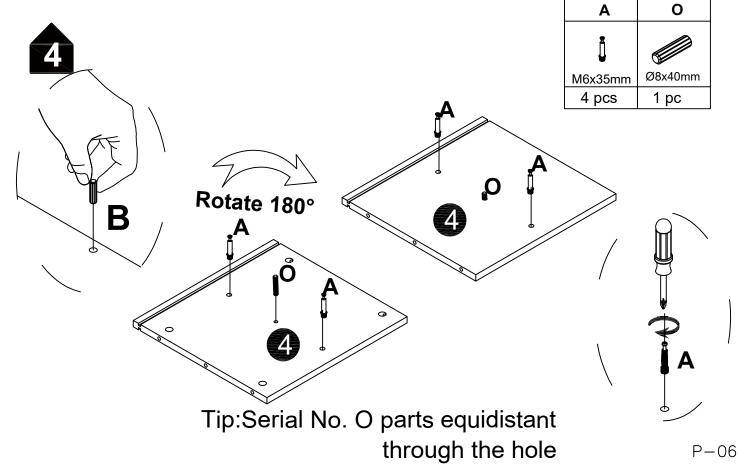





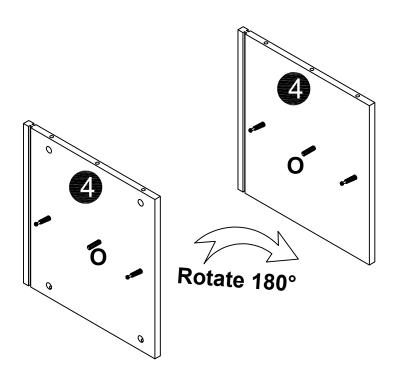


Tip:Serial No. O parts equidistant through the hole




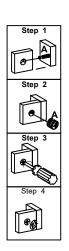


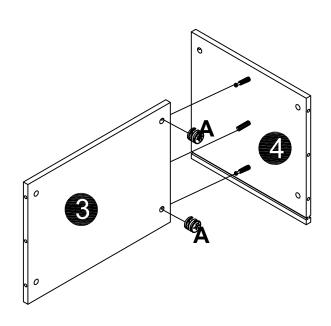


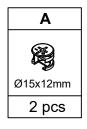




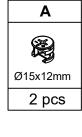


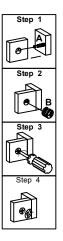


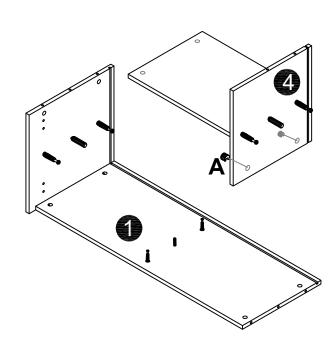




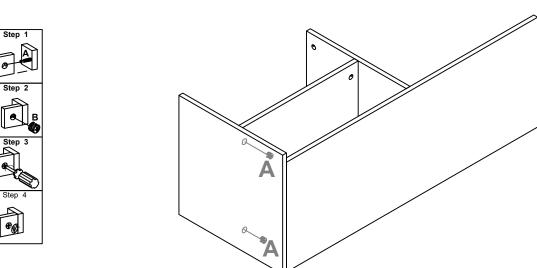

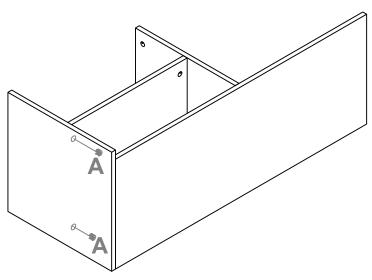


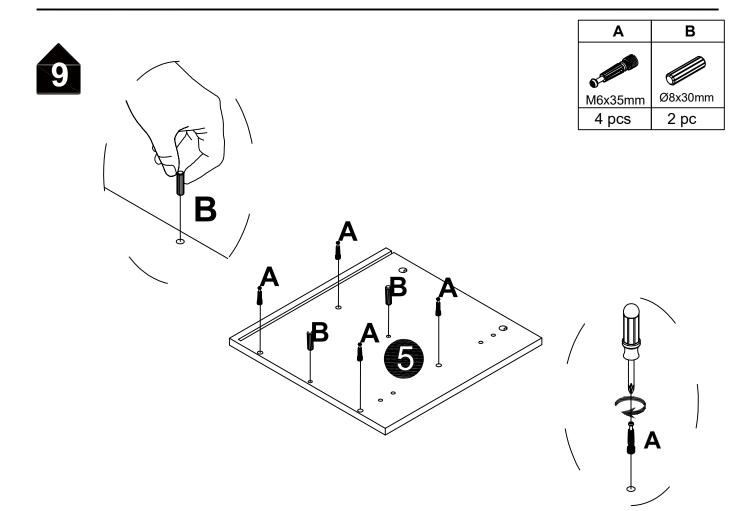


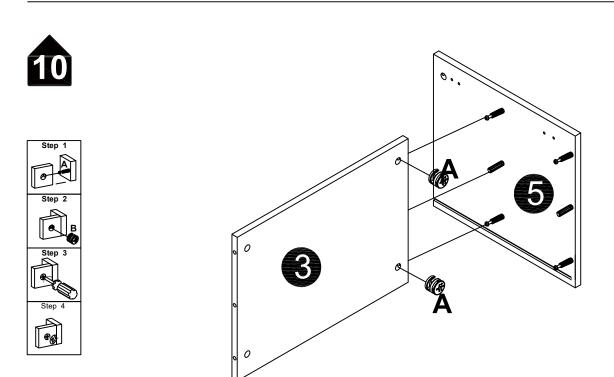







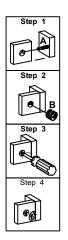


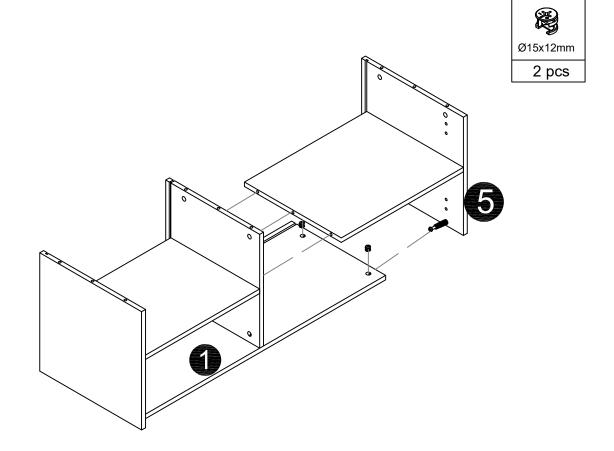



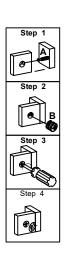


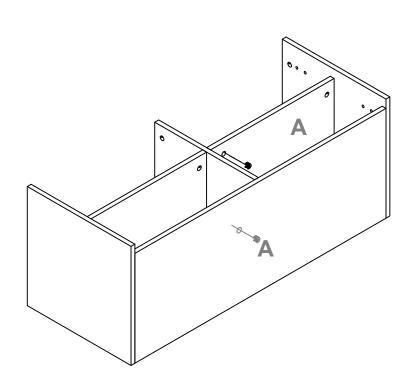


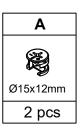


Α



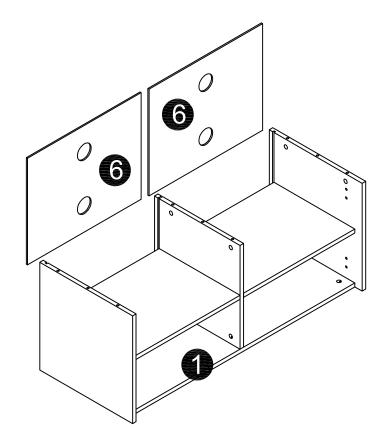


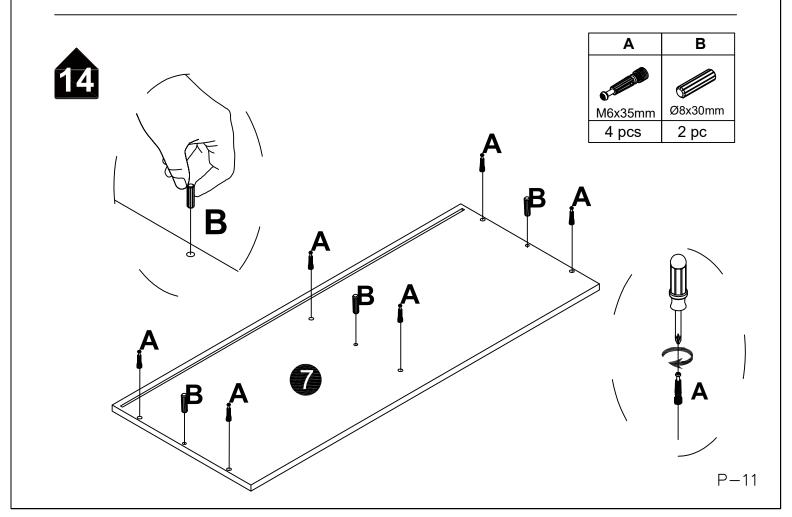





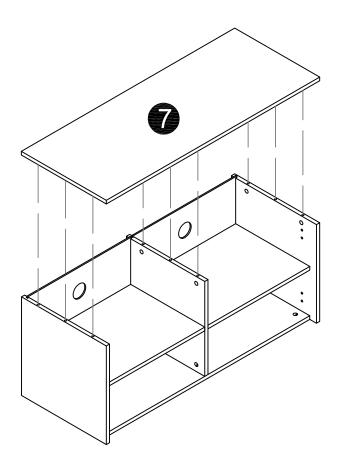



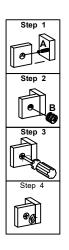


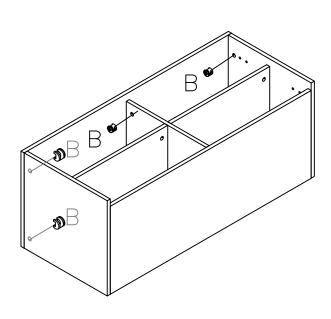

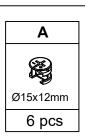





D	E
Ø3.5x14mm	
8 pcs	8 pcs

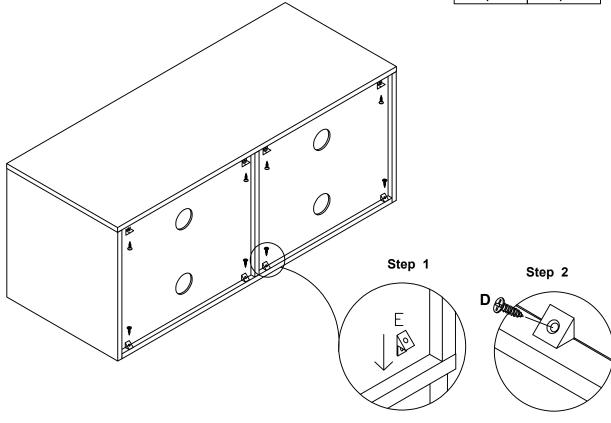





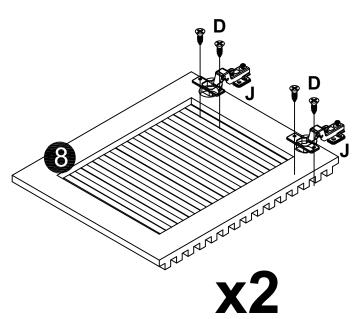

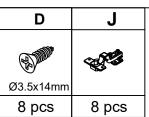





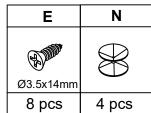


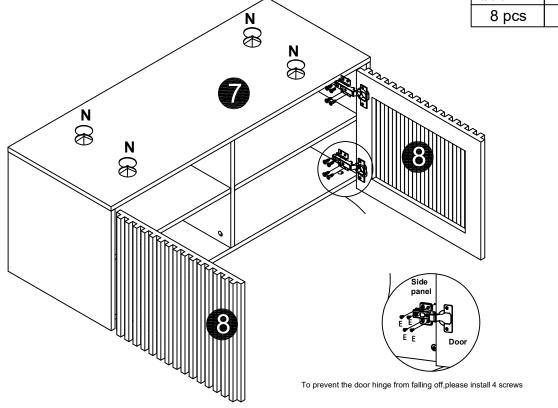




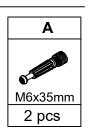

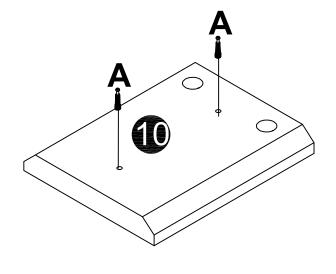

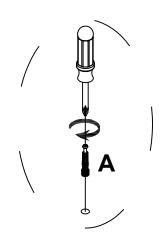


#### Step 1 Open the door.

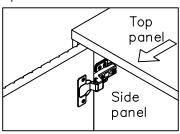


## TO ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).


Step 2
Adjust the door panel to be flush with side panel and top panel edge.

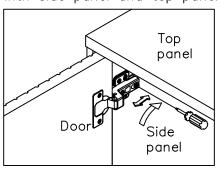

Loosen the screw indicated a little, adjust the hinge to right position (see step 2a & 2b), then tighten the screw.


Step 2aMOVE DOOR OUT

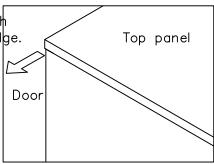


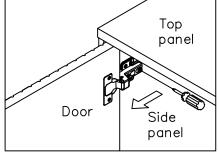

Pull the hinge forward a little.


Step 2bmove door inside

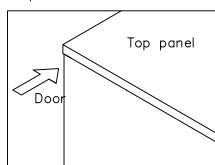

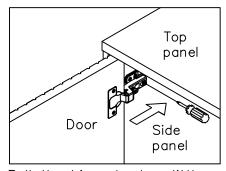

Pull the hinge back a little.


Step 3
Adjust the gap betweem door pantopo big and side panel.

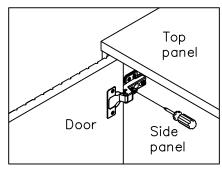


Loosen or tighten the screw indicated a little to adjust the gap between the door panels, adjust the hinge to right position

(see step 3a & 3b).


Step 3dMOVE DOOR LEFT

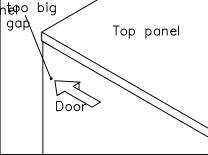


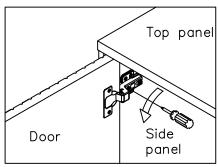

Turn the screw clockwise a little as shown to make the gap small.

Step 3bMOVE DOOR RIGHT

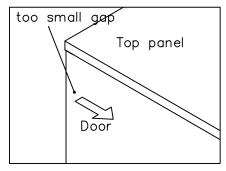


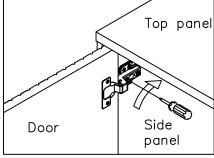



Turn the screw counterclockwise a little as shown to make the gap big.







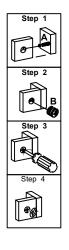

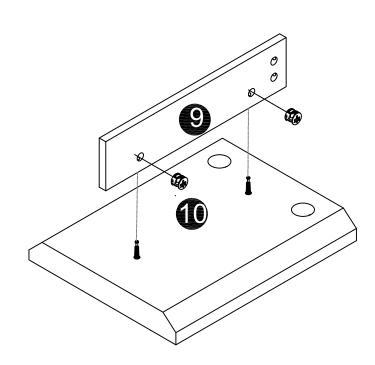

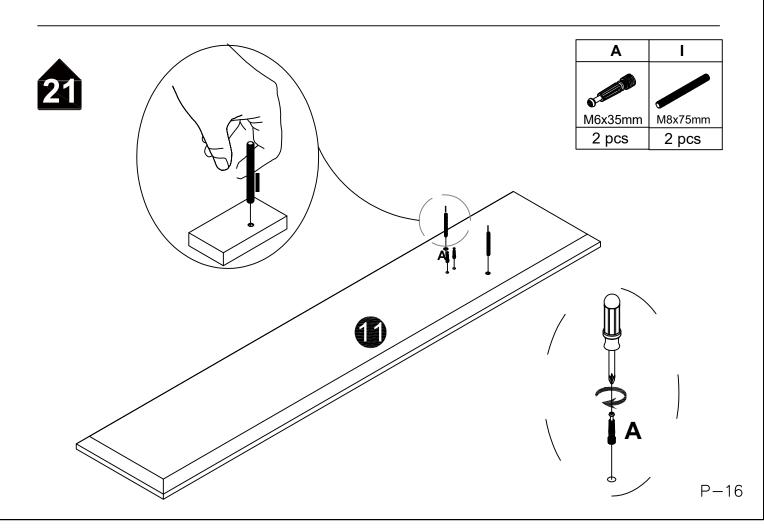

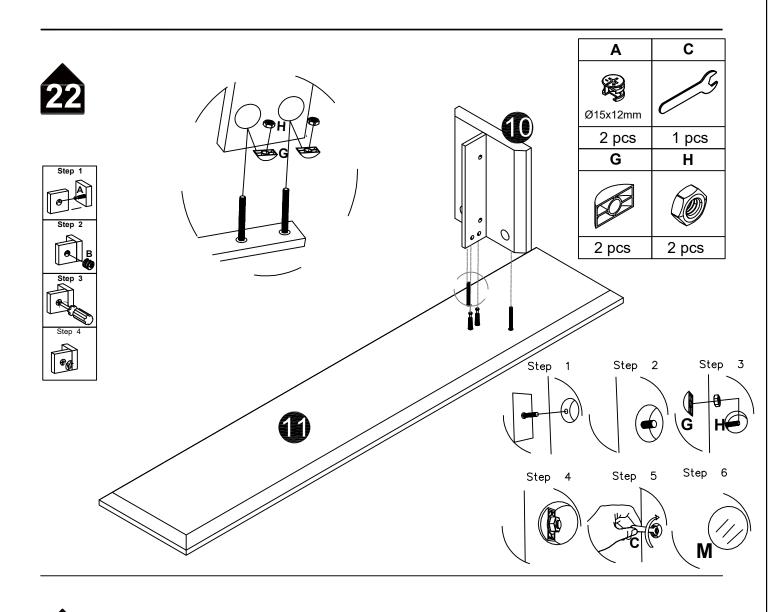

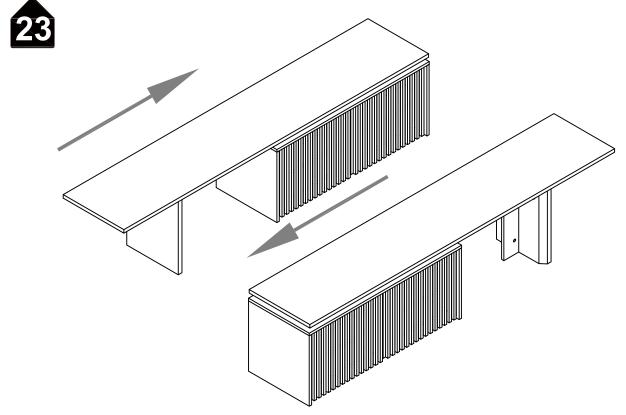

# Thank you for your support!

