Assembly Instructions

Caution: •You must read this before you proceed.

•Sets often ship in multiple boxes and may arrive a day or two apart.

EXTENSION DINING TABLE




Parts List				
Label	Picture	Description	QTY	
A		Table Top	1	
В		Table Base	2	
С		Crossbar	1	
D		Leaf	1	

<u>Hardware</u>				
Label	Picture	Description	QTY	
1)		Allen Wrench	1	
2		Bolt (M6x50mm)	13	
3		Crescent Nut	5	
4		Spring Washer Ring (M6x11mm)	9	
(5)		Flat Washer Ring (M6x19mm)	9	
6		PVC Dowel (M8x30mm)	3	
7		Adjustable Glider	5	

Assembly Preparation

Before Beginning Assembly:

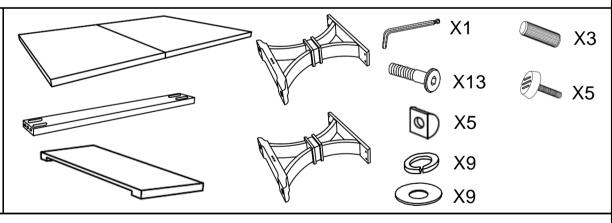



· Read instructions, cover to cover-



Have 2 adults on hand for assembly-



Do not assemble on flooring or carpet-




Assemble on a clean non-marring surface (packing foam)-



Save all packaging until finished-


Assembly Steps

Overview

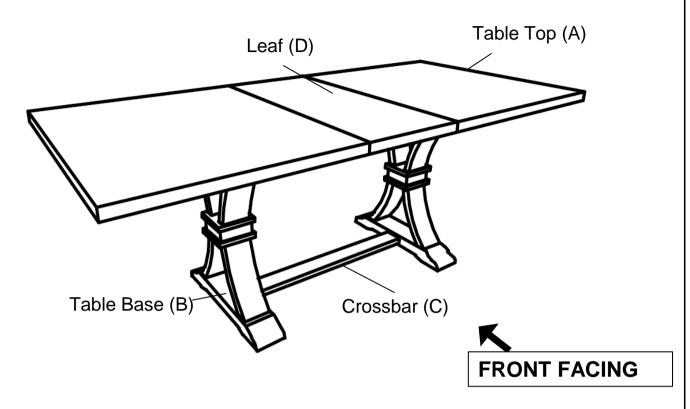


This Table has multiple parts and may require up to 60 minutes to assemble. To give you an overview of the Table parts, the above picture is to help you put the various parts into perspective. Please read through the instructions herebelow to familiarise yourself with the parts and steps before assembly.



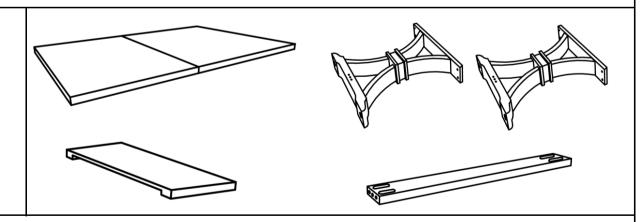


Unpack and place all parts on a clean, non-marring surface.

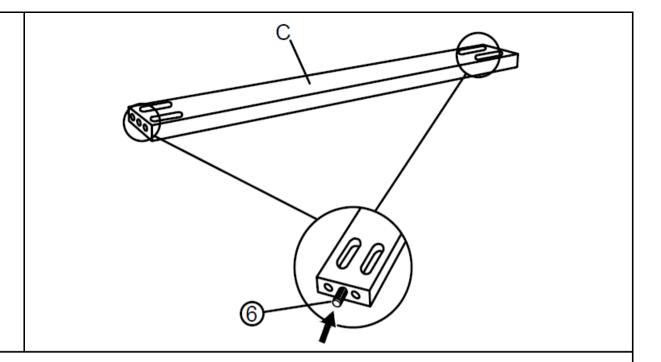


Insert PVC Dowels (6) into the Crossbar (C) as shown above.

Step 3

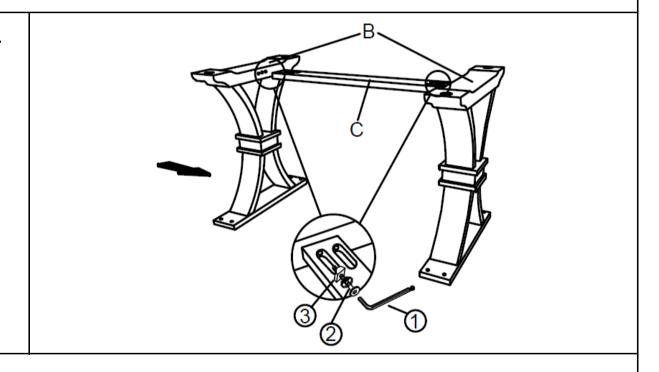

Attach the Crossbar (C) to the Table Base (B) using Bolts (2), Crescent Nuts (3) and the Allen Wrench (1).


DO NOT FULLY TIGHTHEN THE BOLTS.

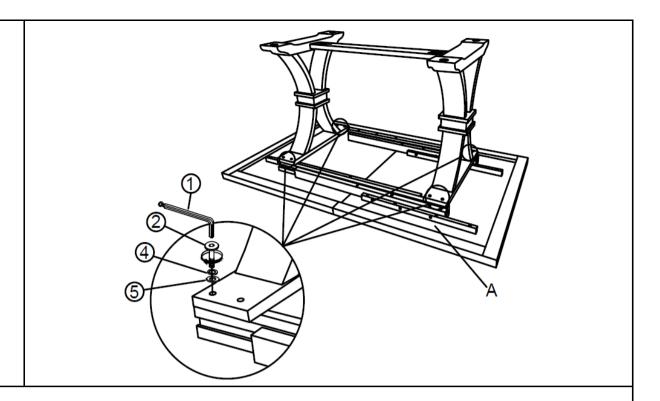

Place the Table Top (A) on a clean, non-marring surface, then place the assembled table parts from Step 3 on top of it. Affix the Table Top (A) to the Table Base (B) with Bolts (2), Spring Washer Rings (4) & Flat Washer Rings (5) using the Allen Wrench (1).

FULLY TIGHTHEN ALL THE BOLTS.


Step 5

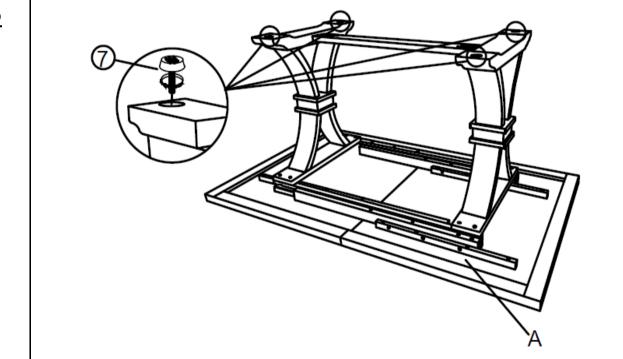

Insert the Adjustable Gliders (7) into the Table Base (B) as shown above. **FULLY TIGHTHEN ALL THE BOLTS.**


Stand the Table up with assistance from your partner. Unlock the latches underneath the Table Top (A). Pull apart the Table Top (A) at both ends.



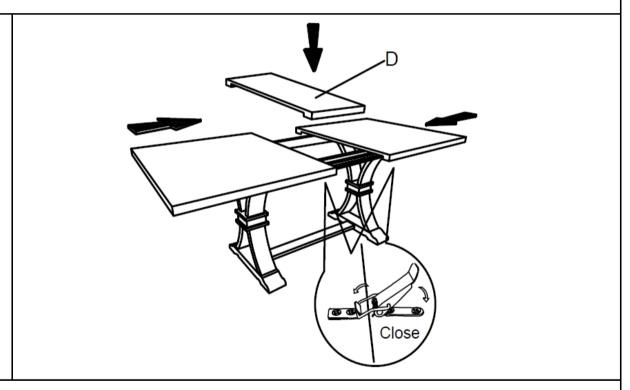

Open

Place the Leaf (B) into place and push both ends together, ensuring the pins line up. Close the Table Top (A) tightly and lock all latches on the under side of the Table.

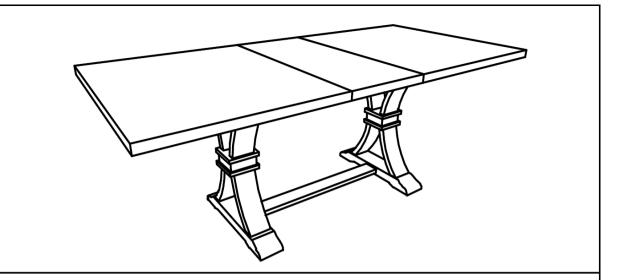

Place the Table on a LEVEL SURFACE and check that it is balanced. If there is a slight wobble, please adjust the Adjustable Gliders (7). EXERT pressure floorwards, onto the Table.

This pressure will help the Legs and Top reach alignment at all joints. Check for wobbles on a level surface.

If no wobbles are found, in a sequential manner, gradually tighten all unightened Bolts until evenly secured.

CAUTION 1: When tightening the Bolts, tighten sequentially. DO NOT tighten any bolt fully and then towards the next one.

This would cause the frame to warp.

If there are any wobbles after tightening, loosen the Bolts and execute this same process.

WARNING: IF THE TABLE IS NOT STABLE, IT COULD LEAD TO DAMAGING THE PRODUCT.


Ensure all bolts are fully locked into position.

The Table is ready to be used.

Caution 2: This Table can only be used on a flat, level surface.

 Care & Maintenance







Do not put hot items directly on furniture surface.



• Do not clean furniture with harsh cleansers or polish.



Do not place furniture under direct sunlight.



Do not place furniture near heating or cooling vents.



 Do not write on furniture without a padded barrier to protect the surface.



• Do not place furniture outside . For indoor use only.



Not for commercial use. For residential use only.



 Stains may be removed with mild soap solution and damp cloth.



Children should not climb or jump on the furniture.



 Dust and pick-up spills using a clean, non-colored, lint-free cloth.