 




INSTALLATION

Product Manual

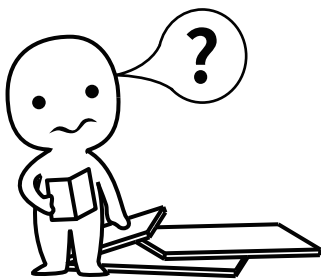


IMPORTANT INFORMATION!

  Please read the entire manual before starting to assemble and/or using this product. Follow the manual thoroughly and keep it for further reference.

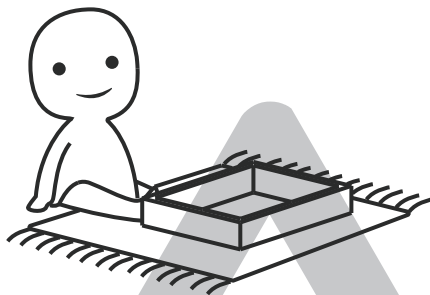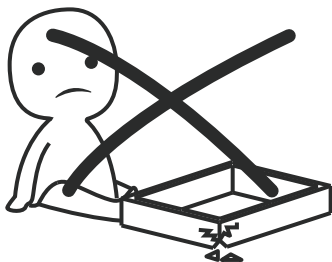



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

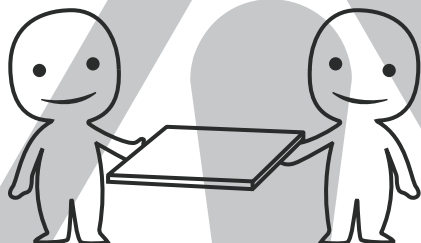

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

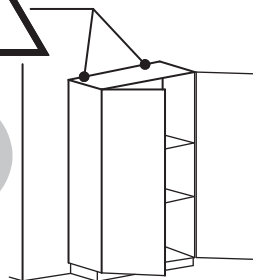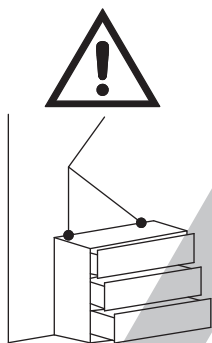

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

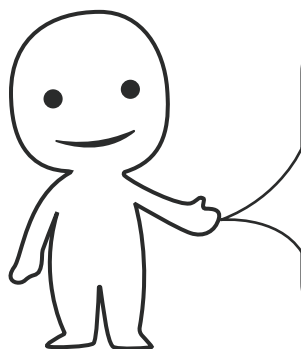


Please prepare the following tools

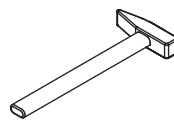   


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 93




Ø5x 42 mm

 B x 93

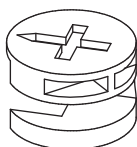


Ø15 x 10 mm

 C x 68

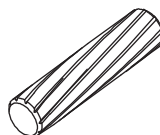


Ø6 x 40 mm

 D x 23




Ø5 x 40 mm

 E x 60




Ø3.5 x 12 mm

 F x 2

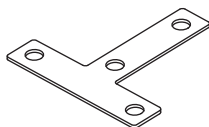

G x 6

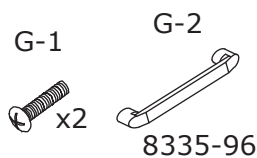 


Ø4 x 20 mm

H x 38




 J x 16




Ø3.5 x 12 mm

 K x 4



L x 16

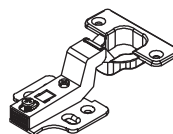 

Ø26 DW

M x 4



 
Ø8x60 M5x55

N x 110




Ø3.5x 14 mm


P x 3

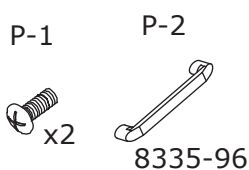

Ø4 x 8 mm

  x 3

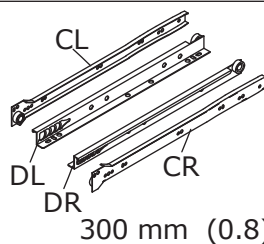

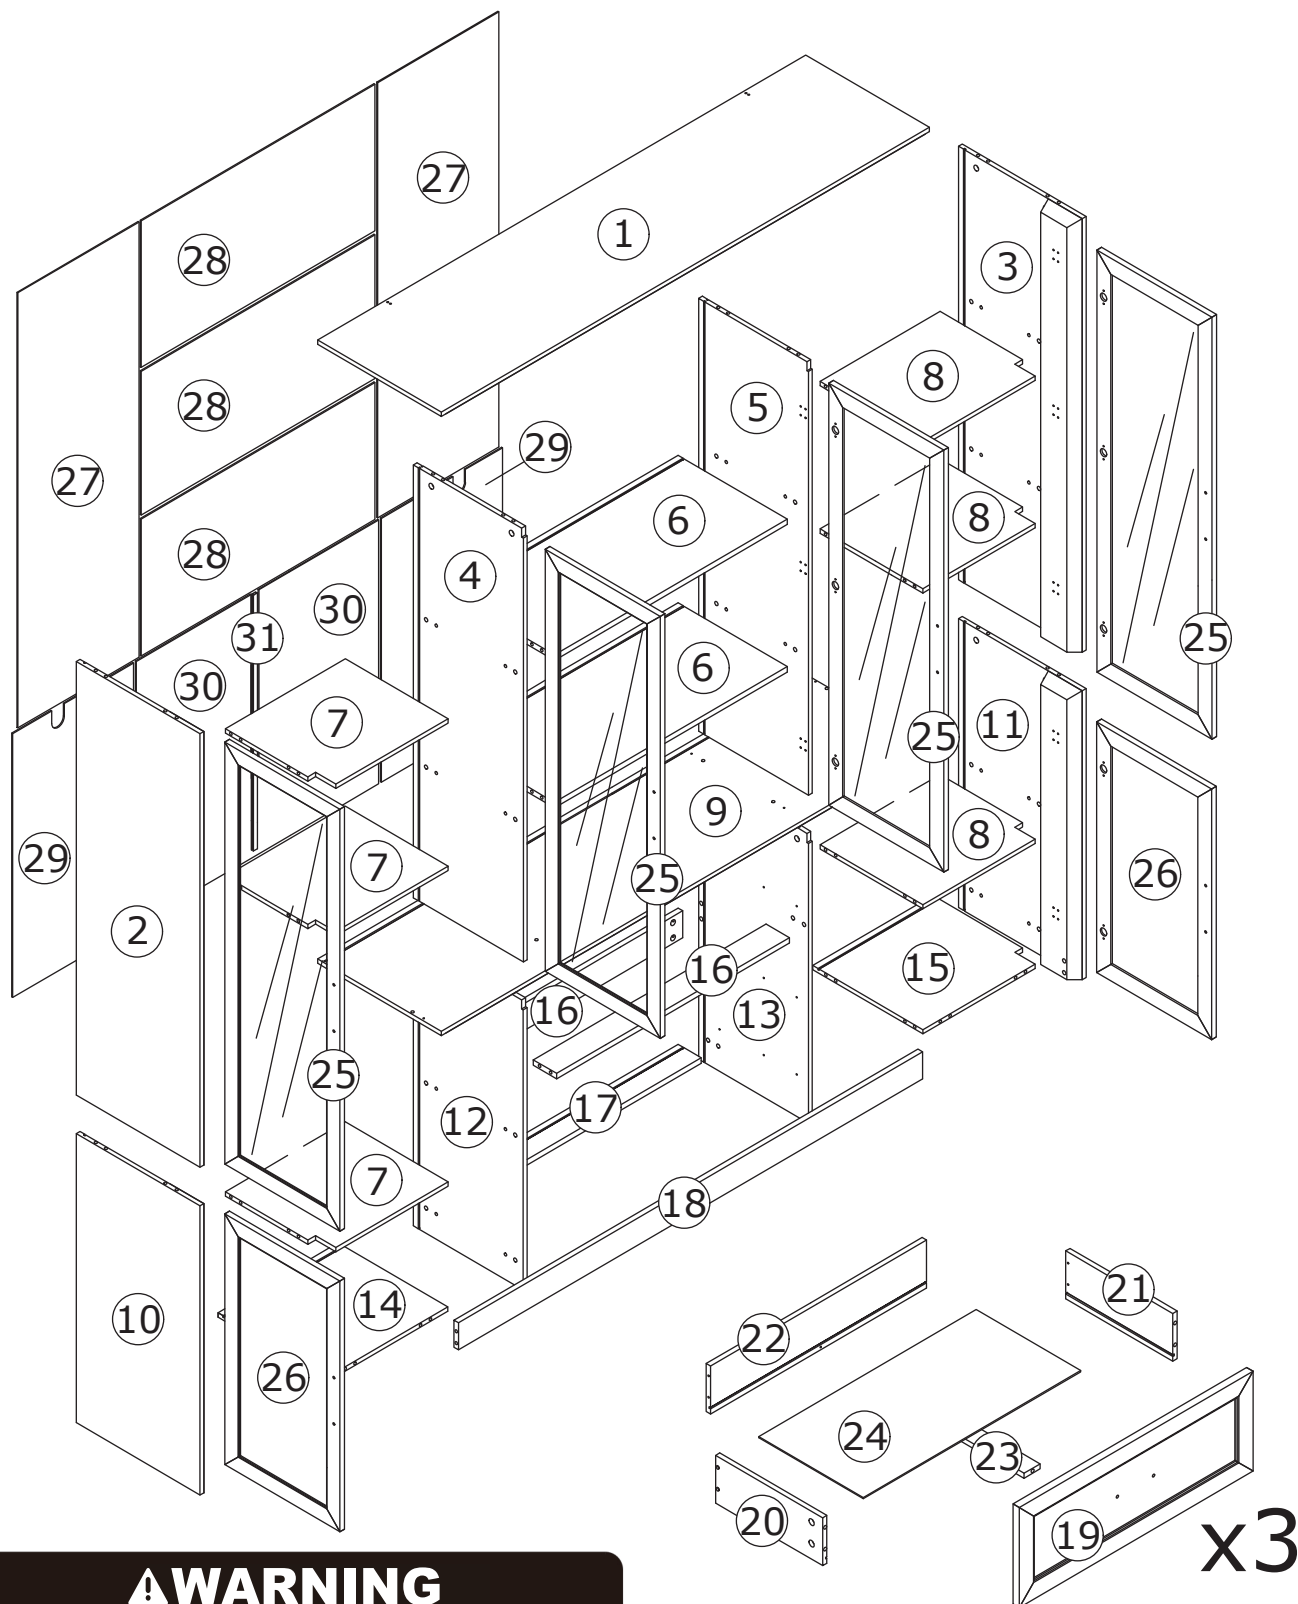


⚠ WARNING






Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 
*This is a permanent label.
Do not remove!*

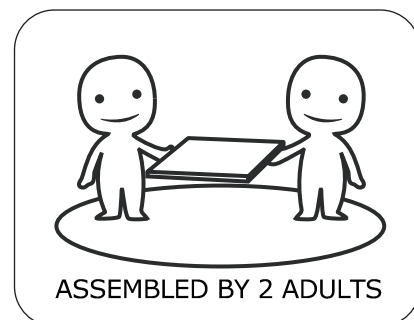




1

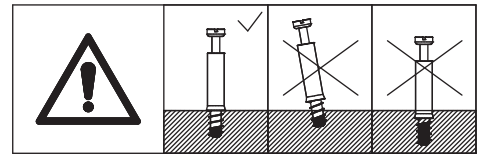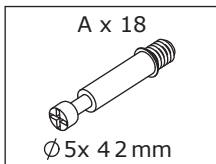   

 Lock the positioning rod A to the corresponding positions on plates 10, 11, and 18 as shown.

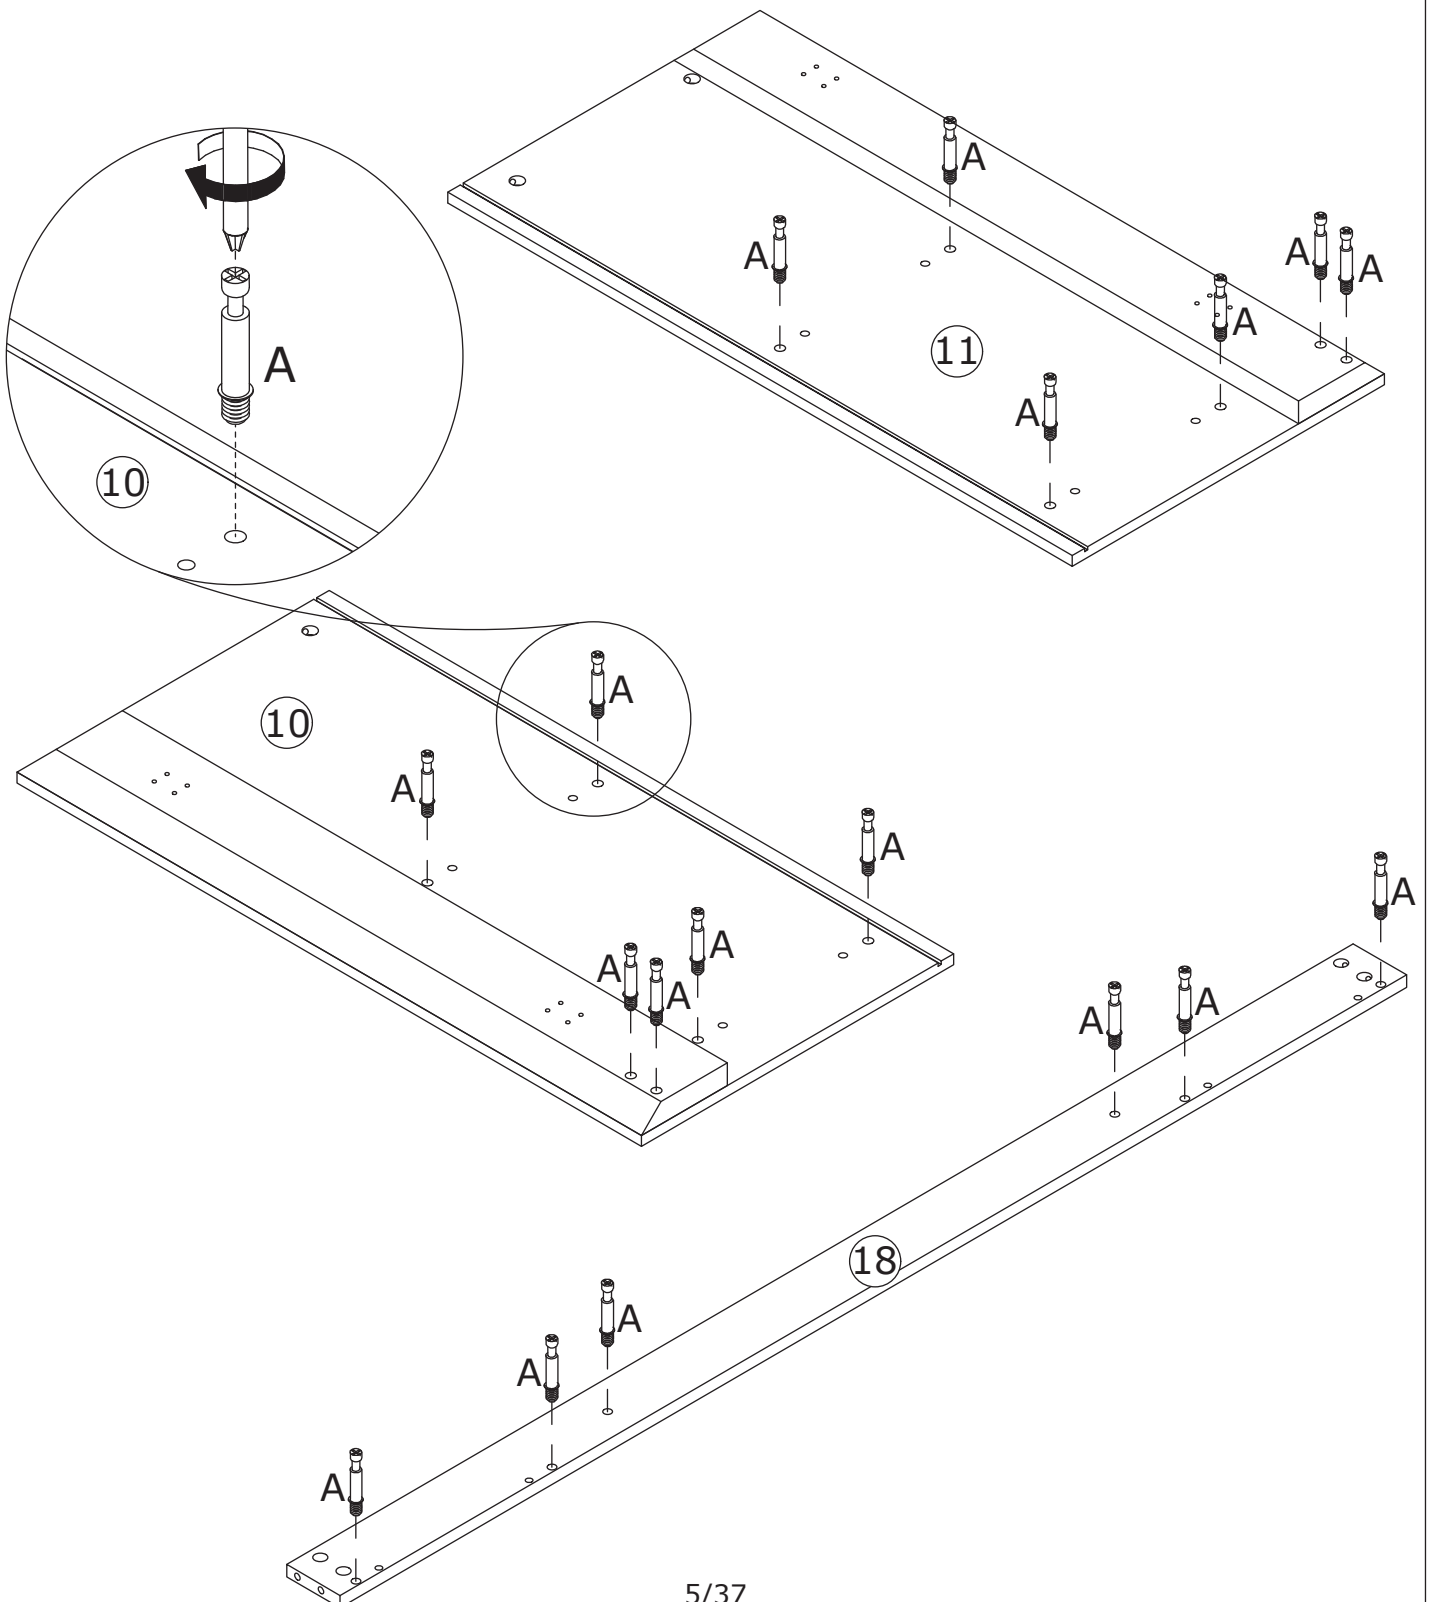


2

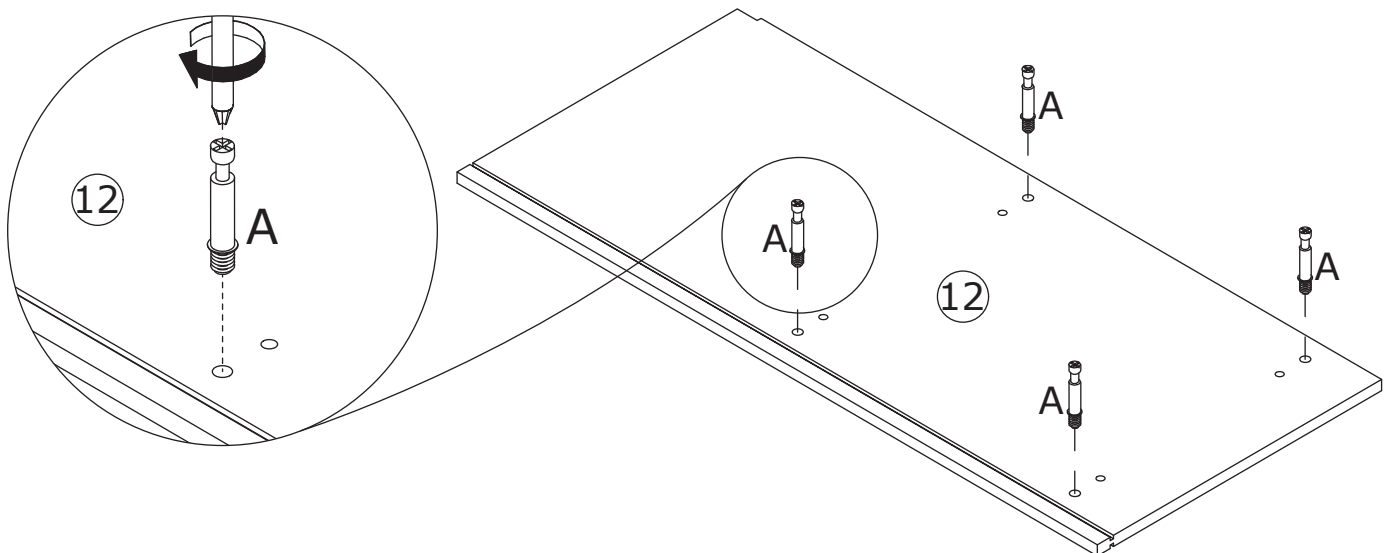 
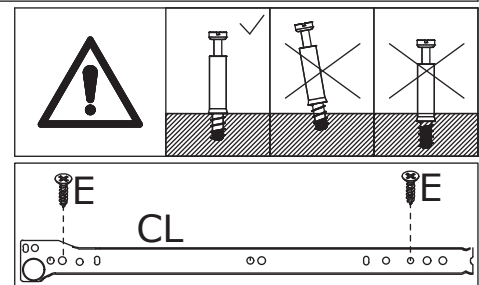 
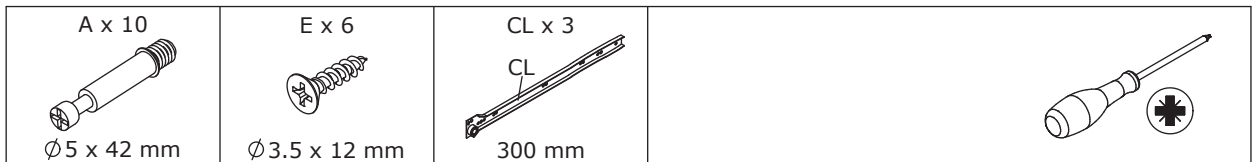 


Lock the positioning rod A to board 12 as shown.

 Flip to back, use screw E to lock the slide rail CL as shown. 180°


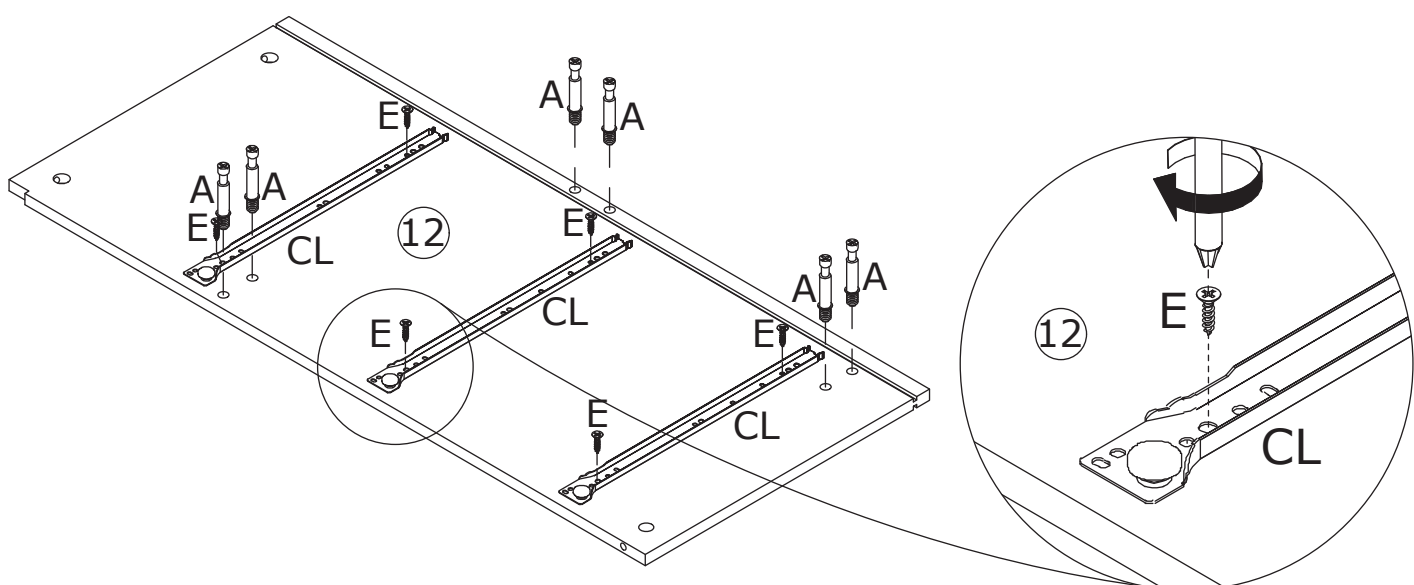


3

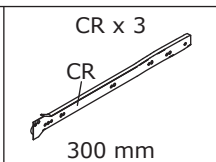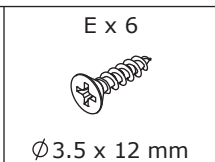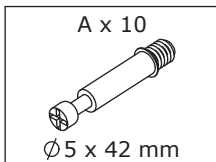   


Lock the positioning rod A to board 13 as shown.

  Flip to back, use screw E to lock the slide rail CR as shown.

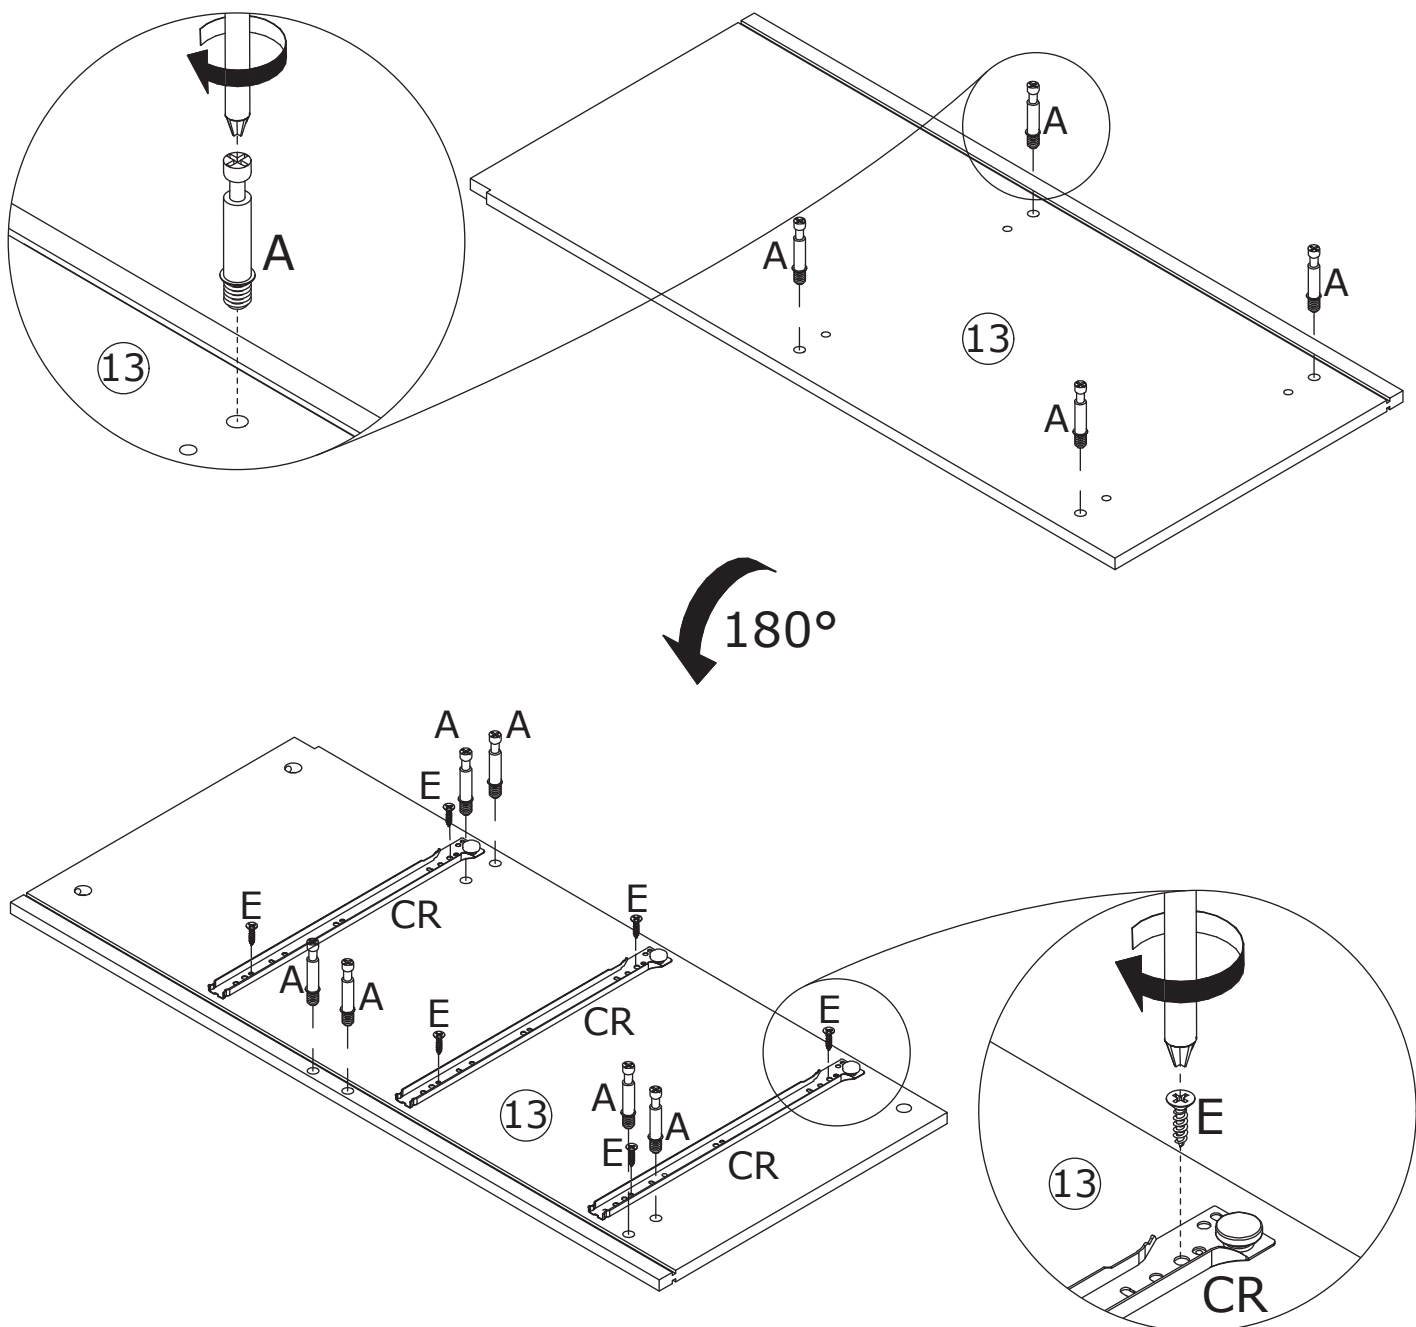
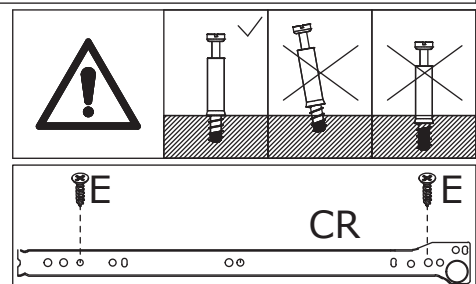


4

 B x 12
Ø 15 x 10 mm



  Connect board 16 and 17 to board 13 and 12 with eccentric wheel B, and lock them as shown.

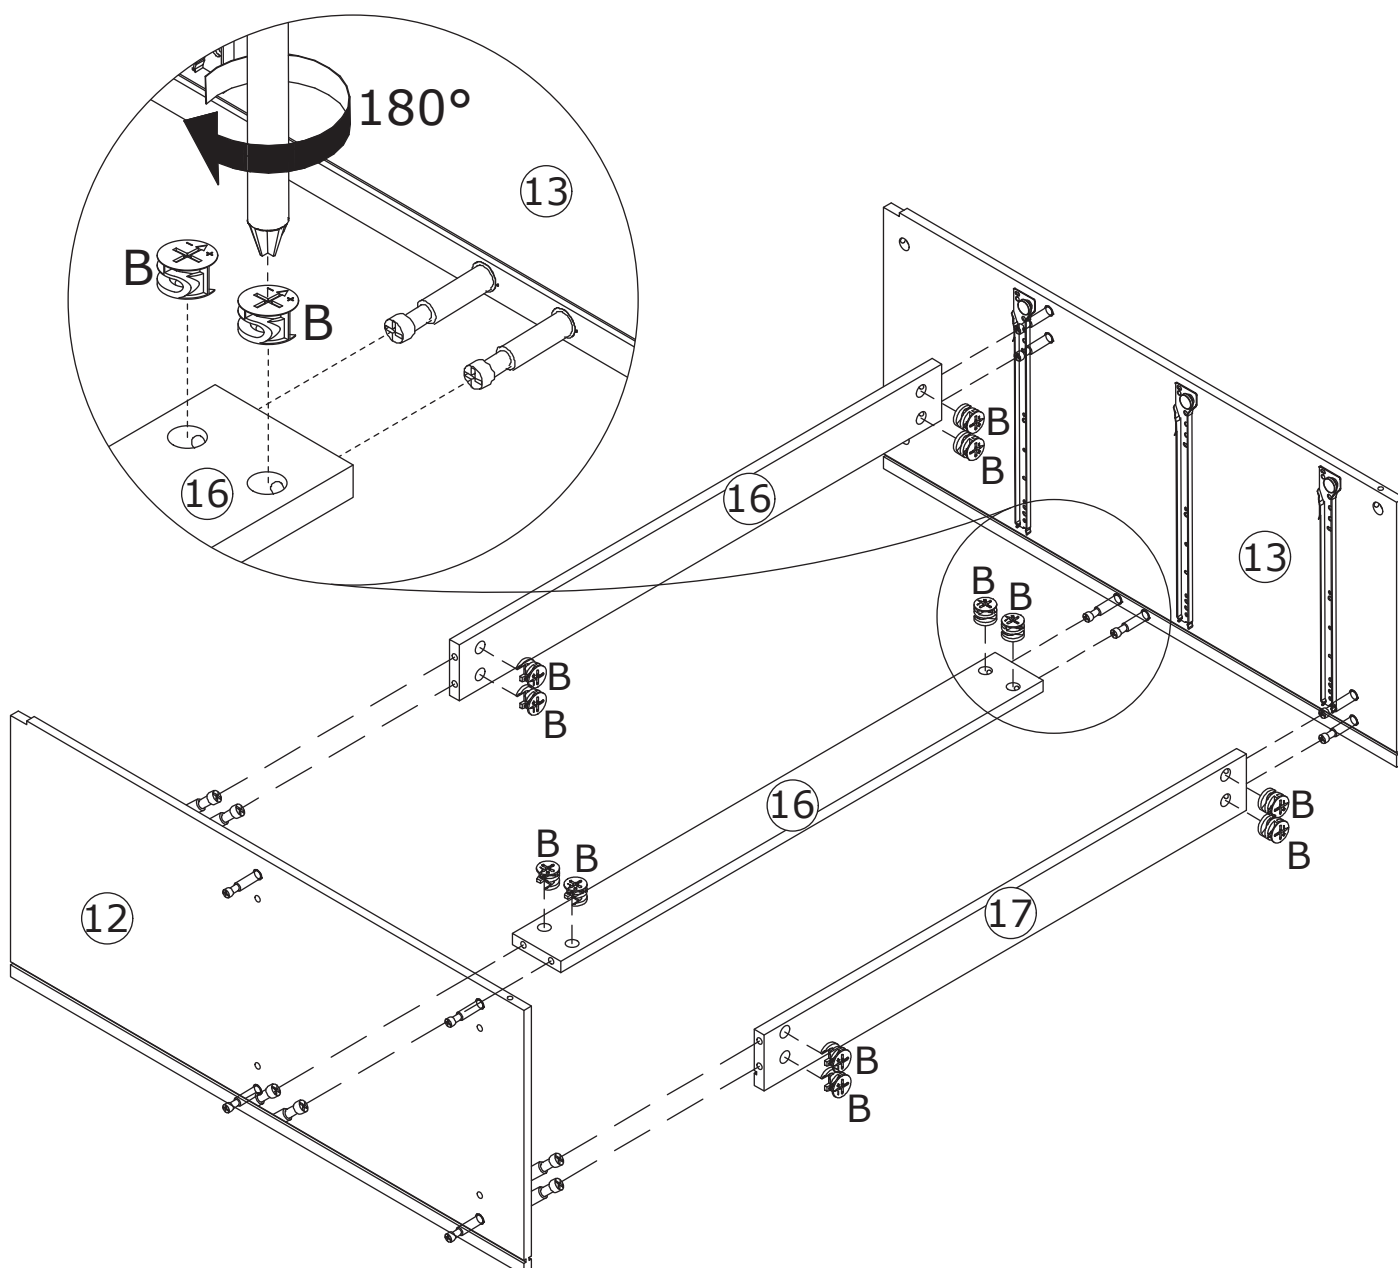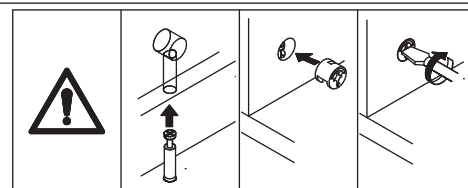


5

B x 8





Ø 15 x 10 mm

 C x 8




Ø 6 x 40 mm


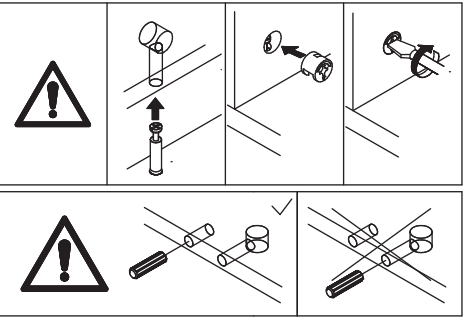 
 


Insert the wooden tenons (C) into boards 7, 8, 14 and 15 as shown.


 
Connect boards 7, 8, 14 and 15 to boards 12 and 13 with eccentric wheel B and lock them as shown.

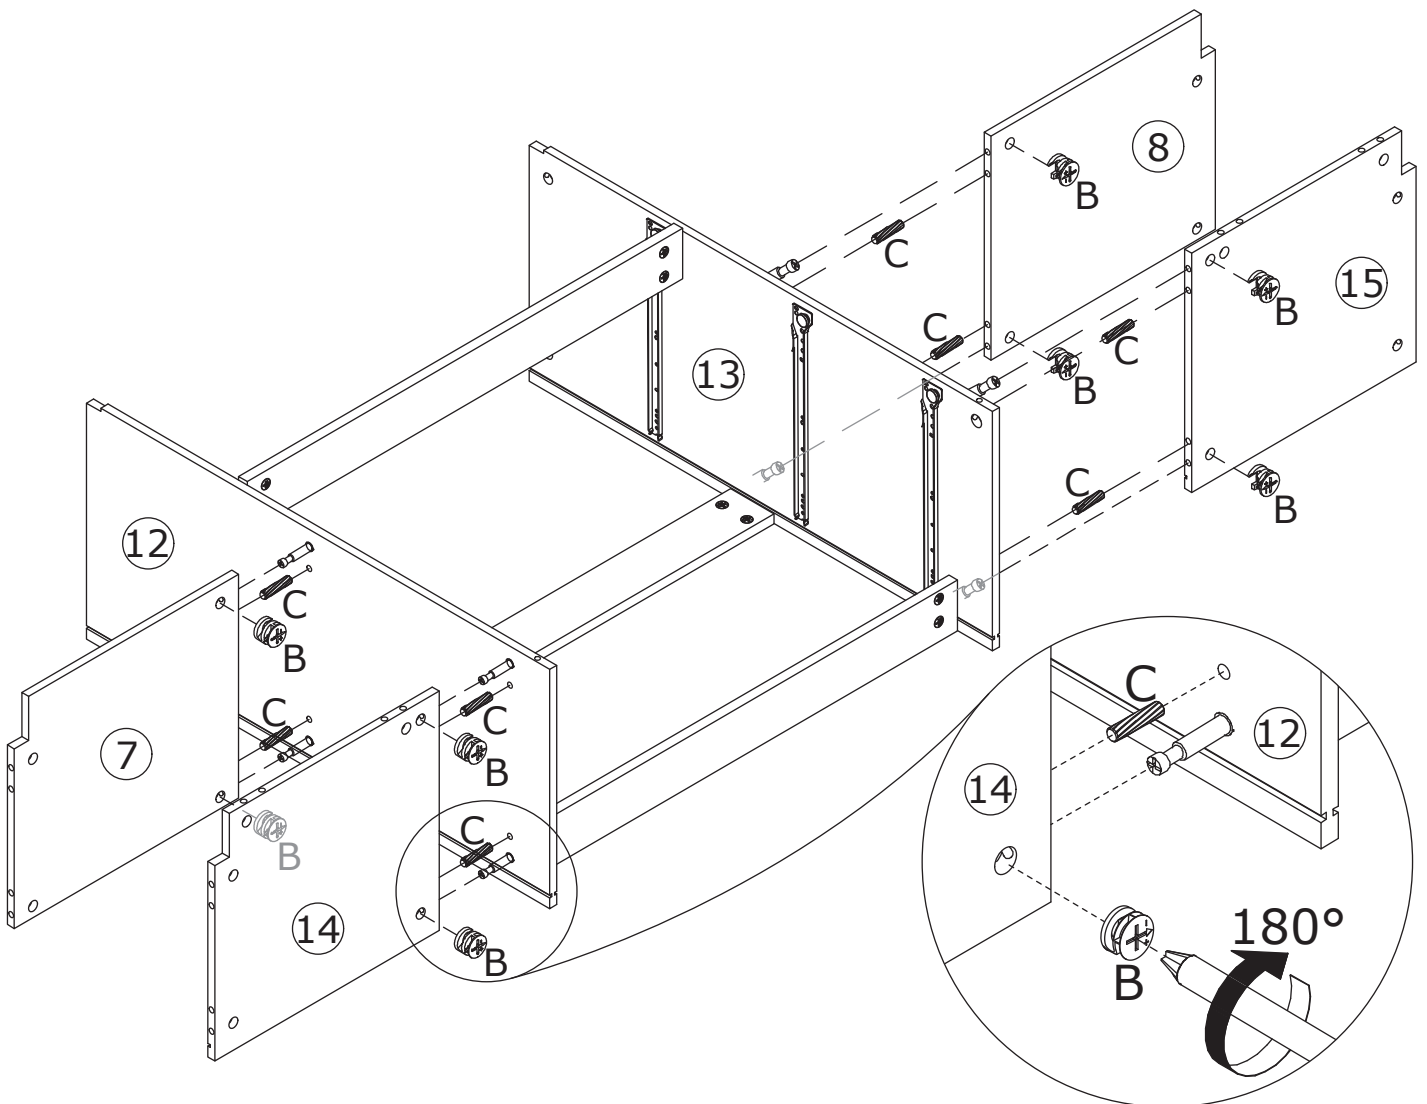





6

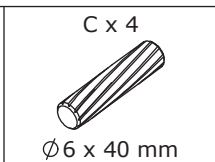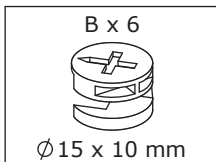   

  Insert the wooden tenons (C) into boards 14 and 15 as shown.
Connect boards 12, 13, 14, and 15 to board 18 with eccentric wheel B and lock them as shown.

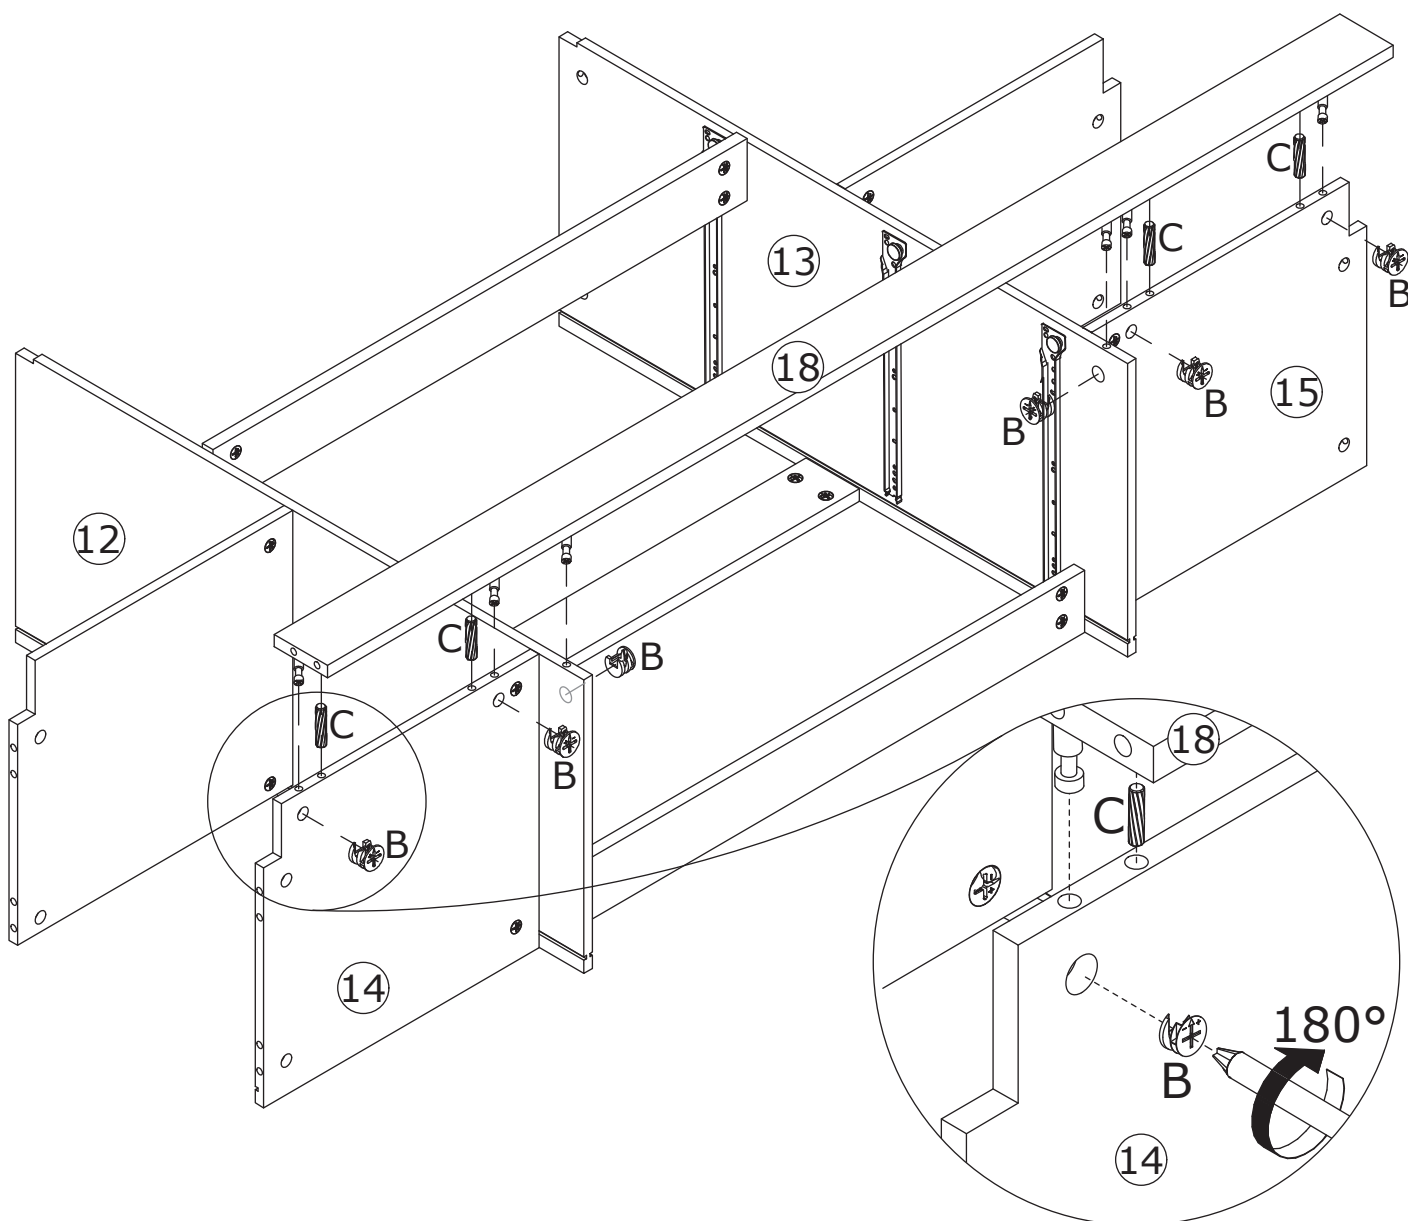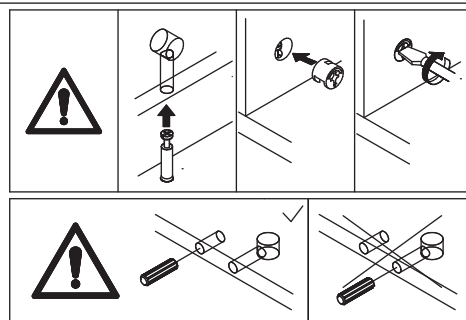


7

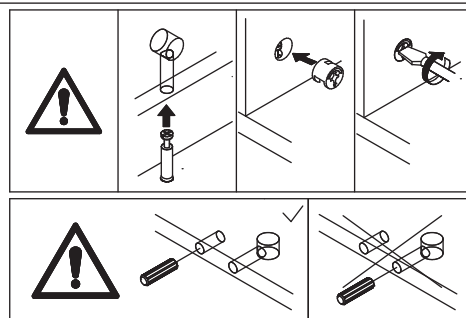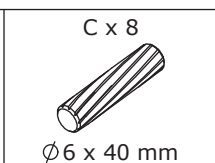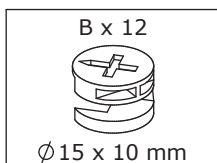    


Insert the wooden tenons (C) into boards 7, 8, 14 and 15 as shown.

 Connect boards 7, 8, 14, 15 and 18 to plate 10 and 11 using eccentric wheel B and lock them as shown.



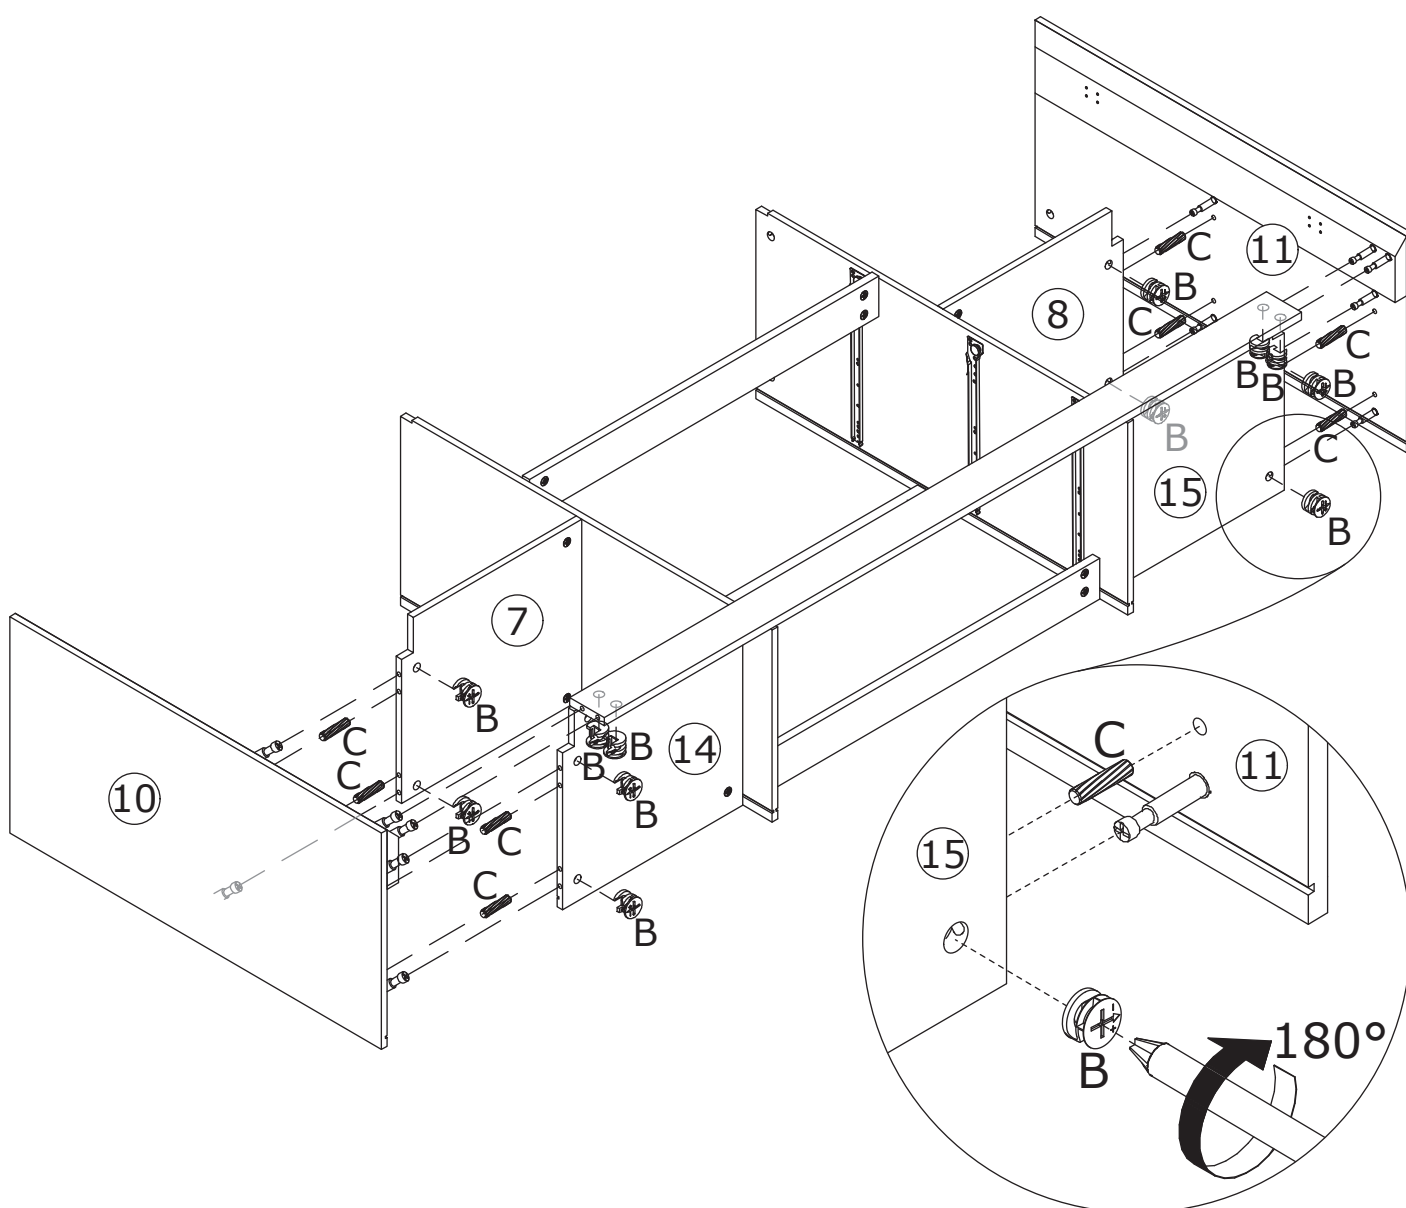


8


 
Insert back boards 29, 30, and 31 into the available slots as shown.

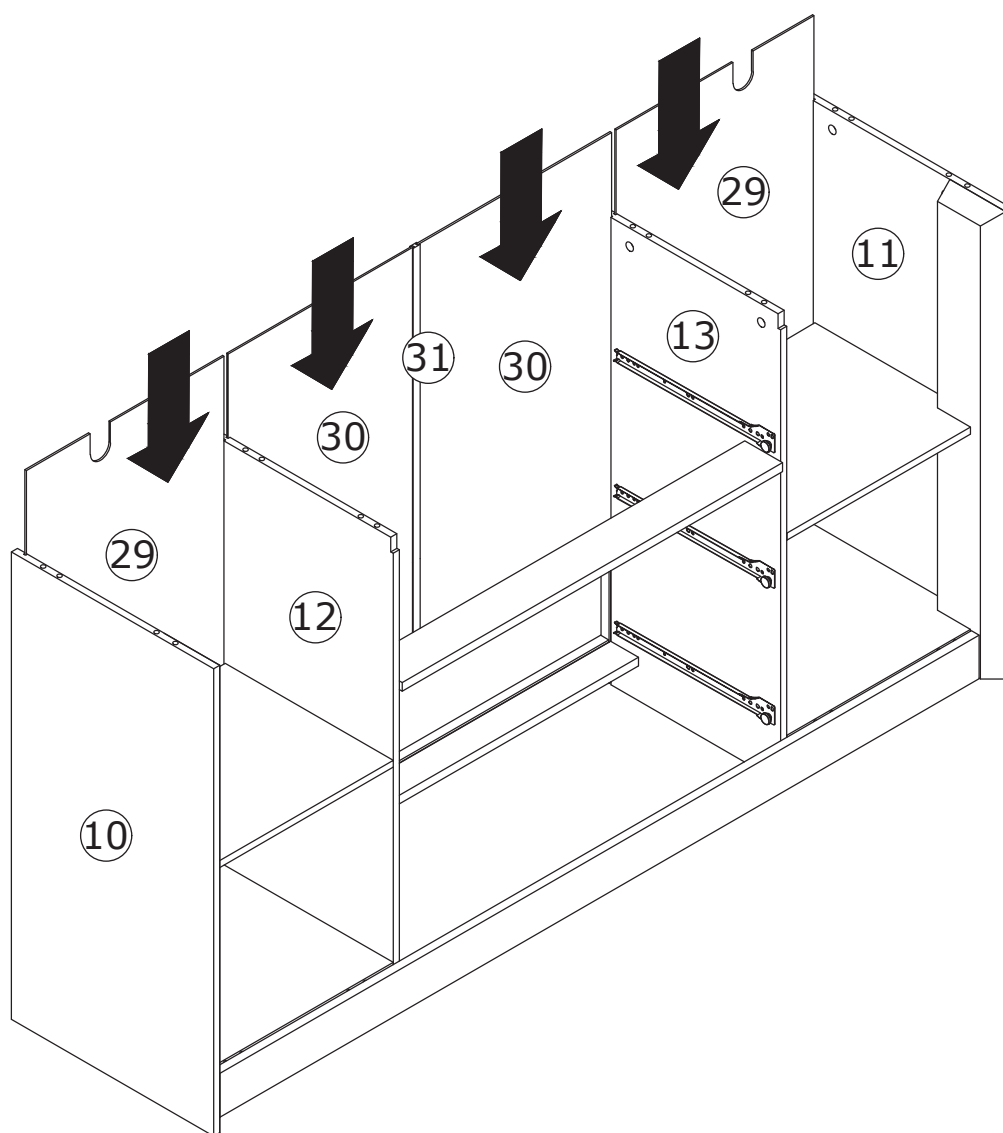




9

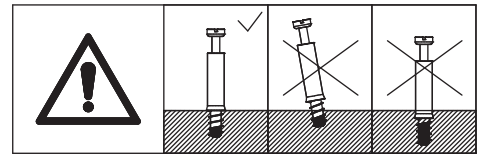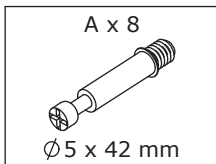   

 
 
Lock the positioning rod A to boards 2 and 3 as shown.

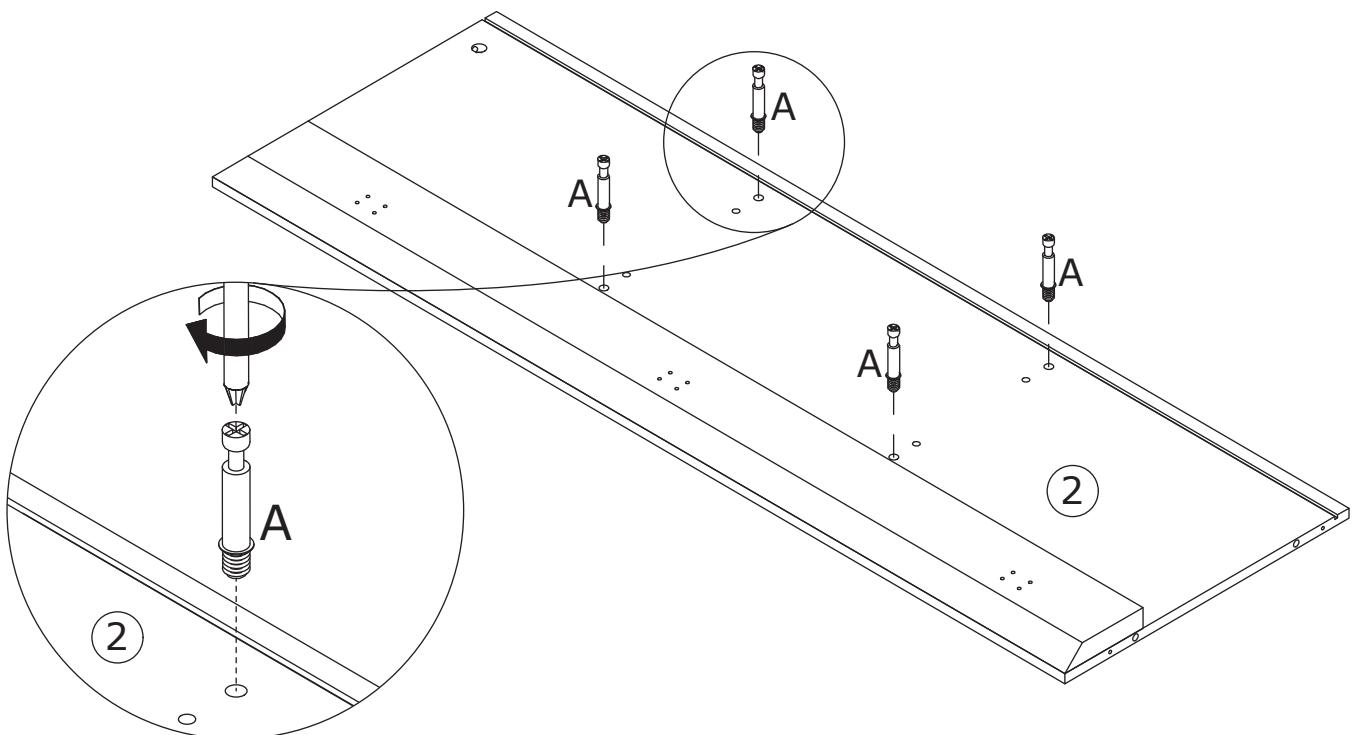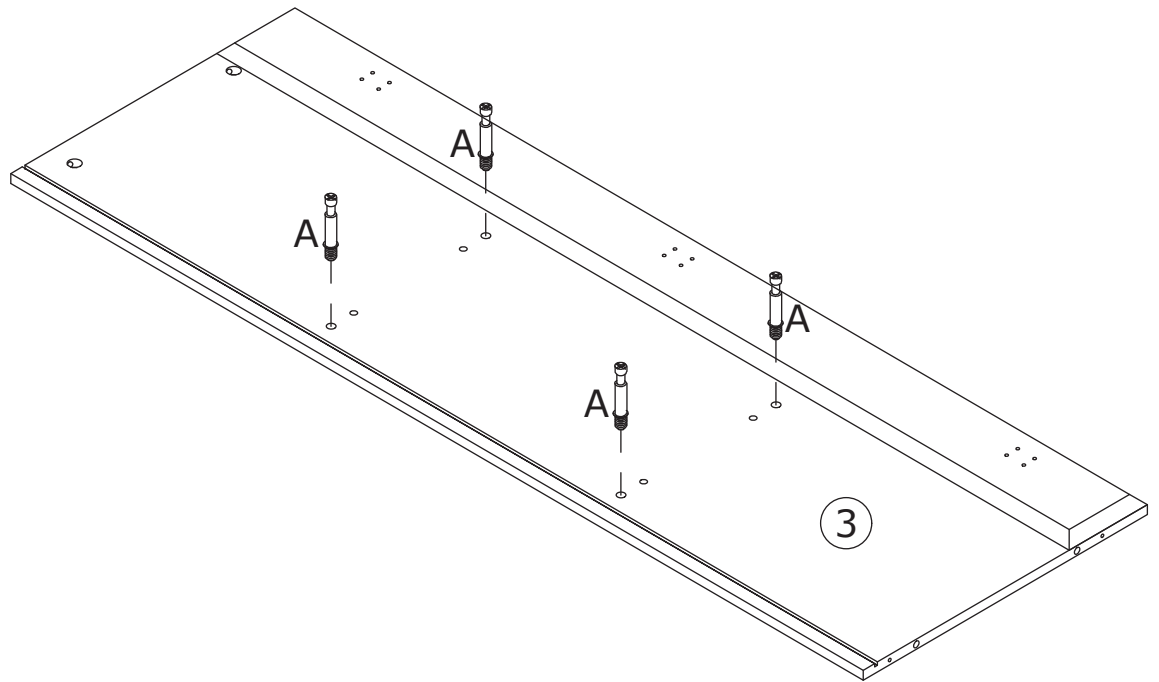


10

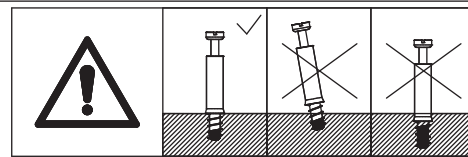  
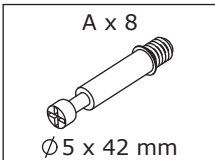 


  Lock the positioning rod A to board 4 as shown.

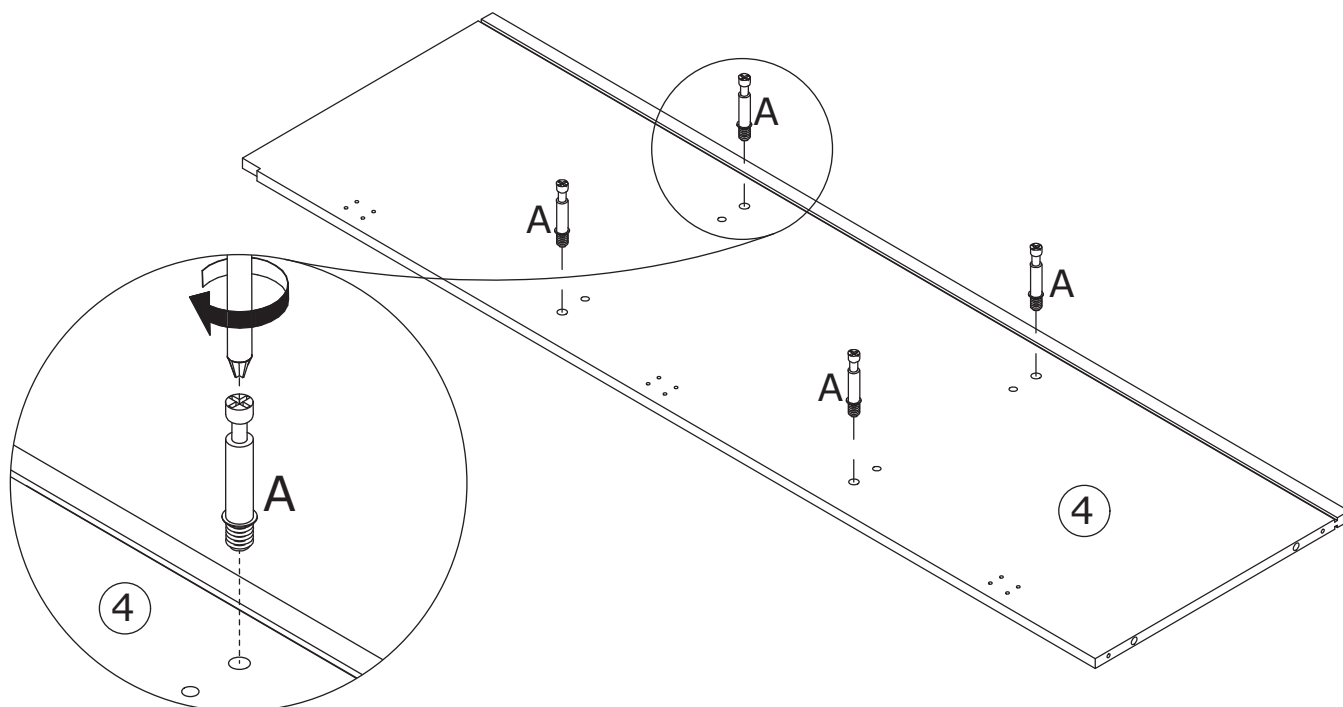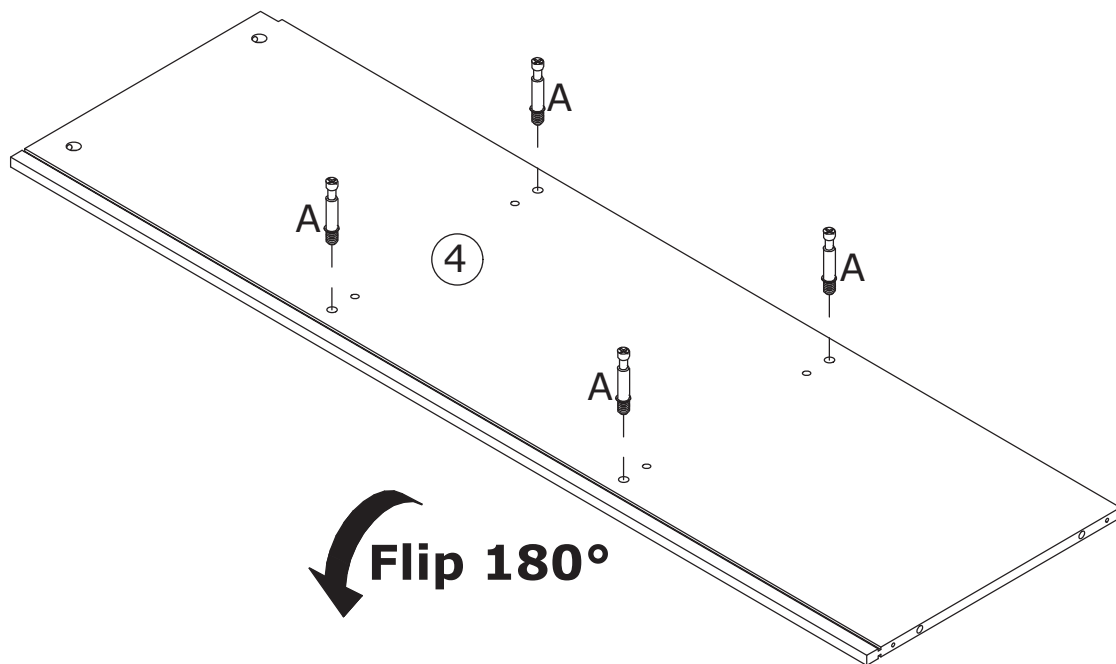


11

 
A x 8

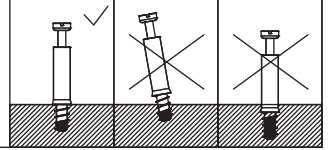   Ø5 x 42 mm

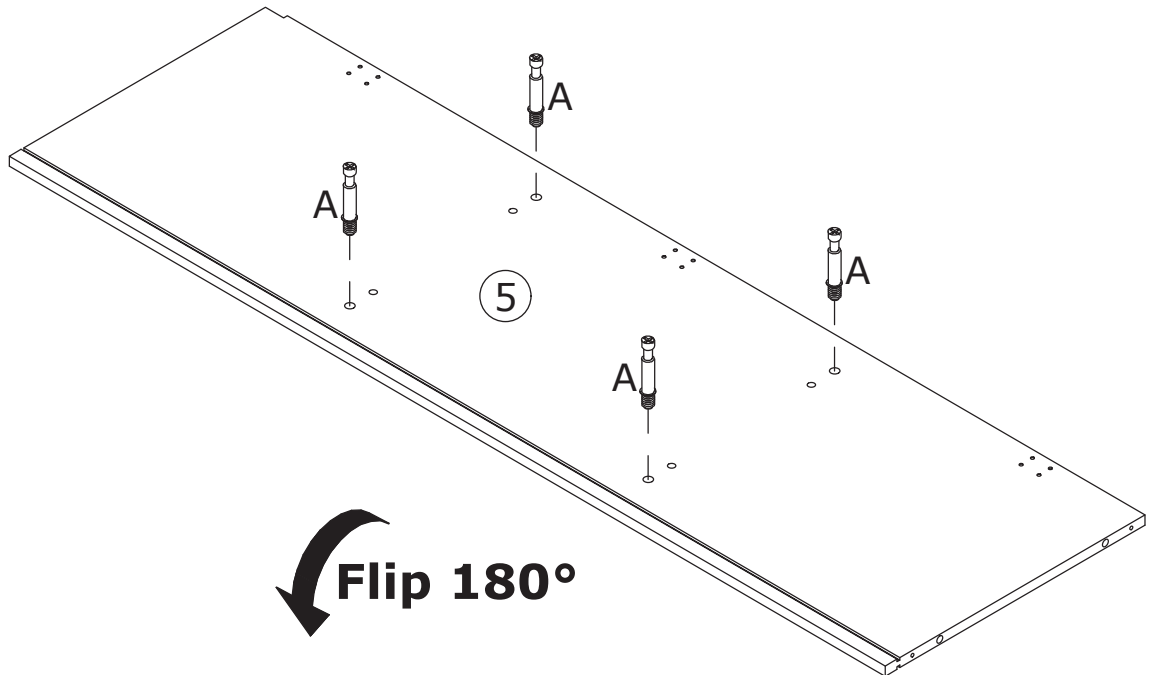 




 
Lock the positioning rod A to board 5 as shown.

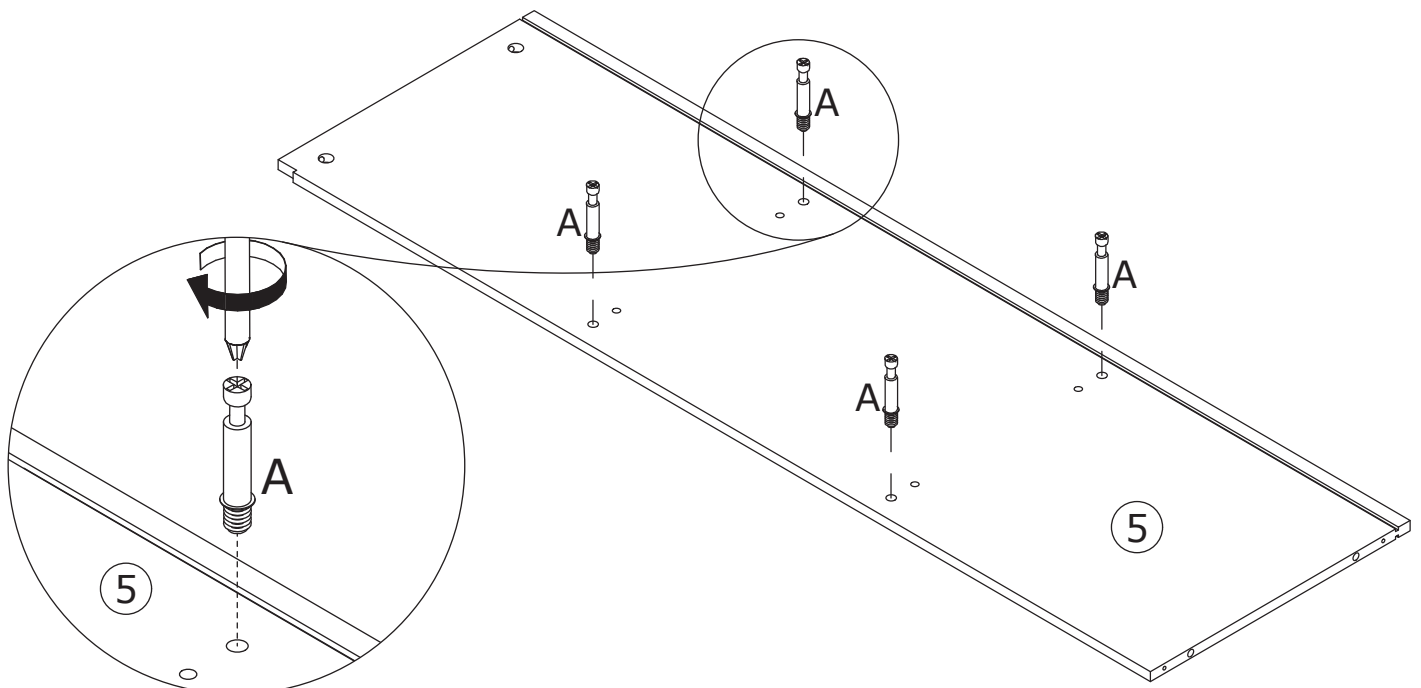


Flip 180°



   
 
12

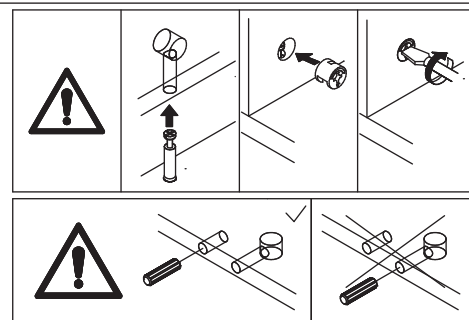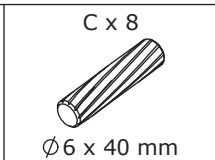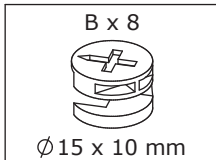


 
Insert the wooden tenons (C) into board 8 as shown.
Connect board 8 to board 3 and 5 using eccentric wheel B,
and lock it as shown in the figure.

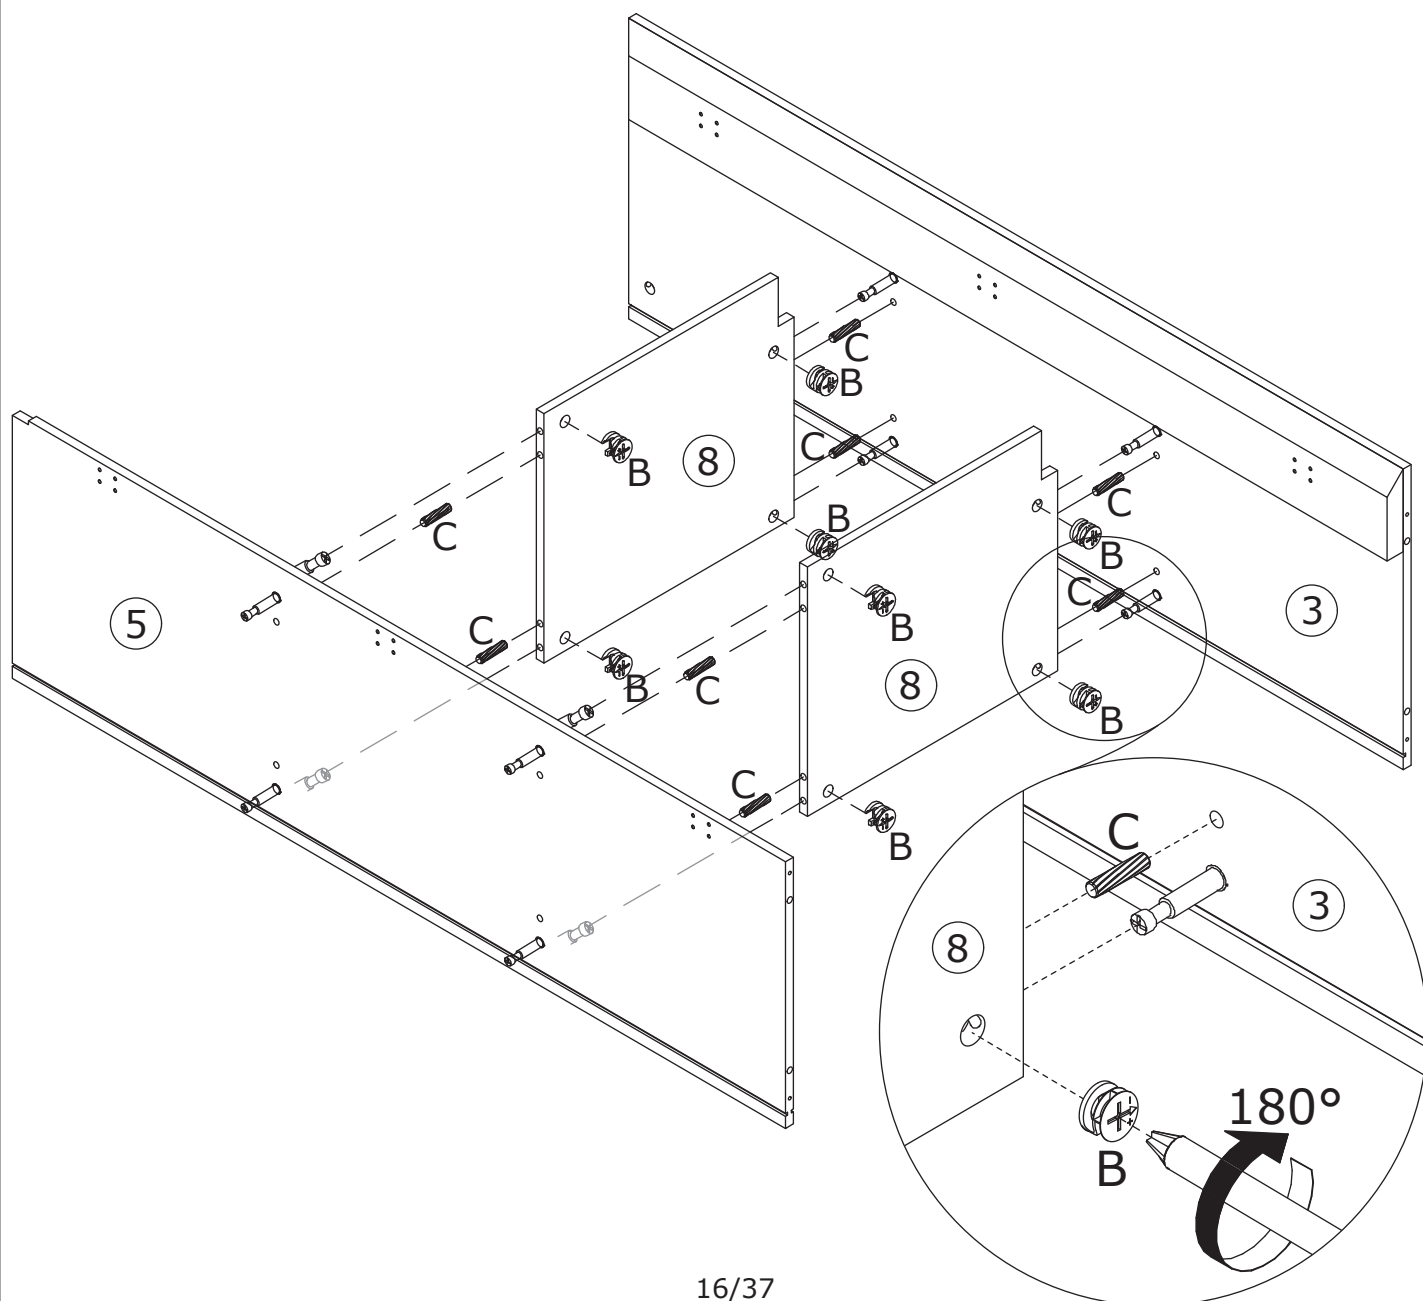

13

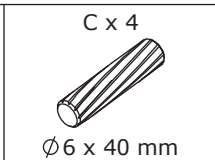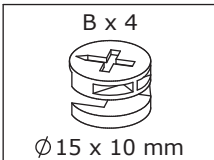  


  Insert the wooden tenons (C) into board 6 as shown.
Connect board 6 to board 5 with eccentric wheel B and lock it as shown.


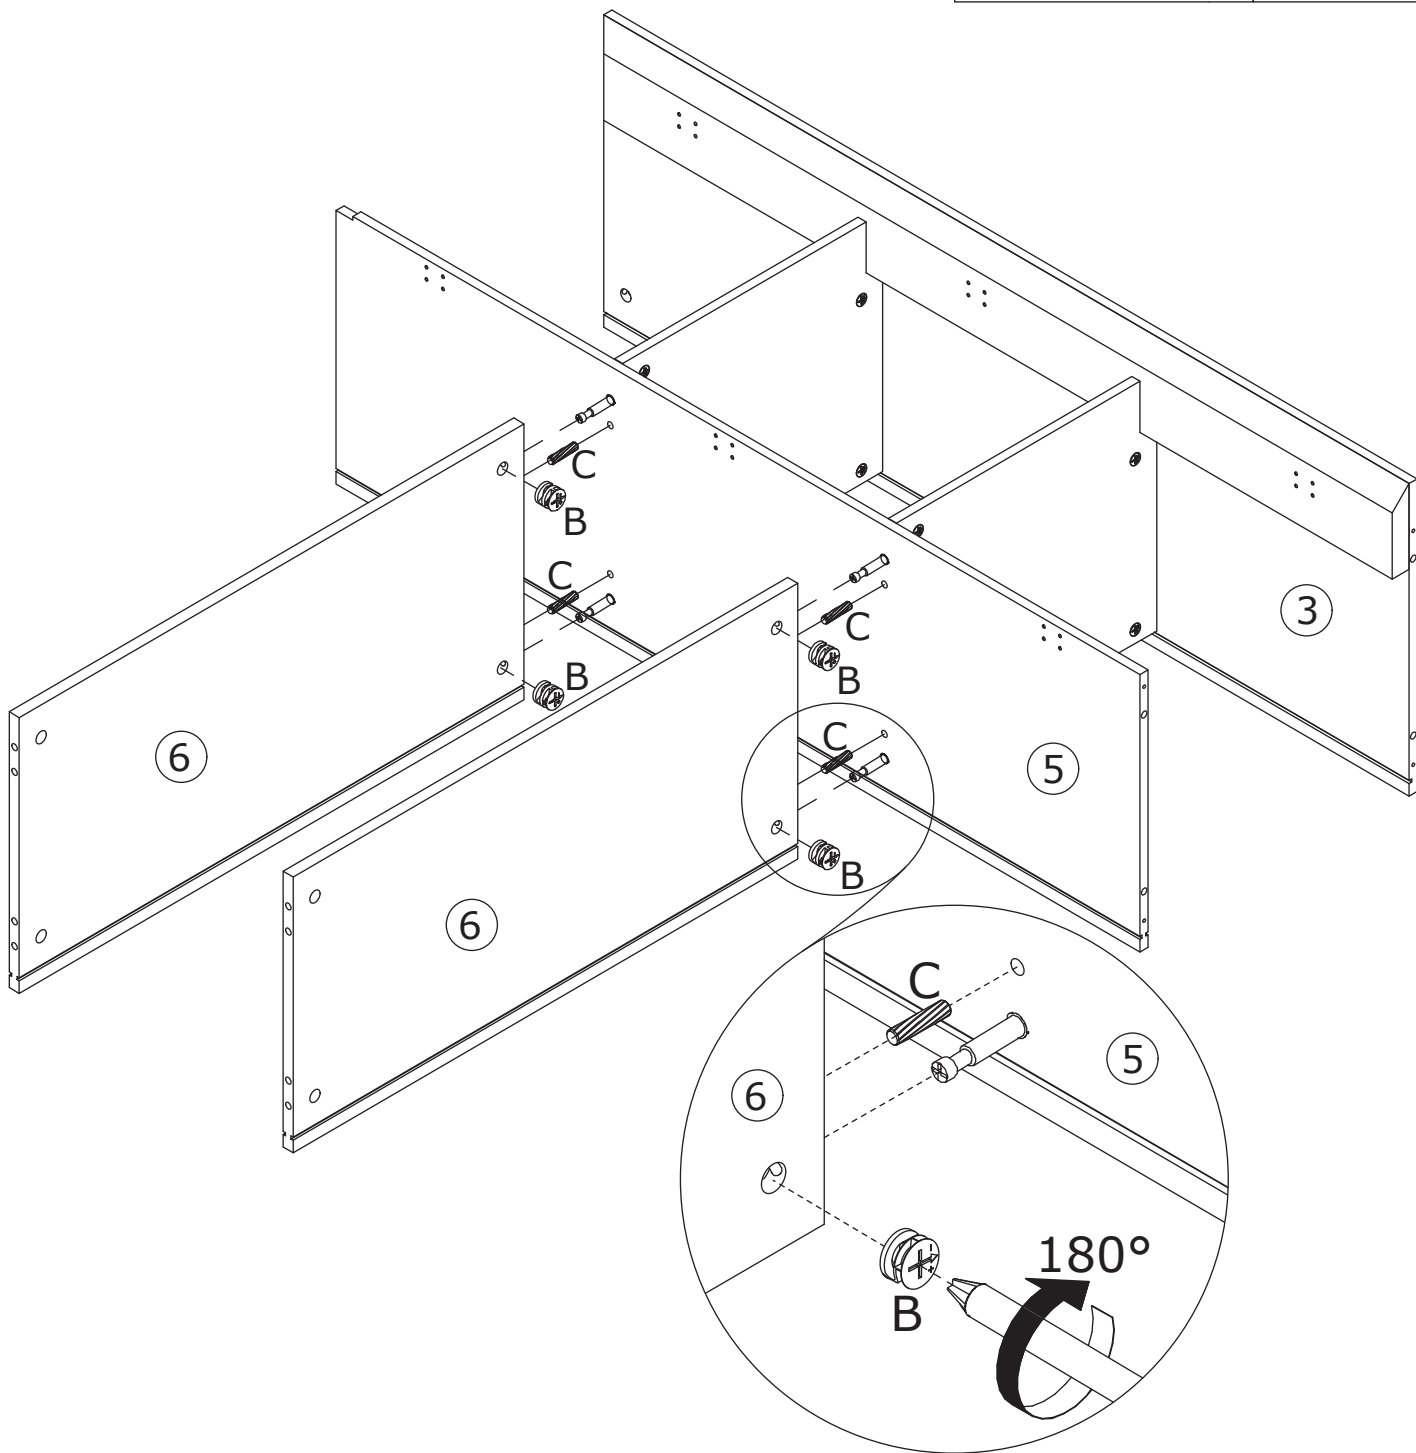
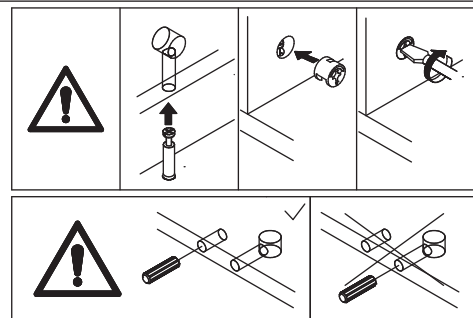


14


 
Insert board 28 into available slots as shown.

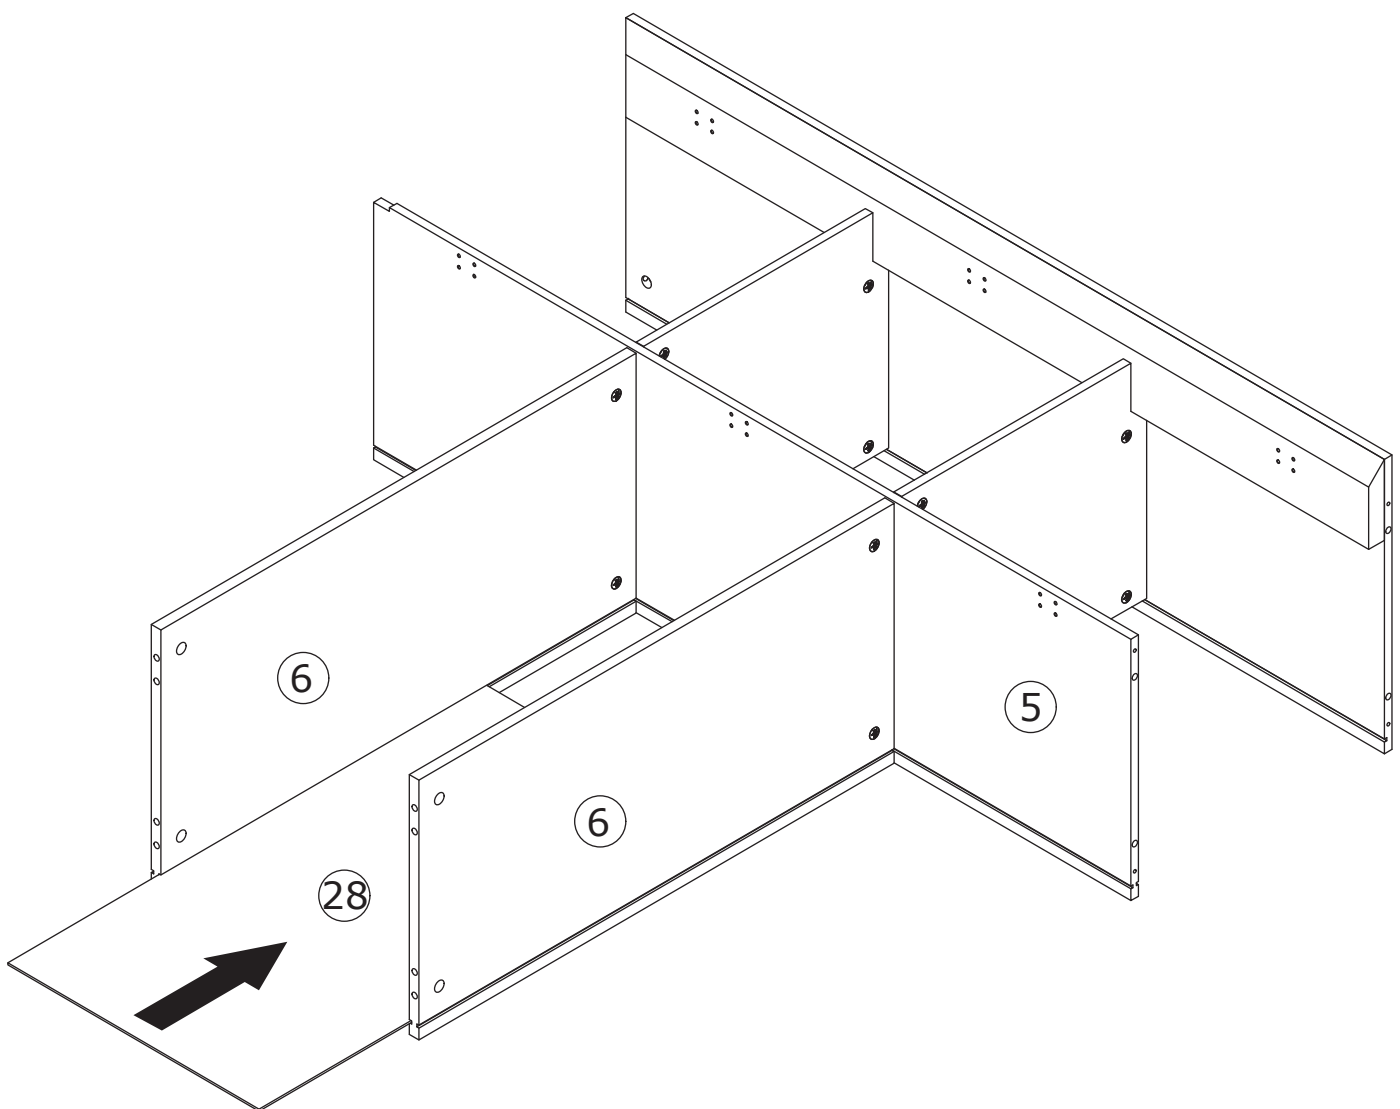

15

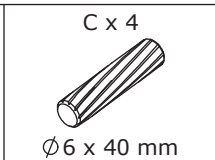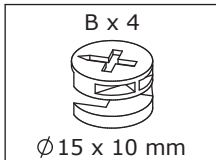   

  Insert the wooden tenons (C) into board 6 as shown.
Connect board 6 to board 4 with eccentric wheel B and lock it as shown.

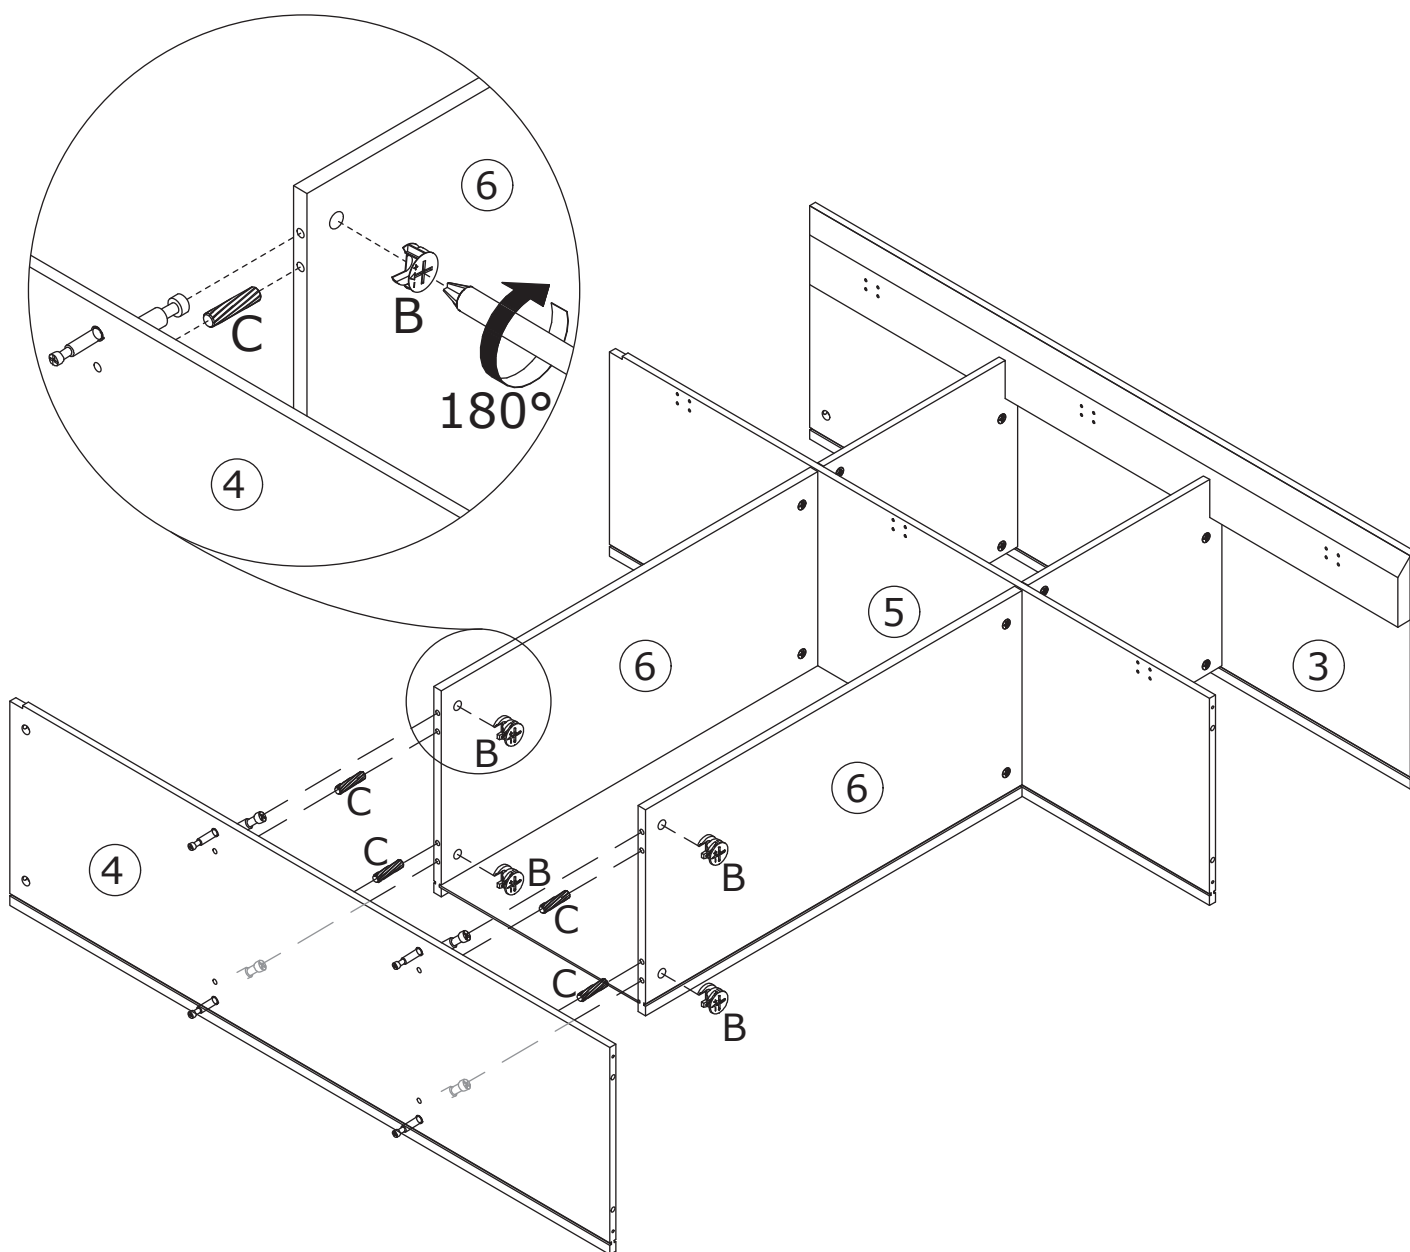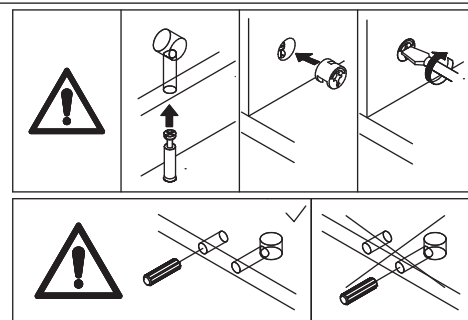


16

B x 8




Ø 15 x 10 mm

 C x 8





Ø 6 x 40 mm

 


Insert the wooden tenons (C) into board 7 as shown.

  Connect board 7 to board 2 and 4 with eccentric wheel B, and lock them as shown.

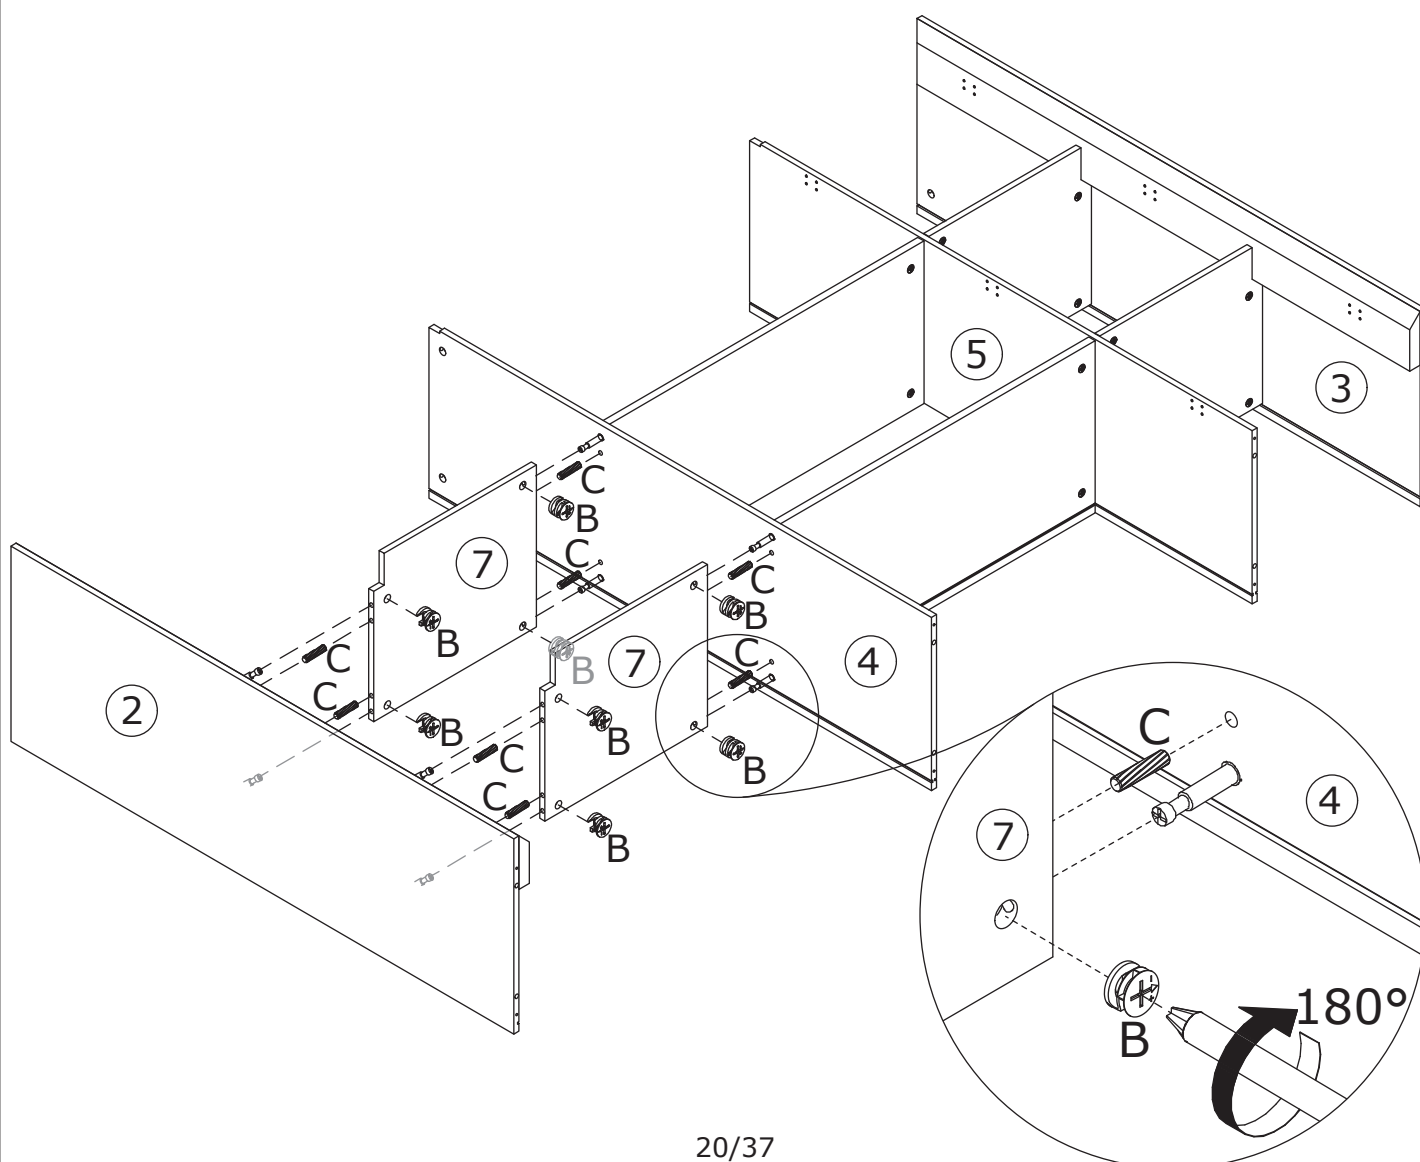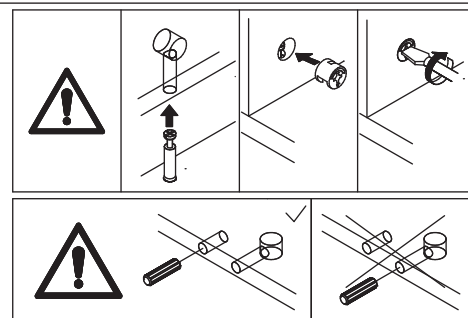


17

 Insert back board 28 into available slots as shown.

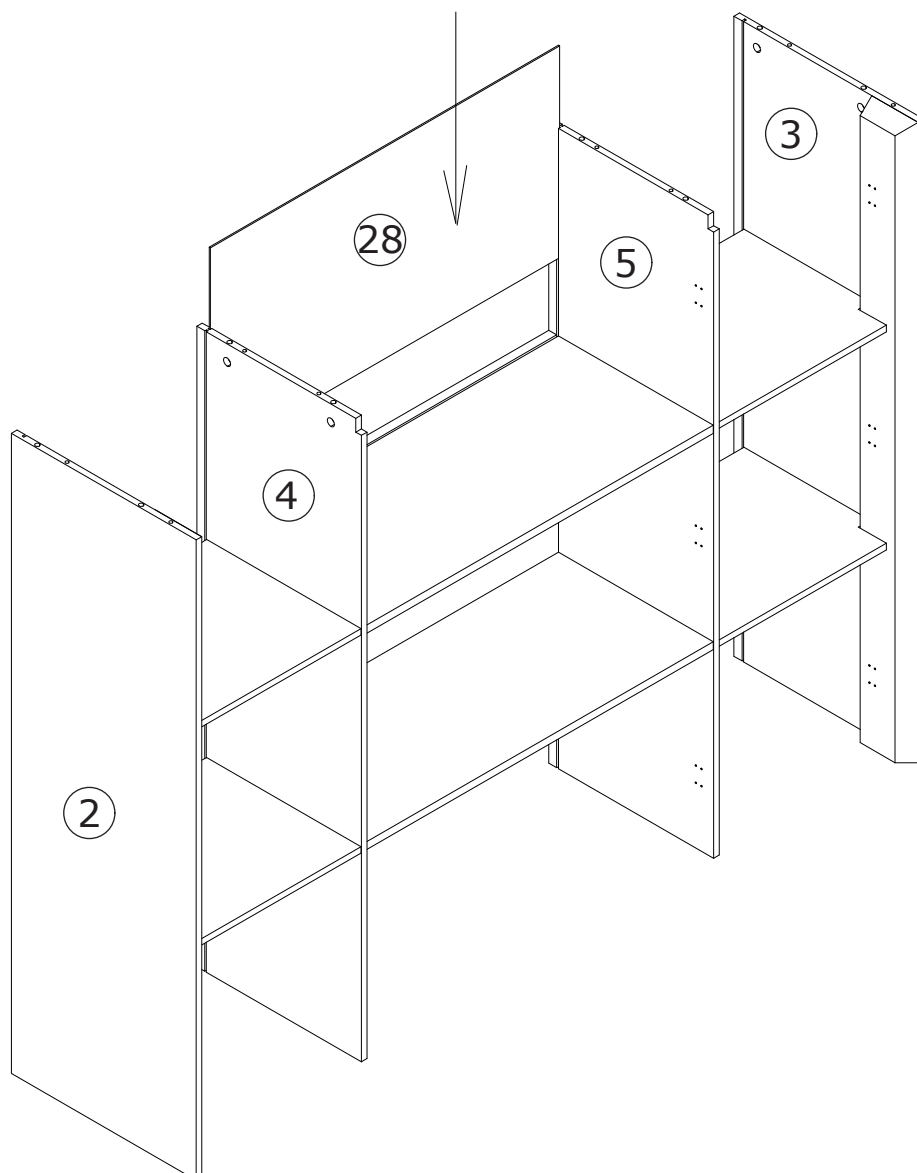



18

 A x 8

 Ø 5 x 42 mm

K x 2

  

J x 4

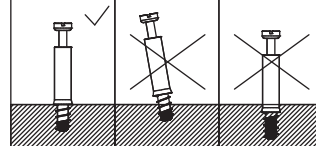 Ø 3.5 x 12 mm



Lock the positioning rod A to board 1.

 Use screw J to secure anti collapse iron plate K to board 1.

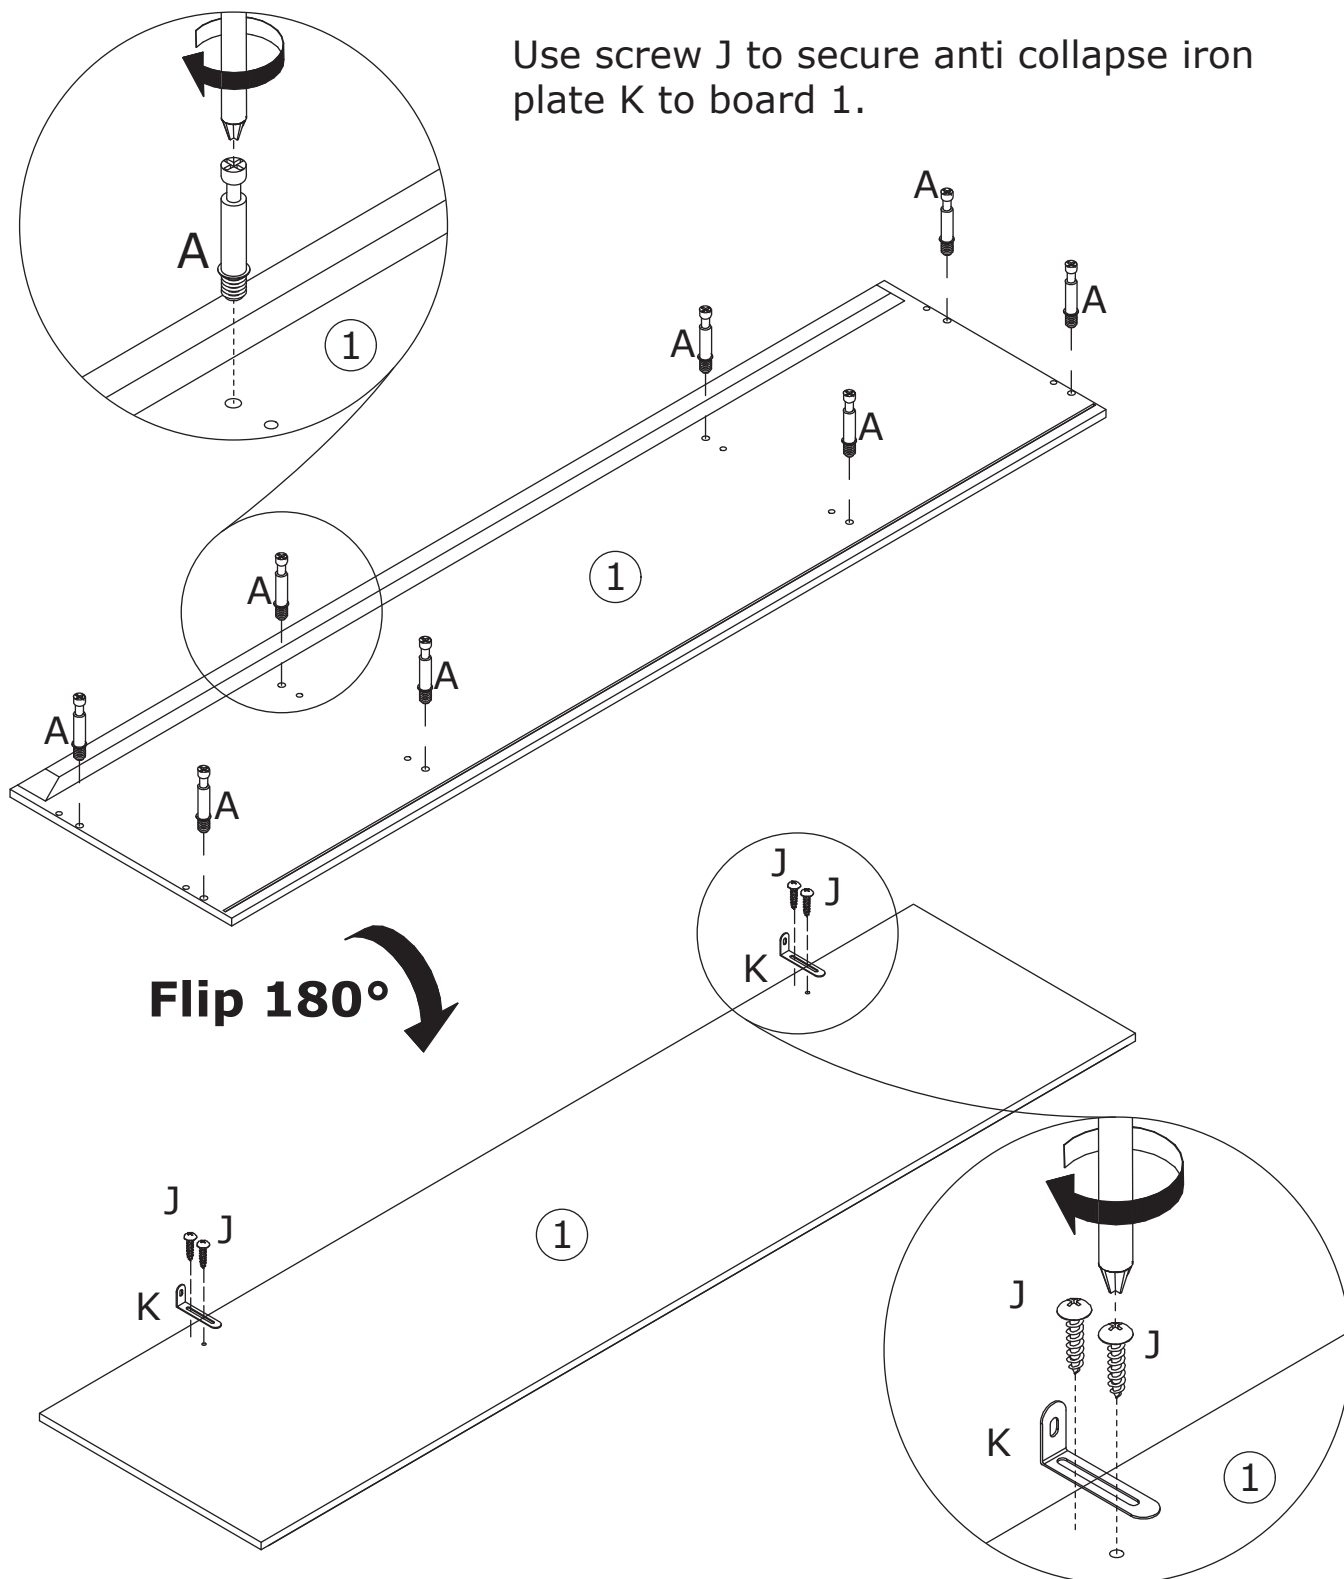


19

B x 8




Ø 15 x 10 mm

 C x 8






Ø 6 x 40 mm

 


Insert the wooden tenons C into boards 2, 3, 4 and 5 as shown.

   Connect board 2, 3, 4, and 5 to board 1 using eccentric wheel B and lock them as shown.

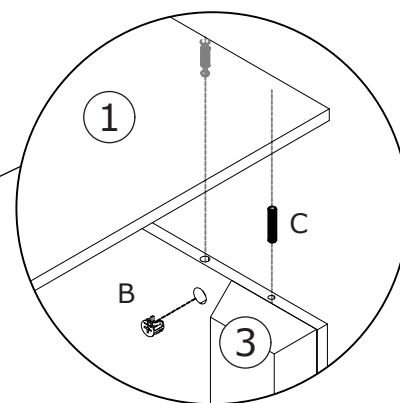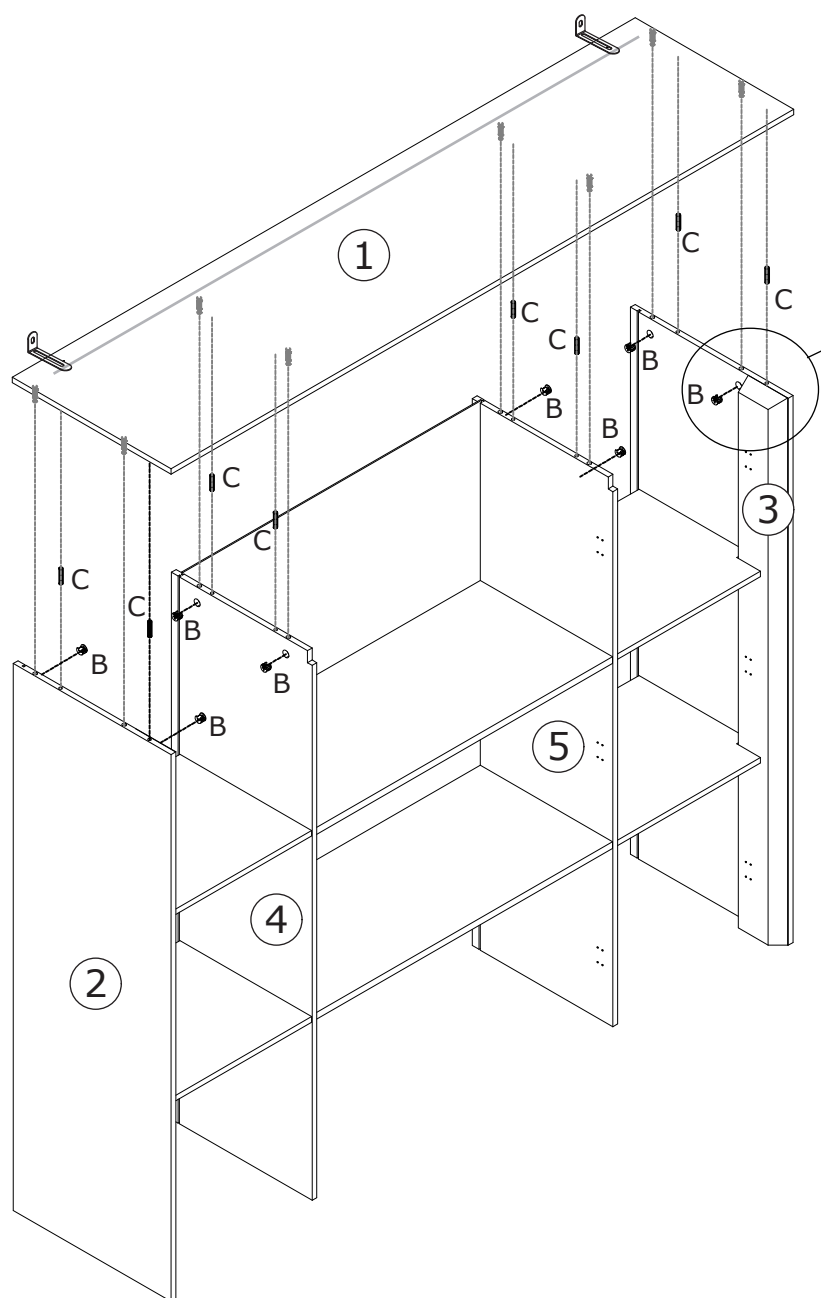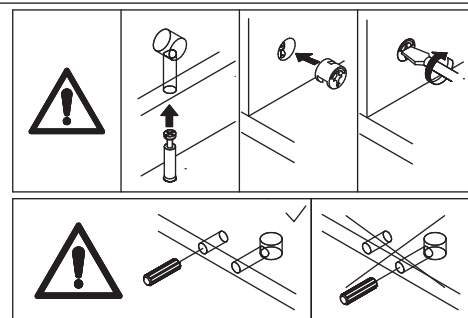



20

 Insert back board 27 and 28 into available slots as shown.

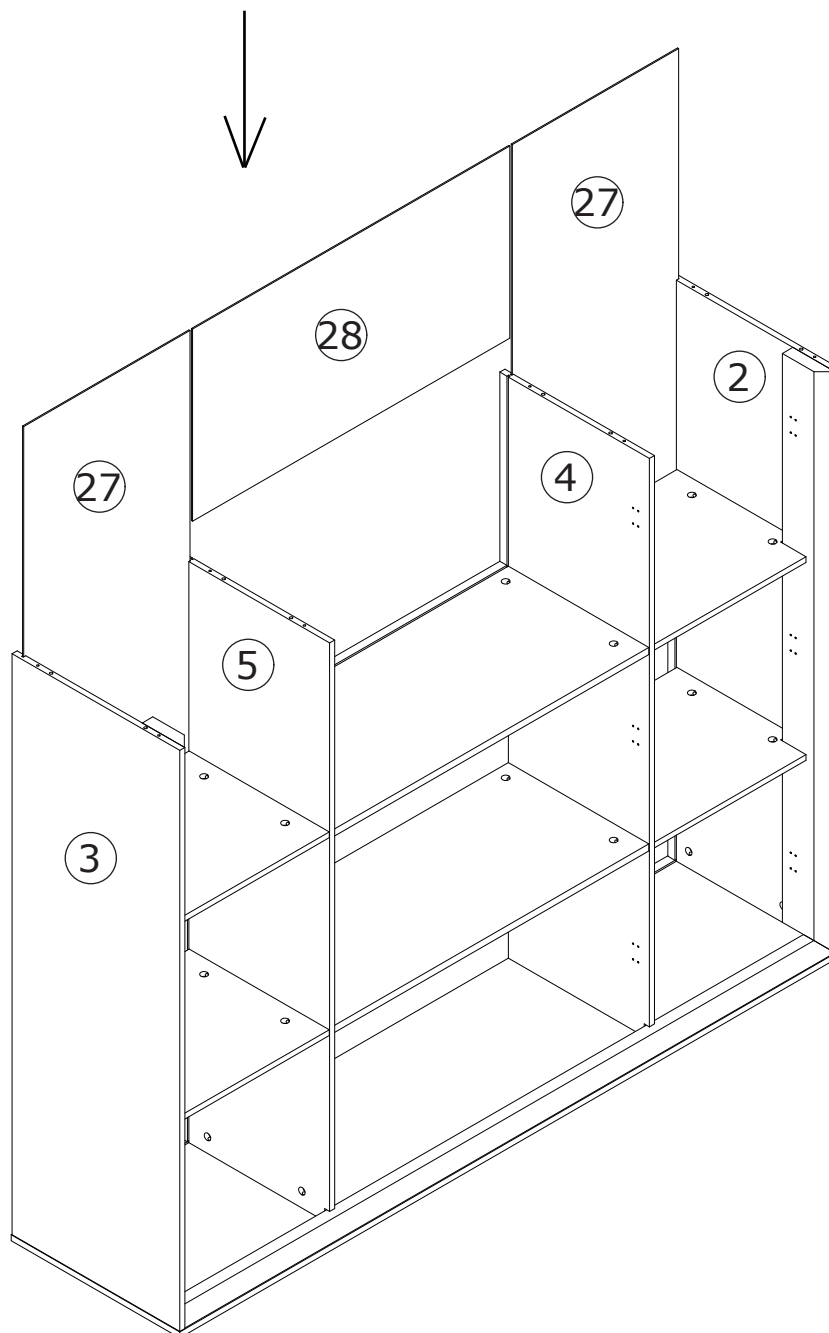


21

 
A x 8  Ø 5 x 42 mm	K x 2 	J x 4  Ø 3.5 x 12 mm	
---	--	---	---

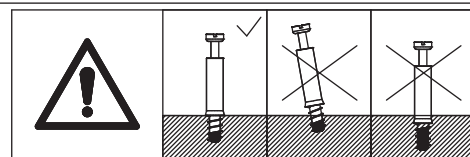 

 
Lock the positioning rod A to board 9 as shown.
Use screw J to secure anti collapse iron plate K to board 9 as shown.

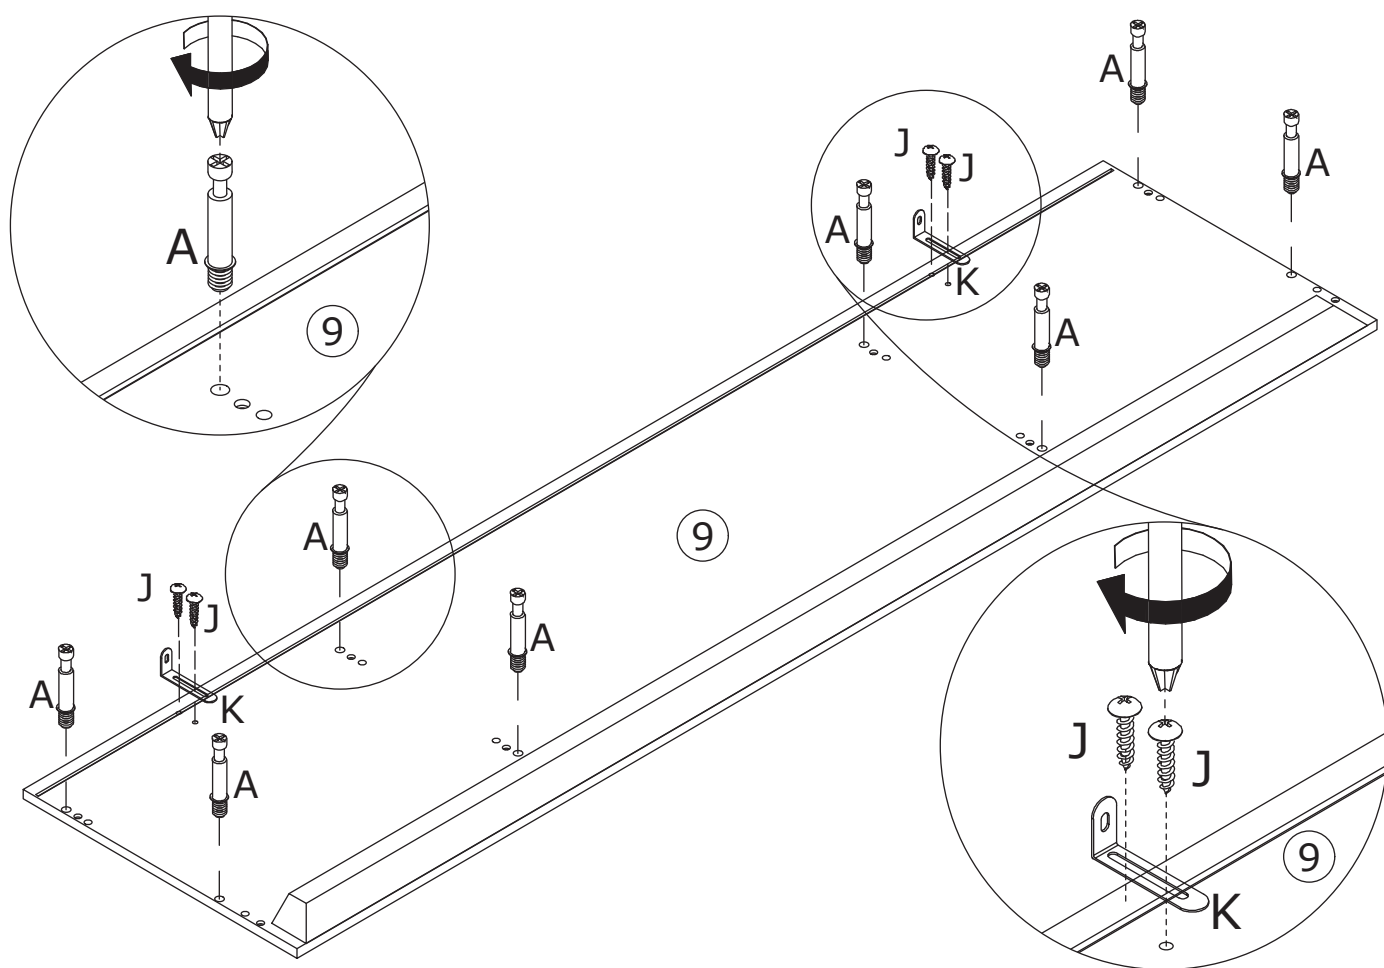

22

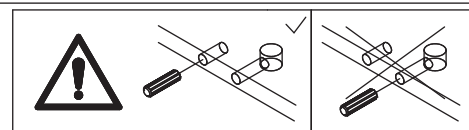 

 Insert the wooden tenons G into boards 2, 3, 4, and 5 as shown.
Connect board 9 to boards 2, 3, 4, and 5 using screw D as shown.

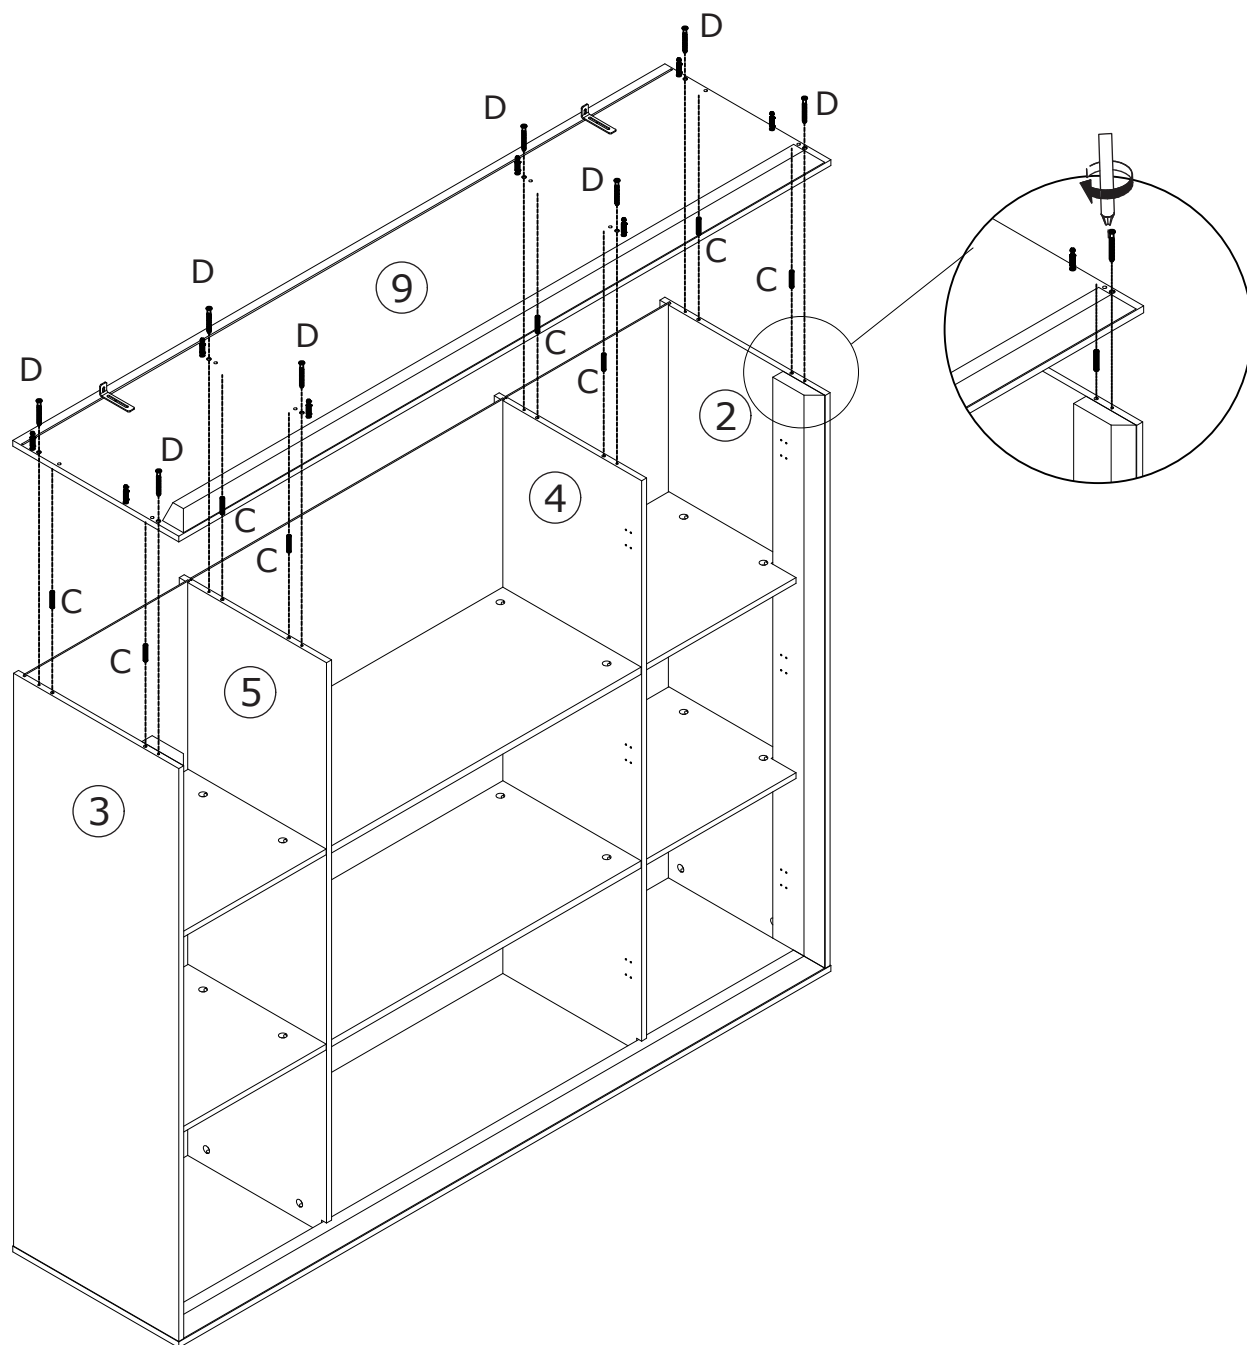

23

B x 8

 


Ø 15 x 10 mm

C x 8





Ø 6 x 40 mm



Insert the wooden tenons C into boards 10, 11, 12, and 13 as shown.

  Connect boards 10, 11, 12, and 13 to board 9 using eccentric wheel B and lock them as shown.

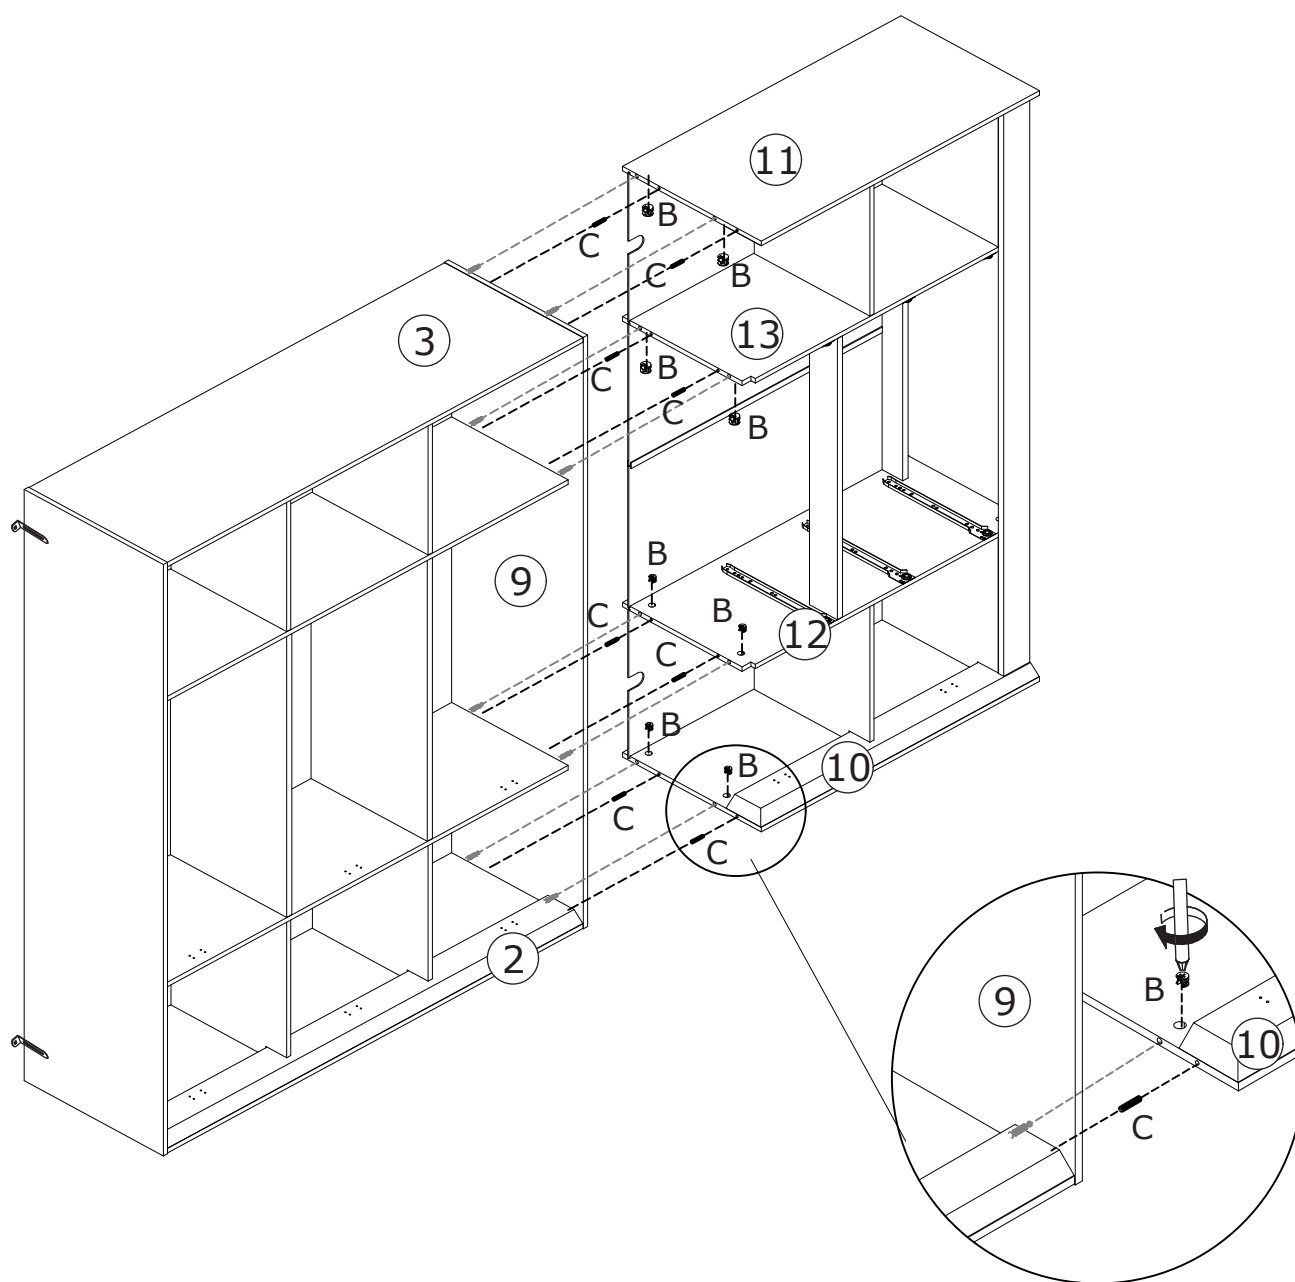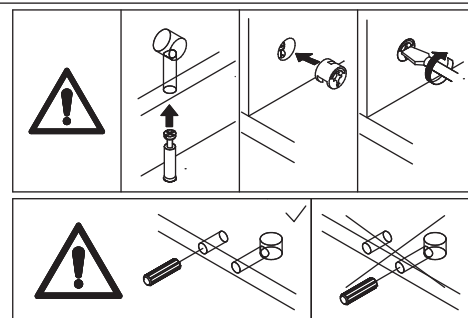

24

 
H x 38





N x 32



Ø 3.5 x 14 mm




  Use screw N to pass through the buckle H and lock the backboard and cabinet as shown.

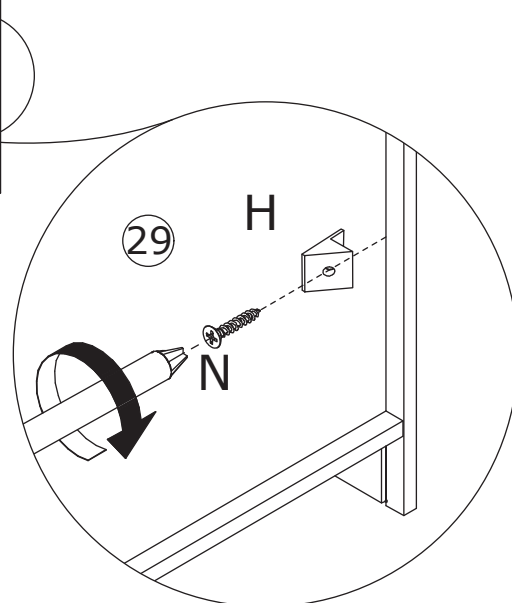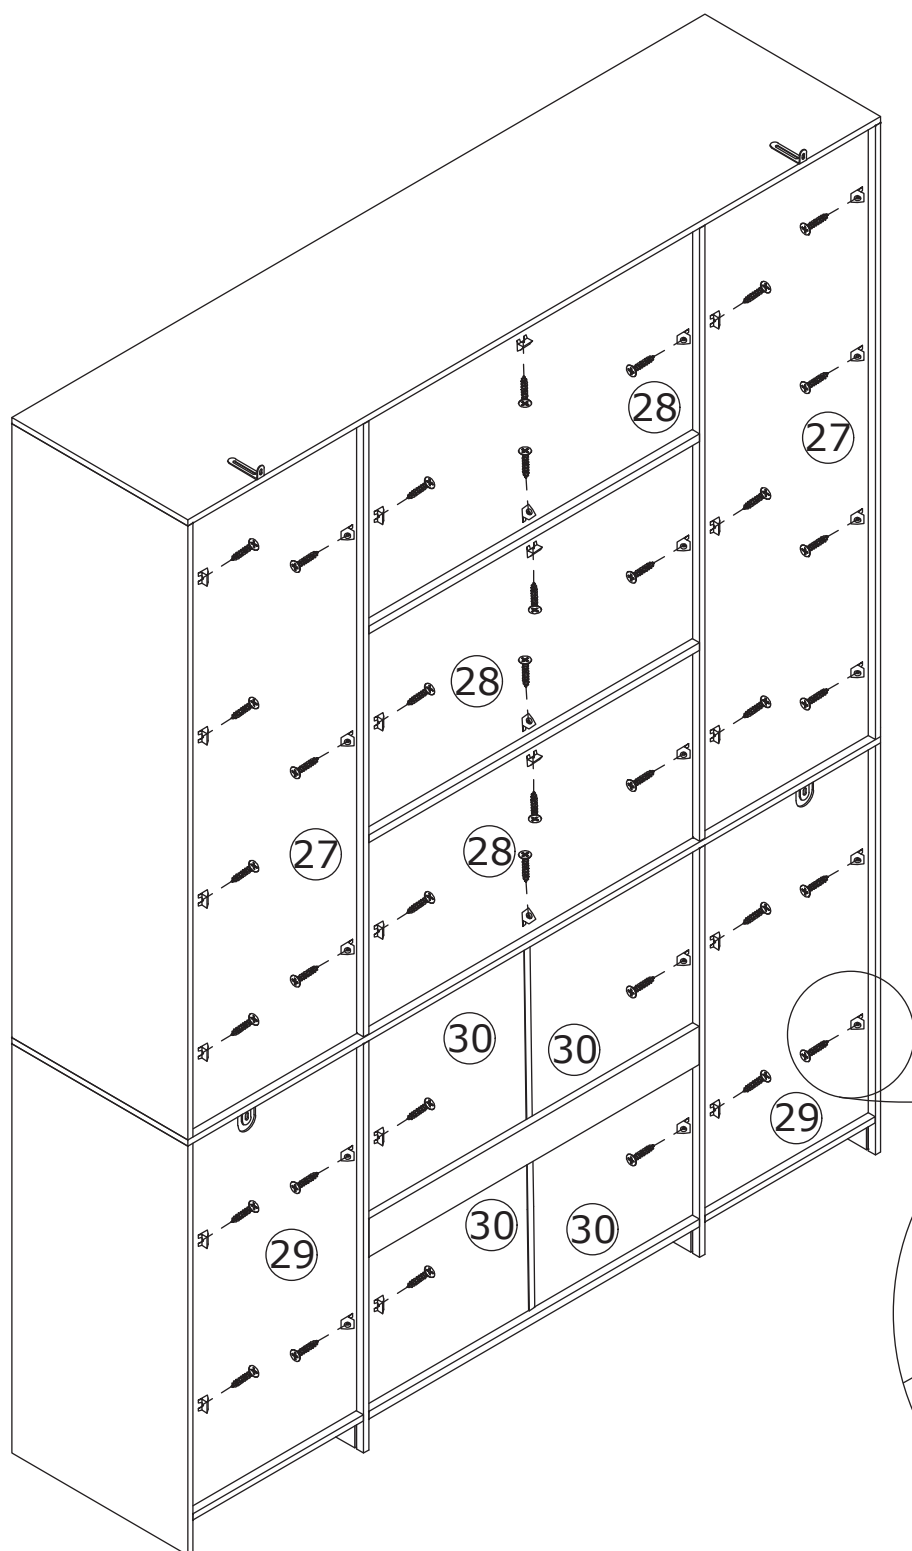

25

 
F x 2





J x 8



 Ø3.5 x 12 mm



  Use screws (J) to secure the iron plate F and fix it in the corresponding position.

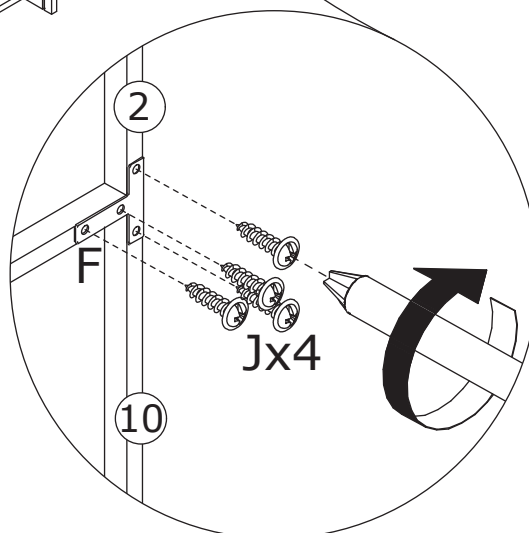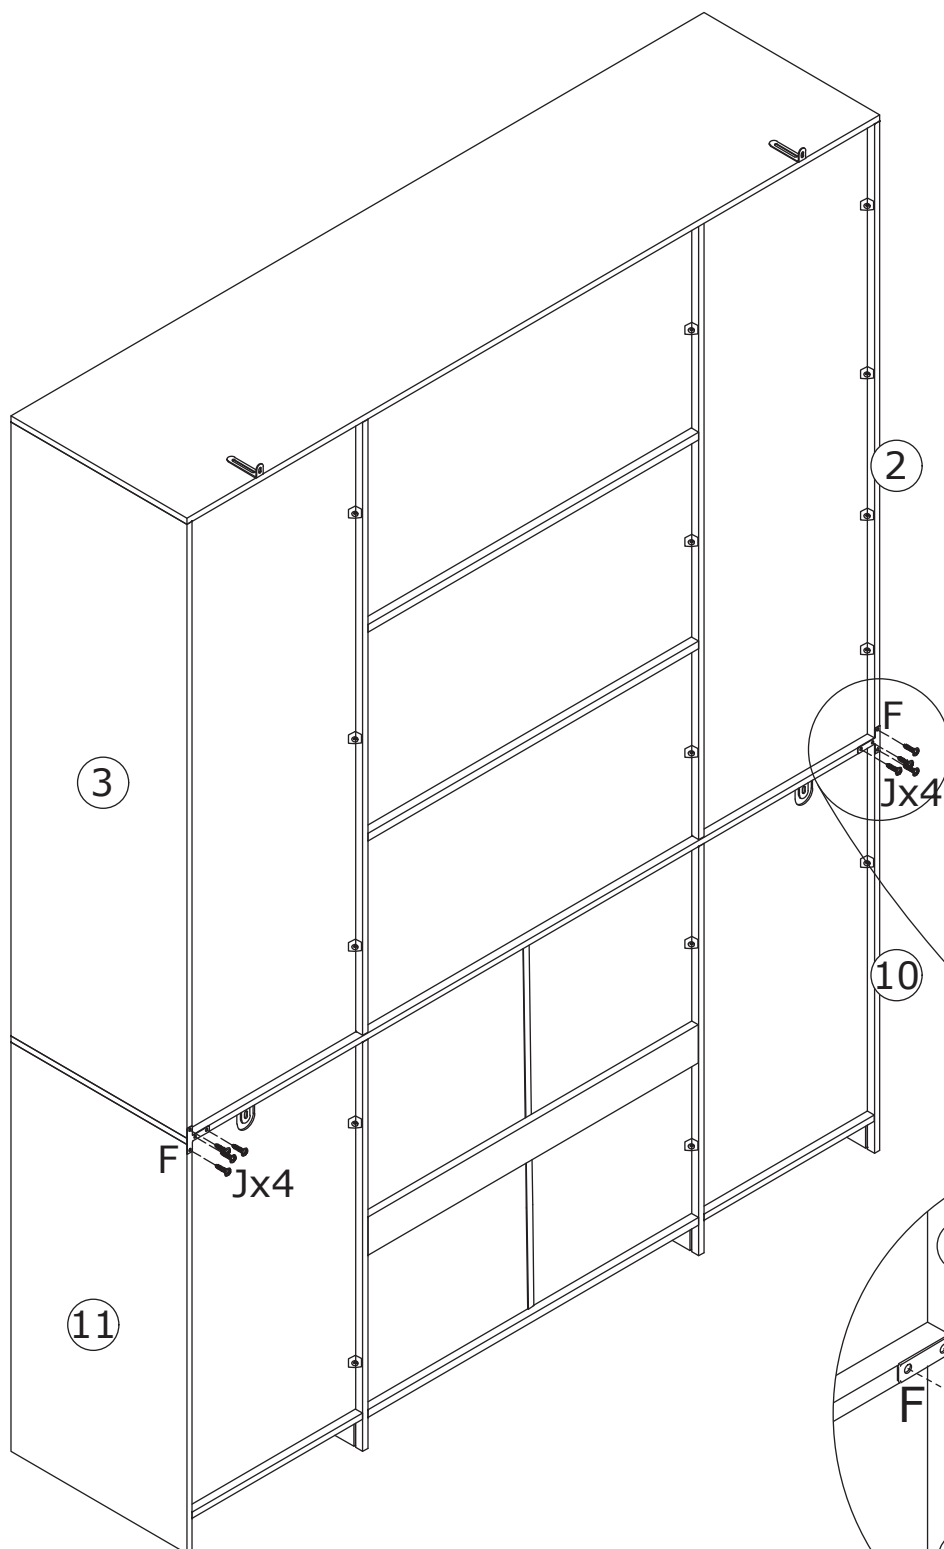


26


G x 6
G-1 x2
G-2
Ø4 x 20 mm

L x 16

 N x 32
Ø3.5 x 14 mm




 Use screw N to secure hinge L to boards 25 and 26 as shown.
Secure handle G to boards 25 and 26 as shown.


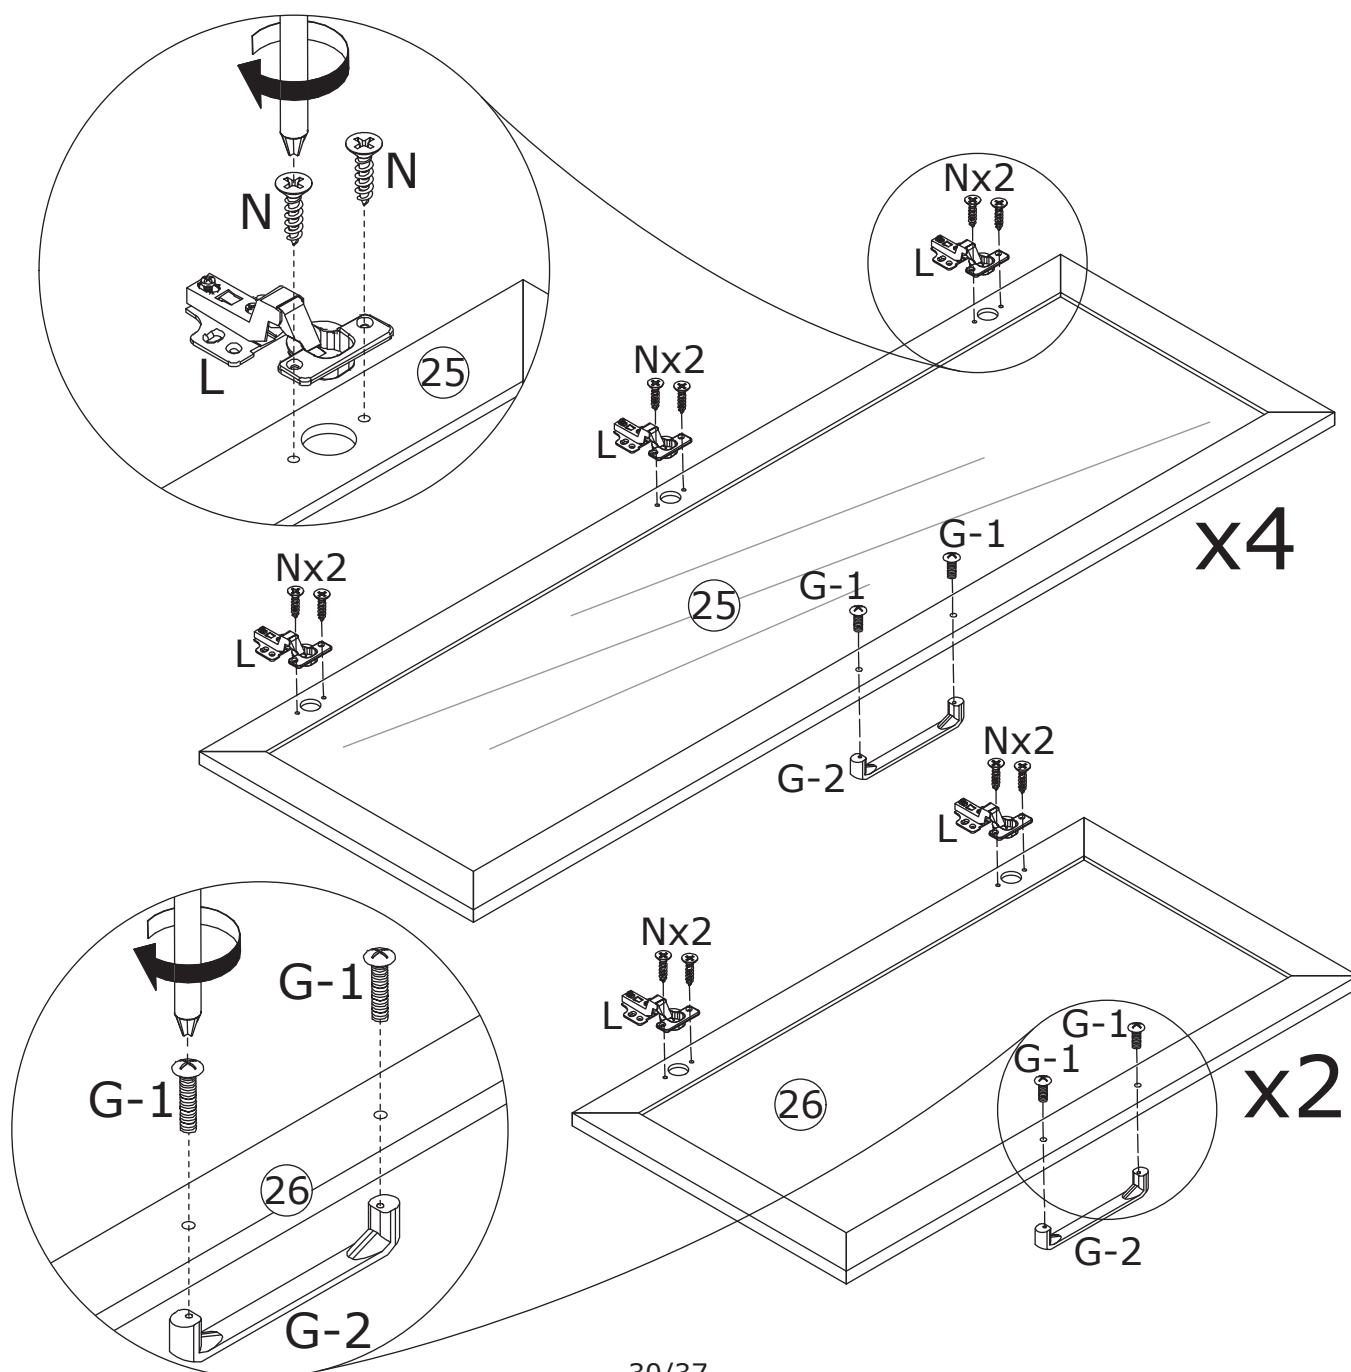


27


 
D x 15









Ø5 x 40 mm

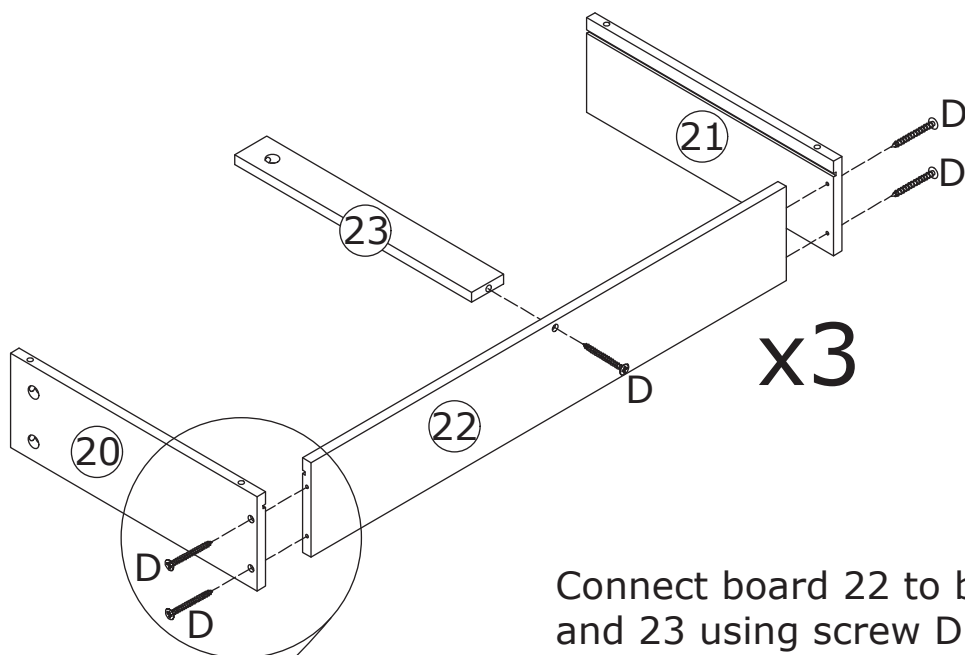  

  Connect board 22 to boards 20, 21, and 23 using screw D as shown. Insert board 24 along the slots as shown.

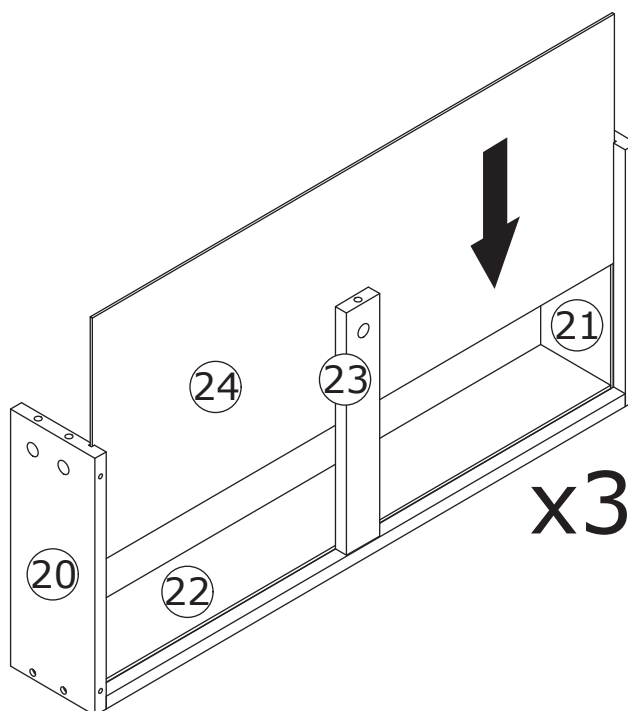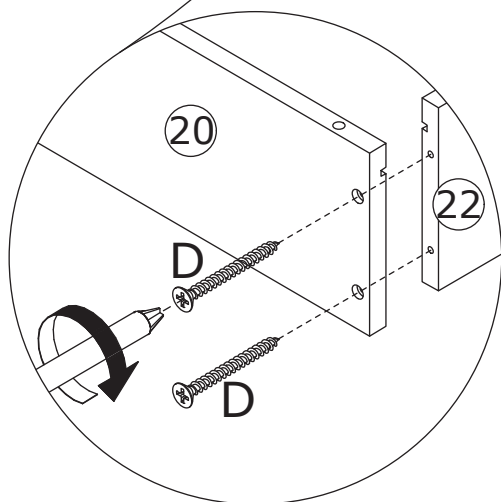


28

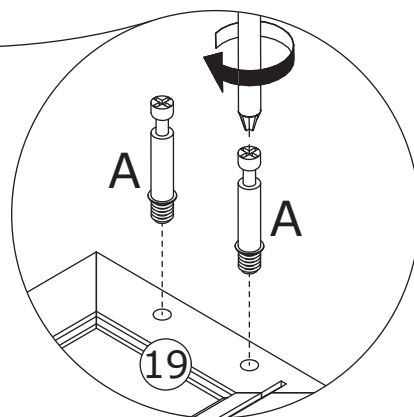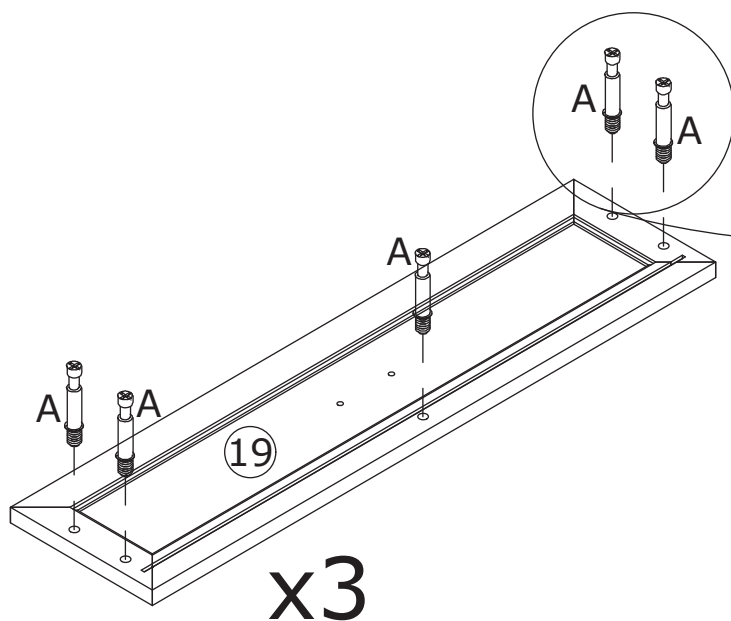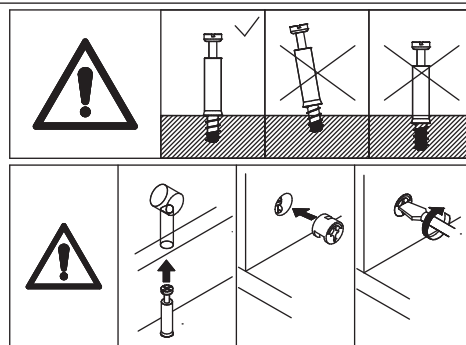    
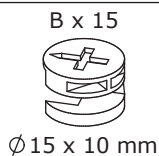 
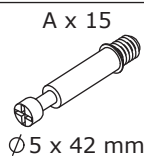 


Lock the positioning rod A to board 19 as shown.




 
Attach board 19 to boards 20, 21, and 23 using eccentric wheel B and lock them as shown.

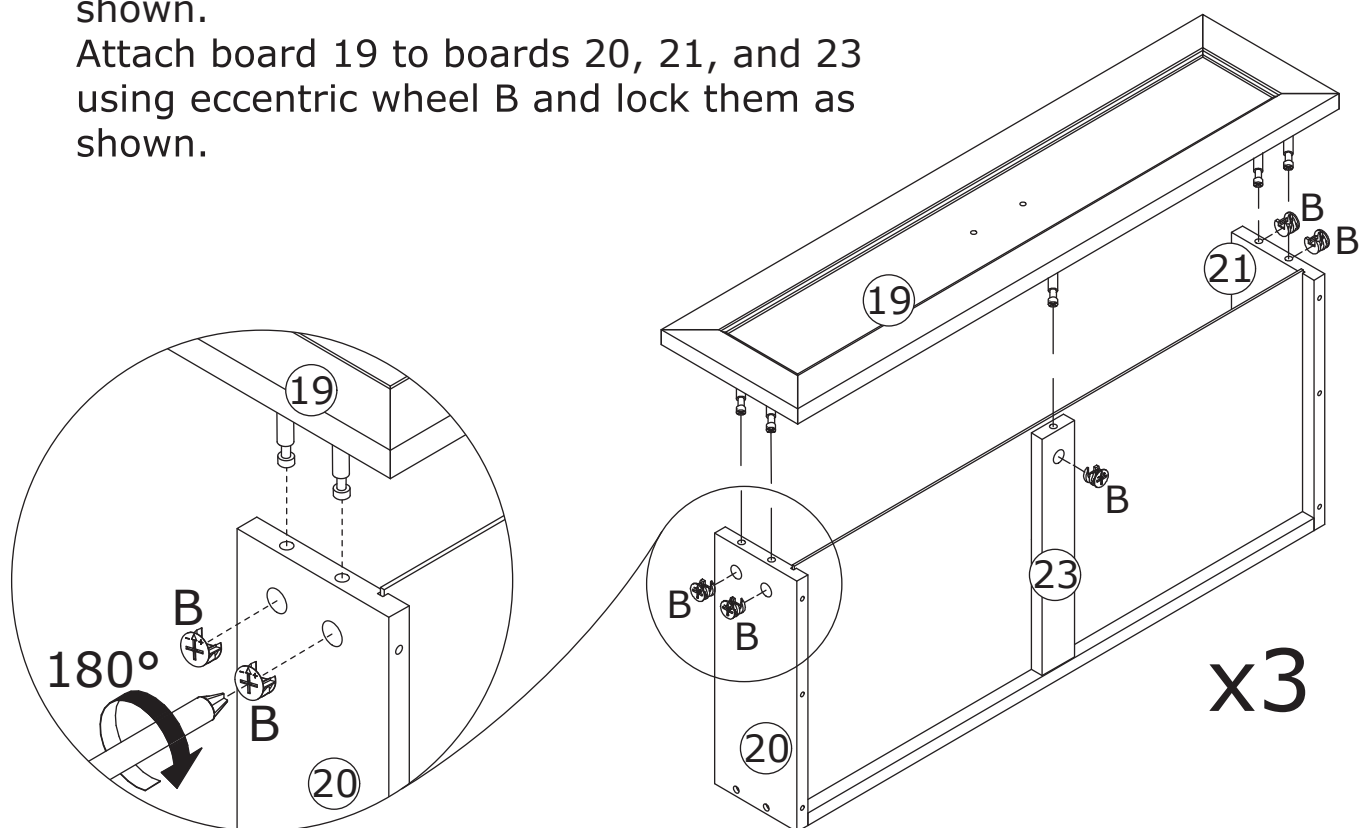













29

   E x 12  Ø 3.5 x 12 mm	P x 3 P-1 x2  P-2  Ø 4 x 8 mm	DL x 3  DL 300 mm	DR x 3  DR 300 mm	
--	---	---	--	---

    Secure handle P to board 19.
Use screw E to lock the slide rail DL and DR onto boards 20 and 21 as shown.

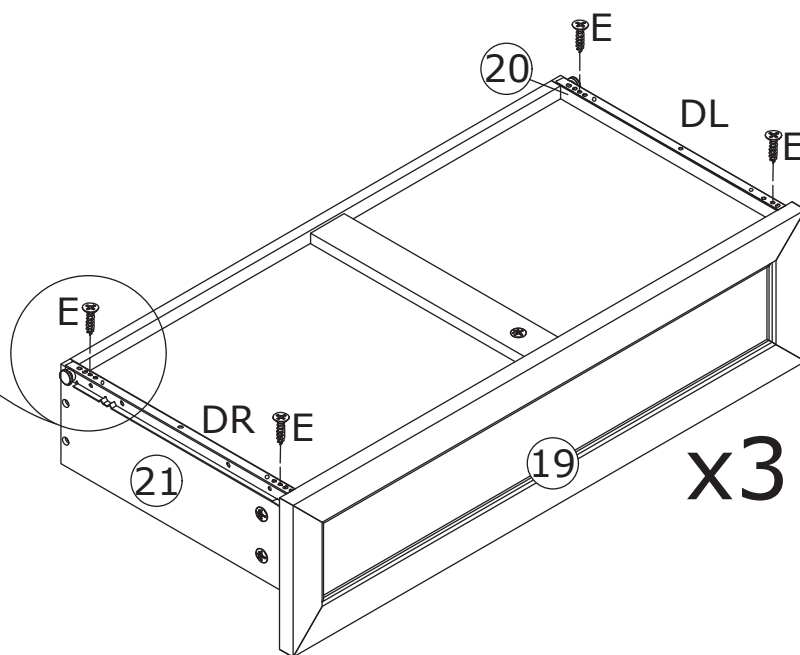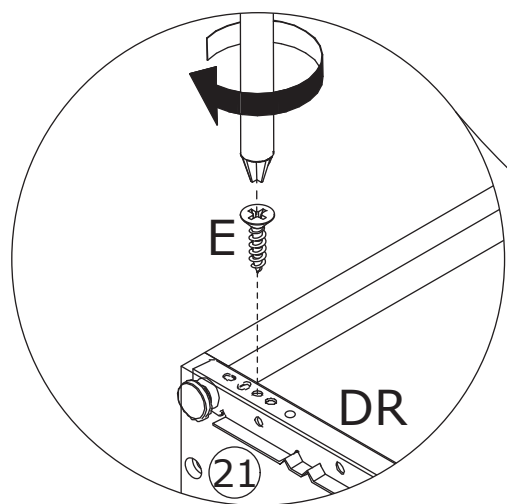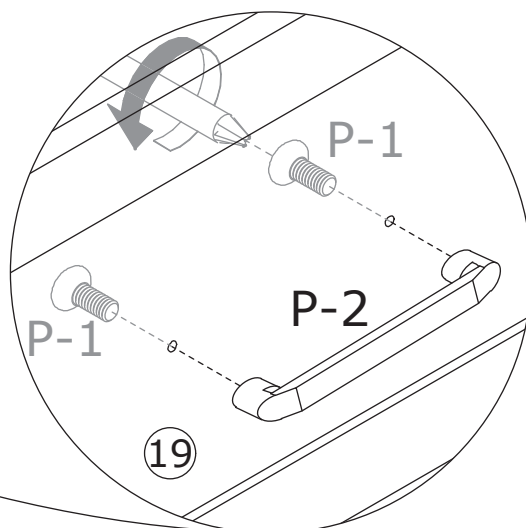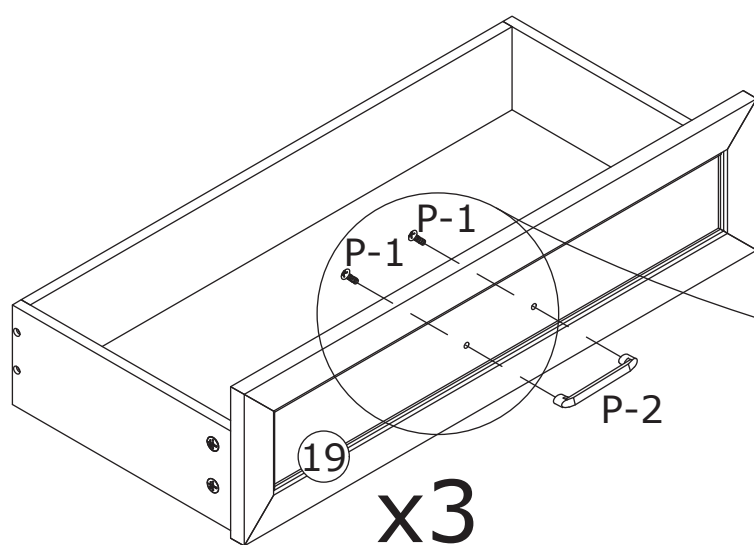

30

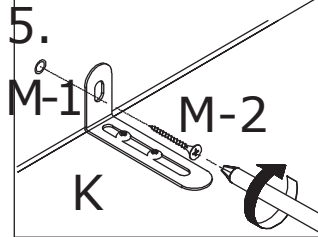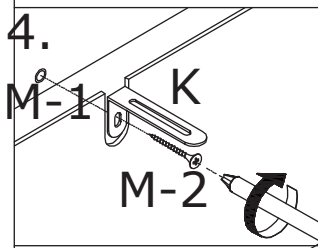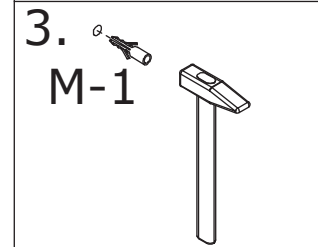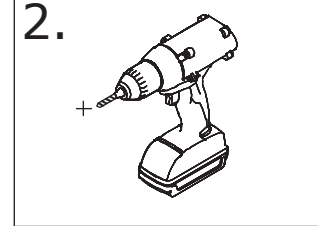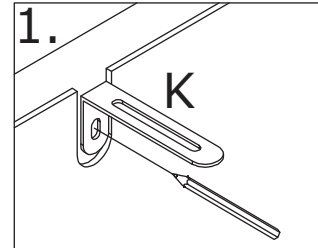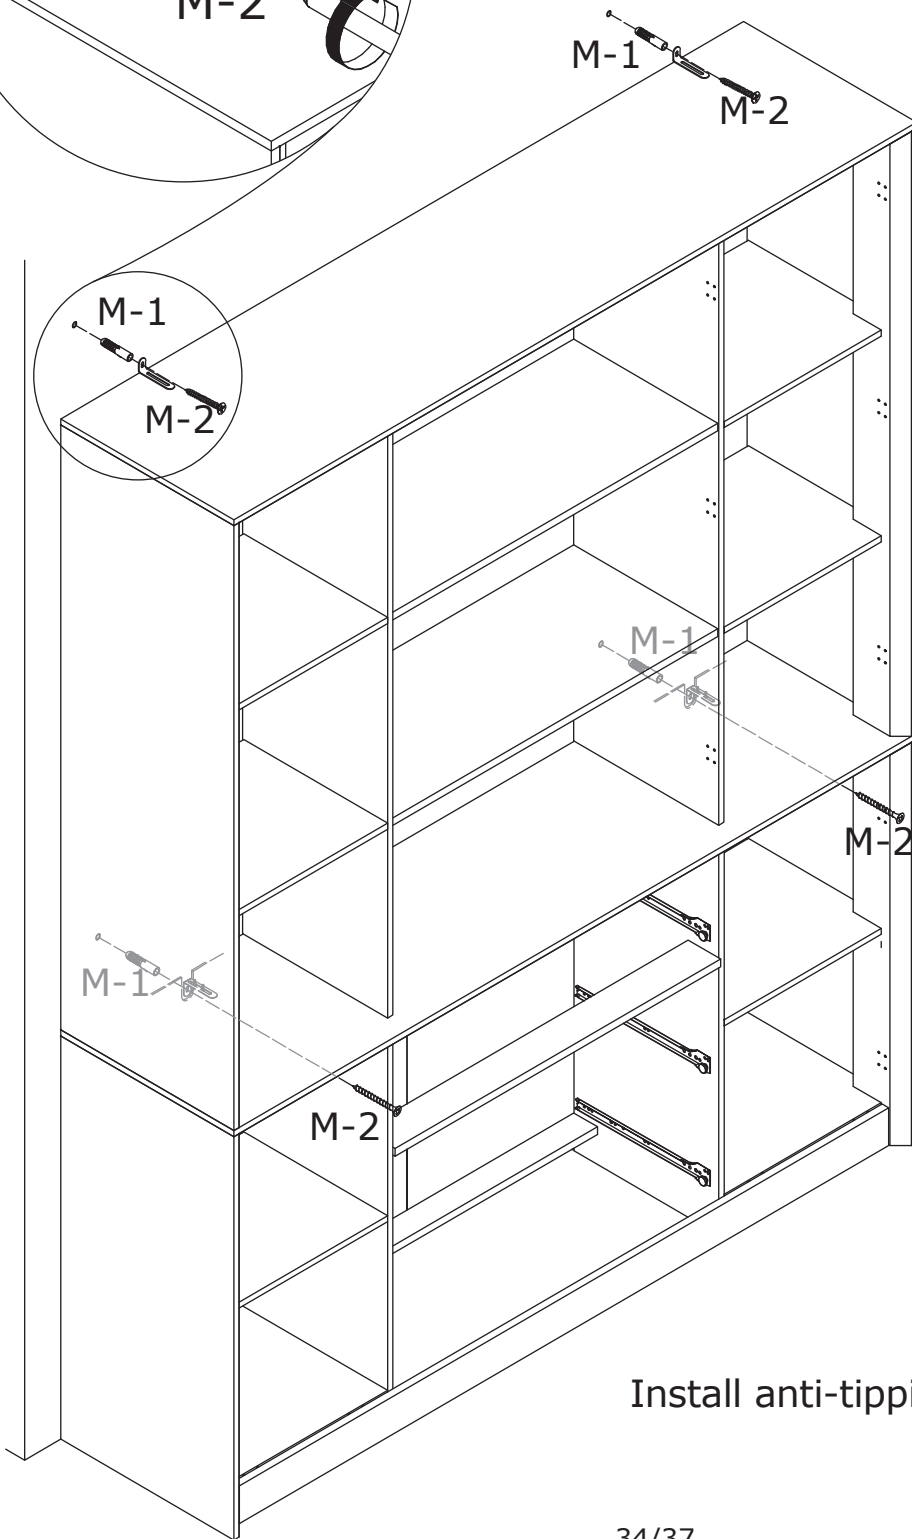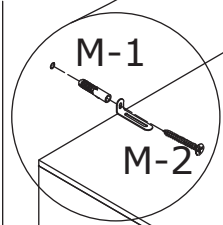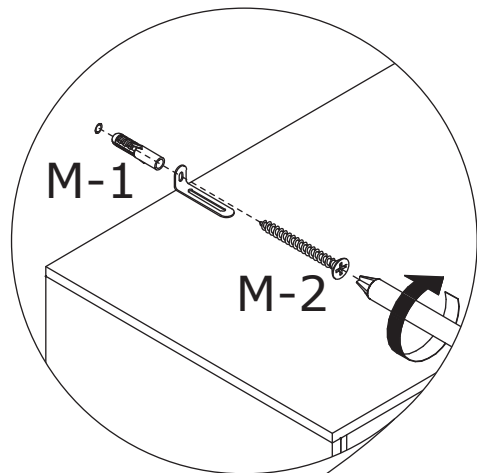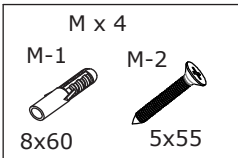            

Install anti-tipping device as shown.

31

N x 40

 


Ø 3.5 x 14 mm

E x 24




Ø 3.5 x 12 mm




Use screw N to lock door 25 to the corresponding positions on boards 2 and 3 as shown.


Use screws N to lock door 26 to the corresponding position on boards 10 and 11 as shown.

 Use screw E to lock door 25 to the corresponding positions on boards 4 and 5 as shown.


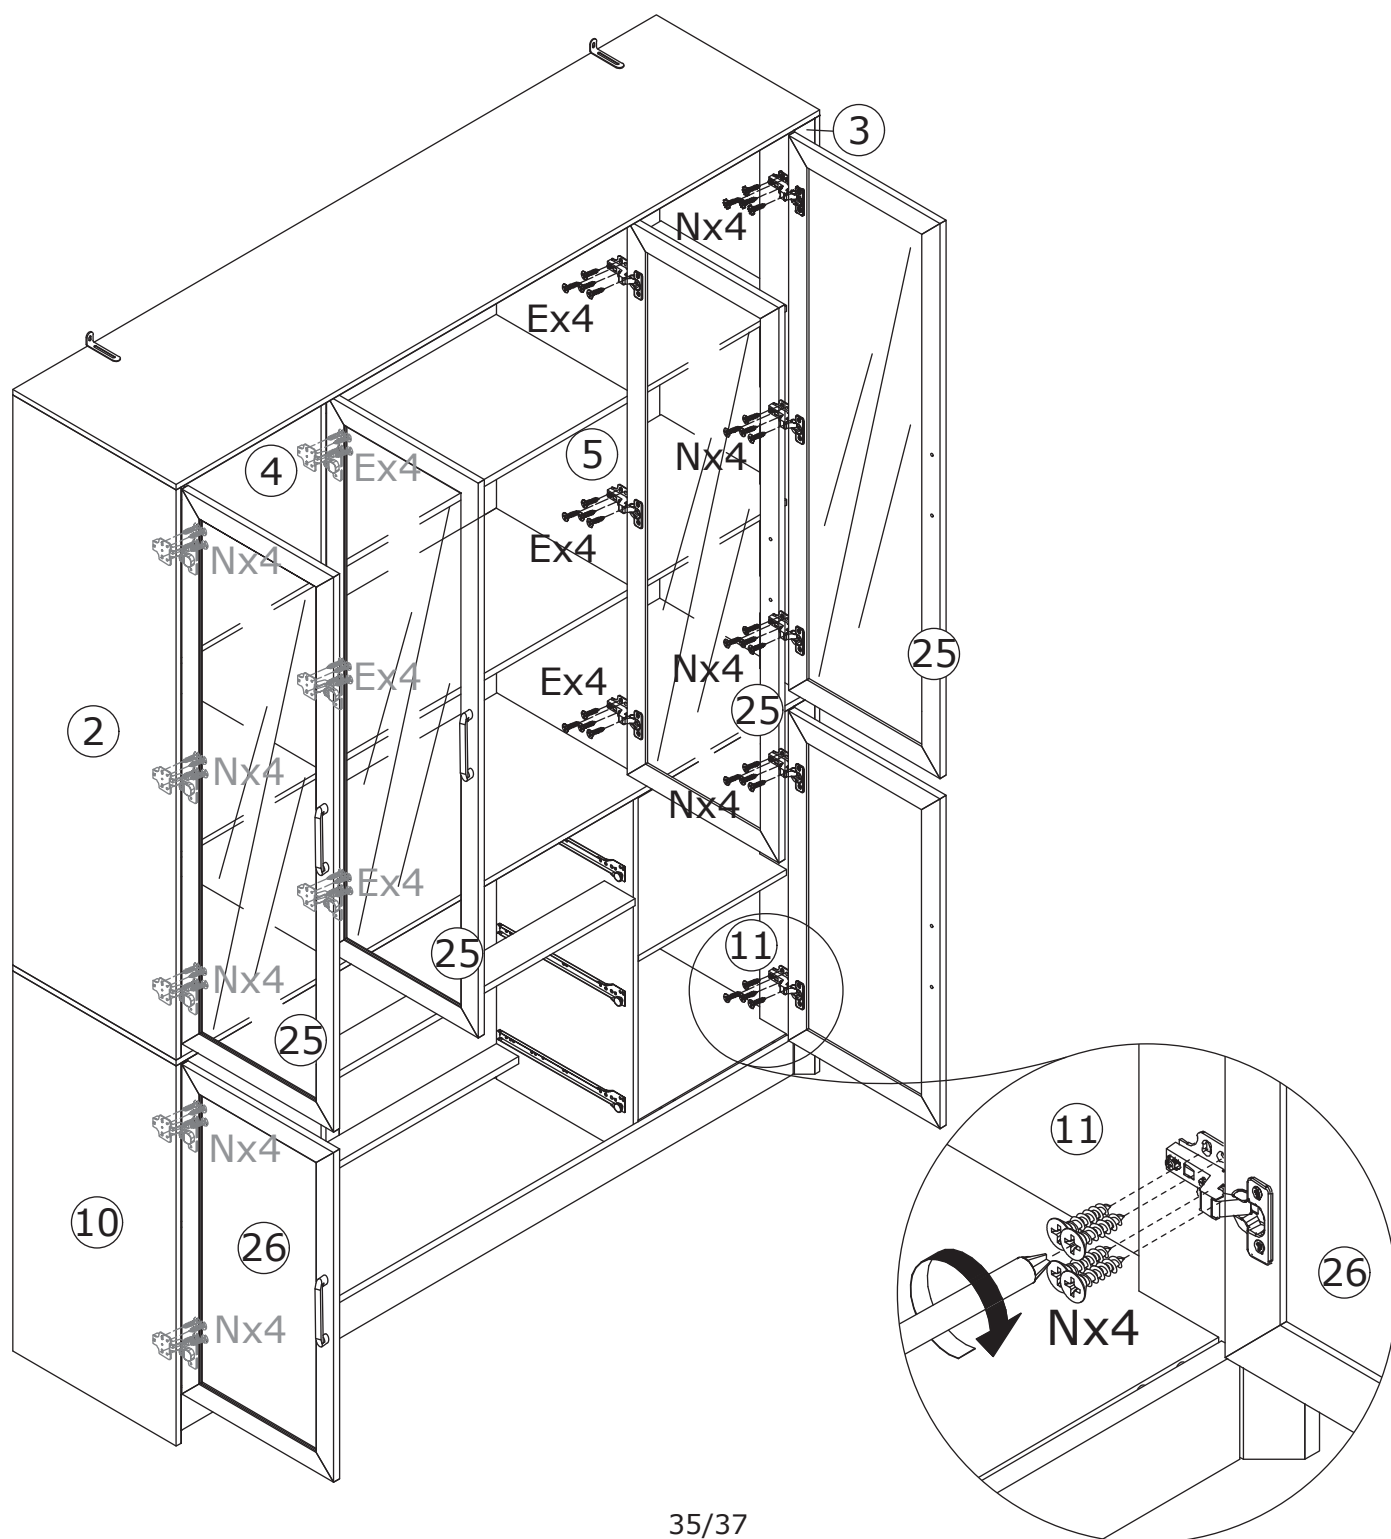


  Place the three drawers in the cabinet according to the position shown.

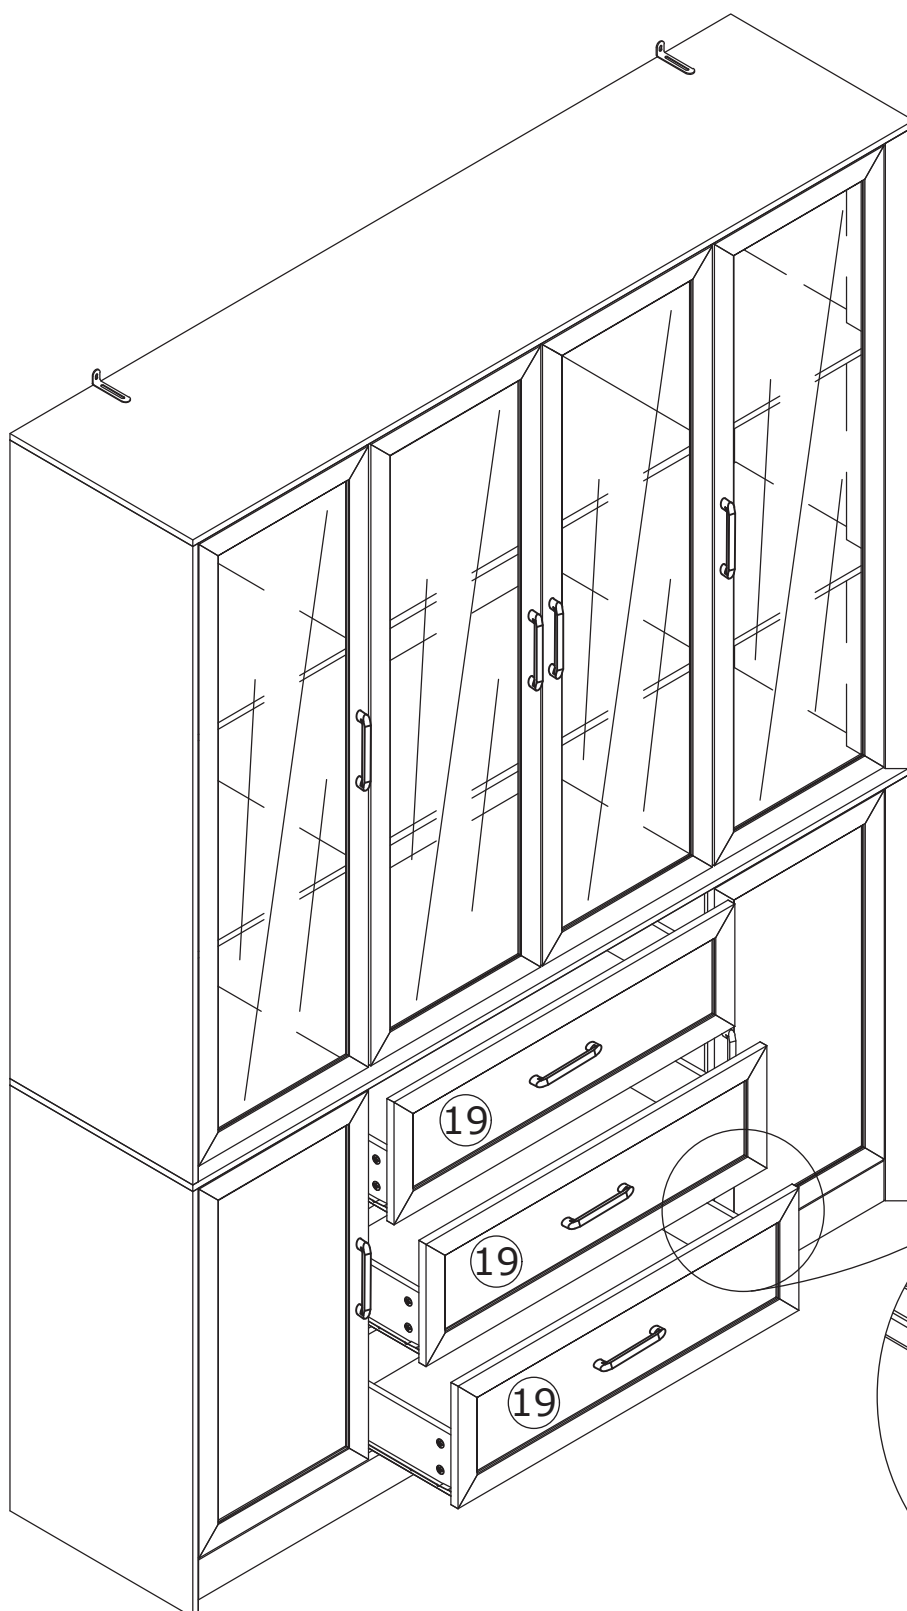




  
If doors are still not aligned if the hinges are assembled correctly.

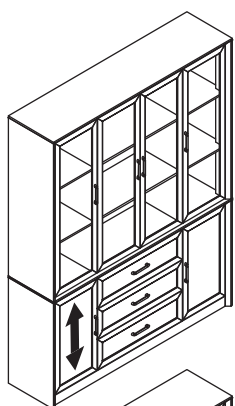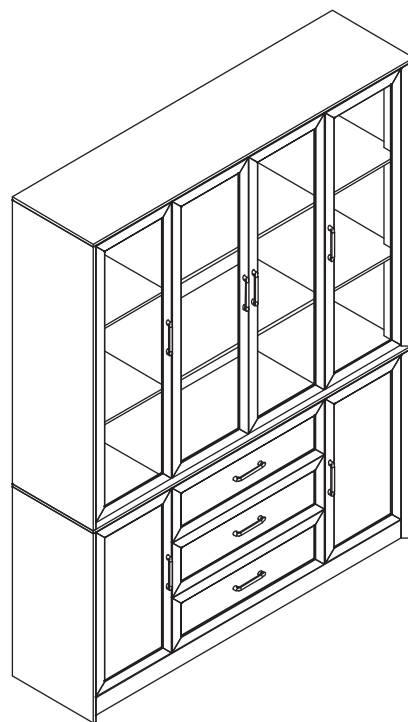



①

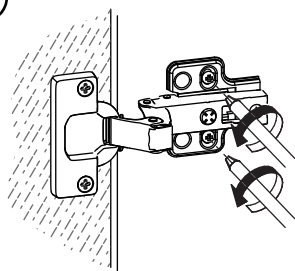 


②

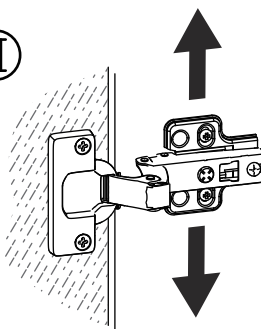 


③

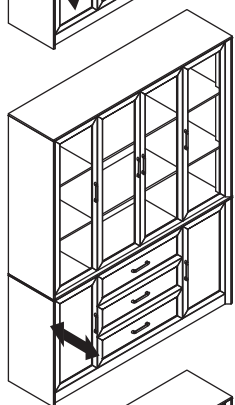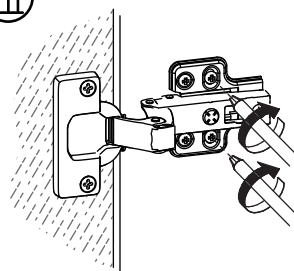  



①

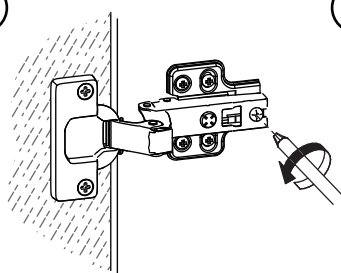 


②

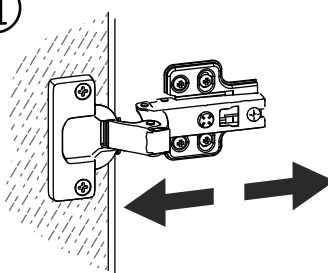 


③

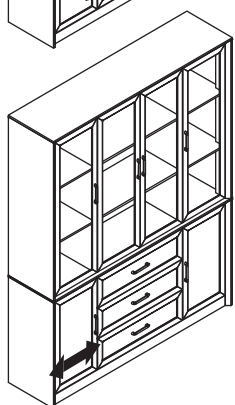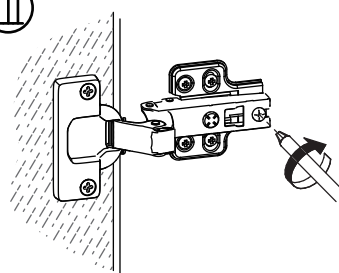  

①

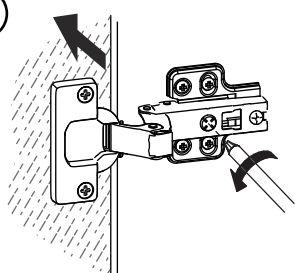 

②

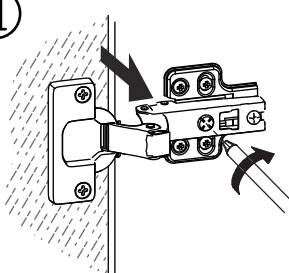 

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.