

Ax1 	Bx1 	Cx1 	Dx1
Ex4 6x13mm	Fx4 6x50mm	Gx8 	Hx4
Ix1 	Jx8 		


SPARE Parts

Ex1 6x13mm	Fx1 6x50mm	Gx1 	Hx1 	Jx1
-------------------	-------------------	---------	---------	---------

STEP 1

Pay attention to the direction


B		1
C		1

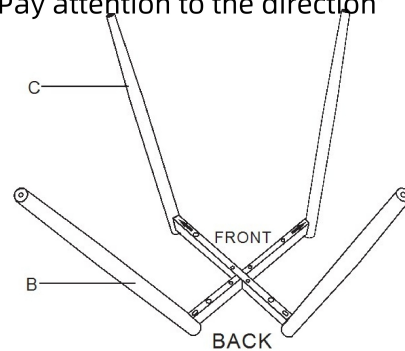

STEP 2

Wrong direction will fail to align

F		4
G		4
H		4
I		1
J		4

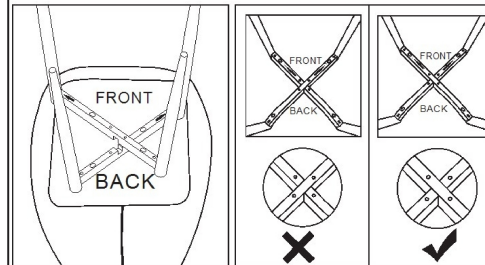

STEP 3

Install the screws and washers as shown

D		1
E		4
G		4
I		1
J		4

