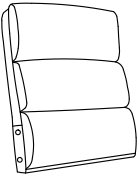

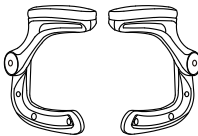
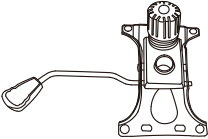
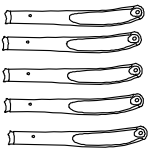
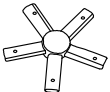



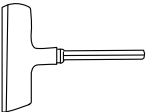



 
 
 



## Accessories List

(A) Backrest 	(B) Seat Cushion 	(C) 2 Armrests 	(D) Base Plate 
(E1) Split Base Tube 	(E2) Central Base Tube 	(E3) Central Base Buckle 	(F) Air Rod 
(G) 5 Casters 	(H) Hexagon Wrench 	(I) 6 Decoration Caps 	(J) 2 Covers 
(K) 4 Screws (M6x25) 	(L) 6 Screws (M8x25) 	(M) 2 Screws (M6x50) 	(N) 5 Screws (M6x20) 


### Notice

- Do not stand in this chair or use the chair as a step ladder use it as chair only.  
This chair is designed for one person to use at a time.
- This chair is designed for one person weighing up to 250lb(113kg).
- Do not use this chair unless all bolts, screws and knobs are firmly secured.
- Check all bolts,screws and knobs every 90days. Tighten if any are loose.
- Some of the parts are heavy and/or have shape edge, please install it carefully to avoid hurting you and people around you.

## Instructions for Use

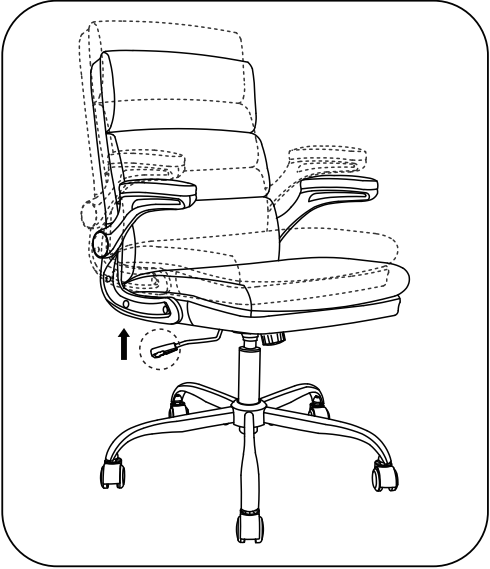


Upward adjustment

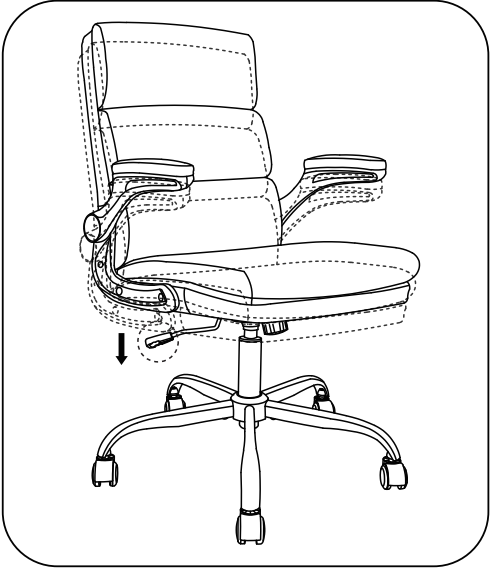

Downward adjustment



Armrest adjustment

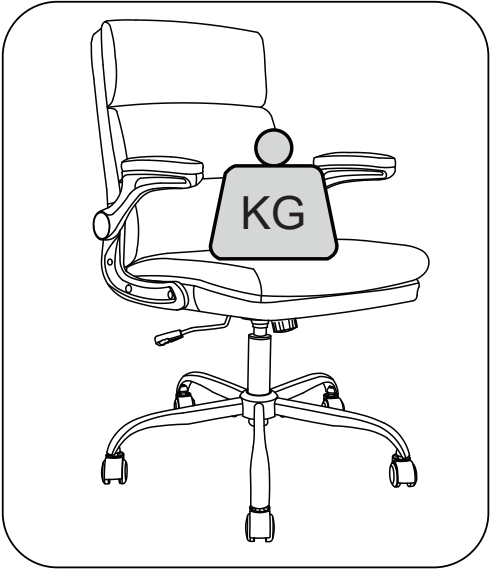


250LB (113kg)

Thanks for purchasing our products. Please read this manual before assembly.  
And please assemble in order. After the assembly, keep the instruction properly.  
Make sure all the parts are included (16 kinds in total)

# Assembly Instruction

## Step 1


Take out Split Base Tube (E1) and Central Base Tube (E2). Insert Split Base Tube (E1) into Central Base Tube (E2). You can see there are screw holes. Align with the holes, tighten 5 Screws (M6x20) (N) with Hexagon Wrench (H) to fix 5 Split Base Tube (E1) to Central Base Tube (E2).

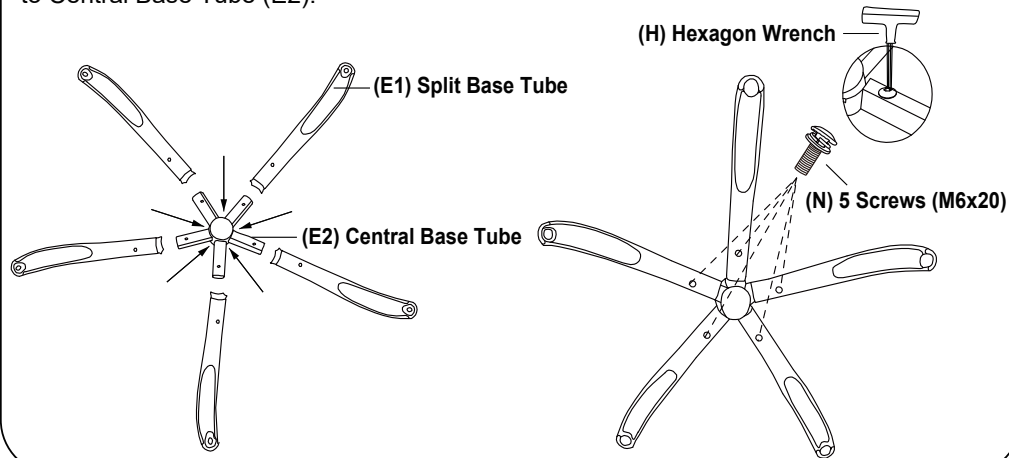

## Step 2

Insert 5 Castors (G) into part of Step 1 as shown. Put Air Rod (F) through Central Base Buckle (E3) into the hole of Central Base Tube (E2) as shown.

\* Caution: Confirm Castors (G) must be inserted deeply. Otherwise the castors could easily fall out and the chair could fall down.

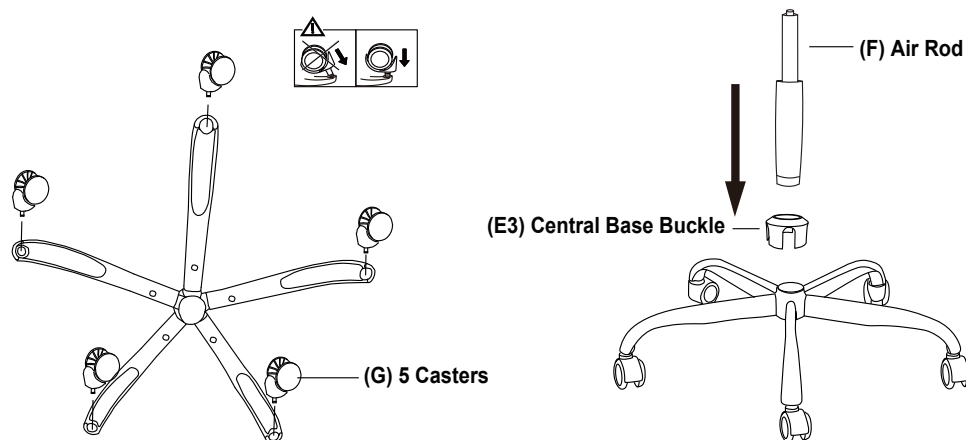


## Step 3

Fix the Base Plate (D) to the bottom of the Seat Cushion (B). Tighten the 4 Screws M6X25 (K) with Hexagon Wrench (H) firmly. Insert the Seat Cushion (B) into the Air Rod (F). Fix the bottom of 2 Armrests (C) to the back of the Seat Cushion (B). Tighten the 4 Screws M8X25 (L) with Hexagon Wrench (H) firmly.

\* Caution: There is a FRONT print on the front of the Base Plate (D)

\* Caution: Do not tighten the bolts before the product is fully assembled.

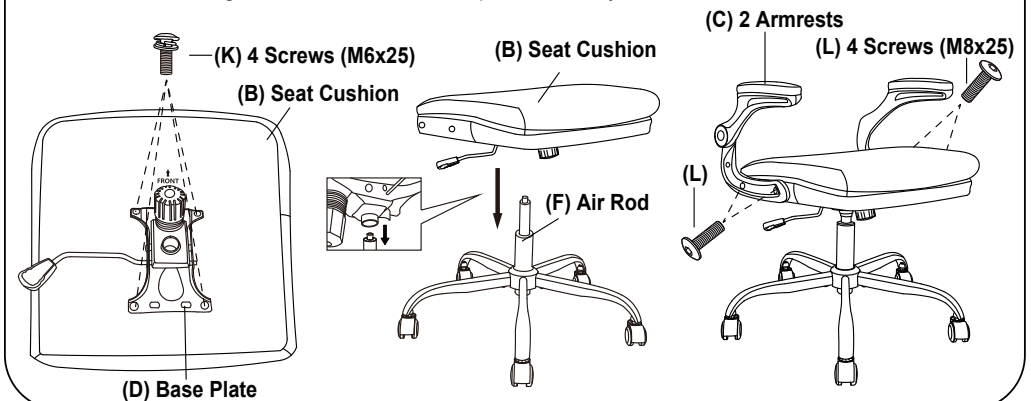

## Step 4

Attach the Backrest (A) to the Armrests (C). Tighten the 2 Screws M6X50 (M) and 2 Screws M8X25 (L) with Hexagon Wrench (H) firmly. Then Cover the screws with 2 Covers (J). Cover the screws with 6 Decoration Caps (I), the assembly is complete now.

