 
 
 


 
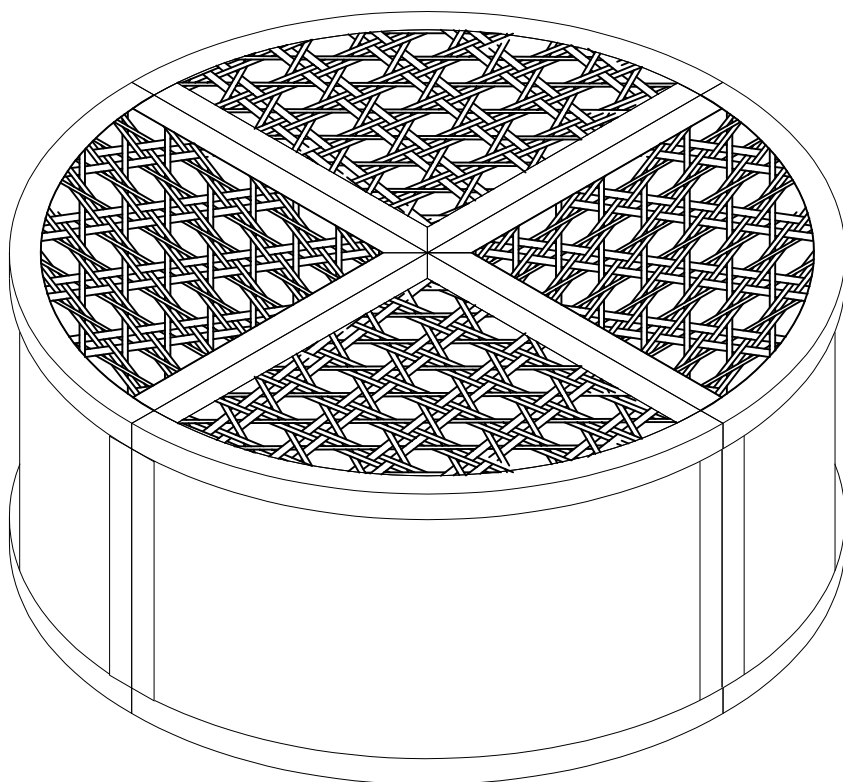 


 
 
ITEM NO: N735P185130N

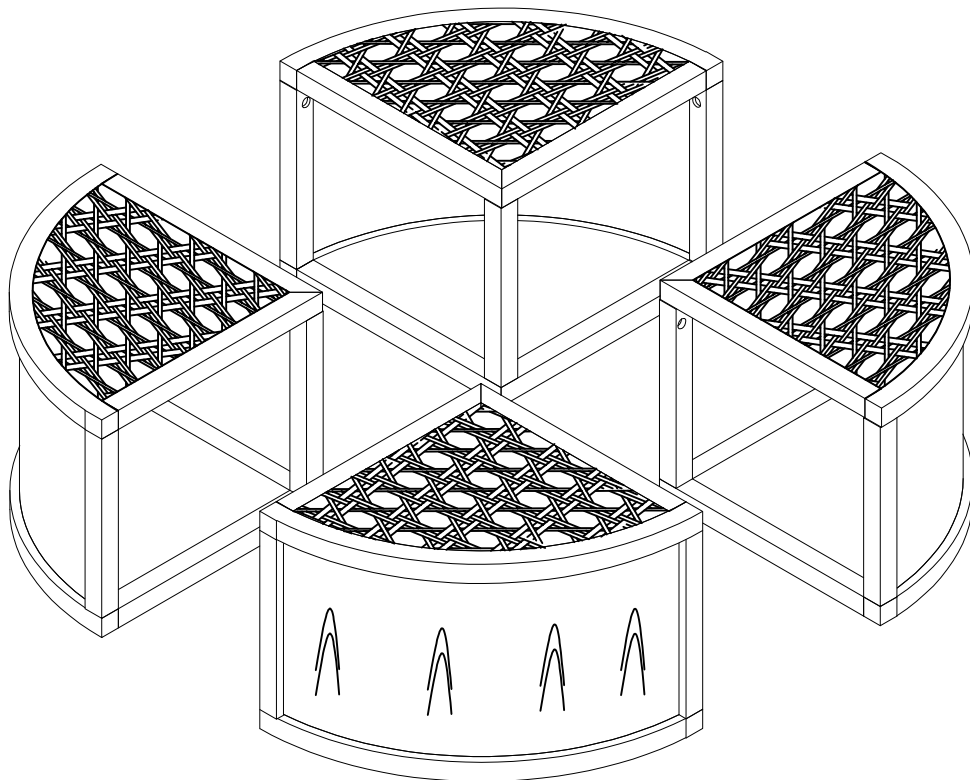

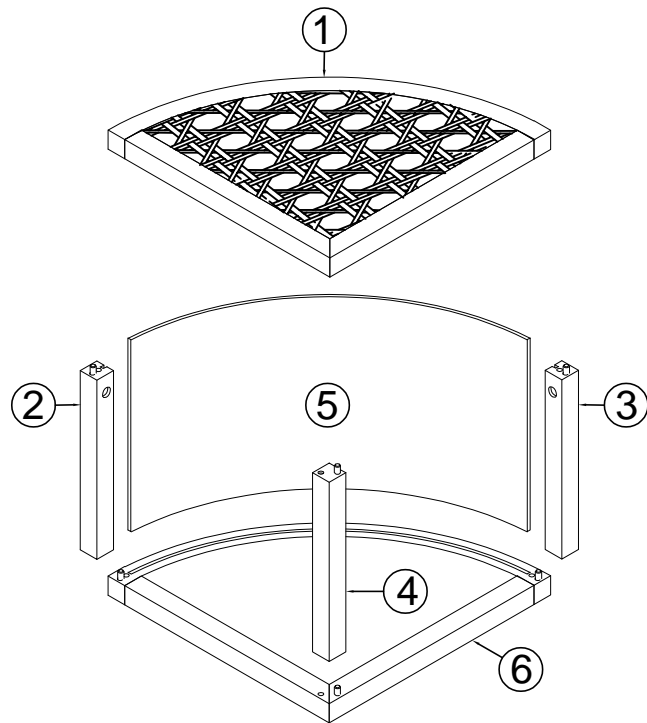 



 

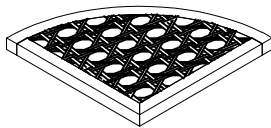
## Detail View - N735P185130N X 4

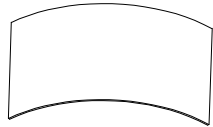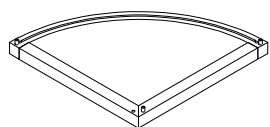

## Part List

1	 Top Frame - 4pcs	2	 Left Legs - 4pcs
3	 Right Legs - 4pcs	4	 Center Legs - 4pcs
5	 Back Panel - 4pcs	6	 Bottom Frame - 4pcs

 
## Hardware List

A	 ø1/4"x40mm Hex-Head bolts (12pcs)	B	 ø1/4"x14x1mm Washer (12pcs)	C	 ø1/4"x11x1mm Spring Washer (12pcs)
D	 4mm Allen key(1pc)	E	 ø6x30mm Three in one bolts (12pcs)	F	 ø14.5x12mm Three in one lock (12pcs)
G	 ø8x30mm Wood dowel (24pcs)				

 


Assembly Tools Required (Not Included)

 
## STEP: 1

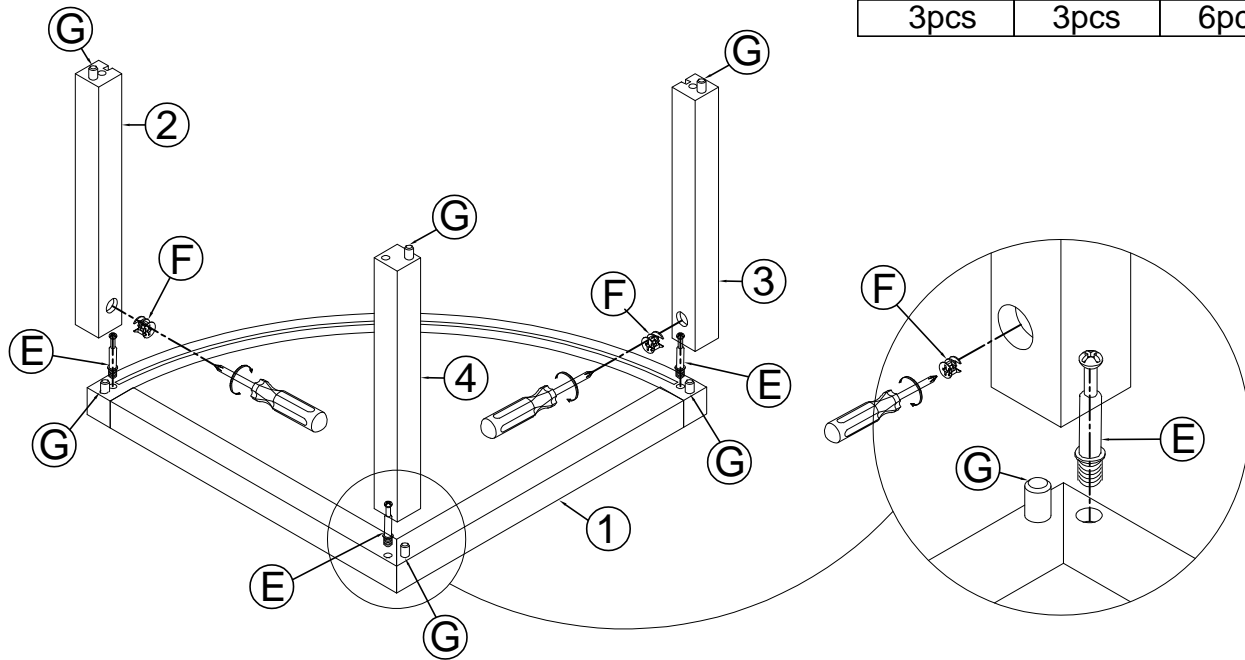

 
E	F	G
3pcs	3pcs	6pcs

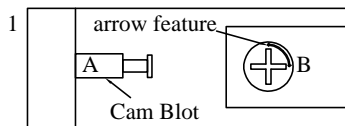

Make sure arrow feature on Cam (B) points to Cam bolt (A)

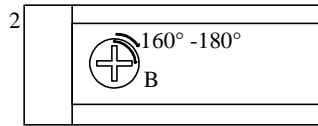 


Rotate cam (B) clockwise 160° - 180° to lock parts together.

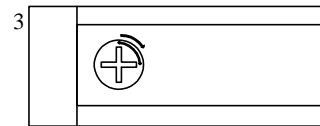



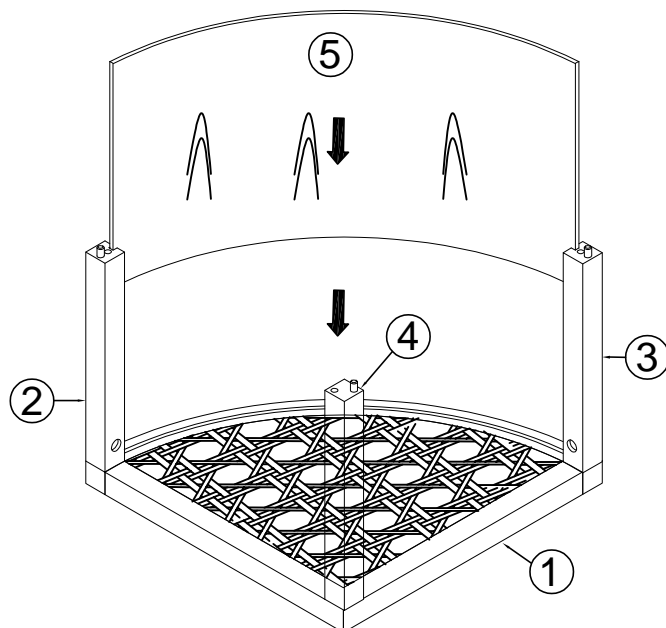

 
Parts should be tight against each other and connection should be rigid

## STEP: 2



STEP: 3

A	B	C	D
			
3PCS	3PCS	3PCS	1PC

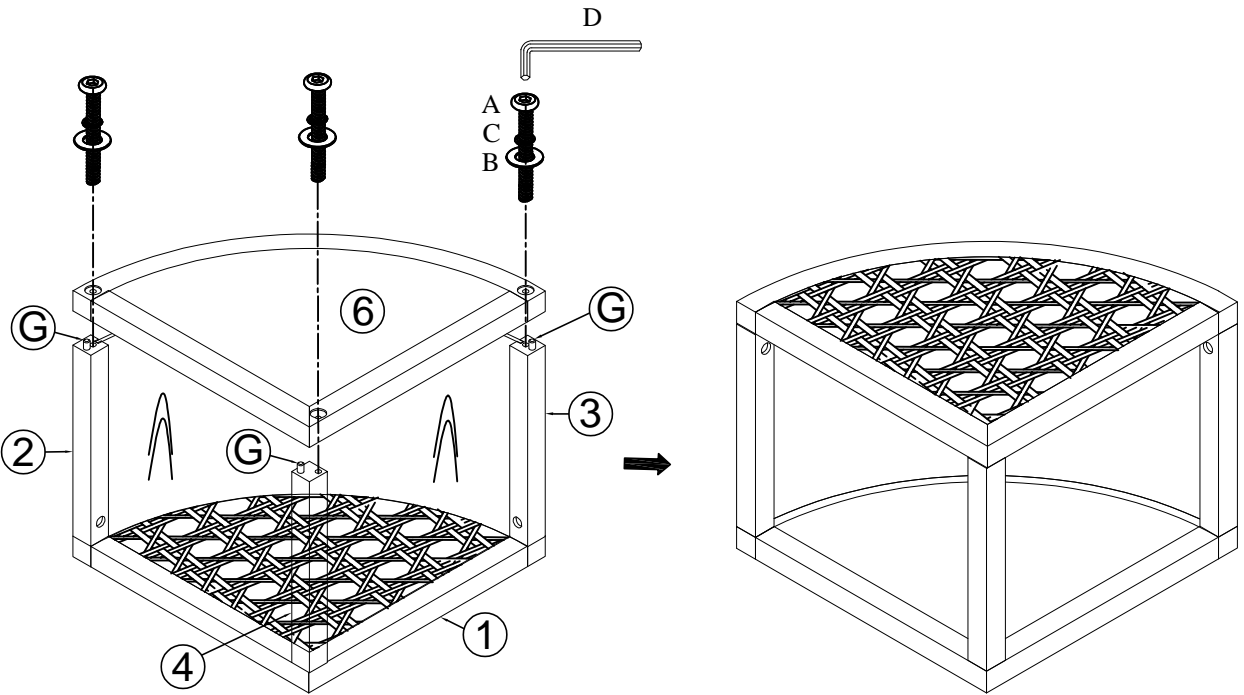

STEP: 4

