

CROWNFUL

USER MANUAL

DIGITAL KITCHEN SCALE

MODEL NO.: K210H

READ THIS MANUAL THOROUGHLY BEFORE USING AND SAVE IT FOR FUTURE REFERENCE

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS 03

GETTING TO KNOW YOUR DIGITAL KITCHEN SCALE 04

BEFORE FIRST USE 06

OPERATION INSTRUCTIONS 07

CARE & MAINTENANCE 09

TROUBLESHOOTING 09

IMPORTANT SAFEGUARDS

WARNING: Please read and comply with all of the instructions and warnings provided in this manual before using the product. Failure to comply with the instructions and warnings provided herein may result in inaccurate results and/or damage to the product itself.

IMPORTANT SAFETY INFORMATION

- DO NOT immerse the scale in water or corrosive liquids. If a liquid is spilled on the scale platform, immediately wipe the scale clean with a soft cloth in order to avoid potential damage to the scale.
- DO NOT exceed the 33 lb weight capacity. An overload indicator will appear on the LCD display if the limit is exceeded.
- Always place the scale on a hard, dry and flat surface before measurement in order to ensure accuracy.
- When replacing batteries, ensure that they are inserted with the correct polarity as indicated inside the battery compartment.
- DO NOT mix new and used batteries to power the device.
- This scale is not intended for commercial or heavy-duty use.
- When the scale is not in use, it should be stored in a cool and dry environment.
- To clean the scale, simply use a soft cloth dampened with water to wipe the surface of the platform.
- If the scale fails to turn on, please make sure to check if the device is out of power. Replace the batteries or recharge the food scale with USB cable if necessary.
- If the scale is not in use for an extended period of time, take out the batteries to extend the scale service lifetime.
- Replace the batteries or charge it with the USB cable if the low-battery indicator "Lo" is displayed in order to ensure the highest accuracy.

3

GETTING TO KNOW YOUR DIGITAL KITCHEN SCALE

This kitchen scale features a compact metal panel that allows for precise measurements ranging from 0.05 oz to 33 lb. It offers the flexibility to convert between different units for added convenience. The large display ensures accurate measurements in 0.05 ounce intervals. Designed with both style and durability in mind, this scale is suitable for everyday use. It can be powered by either the built-in rechargeable lithium battery or AAA batteries, providing multiple options for power supply. In summary, this reliable and efficient kitchen scale is a must-have tool for any kitchen.

1) PRODUCT DIAGRAM

1. LCD Display

2. Power / Auto-Tare Button

3. Unit Selection

4. Battery Compartment

5. USB Type-C Charging Port

6. Anti-Skid Padding

7. Weighing Platform

8. Charging Indicator

4

2) PACKAGE INCLUSION

1x Digital Kitchen Scale

1x User Manual

1x USB-A to USB-C Cable

2x 1.5V AAA Batteries (Pre-installed)

NOTE:

The provided 2 x 1.5V AAA Batteries are non-rechargeable batteries and should not be recharged.

3) SPECIFICATIONS

Model:	K210H
Weight Capacity:	529 oz / 33 lb / 15 kg / 15000 ml
Units:	oz / lb / kg / g / ml / milk ml
Measurement Increments:	0.05 oz / 1 g / 1 ml
Auto-Off:	180 seconds
Two Power Supply Options:	1) Battery powered: 2x 1.5V AAA batteries (Pre-installed) 2) USB charging: Built-in 250mAh rechargeable battery and comes with a USB-C charging cable
Product Dimensions:	7.9*5.5*0.7 inch/20*13.9*1.7 cm
Product Weight:	0.63 lb / 288 g

5

Thanks for trusting CROWNFUL for your household and kitchen needs!

SUBSCRIBE to our newsletter to get yourself updated with latest great deals, gifts and valuable information about CROWNFUL products.
https://www.facebook.com/crownful.official

GOT QUESTIONS or CONCERNS?
Please contact support@crownful.com

12 Months

WARRANTY ISSUE
Email: support@crownful.com

And we'll do our best to make you one of our HAPPY customers!
We remain at your service! OF CROWNFUL
https://www.crownful.com/

Crownful Official

Website: www.crownful.com

Ver.2.0925

BEFORE FIRST USE

1. Remove all packaging from your food scale and its accessories.

2. The included AAA batteries are preinstalled in the scale.

- Open the battery compartment cover located on the backside of the scale.
- Remove the plastic strip from the battery compartment to allow the batteries to power the device.
- Reaply the battery compartment cover.

NOTE: The included AAA batteries are not rechargeable. If they run out of power, please replace them with new AAA batteries.

3. To switch the power supply method, follow these steps:

- Remove the AAA batteries from the scale.
- Connect the scale to a power source using the provided USB-C cable.
- The charging indicator will turn red, indicating that the scale is charging.
- Once the charging is complete, the charging indicator will turn off.

NOTE:

- For accurate results, always place the scale on a hard, flat surface, and keep the scale away from dirt, dust, vibrations, wind, air currents, and electromagnetic interference.
- When you turn on the scale, choose units, or use the tare function, wait for the display to read "0" before measuring.

6

OPERATING INSTRUCTIONS

GENERAL OPERATION

1. Place the scale on a flat and level hard surface for measurement.

2. Press the " " button to turn on the scale. Wait until the screen displays zero before measuring.

3. Place the object of measurement on the center of the weighing platform.

4. Allow the scale to adjust to the weight of the object for a few seconds before it displays the final measured reading on the LCD screen.

TARE FUNCTION

The tare function allows you to measure objects in a container without having to include the container's weight in the final measurement.

1. Turn on the scale and wait for the screen to display zero. If the screen does not display zero automatically, press the " " button to auto-adjust to zero.

2. Place the desired object which is to be excluded, on the center of the measuring platform.

3. Press the " " button to tare the current weight of the object. The screen should now display zero.

4. Place the desired item(s) to be weighed on the center of the measuring platform or within the tared container to calculate the net weight of the desired item(s).

UNIT CONVERSION

To change the unit of measurement, press the " " button until the LCD display indicates the desired unit of measurement.

BATTERY REPLACEMENT

1. Open the battery compartment cover located on the backside of the scale.

2. Take out the used batteries and dispose of them properly.

3. Install new AAA batteries, taking note of the correct polarity displayed in the battery compartment.

4. Reseal the battery compartment.

7

USB TYPE-C CHARGE

The scale's display will show "Lo" when the battery power is low. Follow the steps to recharge.

1. Insert the USB charging cable into the USB charging socket.

2. Plug the USB charging cable into a DC 5V adapter and plug into an outlet. You can also plug the cable into a powered USB outlet.

3. When charging, charging indicator will turn red. Once the battery is fully charged, the charging indicator will turn off.

REMINDER: While the built-in battery is charging, please ensure to remove the AAA batteries from the scale. This will prevent any potential issues or conflicts when using the USB-C cable for charging.

MANUAL POWER OFF

Press and hold the " " button for 3 seconds to manually turn off the digital scale at any time.

AUTOMATIC POWER OFF

To save battery power, the scale will automatically power off after 180 seconds of inactivity.

NOTE: To set the custom auto shutdown time on the scale, follow these steps:

1. Make sure the scale is in the shutdown state.

2. With one hand, press and hold the " " button.

3. While still holding the " " button, press the " " button.

4. The scale will power on and display the currently set shutdown time (e.g. 3 for 3 minutes, 10 for 10 minutes, 60 for 60 minutes).

5. Use the " " button to modify the settings.

6. Press the " " button to confirm the modification.

8

CARE & MAINTENANCE

CLEANING

- Use a slightly damp cloth to clean the surface of the scale, followed by a dry, soft cloth to wipe away the remaining moisture.
- Use a dry, soft cloth to wipe dust off the scale.
- Do not wash the scale or immerse it in water or any other liquid.

STORAGE

When not in use, store the scale in a cool, dry environment.

TROUBLESHOOTING

ERROR MESSAGE	REASON	SOLUTION
"Lo"	Battery power is low.	Install new batteries/ USB Type-C charging.
"Err"	Scale overload. Maximum weight capacity: 33lb(15kg)	Remove the object from the scale to avoid damage.
"-."	Indicates a negative weight. When an object is weighed and cleared, and then the object is removed, it will display a negative weight.	Press the " " button to adjust to zero.

If your problem is not listed, please contact Customer Support at support@crownful.com.

9