 


Comfort Smart

Space Heater Portable

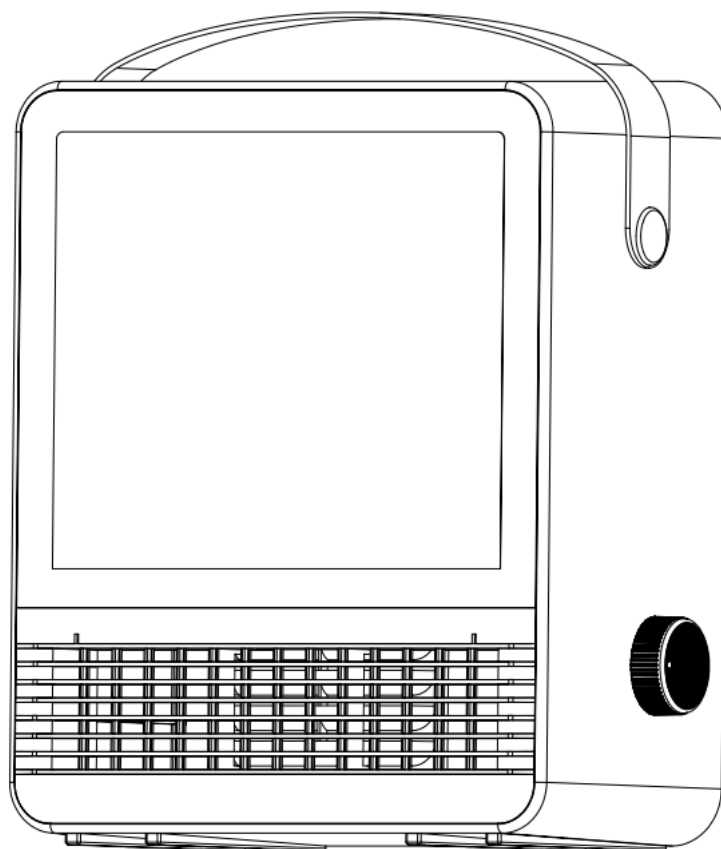

Model: CS-109-PH

OWNER'S MANUAL

AC 120V 60Hz 1500W

 
Important Safety Instructions

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:


1. **Read all instructions before using this heater.**
2. **USE THIS HEATER ONLY AS DESCRIBED IN THIS MANUAL.** Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
3. **CAUTION!** This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet from the front of the heater and keep them away from the sides and rear.
4. **EXTREME CAUTION** is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
5. **ALWAYS** unplug heater when not in use.
6. **DO NOT** operate any heater if any of the following conditions are true:
 - a. Heater has a damaged cord or plug,
 - b. Heater has malfunctions,
 - c. Heater has been dropped or damaged in any manner.If any of the above are true, discard heater, or return to authorized service facility for examination and/or repair.
7. **DO NOT** use outdoors.
8. This heater is **NOT INTENDED** for use in bathrooms, laundry areas and similar indoor locations. **NEVER** locate heater where it may fall into a bathtub or other water container.
9. **DO NOT** run cord under carpeting. **DO NOT** cover cord with throw rugs, runners, or similar coverings. **DO NOT** route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
10. To disconnect heater, turn control to off, and then remove plug from outlet.
11. Connect to properly grounded outlets only.
12. **DO NOT** insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire or damage the heater.
13. To prevent a possible fire, **DO NOT** block air intakes or exhaust in any manner. **DO NOT** use on soft surfaces, like a bed, where openings may become blocked.
14. A heater has hot and arcing or sparking parts inside. **DO NOT** use it in areas where gasoline, paint, or flammable liquids are used or stored.
15. **ALWAYS** plug heater directly into a wall outlet/receptacle. **NEVER** use with an extension cord or relocatable power source (outlet/power strip).
16. Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.
17. To avoid excessive room temperatures which can cause hyperthermia:
DO NOT leave product running unattended in a confined space around infants or individuals with reduced physical, sensory, or mental capabilities.

SAVE THESE INSTRUCTIONS FOR FUTURE USE.

Product Specifications

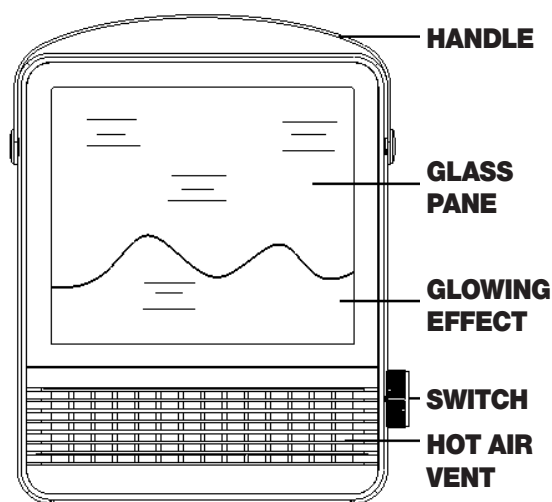

FRONT

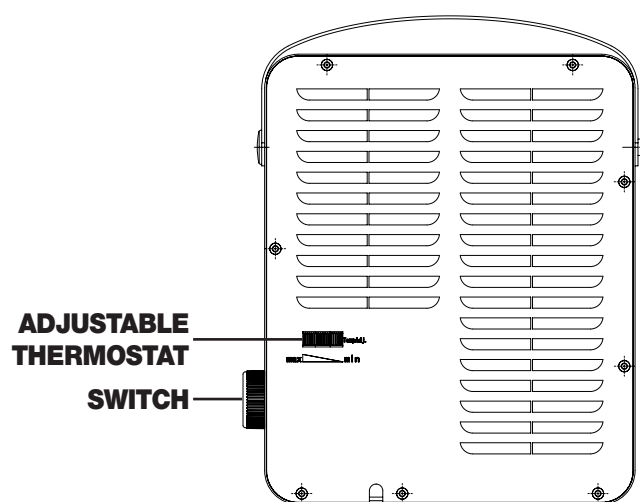 

BACK

MODEL	CS-109-PH
DESCRIPTION	Electric Fireplace
RATING POWER	AC100-120V, 50/60Hz
POWER	1500W
PRODUCT SIZE	9.84" x 5.67" x 11.97" (250 x 144 x 304 mm)

OPERATION	
0	ON/OFF
Flame	Flame On
LOW	800W (low heater output)
HIGH	1500W (full heater output)
ADJUSTABLE THERMOSTAT	Adjust temperature Manually

Usage Instructions

POSITION OF THE APPLIANCE

The heater should only be operated at a minimum distance of 50 cm (19 3/4") from any wall or other object. Position the airflow in order to optimize the heating of the room.

Avoid corners, small volume rooms, floors, and ceilings.

OVER HEAT PROTECTION

This heater is protected with an overheat protection function that switches off the appliance automatically in case of overheating (e.g., due to the total or partial obstruction of the airflow intake and/or exhaust). In this case, unplug the appliance, wait about 30 minutes for it to cool, and remove the object that is causing the obstruction. Then, switch heater back on as described above. The appliance should operate normally. Should the problem persist, please contact customer service or consult with a competent and qualified service technician.

Care & Maintenance

- Before cleaning the appliance, ensure it is disconnected from the power supply and has cooled down completely.
- To avoid the risk of electric shock, do not clean the heater with water and do not immerse it in water.
- The housing may be wiped with a slightly damp, lint-free cloth.
- If necessary, dust particles accumulated in the air outlet openings may be removed with a vacuum cleaner.

Comfort Smart

Thank you for purchasing our heater!

Each unit has been manufactured to ensure safety and reliability.

Before first use, read the instructions carefully and keep it for further reference.

Questions, problems, missing parts?

Before returning to store, call

Customer Service:

8am-5pm CST, Monday - Friday

Phone: 877-430-0703

Email: resolutions@electricfireplacesdirect.com

Retain this manual for future use.