











Assembly Instructions




Thank you for purchasing our product!

Please assemble the products with the guidance of this manual instruction. Contact our friendly customer service department with any comments or in case there is any missing or damaged parts or hardware. Replacements for missing or damaged parts or hardware are normally shipped within 2 to 3 days.

We appreciate your business!


Ax1  Back	Bx1  Seat	Cx2  Front legs	Dx1  M8x55MM Bolt	Ex4  M8x65MM Bolt
Fx4  M8x80MM Bolt	Gx9  Flat Washer	Hx9  Spring Washer	Ix1  M8 Allen key	Jx1  Non-woven fabric

①

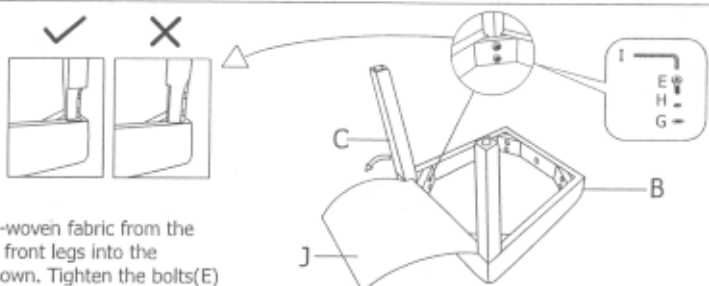


Remove the non-woven fabric from the seat, insert both front legs into the seat frame as shown. Tighten the bolts(E) for the front legs, **but do not tighten completely.**

②

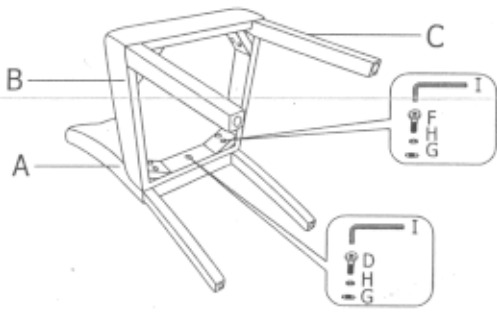

Attach the seat frame (B) to the chair back (A), tighten the bolts(F) to the seat, **but do not tighten completely.**

③



Make sure all legs are level on the floor, then fully tighten all bolts.

Stick the non-woven cover underneath the seat.

WARNING

DO NOT STAND ON THE CHAIR, DO NOT USE THIS CHAIR AS A STEP LADDER. USE THIS PRODUCT ONLY FOR SEATING ONE PERSON AT A TIME. DO NOT USE THIS CHAIR UNLESS ALL BOLTS, SCREWS AND KNOBS ARE FIRMLY SECURED. AT LEAST EVERY 4 MONTHS, CHECK ALL BOLTS, SCREWS AND KNOBS TO BE SURE THEY ARE TIGHT. IF PARTS ARE MISSING, BROKE, DAMAGED OR WORN, STOP USING THIS PRODUCT UNTIL YOU HAVE REPAIRED IT FULLY. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY. PLEASE DO NOT USE KNIFE TO OPEN ANY PARTS OF THE BOX OR CHAIR.