

Troubleshooting Guide:

Item will not fully inflate.	Ensure the zippers on the back of each inflatable figure are closed. Inspect fabric for tears and holes; repair if necessary. Make sure the fan is not obstructed by any debris or snow. Unplug the fan from the electrical outlet and let cool completely, before clearing debris.
Fan does not operate.	Ensure the fan is plugged into a working outlet (for indoors, a standard AC outlet, for outdoors a GFCI outlet). Fan may be overheated. Unplug the fan from the electrical outlet and let cool completely.

