


UNIVERSAL PORTRAIT FIXED TV WALL MOUNT

MasterTM Mounts

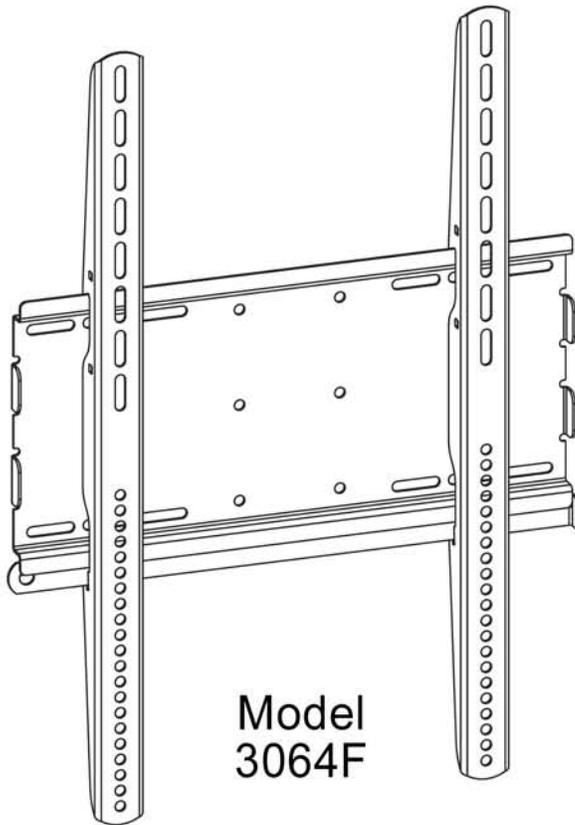

Model
3064F

Universal VESA
100x100 to 400x600

Recommended for TVs up to 70 inches
TV weight must not exceed the
Maximum capacity of 154 lbs

NOTE: Read the entire instruction manual before you start the installation and assembly of this mount.

 **WARNING**

Do not begin the installation until you have read and understand all the instructions and warnings included in this installation manual. If you have any questions regarding any of the instructions or warnings, please contact a professional or the product's distributor.

This mounting bracket was designed to be installed and utilized **ONLY** as specified in this manual. Improper installation of this product may cause damage and/or serious injury.

This product should only be installed by someone with good mechanical ability who has basic building experience and fully understands this manual.

Make sure that the supporting surface and substructure will safely support the combined weight of the equipment and all the attached hardware and components.

If mounting to wood stud walls, make sure that the mounting screws are anchored into the center of the studs. The use of a stud finder is highly recommended.

Always use an assistant or mechanical lifting equipment to safely lift and position the equipment/TV.


Tighten the screws firmly, but do not over tighten. Over tightening can cause damage to the screws and this greatly reduces their holding power.

This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury. Always consult with a professional or expert if you would like to use outdoors. The environment as well as many other conditions will have to be considered and installation is based solely on the experts warranties and claims.

Component Checklist

Important:

Make sure that you have received all the parts according to the component checklist prior to installation. If any parts are missing or defective, call your local distributor for a replacement.

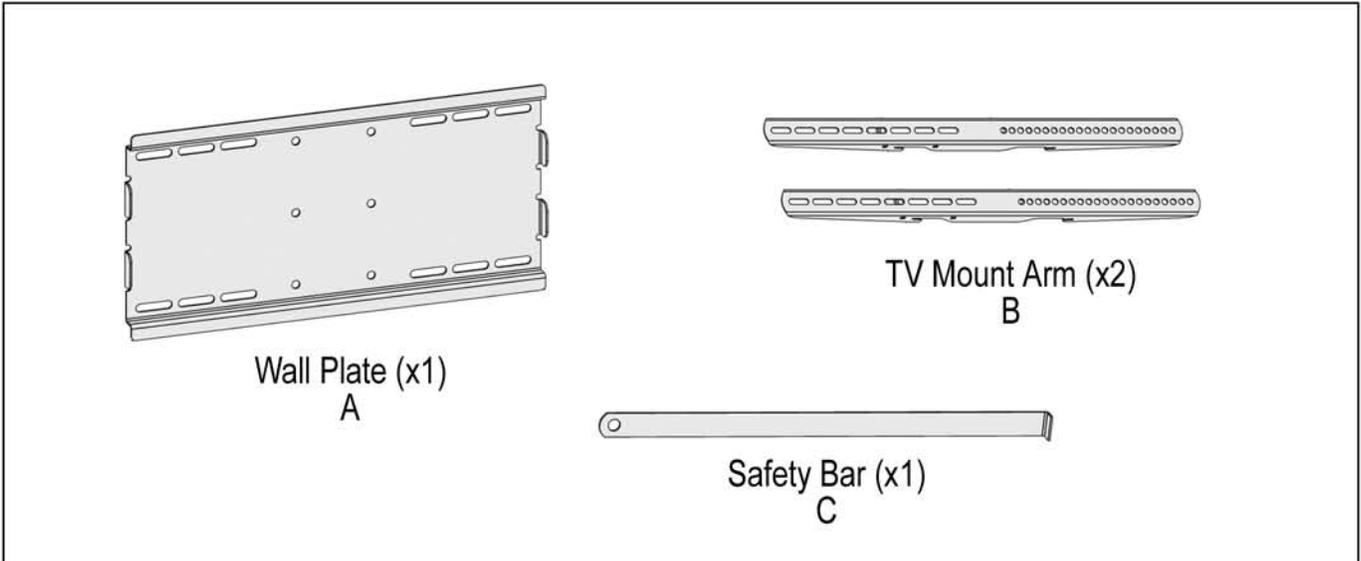

You will not be using all the screws/parts included in this mounting hardware kit. The hardware you will use is dependant on the TV and the conditions of where the TV will be installed/mounted.

Package M



M5x14 (x4)
M-A



M6x14E(x4)
M-B



 
M8x20 (x4)
M-C



M6x30 (x4)
M-D



M8x30 (x4)
M-E



Washer (x4)
M-F



Small Spacer (x8)
M-G



Big Spacer (x4)
M-H

Package W



ST6.3x55 (x4)
W-A







Concrete Anchor (x4)
W-B




D6 Washer (x4)
W-C



1a. For Wood Stud Mounting

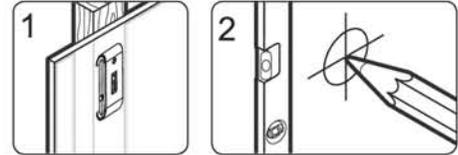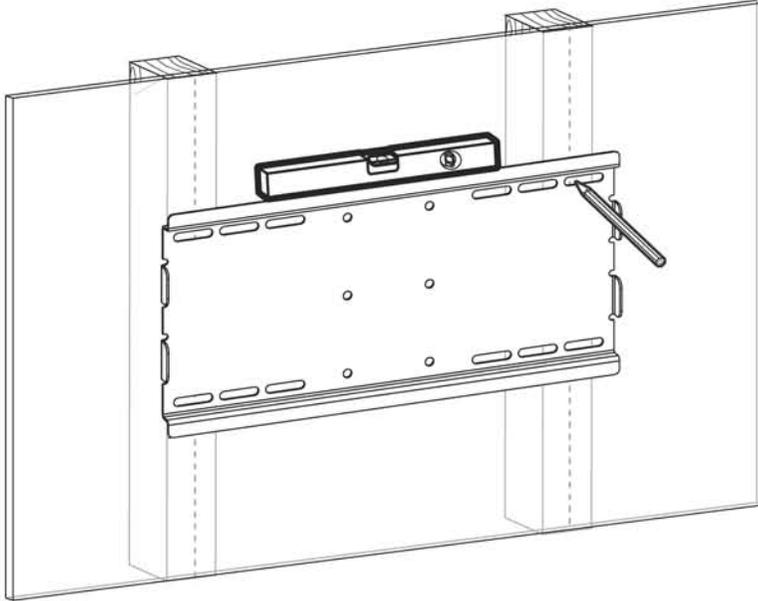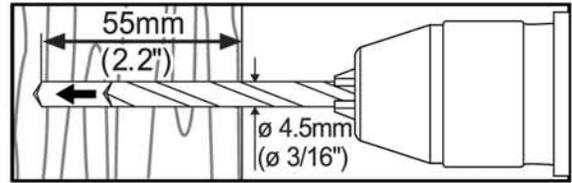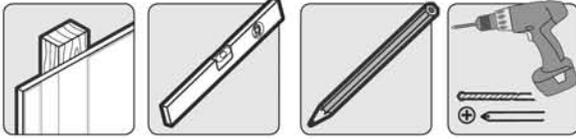

Find and mark the exact location of mounting holes

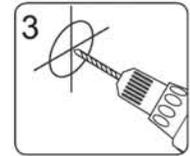

Drill pilot holes

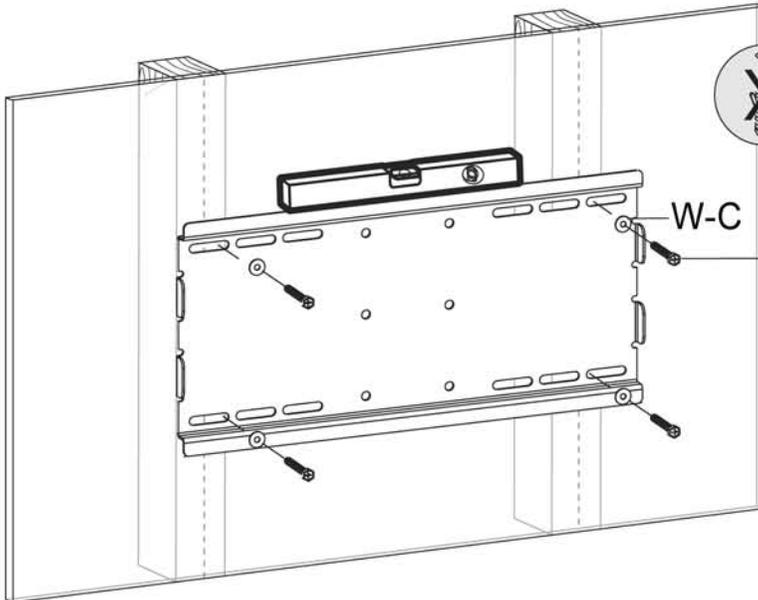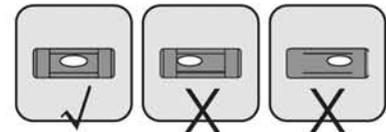

Do not use anchors for wood stud installations







Screw the wall plate (A) onto the wall

Make sure that mounting screws are anchored into the center of each stud. The use of a stud finder is highly recommended.



Installers are responsible to provide hardware for other types of mounting situations in different environments.

Installers must verify that the supporting surface and substructure will safely support the combined weight of the equipment and all the attached hardware and components.

1b. For Solid Brick and Concrete Mounting

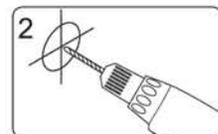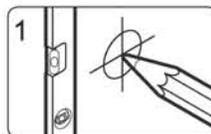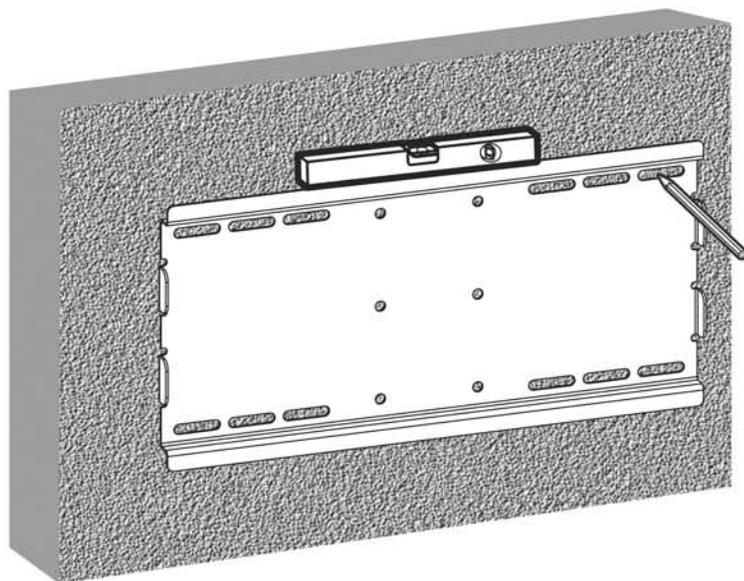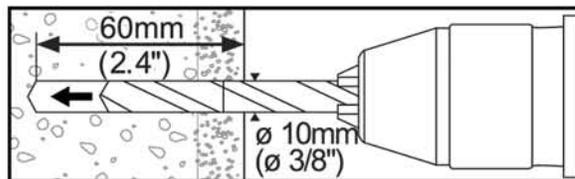

1. Find and mark the exact location of mounting holes
2. Drill pilot holes

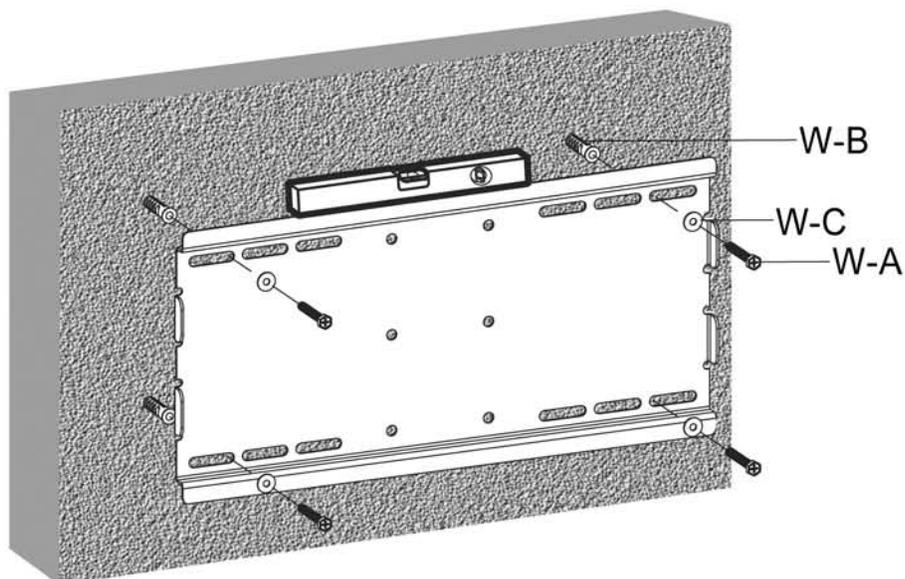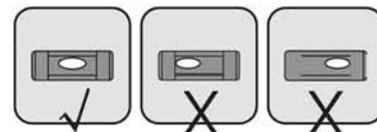


Screw the wall plate (A) onto the wall


Warning!

Installers must verify the supporting surface and the substructure will safely support the combination of the equipment and all the attached hardware and components.


2. Installing the TV Arm Brackets

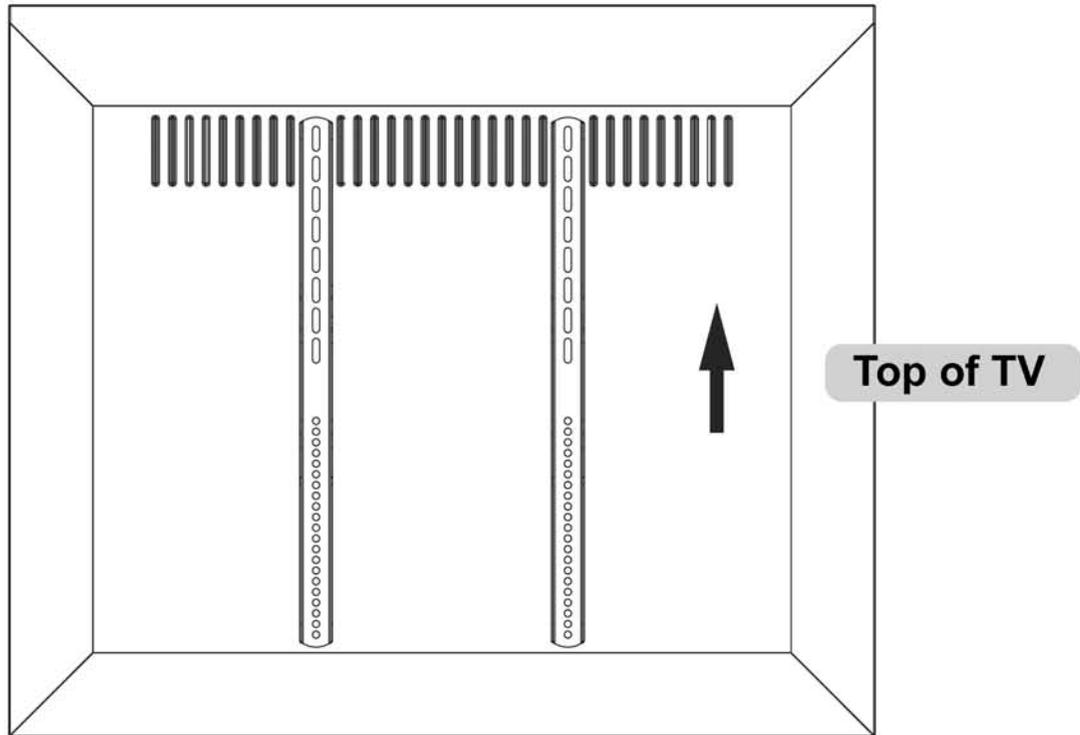



2-1. For Flat Back TVs

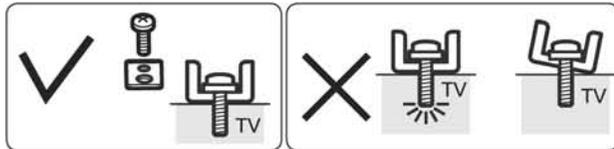



Using the hardware shown in the illustration attach the TV arms onto the TV using the TV's threaded VESA holes

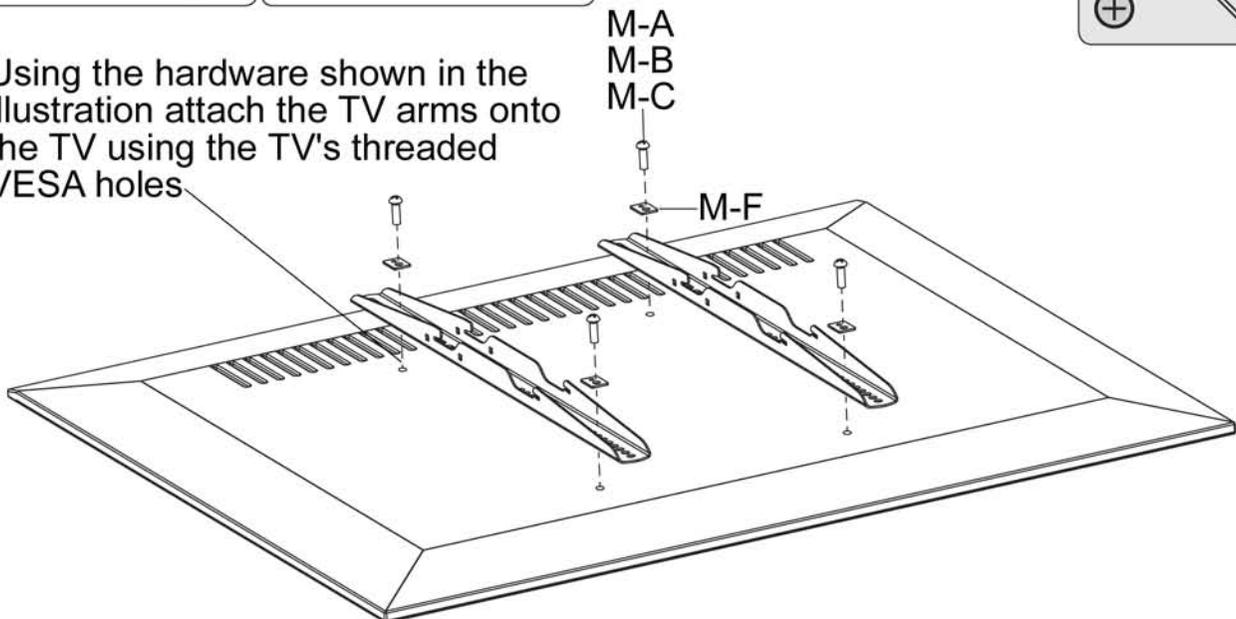

2-2. For Curved or recessed back TVs or to Access AV plugs

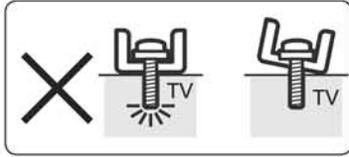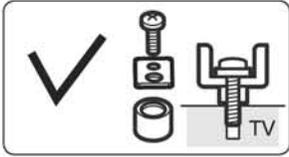


Use small or big spacers between the TV Mount Arms (B) and the back of the TV so there is no space between the arms and the TV's back. You may stack and use multiple spacer for each screw.

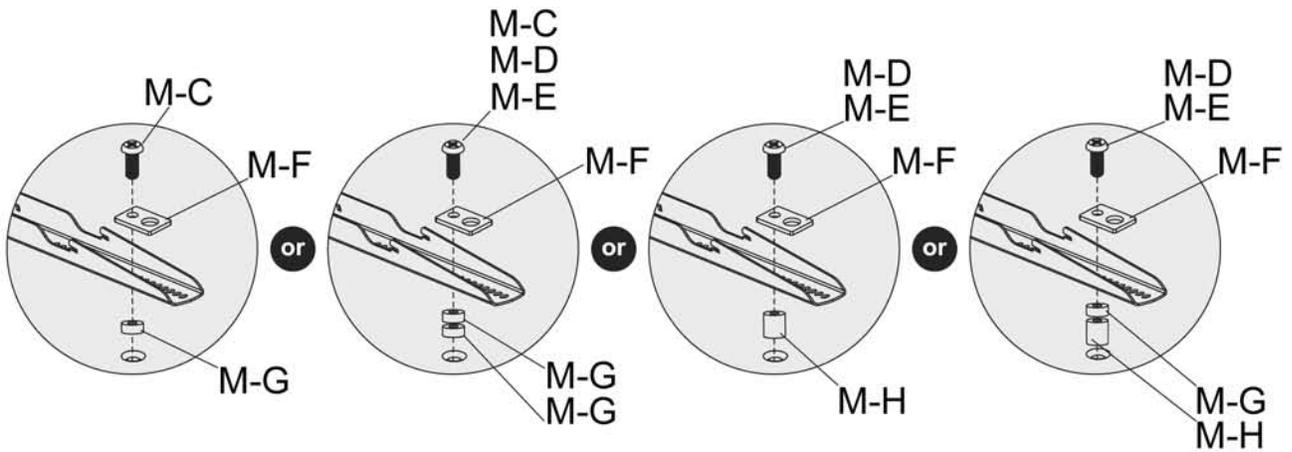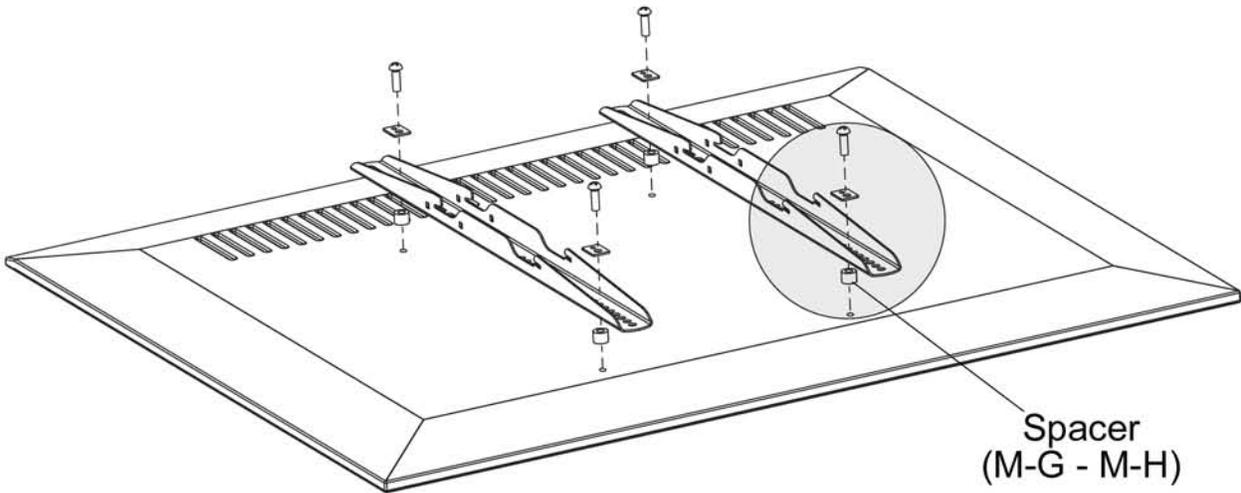

1. Choose the appropriate screws and spacers (if necessary) according to the type of TV you have.
2. Positions the mount arms as close as you can to the center of the TV.
3. Screw the arms onto the TV, tighten all screws but do not over tighten.


3. Hanging the TV onto wall plate

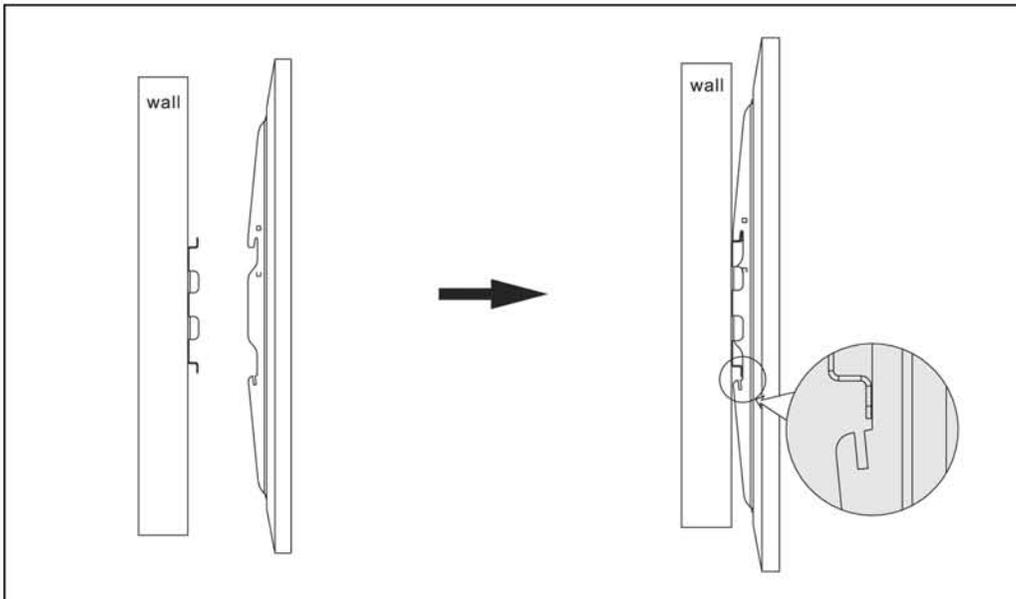


It is safest to have 2 people when lifting and hanging the TV onto the mount

Prior to releasing the TV, make certain that the arms are securely hooked over the wall mount plate.

4. Installing the anti-theft and safety bar

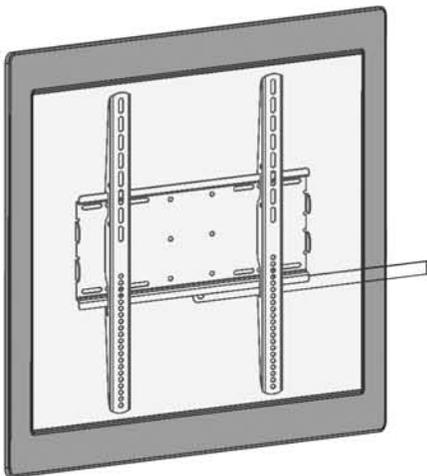

Insert the safety bar through the bottom of the mount to prevent the TV from accidentally falling.

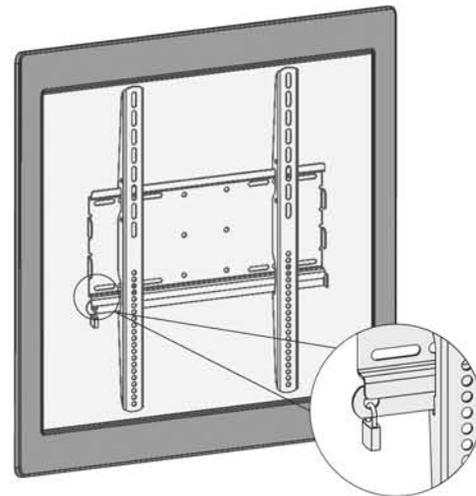

A padlock can be used at the end of the safety bar to help prevent theft of your TV